

when the igni-
"ON" position.
seconds. This
ags are oper-


buckle swi...
semblies, inflators, warning...
necting wiring and power sources. (Fo...
details, see "Service reminder indicators
and warning buzzers" on page 129 in Sec...
tion 1-6.)

★ If any of the following conditions occurs, this indicates a malfunction of the airbags or seat belt pretensioners. Contact your Toyota dealer as soon as possible.

- When the ignition key is turned to the "ON" position, the light does not come on or remains on for more than 6 seconds.
- The light comes on or flashes while driving.

★ The SRS warning light will come on and front passenger occupant classification indicator light will indicate "OFF" if there is a malfunction in the front passenger occupant classification system.

monitors the
nt airbag sen
le and curtain
in shield air
sition sensor
ch, front pas
n system and
er's seat bel
ensioner as
ght, intercon
ources. (For
er indicators
129 in Sec

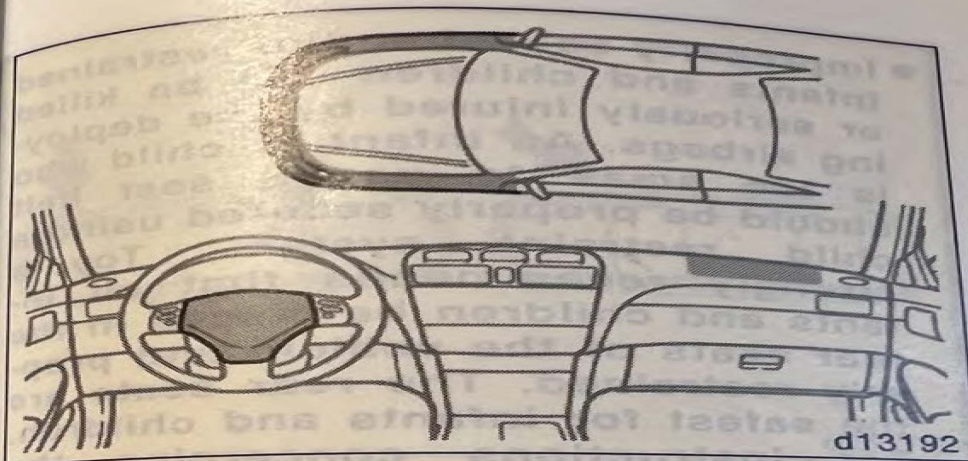

**Do not discor
before contac**

ons occurs
the airbags
ontact your
ssible.
rned to the
s not come
than 6 sec
shes while
ne on and
fication in-
if there is
nger occu-

In the following cases, contact your Toyota dealer as soon as possible:

- The SRS front airbags have been inflated.
- The front of the vehicle (shaded in the illustration) was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.
- The pad section of the steering wheel or front passenger airbag cover (shaded in the illustration) is scratched, cracked, or otherwise damaged.











[View photo album](#)

Thank you,

[\[Redacted Name\]](#)
[Redacted Address]
[Redacted City, State, Zip]

© 2014 [Redacted Name]. All rights reserved. This document is the property of [Redacted Name]. It is not to be distributed, copied, or otherwise used without the express written consent of [Redacted Name].