

EA02-025

FORD 10/27/03

APPENDIX N

BOOKS 7 OF 61

PART 1 OF 4

REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL
PERFORMED RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
99S15 RECALL COMPLETED

PERFORM RECALL INSTALL NEW SWITCH AND BLEED REAR BRAKES

99S15 99S15

INSTALL SWITCH

PERFORM RECALL

99S15 SPEED CONTROL CABLE REPLACED SPEED CONTROL CABLE PER RECALL 99S15

AS PER RECALL 99S15 RECALL TO INSTALL CRUISE CONTROL SWITCH

REPLACE CRUISE CONTROL SWITCH WIRE CONN, BLEED BRAKE PER RECALL, RT OK

RECALL 99S15 99S15 REPLACE SPEED CONTROL SWITCH

PERFORM 99S15

PERFORMED RECALL

REMOVE & REPLACE SPEED CONTROL DEACTIVATION SWIT

REPLACE SPEED CONTROL SWITCH PER RECALL

PERFORMED RECALL

REPLACE CRUISE CANCEL SWITCH

RECALL R-R DEAC SW, INSTALLED NEW CONNECTED, RECKD OK

REPLACE DEACTIVATION SWITCH

210116 PERFORM RECALL

RECALL 99S15 RECALL, REPLACE SWITCH

RECALL 99S15 RECALL 99S15

DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REPLACED SWITCH.

INSTALLED DEACTIVATION SWITCH PER RECALL, RT OK

RECALL 99S15 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL

PERFORMED RECALL

RECALL COMPLETED PERFORM CAMPAIGN PER FORDS SPECIFICATIONS AND INSTRUCTIONS 99S15B FOR .5 AND .1 FOR ADMIN. TIME

PERFORMED RECALL PERFORMED RECALL

PERFORM RECALL

PERFORMED RECALL 99S15B 1 PERFORMED RECALL

RECALL COMPLETED

COMPLETED RECALL PER INSTRUCTIONS. REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.

REPLACED DEACTIVATION SWITCH

REPLACE DEACTIVATE SWITCH AND CONNECTOR SHELL PER 99S15B

NOTE: FRONT BRAKES ARE 1-32 CURT. DECLINED-BELT IS DRY ROT DECLINED-BATTERY HAS CORROSION DECLINED CLEANING-
G RC 99S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPLACE SWITCH AND CONNECTOR

99S15 TECH 113 99S15B 0.5 PERFORM RECALL PER FORD REPLACE SWITCH AND CONNECTOR

SERVICED A SPER RECALL

PERFORMED 99S15 RECALL

1 PERFORM RECALL

88851 98S15 REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL, BLEED BRAKES
RECALL RECALL
RPL CRUISE DEACTIVATION SWITCH PER 98S15
SPEED CONTROL SWITCH 98S15 RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER CAMPAIGN 98S15
OPEN RECALL PERFORMED RECALL
RECALL 98S15B COMPLETED RECALL 98S15B COMPLETED

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
REPLACE SWITCH
INSTALL SWITCH
PERFORM COMPLETE RECALL 98S15 PER INST
COMPLETED RECALL AS PER INSTRUCTIONS
98S15 RECALL 98S15 COMPLETED RECALL
150878 98S15 REPAIR SPEED CONTROL
93349 RECALL INSTAL BK SWITCH AS PER RECALL 98S16 XXX ROAD TESTED TO MAKE SURE CRUISE CONTROL WORKS PROPERLY
98S15 98S15
PERFORMED RECALL 98S15
REPLACED SWITCH
PERFORM 98S15
REPL CRUISE CONTROL SWITCH AND METERING BLOCK - BLEED BRKS
98S15 98S15
REPLACE CRUISE CONTROL BRAKE CANCEL SWITCH
REPLACE SPEED SWITCH AS PER RECALL
RECALL R-R DEAC SW, INSTALLED NEW, RECD OK
98S15 REPLACE DEACTIVATION SWITCH
RECALL PERFORMED RECALL 98S15
103012 98S15B 0.5 0.5 PERFORM CAMPAIGN 98S15
REPLACE SW AND PLUG
98S15 COMPLETED
REPL CRUISE SWITCH 98S15
PERFORM RECALL
RECALL 98S15 98S15 REPLACE SPEED CONTROL SWITCH
CAMPAIGN COMPLETED

RPL SPEED CONTROL DEACTIVATION SWITCH PER 98S15
REPLACED SWITCH AND CONNECTOR
PER NOTIFICATION RECALL 98S15 REMOVE TAPE AND SECURE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15 INSTRUCTIONS

NA 98S15 REPLACED DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH
RECALL COMPLETE
117000 RECALL WP830 PERFORMED RECALL 98S15 REPLACED SPEED SWITCH
81609 T 0.4, PERFORMED THE RECALL
RECALL REPLACED SWITCH
PERFORMED RECALL
105300 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
47632 PERFORMED RECALL

PERFORM RECALL 98S15 PER TECHNICAL INSTRUCTIONS
840494 PERFORM RECALL INSTALLED SWITCH AND CONNECTOR
PERFORMED RECALL AS OUTLINED
COMPLETED RECALL 98S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 98S15B .5 + .1
PERFORM RECALL
REPLACED CRUISE DEACTIVATE SWITCH AND HARDSHELL CONNECTOR PER RECALL
1 1 REPL CONNECTOR
OWNER NOTIFICATION CRUISE CONTROL RECALL 98S15
AS PER RECALL 98S15 RECALL TO INSTALL DEACTIVATION SWITCH FOR SPEED CONTROL

REPLACED DEACTIVATION SWITCH & CONNECTOR
1 OK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH & PLUG
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
REPAIR AS PER 98S15
PER RECALL PERF RECALL
REPL BRK PRSS SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REPLACE DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL
RECALL 98S15 INSTALLED SPEED CONTROL SWITCH
1 PERFORMED RECALL 98S15
1 REPL CRUISE DEACT SWITCH
98S15 RECALL 98S15 RECALL
REPLACED DEACTIVATION SWITCH AND CONNECTOR
1 REPLACED SPEED CONTROL DEACTIVATION SWITCH ASSEMBLY AND CONNECTOR. CHECK NORMAL OPERATION

REPLACED DEACTIVATION SWITCH AND CONNECTOR
PERFORMED RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH T117
1 PERFORM RECALL 98S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15
48898 PERFORMED RECALL REPLACED SWITCH & CONNECTOR
PERFORMED RECALL, INSTALLED NEW SWITCH
REPLACED SWITCH AND CONNECTOR
98S15 RECALL 98S15 RECALL COMPLETE
74747 PERFORM RECALL, REPLA SWITCH 98S15B .5
102112 PERFORM 98S15 RECALL PER INSTRUCTIONS
RECALL RECALL
SAFETY RECALL 98S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH
PERFORM RECALL RECALL
88063 WPB40 REMOVE AND INSTALL SPEED DEACTIVATION SWITCH AND HARNESS. POST TEST, POST ROAD TEST.
RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO
80232 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
97457 RECALL PERFORMED

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

PERFORM RECALL
43272 INSPECT FOR DEACTIVATION SWITCH. REMOVE AND REPLACE THE SWITCH AND CONNECTOR AS PER RECALL 98S15
PERFORMED RECALL

REPLACE SPEED CONTROL DEACTIVATOR PER RECALL

RECALL 98S15 PERFORMED RECALL 98S15

RECALL 98S15

COMPLETED RECALL 98S14

REPLACED SPEED CONTROL CABLE

REPLACED DEACTIVATION SWITCH & CONNECTOR

REPLACED DEACTIVATION SWITCH

RECALL PERFORMED

REPLACED SC DEACTIVATION SWITCH 98S15

PERFORMED RECALL AS PER INSTRUCTIONS

PERFORMED RECALL INTERIM AND PART REPLACEMENT REPAIR RO 43757A WAS CODED INCORRECTLY ON THE LABOR OPERATION ALSO 43757A WAS 1

REPLACED DEACTIVATION SWITCH PER RECALL 98S15

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.

RECALL COMPLETED

REMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH

80202 PERFORMED SPEED CONTROL RECALL

PERFORM RECALL 98S15

PERFORM 98S15 RECALL

PERFORM RECALL 98S15- REPLACE CRUISE CONTROL SWITCH

RECALL DONE

17442 RECALL WP40 PERFORMED RECALL, REPLACED CRUISE CONTROL DEACTIVATION SWITCH.

RECALL PERFORMED RECALL

31243 98S15 W REFOR 98S15 SPEED CONTROL SWITCH JH

31057 RECALL 98S15 RECALL 98S15 DEACTIVATION SWITCH

98S15 SWITCH AND CONNECTOR

PERFORM RECALL 98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER REC 98S15

137582 RECALL R&R DEACT. SWITCH & CONNECTOR PER RECALL

67281 INSPECT AND REPLACE DEACTIVATION SWITCH PER 98S15 RECALL

98S15 98S15-REPAIR CRUISE CONTROL

CHECKED OASIS. INSTALLED SPEED CONTROL DEACTIVATION SWITCH

REPLACED SPEED CONTROL SWITCH

SPD CTRL DEACTIVATION SW REPLCMT PERFORMED RECALL 98S15

PERFORM RECALL

98S15 98S15

95828 RECALL 98S15B 0.5HRS REPLACE SWITCH AND CONICTOR TIC372

REPLACE CRUISE SWITCH AND CONNECTOR

RECALL PERFORM RECALL PER FORD

SPEED CONTROL DEACTIVATION SWITCH PERFORMED RECALL 98S15

1 PERFORMED RECALL 98S15

REPLACE CRUISE SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH

DIAG PERFORM RECALL 98S15

REPLACE SPEED CONTROL SWITCH

INSPECT AND REPLACE PRESSURE SWITCH AND CONNECTOR AS PER RECALL

98S15 98S15 REPLACED CONNECTOR AND SWITCH

1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98S15B .B

RECALL 98S15 COMPLETED
 PER NOTIFICATION RECALL 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 98S15 RECALL INSTRUCTION
 PERFORMED RECALL 98S15, INSTALLED NEW DEACTIVATION SWITCH.
 RECALL 98S15B COMPLETED RECALL 98S15B COMPLETED
 F RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
 98S70 98S15 RECALL, R & R SPEED CONTROL BRAKE DIAG. SWITCH AS PER RECALL
 146187 PERFORMED RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
 PERFORMED RECALL 98S15, ROAD TEST AND VERIFIED REPAIR
 RECALL DONE
 107812 PERFORM RECALL 98S15 REPLACE BRAKE SWITCH JUNT
 RECALL REPAIR AS PER RECALL 98S15 DEACTIVATION SWITCH REPLACEMENT
 98S42 RECALL 98S15 REPLACED SPEED CONTROL SWITCH ROAD TEST OK
 MISC VEHICLE DAMAGE: L-F POWER WINDOW CONTROLS LOOSE BEZEL; AIR BAG LIGHT ON; FOG HORN ON
 REPLACED CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR
 98S15 98S15
 RECALL COMPLETED
 78148 REPLACED SWITCH PER RECALL TECH 508
 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL
 COMPLETE RECALL
 REPL SWITCH PER RECALL
 120489 REPLACE SWITCH PER 98S15 8728
 SPD CTRL DEACTIVATION SW REPLCMNT PERFORMED RECALL 98S15
 74806 RECALL REPLACED C C DEACTIVATOR SWITCH
 RECALL REPLACE M SPEED CONTROL DEACTIVATION SWITCH PER RECALL
 80800 RECALL DID RECALL REPLACED SWITCH AND WIRES TECH 10
 RECALL RECALL
 SAFETY RECALL 98S15 -REPLACE SPEED CONTROL DEACTIVATION SWITCH
 RECALL 98S15 RECALL
 REPLACE DEACTIVATION SWITCH SPEED CONTROL
 REPLACE DEACTIVATION SWITCH AND HARDSHELL CON NECTOR PER RECALL
 CAMPAIGN COMPLETED
 48882 W F INSTALLED DEACTIVATION SWITCH AS PER RECALL
 48823 REPLACE SWITCH PER RECALL
 REPLACED DEACTIVATION SWITCH.
 RECALL PERFORM RECALL 98S15
 PERFORM UPDATE
 77216 RECALL 98S15 RECALL 98S15 DEEACTIVATION SWITCH
 FACTORY RECALL COMPLETED RECALL
 RECALL 98S15 PERFORM RECALL 98S15

 RECALL
 138253 PERFORMED RECALL
 PERFORMED RECALL 98S15
 PERFORMED RECALL

 NA 98S15 REPLACED SWITCH
 1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98S15B .8
 PERFORM RECALL 98S15- REPLACE SPEED CONTROL SWITCH

REPLACE CRUISE DEACTIVATION SWITCH

PERFORMED RECALL

PERFORM RECALL

03705 REPLACED C-C DE-ACTIVATION BUTTON M1 0.5 CC 42 PARTS FAILURE THIS RO LINE A

JS PERFORM RECALL REPL DEACTIVATION SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

RECALL COMPLETED

X REPLACED CRUISE DEACTIVATION SWITCH

PERFORMED RECALL

REPL CRUISE CONTROL SWITCHES

1 PERFORM RECALL AS PER INSTRUCTIONS

RECALL 00S15 PERFORMED RECALL 00S15

SPEED CONT REPL SWITCH

00 00S15B

RECALL REPLACE SWITCH

PERFORMED RECALL 00S15

PERFORME 00S15

COMPLETED RECALL 00S15B 1

DID RECALL 00S15

120002 PERFORMED RECALL, REPLACED SWITCH

00S15 00S15

REPLACE SWITCH

RECALL 00S15 00S15 REPLACE SPEED CABLE

REPLACE DEACTIVATION SWITCH AS PER RECALL

00S15 00S15 PERFORM RECALL

PERFORMED RECALL 00S154

REMOVE TAPE AND SECURE LABOR OP 00S15E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OP 00S15B .5 REMOVED TAPED AND SE

00S02 RECALL INSPECT AND REPLACE SPEED CONTROL SWITCH

COMPLETE RECALL

PERFORMED RECALL 00S15-INSTALL SWITCH

DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPLACED SWITCH AND CONNECTOR

INSTALL NEW SWITCH

REPLACE DEACTIVATION SWITCH AS PER 00S15

00S13 PERFORM RECALL 00S15.

42068 R/R SWITCH.

COMPLETED RECALL

REPLACE BRAKE SWITCH

PERFORMED RECALL 00S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 00S15

00S15 SPEED CONTROL DEACTIVATION REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 00S15

00S15 00S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

115140 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 00S15

REPLACED BRAKE DEACTIVATION SWITCH

43137 PERFORM RECALL FOR CRUISE DE-ACTIVATION REPLACED SWITCH AND CONNECTOR

REPLACED SWITCH PER RECALL 99S15

PERFORMED RECALL 99S15

44891 PERFORM RECALL 99S15 REPLACED DEACTIVATION BRAKE SWITCH

INSTALL PER RECALL

PER RECALL REMOVED OLD SWITCH AND INSTALL NEW SWITCH AND CON N PER RECALL

PERFORMED RECALL 99S15

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH ASSEMBLY. CHECK NORMAL OPERATIONS.

PERFORMED RECALL

PERFORM RECALL 99S15 R/R CRUISE CONTROL DEACTIVATION SWITCH & CONNECTOR

PERFORMED RECALL 99S15-INSTALL SWITCH

REPLACE CRUISE DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15

RECALL

SW REPL

99S15

99S15 RECALL

REPLACE SWITCH PER RECALL

PER RECALL 99S15

REPLACED SWT PER RECALL

RECALL

99S15B

PERFORM RECALL 99S15B

RECALL 99S15

99S15

SAFETY RECALL

99S15-REPLACE SPEED CONTROL DEACTIVATION SWITCH

47172 79 PERFORM 99S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST

74389 CC 42 99S15B 0.5- ADMIN 0.1 REPLACED SWITCH AND CONNECTOR.

1 PERFORM RECALL 99S15

REPLACE DEACTIVATIO SWITCH PER RECALL

99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN.

00

99S15B

REPLACED SWITCH AND CONNECTOR

PERFORMED RECALL AS PER INSTRUCTIONS

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

PERFORM RECALL ON SPEED SWITCH

1 INSTALLED SWITCH AS PER RECALL

99S15 RECALL

1 INSTALL DEACT SWITCH AS PER RECALL

1 REPLACE THE CRUISE DEACT SWITCH PER RECALL

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15

PERFORM RECALL 99S15

REPLACED CONNECTOR AND SWITCH AS PER RECALL

REPLACED SWITCH PER RECALL

RECALL 99S15

TECH 141 PERFORM RECALL 99S15

MODIFY AS PER INSTRUCTIONS

68848 RECALL J5 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15B

1 PERFORMED RECALL 99S15 REPLACED CRUISE CONTROL SWITCH AND CONNECTOR

THE SHORT MAY DISABLE THE SPEED CONTROL SYSTEM OR CAUSE A FUSE TO OPEN. AFTER INSPECTION, IF THE VEHICLE IS INVOLVED THE DEALER WILL

RECALL 99S15 RECALL 99S15

REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99S15

99S15 SP SW REPLACE

RECALL PERFORMED

RECALL COMPLETED

PERFORMED RECALL 99S15

REPLACED SWITCH AND CONNECTOR

REPLACED SC DEACTIVATION SWITCH 99S15

99S15, CRUISE SWITCH

REPLACE CRUISE SWITCH PER RECALL

RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL 99S15E

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

RECALL 99S15

RECALL CRUISE CONTROL RECALL 99S15

101906 99S15 RECALL

78348 99S15B 0.5 ADMIN 0.1

PERFORM RECALL

REPLACE DEACTIVATION SWITCH AS PER RECALL

REPLACED SPEED CONTROL SWITCH AND CONNECTOR

99S15 99S15 REPLACED CONNECTOR AND SWITCH

PERFORMED RECALL 99S15

PERFORMED 99S15 RECALL

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99S15.

COMPLETE RECALL 99S15

RECALL COMPLETE

PERFORMED RECALL

REPLACE SWITCH

PERFORM 99S15 RECALL

X PERFORMED RECALL

REPLACED CRUISE DEACTIVATION SWITCH PER RECALL 99S15

128402 INSTALLED RECALL

74329 RECALL 0.5 99S15B INSTALLED RECALL SWITCH

RECALL 99S15 RECALL COMPLETE

47812 99S15 RECALL 99S15 REPLACE DEACTIVATOR SWITCH

REPLACE SWITCH AND HARD SHELL

PERFORM RECALL

99S15 RECALL

147466 PERFORM 99S15

- 99S15 RECALL COMPLETED

RECALL COMPLETED.

. REPLACED CRUISE DEACTIVATION SWITCH AS PER RECALL 99S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
1 REPLACE DEACTIVATION SWITCH

88711 REPLACE THE DEACTIVATION SWITCH

REPAIR AS PER RECALL

RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR
RECALL SW REPL

REPLACED DEACTIVATION SWITCH AND CONNECTOR.

05382 PERFORM 99S15 SPEED CONTROL SWITCH ROAD TEST OK

RECALL COMPLETED.

PERFORM 99S15 REPLACE CRUISE DUMP SWITCH BLEED BRAKES

RECALL 99S15 INSTALLED MODIFICATION FOR CRUISE CONTROL

PERFORM RECALL

COMPL: RECALL 99S15, SPEED CONTROL SWITCH. REPLACED DEACTIVATION SWITCH & CONNECTOR. APPROX TIME: 0.5 HRS

RECALL PERFORMED RECALL 99S15

COMPLETED RECALL 99S15

REPL SPD CNTRL DEACTIVATION SW

REPLACED FAULTY C-CONTROL DEACTIVATION SWITCH, PER 99S15B.

99S15 RECALL ON OASIS 99S15 RECALL REPLACED SWITCH & CONNECTOR

99S15 RECALL

PERFORM RECALL 99S15 REPLACE SPEED CONTROL SWIT

PERFORM RECALL 99S15

RECALL 99S15 PERFORMED RECALL 99S15

REQUEST RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

UNKNOWN INSTALL CRUISE SWITCH AND CONNECTOR PER 99S15

COMPLETED RECALL 99S15

99S15 RECALL

REPLACE AS PER RECALL 99S15

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15

SHORT MAY DIASABLE SPEED CONTROL OR CAUSE BRAKE LIGHT FUSE TO OPEN DISCONNECT CONNECTOR FROM CRUISE DEACTIVATION SWITCH & PRC

75887 PERFORMED REC ALL 99S15

RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH

152122 RECALL 0.5 99S15B INSTALLED RECALL SWITC

RECALL 99S15 PERFORM RECALL 99S15

INSTALL SPEED CONTROL CONNECTOR

0667 99S15 99S15 .5 .5 99S15

83160 RECALL 0.5 INSTALLED RECALL SWITCH

PERFORMED RECALL

REPLACED DEACTIVATION SWITCH AD HARD SHELL CO NNECTOR AS PER RECALL 99S15

99S15 RECALL PERFORMED

83460 REPLACED SPEED CONTROL DEACTIVATION S-W PER R RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

RECALL COMPLETED

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

82 INSTALL RECALL SWITCH

RECALL PERFORMED RECAL

PERFORMED RECALL AS NEEDED ALL AOK
 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
 99S15 99S15
 REPLACE SWITCH AND CONNECTOR
 REPLACE SWITCH AND HARD SHELL
 REPLACE KIT PER RECALL
 RECALL PERFORMED
 INSTALLED SWITCH PER RECALL
 RECALL 99S15 COMPLETED
 REPLACE DEACTIVATION SWITCH
 41352 99S15 W REPLACE SPEED CONT. SWITCH
 89142 RECALL 99S15 RECALL 99S15
 188501 PERFORM RECALL 99S15 SPEED CONTROL DEACTIVATIO & REPLACE WITH NEW KIT
 1 RECALL COMPLETE
 99208 REPLACE DEACTIVATION SWITCH PER 99S15 RECALL
 PERFORMED RECALL 99S15
 REPLACED SPEED CONTROL DEACTIVATION SWITCH
 1 PERFORMED RECALL 99S15
 190119 INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15 DONE 7216
 CHECK AND REPAIR AS REQUIRED
 RECALL RECALL
 ONP PERFORMED RECALL
 INSTALLED DEACTIVATION SWITCH AS PER RECALL 99S1
 RECALL SWITCH REPLACE DEACTIVATION SWITCH & CONN.
 99S15 RECALL 99S15 RECALL
 INSTALL CRUISE DISABLE SWITCH AND CONNECTOR PER RECALL
 148342 RECALL 99S15 REPLACE CRUISE CONTROL SWITCH AND PLUG

 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

RPL SPEED CONTROL SWITCH PER 99S15

REPLACE DEACTIVATER SWITCH-WARRANTY-RECALL=BILL
 F RC 99S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
 80683 W REPLACED SPEED CONTROL SWITCH PER RECALL 99S15.

99S15 99S15
 TEST & REPLACE DEACTIVATION SWITCH
 INSTALLED SPEED CONTROL DEACTIVATION SWITCH AND HEAT SHIELD CONNECTOR PER RECALL
 PERFORM RECALL
 REPLACE DEACTIVATION SWITCH AS PER RECALL 99S15
 PUT NEW DEACT SWITCH FOR SPEED CONTROL AND NEW WIRE CONNECT AND BLEED BRAKES
 1 COMPLETED RECALL PER FORD INSTRUCTIONS. REMOVED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH. THANK YOU, KENN
 SPEED CNTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 99S15
 1 DEACTIVATION SWITCH RECALL

RECALL 99S15 REPL SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

REPLACED SC DEACTIVATION SWITCH 98S15

RECALL 98S15

98S15 RECALL ON OASIS 98S15 RECALL REPLACED SWITCH & CONNECTOR

INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AS NOTED IN RECALL 98S15 ALL OK TO RELEASE

1 PERFORMED RECALL 98S15

RPLC CRUISE CTRL DEACTIVATION SWITCH & CONNECTION PER 98S15

AS PER RECALL

98S15 RECALL TO INSTALL DEACTIVATION SWITCH FOR SPEED CONTROL

111047 RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH. REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL 98S15

REPLACED BRAKE DEACTIVATION SWITCH

63242 0.5 HRS REPLACED DEACTIVATION SWITCH PER RECALL 98S15.

104687 RECALL INSTALL NEW SWITCH AND PLUG

RECALL 98S15

PERFORMED RECALL 98S15

RECALL 98S15 RECALL PERFORME

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15

REPLACED SWITCH PER 98S15

70708 RECALL WPG40 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15

PERFORM RECALL 98S15 RNR CRUISE CONTROL DEACTIVATION SWITCH & CONNECTOR

98S11 REPLACE SPEED CONTROL SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15

RECALL COMPLETED

COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

PERFORMED 98S15 RECALL

1 PUT KIT IN 77 STEVE

RECALL 98S15 REPLACED DEACTIVATION SWITCH AS PER RECALL

1 REPLACE SPEED CONTROL SWITCH 1

SPEED CONTROL SWITCH 98S15 RECALL

PERFORMED RECALL

REPLACED SC DEACTIVATION SWITCH 98S15

PERFORMED RECALL 98S15

98S15 RECALL ACT SWITCH

PERFORM RECALL

101419 98S15 RECALL WF INSTALL SPEED CONTROL SWITCH

RECALL 98S15 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL

RNR DEACTIVATION SWITCH PERFORM RECALL 98S15

PERFORMED FACTORY RECALL 98S15

RECALL 98S15 RECALL 98S15

100714 RECALL 98S15 0.5HRS REPLACE SWITCH AND CONECTOR T10372

RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

1 PERFORM RECALL REPLACE DEACT SWITCH
 REPL CRUISE CONTROL SWITCH
 RECALL 99S15
 RNR DEACTIVATION SWITCH PERFORM RECALL 99S15
 RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL
 SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15
 1 PERFORMED RECALL 99S15
 RECALL 99S15
 RECALL COMPLETE
 RECALL 99S15 REPLACED SWITCH
 PERFORMED 99S15 RECALL
 1 REPLACE CRUISE DEACTIVATION SWITCH & CONNECTOR PER RECALL
 PERFORM RECALL 99S15 99S15
 RECALL PERFORM RECALL PER PROGRAM 99S15, SPEED DEAC SWITCH
 DEACTIVATION SWITCH 99S15
 PERFORMED RECALL 99S15 SPEED CONTROL
 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
 RECALL 99S15
 - MODIFY PER RECALL 99S15
 1 REPLACED SWITCH AND CONNECTOR
 RECALL COMPLETED 99S15 PERFORMED
 RECALL 99S15 REPLACED DEACTIVATER SWITCH AND CONNECTOR AS PER RECALL 99S15.
 REPLACED SPEED CONTROL DEACTIVATION SWITCH
 41762 RECALL 99S15 PERFORMED RECALL 99S15
 SPEED CONTROL SWITCH 99S15 RECALL
 36745 RECALL WARR PERF. RECALL 99S15
 OPEN RECALL PERFORM RECALL
 99S15 REPLACE CRUISE CONTROL SWITCH PER RECALL
 RECALL COMPLETE
 AS PER RECALL 99S15 RECALL TO INSTALL DEACTIVATION SWITCH
 PERFORMED RECALL AS PER INSTRUCTIONS
 PERFORM RECALL 99S15
 RECALL COMPLETE
 RNR DEACTIVATION SWITCH PERFORM RECALL 99S15
 X 99S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
 71628 RECALL CRUZ CONTROL DEACTAVATION SW AND CONECTO WARR REPLACED DEACTAVATION SW AND HARD SHELL CONECTO ASSY PER RECALL
 91271 R99S15 0.6HR RECALL COMPLETE
 PERFORM RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONECTO
 RECALL INSTALLED DEACTIVATION SWITCH
 RECALL 99S15 REPLACED SWITCH

 INSTALLED KIT TO COMPLETE
 RECALL 99S15 99S15
 PERFORM RECALL 99S15
 RECALL 99S159 ... REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER 99S15
 APPLIED RECALL 99S15
 INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL

INSTALL CRUISE SWITCH
90S15 RECALL PERFORMED
REPLACED SWITCH AND HARD SHELL CONNECTOR
PERFORM RECALL 90S15
60528 REPLACE BRAKE SWITCH AS PER RECALL 90S15B 0.5 HR
RECALL 90S15. REPAIRED IN AW RECALL 90S15.
1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
INSTALL CRUISE CONTROL DEACTIVATION SWITCH.
PERFORM RECALL 90S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
87129 INSTLL SWITHCH AND CONNECTOR

RECALL 90S15 REMOVED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 90S15
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 90S15
REPLACE DEACTIVATION SWITCH
PERFORM RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL
90S17 RECALL 90S15B 0.5 REPLACE DEACTIVATION SWITCH & HARDSHELL CONN

90S15 RECALL PERFORMED 90S15
107605 REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL. ***WIPER DID NOT WORK PRIOR TO REPAIR. WIPER MOTOR IS MISSING***
PERFORMED RECALL 90S15
90S15 INSTAL SWITCH AND CONNECTOR PER RECALL
1 COMPLETED RECALL 90S15
PERFORM RECALL 90S15
RECALL COMPLETE
PERFORMED RECALL
118500 90S15B .5HR.L PERFORM RECALL
119094 INSTALLED DEACTIVATION SWITCH AND WIRE PLUG
33123 90S15 REPLACED THE BRAKE LINE SWITCH
1 CHECK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
90S15 REPLACE SWITCH AND CONNECTOR PER RECALL
REPLACE SWITCH
PERFORM RECALL 90S15 90S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL
RECALL COMPLETE
39108 RECALL 90S15B 0.3L PERFORMED RECALL
88288 RECALL 90S15 WR REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL

1 --COMPLETED RECALL 90S15
TECH 812 PERFORMED RECALL SPEED CONTROL DEACTIVATION SWITCH
PERFORM RECALL 90S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR.
REPLACED SPD CONTROL DEACTIVATION SWITCH.
PERFORM RECALL
RECALL COMPLETED
00891 RECALL RECALL 90S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
1 PERFORM RECALL
PERFORMED RECALL 90S15,REPLACE SPEED DEACTIVATION SWITCH

SPD CTRL DEACTIVATION SW REPLACINTPERFORMED RECALL 99S15
93134 INSTALLED SW. AND HARD SHELL CONNECTION
RECALL 99S15
99S15B 0.5

WORKING ON 74027 FROM 10-12-99 HEATER. PERFORM 99S15 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACEMENT RECALL
RECALL COMPLETED PERFORM CAMPAIGN PER FORDS SPECIFICATIONS AND INSTRUCTIONS INSTALLED DEACTIVATION SWITCH
PERFORMED RECALL REPLACED SWITCH AND CHECKS OK
99S15B RECALL
COMPLETE RECALL 99S15
RECALL 99S15B _ REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER 99S15
SPEED CONTROL DEACTIVATION MOD. 99S15 RECALL REPLACE SPEED DEACTIVATION SWITCH AND CONNECTOR
RECALL 99S15 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO
1 PERFORM RECALL

RECALL COMPLETED
SWITCH MAY DEVELOP A RESISTIVE SHORT IN THE ELECTRICAL CKT THAT MAY RESULT IN AN UNDERHOOD FIRE. REPLACE SPEED CONTROL DEACTIVATI
PERFORM RECALL INSTALL SWITCH
REPLACED CRUISE CONTROL DEACTIVATION SWITCH
INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS ==THANK YOU-DARREN GREEN TEAM== 1
RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL
OPEN RECALL PERFORMED RECAL
PERFORM RECALL
REPLACED SC DEACTIVATION SWITCH 99S15
82731 R99S15 0.5HR RECALL COMPLETE
RECALL 99S15 REPLACE C-C SW
38487 99S15 W REPLACE SWITCH 99S15 RECALL GA
. INSTALL SWITCH AS PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH.
1 PERFORMED RECALL 99S15
83640 RECALL WTY PREFORM RECALL

INSTALL CRUISE CONTROL SWITCH AS PER RECALL
PREFORM RECALL PER TECH INSTRUCTIONS
500098 WARR PERFORM RECALL 99S15
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ASSEMBLY. CHECK NORMAL OPERATION.
INSTALL UPATED SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH
RECALL COMPLETED
REPLACED SPEEDS CRUS CONTROL SWITCH FOR RECALL
144156 INSTALL RECALL PARTS
PERFORMED RECALL 99S15 INSPECTED-REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTO

90304 REPLACE CRUISE DEACTIVATION SWITCH PER RECALL 99S15. ALSO NOTE THAT DUE TO MILEAGE RECOMMEND TRANS SERVICE, COOLANT SERV
1 REPLACE DEACTIVATION SWITCH AS PER RECALL 99S
1 PERFORM RECALL REPLACE DEACTIVATION SWITCH

RECALL 99S15 R AND R SPEED CONTROL DEACTIVATION SWITCH PER RECALL

73063 RECALL COMPLETE

REMOVE AND REPLACE DEACTIVATION SWITCH AS PER RECALL 99S15

PERFORM RECALL

99S15-SWITCH RECALL 99S15-SWITCH RECALL

99S15 99S15

RECALL 99S15 RECALL 99S15

04248 RECALL REPLACED CRUISE SW

PERFORMED OPEN RECALL

38582 RECALL W/F30 PERFORMED 99S15 RECALL INSPECTION ONLY.

REPLACED SWITCH

PERFORM RECALL 99S15 SPEED CONTROL

REPLACED SWITCH AND CONNECTOR

98779 99S15 PERFORMED RECALL

RECALL 99S15

1 PERFORM RECALL

RECALL RECALL

1 PERFORMED RECALL 99S15

REPLACED CRUISE DEACTIVATION SWITCH

99S15 99S15

PERFORMED RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR.

74490 PERFORMED RECALL 99S15 REPLACED HARD-SHELL CONNECTOR

PERFORMED RECALL 99S15

PERFORMED RECALL

COMPLETED RECALL 99S15

RECALL 99S15-REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACED SWITCH & CONNECTOR PER RECALL

99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL

RECALL 99S15 REPLACE SWITCH AND CONNECTOR

COMPLETE RECALL 99S15

1 PERFORMED RECALL

RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15

OPEN RECALL PERFORMED RECALL

98229 REPLACE SPEED CONTROL SWITCH + CONNECTOR

INSTALLED DEACTIVATION SWITCH PER RECALL

1 PERFORM RECALL 99S15

SPEED CONTROL SWITCH

REPLACE CRUISE DEACTIVATION SWITCH PER RECALL

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER RECALL 99S15.

REPLACE DEACTIVATION SWITCH

REPLACE BRAKE PRESSURE SWITCH PER RECALL

RECALL 99S15 COMPLETED

REPLACE SWITCH AND CONNECTOR PER RECALL
REPLACED WIRING HARNESS FROM COMPUTER & INJECTOR
1 PERFORMED RECALL 99S15

024 REPLACED CRUISE DEACTIVATION SWITCH
PERFORM RECALL

PERFORMED RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
R AND R DEACT SWITCH AND CONNECTOR

189448 99S15 RECALL WF INSTALL SPEED CONTROL DEACTIVATION SWITCH
99S15

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99S15.

REPLACED THE SWITCH PER RECALL 99S15
REPLACED SPEED CONTROL SWITCH.

RECALL 99S15 REPLACE C-C SW

RECALL SW CRUISE SW REPL

1 REPLACE DEACTIVATION SWITCH AS PER RECALL 99S

PERFORMED 99S15 RECALL

99: PERFORMED 99S15 RECALL, REPLACE CRUISE SWITCHES

58876 RECALL 99S15 DONE SPEED CONTROL DEACT SWITCH

COMPLETED RECALL

REPLACED SPEED CONTROL CABLE PER RECALL

FACTORY RECALL COMPLETED RECALL

PERFORM RECALL

99S14 REPLACED SPEED CONTROL SENSOR AS PER RECALL 99S15

REPLACE CRUISE DEACTG SWITCH

89090 W REPLACE SWITCH CA

PERFORMED RECALL REPLACE HARD SHELL CONNECTOR

REPLACE CRUISE DEACT SWITCH

OPEN RECALL PERFORMED 99S15 RECALL

PERFORM RECALL ON SPEED CONTROL SWITCH

RNR DEACTIVATION SWITCH PERFORM RECALL 99S15

RECALL COMPLETE

78843 SAFETY RECALL 99S15 W COMPLETED SAFETY RECALL

PERF RECALL 99S15

RECALL COMPLETE

PERFORMED RECALL 99S15-INSTALLED DEACTIVATION S WITCH

D RC 99S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

REPLACE SWITCH PER RECALL

FACTORY RECALL COMPLETED RECALL

99S15 REPLACE CRUISE CONTROL SWITCH PER RECALL

INSTALL CRUISE CONTROL SWITCH PER RECALL

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15

PERFORM RECALL 8222

RECALL 99S15 COMPLETED

58360 R98S15 0.05HR RECALL COMPLETE

1 INSTALL SWITCH FOR RECALL

RECALL COMPLETED PERFORM CAMPAIGN PER FORDS SPECIFICATIONS AND INSTRUCTIONS 98S15B FOR .5 AND .1 FOR ADMIN. TIME
COMPLETE RECALL 98S15

REPLACE DEACTIVATION SWITCH

AS PER RECALL

98S15 RECALL TO INSTALL DEACTIVATION SWITCH

PERFORM 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

98S15 RECALL

PERFORM RECALL 98S15 SPEED CONTROL SWITCH REPLACEMENT

PERFORM RECALL 98S15

1 INSTALLED NEW CRUISE SWITCH PER RECALL 98S15.

RECALL COMPLETE

PERFORM RECALL

1 PERFORM RECALL

INSTALL DEACTIVATION SWITCH PER RECALL

155224 79 PERFORM 98S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST JH

REPLACED DEACTIVATION SWITCH AND HARD SHELL

136017 SPEED CONTROL DEACTIVATION SWITCH RECAL 98S15 RENEW SPEED CONTROL DEACTIVATION SWITCH & CONN 23

INSTALL SPEED CONTROL DEACTIVATOR SWITCH PER RECALL. WAITING

COMPLETED RECALL 98S15

RECALL 98S15

98S15 RECALL PERFORMED

RECALL 98S15 PERFORM RECALL 98S15

75000 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98-S-15

118024 RECALL 98S15B .5, ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL

AS PER RECALL

98S15 RECALL TO REPLACE DEACTIVATION SWITCH

AS PER RECALL

98S15 RECALL TO INSTALL SPEED CONTROL DEACTIVATION SWITCH

REPLACED CRUISE DEACTIVATION SWITCH AS PER RECAL

PERFORM RECALL.....

DID RECALL 98S15

PERFORMED RECALL 1

REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

RECALL

REPLACED DEACTIVATION SWITCH AS PER RECALL

RECALL

98S15 - B - RECALL

RECALL COMPLETED

COMPLETED RECALL

98S15

98S15

SWITCHES ARE SHORTED REPLACE THE SWITCH

98S15 RECALL

98S15 RECALL COMPLETE

PERFORMED RECALL 98S15B REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

RNR DEACTIVATION SWITCH

PERFORM RECALL 98S15

98S15 RECALL WF INSTALL SPEED CONTROL SWITCH

REPLACED SWITCH PER RECALL 98S15

98S15 RECALL
RECALL COMPLETE

1 PERFORMED 98S15 RECALL
1 PERFORMED RECALL 1

98S15 RECALL PERFORM RECALL 98S15 SPEED CONTROL SWITCH REPLACEMENT
77022 TIME TO REPLACE SPEED CONTROL SWITCH AND CONNECT OR PER RECALL 98S15
98S15 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
RECALL 98S15 REMOVED AND REPLACED THE CRUISE DEACTIVATION SWITCH AND CONNECTOR PER RECALL 98S15. TEST DROVE VEHICLE AND THE
78000 98S15 .5 REPLACE SWITCH AND CONNECTOR PER RECALL
RECALL REPLACE SWITCH, HARD SHELL CONNECTOR & BLEED BRAKES
RECALL 98S15- REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
RNR DEACTIVATION SWITCH PERFORM RECALL 98S15
RECALL LETTER PERFORM RECALL AS PER FACTORY INSTRUCTION
PERFORM RECALL
INSTALLED SPEED CONTROL DEACTIVATION SWITCH KIT
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL 98S15
RECALL COMPLETE
RECALL COMPLETED
INSTALL NEW DEACTIVATION SWITCH AND HARNESS PER RECALL.

RECALL 98S15 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL
1 REPLACED CRUISE SWITCH AND CONNECTOR.
REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
INSTALL SWITCH KIT PER RECALL.

0 98S15
RECALL 98S15 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH
CONNECTOR 98S15

SPD CTRL DEACTIVATION SW REPLCMNT PERFORMED RECALL 98S15

1 PERFORMED RECALL
REPLACED CRUISE CONTROL DEACTIVATION SWITCH
PERFORMED RECALL 98S15

- PERFORMED RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH
145328 RECALL WPG40 RECALL COMPLETED, REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR

RECALL 98S15 COMPLETED

TECH INSTALLED CRUISE DEACTIVATION SWITCH PER FORD RECALL

REPLACE CRUISE CONTROL SWITCH

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR. CHECK NORMAL OPERATION.

COMPLETE RECALL 98S15

RECALL REPLACE DEACTIVATION SWITCH AND CONNECTOR PER RECALL
REPLACED DEACTIVATION SWITCH AS PER 98S15

DID RECALL

PERFORMED RECALL

REPLACE SWITCH PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 98S15B 0.5, ADMIN 0.1

REPL CRUISE CONTROL SWITCH 98S15

1 INSTALL DEACTIVATION SWITCH
PERFORMED RECALL 98S15

43640 98S15B .5 .5 RECALL
98S15 REPLACED SWITCH
RECALL COMPLETE

20: PERFORMED 98S15 RECALL, REPLACE SPEED CONTROL SWITCH
RECALL 98S15B RECALL 98S15B
PERFORM RECALL 98S15

VERIFY FUEL ODOR,CK FOR LEAKS RI UPPER PLENUM,EGR VALVE,RI FUEL RAIL,INJ ASSY,RR INJECTOR O RING SEALS,PLENUM AND EGR GSKTS,CHECK I

52785 RECALL 98S15 BASIC 98S2 INSTALLED SWITCH AS PER RECALL 98S15
126726 RECALL 98S15 0.5 INSTALL SPEED CONTROL DEACTIVATION SWITCH
98S15

1 REPLACE HARD SHELL CONNECTOR FOR CRUISE
70470 RECALL 98S15 DEACTION SWITCH INSTALL SWITCH AND CONNECTOR PER RECALL TECH 4132
98S15 REPLACE SWITCH AND CONNECTOR PER RECALL
PERFORM SPEED CONTROL DEACT SW RECALL
98S15B CHECK-REPLACE SPEED CONTROL DEACTIVATION SWITCH-CONNECTOR RECALL 98S00 COMPLETED

REPLACE SWITCH PER RECALL
REPAIRED PER RECALL
PERFORM RECALL
REPLACE SWITCH
70788 W REPLACE SWITCH AND CONNECTOR PER RECALL GA
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15

PERFORMED RECALL 98S15
PERFORMED RECALL
RECALL 98S15
REPLACE DEACTIVATION SWITCH PER 98S15
94428 RECALL 98S15 PERFORMED RECALL 98S15
PERFORM RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO

INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL
INTERM REPAIR REMOVED TAPE SECURE THE SPEED CONTROL DEACTIVATION SWITCH LABOR OP 98S15E 0.3 HRS PERMANENT REPAIR REPLAC
71394 RECALL WTY INSTALL SWITCH AND WIRE END PEWR RECALL

88027 PERFORMED RECALL 98S15 INSTALLED SWITCH
R&R DEACTIVATION SWITCH

134112 INSTALL NEW SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

COMPLETE RECALL 98S15
1 INSTALL SWITCH 1 98S15B 0.6
1 REPLACE DEACTIVATION SWITCH AS PER RECALL 98S

REPLACE SPEED CONTROL DEACTAVATION SWITCH AS PER RECALL 98S15
RECALL COMPLETED PERFORM CAMPAIGN PER FORDS SPECIFICATIONS AND INSTRUCTIONS 98S15B FOR .5 AND .1 FOR ADMIN. TIME
PERF. RECALL
PER THE OASIS PERFORM RECALL #98S15.
RECALL 98S16

REPLACE SWITCH AND CONNECTOR PER RECALL
RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
PERFORM RECALL 98S15
130296 98S15B 0.5 ADMIN 0.1
50188 98S15 .5 REPLACE SWITCH PER RECALL (((ADVISE CUST MASTER CYLINDER IS LEAKING))))))) NEEDS BOOSTER AND MASTER)))))))))
REPLACED DEACTIVATION SWITCH.
REPLACED SWITCH AND CONNECTOR PER RECALL 98S15.
RECALL RECALL
RECALL 98S15 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH

98S15 RECALL 98S15 REPAIR AS PER RECALL
98S15 RECALL PERFORMED
1 PERFORMED RECALL 98S15
RECALL 98S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 98S15.
REPLACED SPEED CONTROL DEACTIVATION SWITCH

RECALL 98S15 98S15 INSTALLED SPEED CONTROL SWITCH
PERFORM RECALL REPALCE SWITCH AND HARD SHELL CONNECTOR.
98S15 RECALL
CAMPAIGN COMPLETED
1 REPLACE DEACTIVATION SWITCH AS PER RECALL 98S
OPEN RECALL PERFORMED RECAL
PERFORMED CRUISE CONTROL CABLE 98S15
FACTORY RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
REPLACE SWITCH PER RECALL
REPLACE SPEED CTRL DEACTIVATION SWITCH AND HARD SHELL PER RECALL
RECALL 98S15
114209 INSTALLED SWITCH PER RECALL
INSTALLED CONNECTOR AND DEACTIVATION SWITCH
RECALL 98S15 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND PLUG
93789 RECALL 98S15 REPLACE CRUISE CONTROL SWITCH AND PLUG
REPLACED CRUISE CONTROL DEACTIVATION SWITCH AND HARNESS.
PERFORMED RECALL 98S15. REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
REPLACED DEACTIVATION SWITCH
38859 INSTALL CRUISE CONTROL DEACTIVATION SWITCH RECALL 98S15
98S15 REPLACED SWITCH PER RECALL
REPLACED CRUISE CONTROL SWITCH

REPLACED SPEED CONTROL SWITCH PER RECALL
REPLACED DEACTIVATION SWITCH PER RECALL
COMPLETED RECALL
INSPECT SPEED CONTROL SYSTEM AND COMPLETE LABOR OPERATION ACCORDINGLY COMPLETED SPEED CONTROL DEACTIVATION CAMPAIGN

REPLACED CRUISE SWITCH AND CONNECTOR
AS PER RECALL 99S15 RECALL TO INSTALL SPEED CONTROL SWITCH

OPEN RECALL COMPLETED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

99S15 REPLACE DEACTIVATION SWITCH 99S15

1 PERFORMED RECALL

PERFORM RECALL

RECALL

99S15 RECALL

RECALL COMPLETED

104321 99S15 WARRANTY INSTALLED SPEED CONTROL DEACTIVATION SWITCH.

104105 99S15B JHILL PERFORM RECALL

99S15 OPEN PERFORM RECALL

100001 PERFORMED DEACT SW RECALL

REPLACE CRUISE SWT. AND CONNECTOR

PERFORM RECALL 99S15 REPLACE SPEED CONTROL SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

PER NOTIFICATION RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99S15 RECALL INSTRUCTION

PER RECALL PERF RECALL

RECALL 99S15 COMPLETED

RECALL 99S15 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH

CERTAIN 1982 AND 93 CROWN VICTORIA, GRAND MARQ, AND LINCOLN TOWN CARS WITH SPEED CONTROL AS PER RECALL-REPAIR SPEED CONTROL AC

RECALL RECALL

123030 99S15 WARR REPLACED SWITCH AND CONN

RECALL 99S15 PERFORMED RECALL 99S15

72845 INSTALLED SPEED CONTROL DEACTIVATION SWIT

99S15B 0.5, TOTAL HRS 0.5, PERFORMED RECALL 99S15, REPLACED DEACTIVATION SWITCH AND CONNECTOR ASSEMBLY.

REPLACE SPEED CONTROL SWITCH AND HARD SHELL CONNECTOR

REPLACED SWITCH AND CONNECTOR.

REPLACED SPEED CONTROL SWTY

99S15 PERFORMED RECALL

PERFORM RECALL INSTALL SWITCH

1 RECALL COMPLETE

COMPLETE RECALL 99S15

PERFORMED RECALL

RECALL

99S15

PERFORMED RECALL

RECALL 99S15 REQUIRED. INS AND REPL BRAKE DEACTIVATOR SWITCH PER RECALL 99S15.

PERFORMED RECALL

RECALL

99S15 SPEED CONT RECALL

99S15 REPLACE SWITCH AND CONNECTOR

99S15 REPLACED SPEED CONTROL CABLE AS PER RECALL

PERFORM RECALL 99S15

REPL CRUISE DEACTIVATION SWITCH

78375 RECALL W INSTALL KIT QA

93075 R R DEACTIVATOR SWITCH PER RECALL

RECALL 99S15 PERFORM RECALL 99S15

61733 R&R CRUISE SWITCH RECALL 99S15

18881 PERFORM RECALL 99S15

PERFORMED RECALL 99S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

RECALL 99S15 INSTALLED SPEED CONTROL DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACE BRAKE SWITCH PER RECALL

RECALL 99S15 PERFORMED RECALL REPLACED SPEED CONTROL DEACTIVATION SWITC

42351 INSTALL REVISED S.C. DEACTIVATION SWITCH.

PERFORMED RECALL

1 REPLACED SWITCH AND CONN

REPLACED SPEED DEACTIVATION SWITCH PER RECALL 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL. ALSO SEE RECALL RELATED DAMAGE IN REPAIR 0

RPLC SPEED CTRL DEACTIVATION SWITCH PER 99S15

REPLACED DEACTIVATION SWITCH

PERFORMED RECALL 99S15

RECALL 99S15 PERFORMED RECALL 99S15

RECALL 99S15

119888 RECALL 99S15 WARRANTY REPLACE SPEED CONTROL SENSOR AND CONECTOR DO TO RECALL 99S15 3720

X INSTALLED SWITCH

INSTALL KIT PER RECALL

X 99S15 RECALL PERFORMED

RECALL 99S15

1 PERFORM CAMPAIGN PER FORDS SPECIFICATIONS AND INSTRUCTIONS 99S15B .5

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

58147 REPLACE SPEED CONTROL DEACTIVATION SWITCH WHILE REPLACING SWITCH THREADS STRIPPED IN PROPORTIONING BLOCK ORDER PROPORT

REPLACE DEACTIVATION SWITCH

RECALL PERFORM RECALL

1 REPLACED SPEED CONTROL SWITCH 1

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

99S15 RECALL 99S15 RECALL

22280 REPLACED SPEED CONTROL DEACTIVATION SWITCH RECALL 99S15

REPL BK SW AND CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

99S15 99S15

99S15 REPLACED SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL 99S15

RECALL REPLACE CRUISE CONTROL CABLE DEACT SWITCH REPLACE CONNECTOR

PERFORM RECALL 99S15

91928 RECALL REPLACE SWITCH AND WIRE CONNECTOR.
REPLACE DEACTIVATION SWITCH
108- SPD CONTROL SWITCH RECALL - 99S15 --REPLACED SWITCH PER RECALL
99S15 RECALL
PERFORMED RECALL 99S15
45124 RECALL PERFORM RECALL #99S15 PER BULLETIN

REPLACE SPEED DEACTIVATION SWITCH RECALL COMPLE
82810 99S15
REPLACE SWITCH PER RECALL
1 PERFORM RECALL 99S15
RECALL CRUISE CONTROL RECALL 99S15
RECALL 99S15 COMPLETED RECALL 99S15
PERFORM RECALL
153988 RECALL WES PERFORMED RECALL 99S15
RECALL 99S15 PERFORM RECALL 99S15
COMPLETE RECALL 99S15
PERFORMED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
INSTALLED KIT TO COMPLETE

PERFORM RECALL 99S15 99S15
99S15 RECALL
PERFORM RECALL 99S15
RECALL 99S15 RECALL; REPLACED DEACTIVATION SWITCH
113299 RECALL PERFORM RECALL 99S15-SPD.CONTROL SWITCH REPLACEMENT-INSTALL NEW SWITCH ASS.
INSTALLED SPEED CONTROL DEACTIVATION SWITCH
RECALL 99S15 RECALL 99S15 COMPLETED
99S15 REPLACED CRUISE CONTROL DEACTIVATION SWITCH
99S15 99S15 RECALL
INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15 BOX B
45578 RECALL 99S15 REPLACE SWITCH PER RECALL 99S15
PERFORMED RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH.
1 RECALL COMPLETE
1 08 REPLACED SWITCH

PERFORM RECALL 99S15
VERIFY RECALL REPLACE CRUISE SWITCH AS PER FMC CHECK OK

RECALL 99S15 PERFORM RECALL REPL DEACTIVATION SWITCH AND CONNECTOR
PERFORMED SPEED CONTROL RECALL 99S15
R&R BRAKE SWITCH PER RECALL
1 INSTALL SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONNECTOR
PER FORD MOTOR CO. 99S15 REPLACE DEACTIVATION SWITCH AND CONNECTOR

132848 W PERFORME RECALL 99S15 REPLACE DEACTIV SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

99S15 99S15
28244 INSTALLED 99S15 SPEED CONTROL SWITCH
RECALL PERFORM RECALL 99S15, REPLACE SPEED CONTROL SWITCH

PERFORMED RECALL
PERFORMED RECALL
REPLACED SWITCH AND CONNECTOR
COMPLETED RECALL

SUPPLEMENT #1 5-88 INSPECTION OPERATION ADDED REPLACE SOEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REPLACED SWITCH

99S15 RECALL PERFORM RECALL
RECALL 99S15 REPLACE C-G SW
REPLACE DEACTIVATION SWITCH AND CONNECTOR PER RECALL INST

14728 RECALL 99S15 COMPLETED
REPLACE CONNECTOR AS PER 99S15 RECALL
REPLACE BRAKE ON-OFF SWITCH, AND BLEED BRAKES
99S15 COMPLETE F

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR
RECALL 99S15 INSTALL SWITCH PER RECALL

1 COMPLETED RECALL

99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH
99S15 RECALL 99S15 RECALL PERFORMED
REPLACE DEACTIVATION SWITCH PER RECALL
99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
99S15 REPLACED SWITCH AND CONNECTOR

99S15B REPLACED CRUISE CONTROL DEACTIVATION
PERFORMED RECALL 99S15
RECALL REPLACE CRUISE SWITCH
RECALL 99S15
PERFORM RECALL 99S15

REPAIR AS PER RECALL
1 PERFORM RECALL-REPLACE SWITCH AND CONNECTOR
REPLACED THE SWITCH PER RECALL 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15
TECH INSTALLED NEW CRUISE DE ACTIVATION SWITCH PER FORD RECALL
48888 PERFORMED RECALL AS PER INSTRUCTIONS
RECALL 99S15 PERFORM RECALL
RECALL 99S15 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO
REPLACE BRAKE PRESSURE SWITCH AND CONNECTOR
UNKNOWN INSTALL CRUISE CONTROL SWITCH AND CONNECTOR PER 99S15

105- SPEED CONTROL SWITCH RECALL-98S15 - INSTALL DEACTIVATION SWITCH PER RECALL
 146750 RECALL 98S15B 0.5 0.5 REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL 98S15
 REPLACE SWITCH AND CONNECTOR
 REPLACED SWITCH PER RECALL
 INSPECT AND OR PERFORM RECALL INSPECTED AND OR PERFORMED RECALL AS PER RECALL INSTRUCTIONS.
 SPD CTRL DEACTIVATION SW REPLACED/PERFORMED RECALL 98S15
 RECALL REPLACED DEACTIVATION SWITCH PER RECALL
 REPLACE SWITCH PER 98S15
 98S15 RECALL 98S15 RECALL COMPLETE
 38038 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH
 98S48 INSTALLED 98S15 SPEED CONTROL SWITCH
 REPL CRUISE SWITCH 98S15
 RECALL SPEED CONTROL REPLACE DEACTIVATION SWITCH

9878 98S15 RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH PER 98S15 RECALL JH
 1 PERFORM RECALL
 PERFORM RECALL 98S15
 1 COMPLETED REQUESTED RECALL AS PER FORD INSTRUCTIONS
 RECALL 98S15B 98S15B REPLACE SWITCH AND HARD SHELL CONNECTOR PLUG

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.
 98S15 REPLACED OLD SWITCH WITH NEW SWITCH
 1 PERFORMED RECALL 98S15

REPLACED SWITCH PER RECALL
 COMPLETE 98S15 RECALL
 38063 RECALL REPLACE CRUISE CONTROL SWITCH AND CONNECTOR
 REPLACE DEACTIVATION SWITCH
 PERFORMED 98S15 RECALL REPLACED SWITCH AS PER RECALL
 RECALL RENEW SPEED CONTROL DE-ACTIVATION SWITCH
 COMPLETED RECALL 98S15
 REPLACE SPEED CONTROL DEACTIVATION SWITCH
 SPD CTRL DEACTIVATION SW REPLACED/PERFORMED RECALL 98S15
 RECALL 98S15 PERF. RECALL
 REPLACED PARTS PER RECALL
 SPEED CONTROL DEACTIVATION SWITCH/PERFORMED RECALL 98S15

REPLACE CRUISE DEACTIVATION CONNECTOR AND SWITCH PER RECALL 98S15
 COMPLETED RECALL
 OPEN RECALL PERFORM RECALL
 REPLACED SWITCH & CONNECTOR PER RECALL
 RECALL 98S15 RECALL
 98S15 RECALL PERFORMED 98S15 RECALL, INSTALLED PART 98S52, REPLACED SPEED CONTROL DEACT SWITCH AND PERFORMED WIRING CONNECTOR
 RPL CRUISE SWITCH PER RECALL 98S15
 73200 REPLACE SPEED CONTROL SWITCH AND CONNECTOR PER RECALL 98S15.
 102874 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL 98S15.
 RECALL 98S15
 RECALL 98S15

SPD CTRL DEACTIVATION SW REPLACINTPERFORMED RECALL 99S15
COMPLETED RECALL

PERFORM 99S15 INSTALL KIT FOR CRUISE
REPLACE DEACTIVATION SWITCH & CONNECTOR
TECH COMPLETED RECALL AS REQUIRED
PERFORMED RECALL 99S15
RECALL 99S15 INSTALL KIT PER 99S15
37201 REPLACED SWITCH PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL
RECALL REPLACE SWITCH

PERFORMED RECALL SPEED CONTROL SWITCH

PERFORMED RECALL 99S15

99S15 99S15 INSTALL K
PERFORM RECALL 99S15 REPLACE CRUISE CONTROL SENS
INSTALLED SWITCH PER RECALL
48595 RECALL 99S15 REPAIR AS PER RECALL
PERFORMED 99S15
1 PERFORMED RECALL
99S15 PERFORM RECALL 99S15
93712 W REPLACE SWITCH AND CONNECTOR GA

PERFORM RECALL 99S15 PER TECHNICAL INSTRUCTIONS
INSTALL NEW CRUISE SHUT OFF SWITCH & CONNECTOR 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED
RECALL REPLACED CRUISE DEACTIVATION SWITCH PER RECALL
NA 99S15 REPLACED SWITCH

A SHORT IN THE SPEED CONTROL SWITH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUISE ALSO A FIRE COULD DEVOPE. REPLACE
SPD CTRL DEACTIVATOR SW REPLACMETPERFORMED RECALL 99S15
RECALLED BY FORD PERFORMED RECALL 99S15
99S15 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH
00 99S15B
OPEN RECALL 99S15 RECALL

1 COMPLETED REQUESTED RECALL AS PER FORD INSTRUCTIONS
83312 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR BODY. RECALL 99S15.
REPLACE SWITCH
REPLACED DEACTIVATION SWITCH
REPLACED BRAKE SWITCH
RECALL 99S15
SHORT MAY DIASABLE SPEED CONTROL OR CAUSE BRAKE LIGHT FUSE TO OPEN DISCONNECT CONNECTOR FROM CRUISE DEACTIVATION SWITCH & PRC
PERFORM RECALL 99S15

PERFORMED RECALL 98S15

X 98S15 - REPLACED CRUISE CONTROL SOLENOID PER RECALL

RECALL COMPLETED

PERFORMED RECALL

RECALL 98S15 REPLACE C-C SW

PERFORMED RECALL

PERFORMED RECALL 98S15 - CHECK AND REPLACE DEACTIVATION SWITCH AND RECHECK OK

1 COMPLETED RECALL

1 PERFORM DEACTIVATION SWITCH RECALL

REPLACED THE DEACTIVATION SWITCH AS PER RECALL 98S15 SPECS.

REPLACED SPEED CONTROL SWITCH AS PER RECALL

1 PERFORMED RECALL 98S15

COMPLETED RECALL

98S15 98S15 PERFORM RECALL

RECALL

98S15

RECALL

98S15

REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR PER RECALL 98S15

1 PERFORM RECALL-REPLACE SWITCH AND CONNECTOR

98S15 RECALL 98S15 RECALL

35767 RECALL W REPLACE SWITCH AND PLUG GA

DDIME - DEALER SELF APPROVAL

98S15 RECALL PERFORMED 98S15 RECALL, R AND REPLACED DEACT. SWITCH, INSTALL BRAKE REPAIR KIT 98S52 BLEED BRAKE SYS. VERIFY.

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

93S13 98S15 W 98S15

98S15

REPLACE CRUISE CONTROL SWITCH PER RECALL

RECALL RECALL

REPLACE SWITCH AND PLUG

REPL SW AND CONNECTOR PER RECALL

RECALL 98S15 REPLACED HEADLIGHT SWITCH AND CONNECTOR

DEACTIVATED SWITCH

PER RECALL

98S15

PERFORMED RECALL

PERFORMED RECALL

INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL

PERFORM RECALL 98S15 T119

RECALL 98S15 PERF. RECALL

RECALL COMPLETE

SPD CTRL DEACTIVATION SW REPLCMNT PERFORMED RECALL 98S15

RECALL 98S15 DONE

1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

M1 TIME TO TEST SPEED CONTROL, UNLISTED IN SLTS. REPLACED CRUISE CONTROL SWITCH, INOP.

COMPLETED RECALL REPLACED CRUISE DEACTIVATION SWITCH

1 PERFORMED RECALL 98S15

REPLACED CRUISE CONTROL CUTOFF SWITCH PER THE RECALL
 PERFORM RECALL 98S15
 PERFORMED 98S15
 98S15 RECALL
 61670 R R SPEED SWITCH AND CONNECTOR BLEED REAR BRAKES AND TEST DROVE
 RECALL 98S15. PERFORMED RECALL 98S15.
 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S16
 RECALL REPLACE SPEED CONTROL SWITCH
 RECALL 98S15 98S15B RPL SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CON.
 98S15 REPLACED DEACTIVATION SWITCH
 98S15 RECALL 98S15 RECALL PERFORMED
 COMPLETE RECALL 98S16
 98S15 98S15 REPLACED DEACTIVATION SWITCH
 131003 REPLACED DEACTIVATION SW. & CONN PER 98S15 98S15B
 130730 RECALL 98S15 RECALL
 102650 RECALL 98S15 REPLACE DEACTIVATION SWITCH AND CONNECTOR FOR RECALL 98S15

REPLACED CRUISE CONTROL SWITCH PER RECALL 98S15
 REPLACE SWITCH
 COMPLETE RECALL 98S15
 1 REPLACE SWITCH& CONNECTOR
 REPLACE CRUISE CONTROL CABLE
 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH
 95224 98S15 .5 REPLACE SWITCH AND CONECTOR PRT RECALL
 105512 REPLACE DEACTIVATION SWITCH AND CONNECTOR
 COMPLETED RECALL
 REPLACE SWITCH AND CONNECTOR PER RECALL
 PERFORMED RECALL AS NEEDED ALL OK
 PER RECALL. REPLACED SPEED CONTROL SWITCH AND CONNECTOR PER FORD RECALL NOTE
 REPLACE CRUISE DEACTIVATION CONNECTOR AND SWITCH PER RECALL 98S15
 RECALL R-R DEAC SW, AND CONNECTOR, RECKD OK
 98S15 98S15 PERFORM RECALL

PERFORMED RECALL 98S15
 RECALL W TECH 405 M 109387 PERFORM RECALL
 98070 PERFORM RECALL 98S15
 RECALL 98S15 98S15 COMPLETED RECALL
 211410 RECALL 98S15B, 14200A 0.8L PERFORMED RECALL ALOS HAD TO REPAIR THE WIRING TO CONNECTOR. OLD CONNECTOR MISSING HAD TO SPLICE
 151302 98S15 RECALL W PERFORMED 98S15 RECALL. INSTALLED NEW SPEED CONTROLL DEACTIVATION SWITCH.
 RECALL PERFORM RECALL
 REPLACED CRUISE SWITCH AS PER RECALL 98S15
 RECALL 98S15 98S15 COMPLETED RECALL
 98S15 RECALL 98S15 RECALL RE-WIRE DEACTIVATION SWITCH
 74584 PERFORM RECALL 98S15, REPLACE SPEED CONTROL SWITCH AND BLEED BRAKES.

RECALL 98S15 98S15 RECALL PERFORMED
 REPLACED CRUISE DEACTIVATION SWITCH PER REALL 98S15
 98S15 98S15

INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL

183439 .3 REPLACE CRUISE SWITCH

RECALL 98S15 PERFORMED RECALL 98S15B

COMPLETE RECALL

118118 DID RECALL 98S15 SPEED CONTROL NOTE ABS LIGHT ON , ROTORS HAS VIBS, DENT LEFT UPPER FENDER .

135802 REPLACE SWITCH AND CONNECTOR AS PER RECA

SPEED CONTROL SWITCH 98S15 RECALL

AS PER RECALL 98S15 RECALL TO INSTALL DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS DIRECTED BY 98S15 SAFETY RECALL

RECALL 98S15

PERFORMED RECALL 98S15-INSTALL SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

INSTALLED DEACTIVATION SWITCH PER RECALL 98S15

R-R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACED DEACTIVATOR SWITCH

PERFORMED RECALL

98S15 RECALL

78421 RECALL 98S15 REPLACE DEACTIVATOR SWITCH AS PER RECALL

RECALL 98S15 REPLACE C-C SW

PERFORMED RECALL 98S15

12262 PERFORM RECALL, REPLACE SWITCH 98S15B .5

REPLACE CONNECTOR PER RECALL 98S15

98S15 98S15 RECALL, REPLACE SWITCH

REPLACED DEACTIVATION SWITCH

REPLACE SPEED CONTROL SWITCH AND CONNECTOR

98S15 RECALL 98S15 REPAIR AS PER RECALL

INSTALLED SPEED CONTROL DEACTIVATION SWITCH KIT PER RECALL

PERFORMED RECALL 98S15

PERFORMED RECALL 98S15

REPLACED CRUISE CONTROL SWITCH 98S15

PERFORM RECALL 98S15 98S15

24804 PERFORM DEACTIVATION SWITCH AND CONNECTOR SHELL REPLACEMENT RECALL

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 98S15

PERFORMED RECALL AS PER INSTRUCTIONS

PERFORMED MODIFICATION

88851 REPLACE DEACTIVATE SWITCH

98719 PERFORMED RECALL 98S15 TEST DROVE OK

PERFORM RECALL

RECALL 98S15 RECALL 98S15

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL 98S15

RECALL COMPLETED 98S15 RECALL

REPLACED SWITCH PER RECALL 98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL 99S15 RECALL

73886 REMOVED AND INSTALLED NEW BRAKE DEACTIVATION SWITCH AND WIRE CONNECTOR SLEEVE PER RECAL 99S15 AND THEN ROAD TESTED. SPEE

RECALL RECALL

RECALL 99S15

REPLACE CRUISE CONTROL SWITCH ASY

CERTAIN 1992 AND 93 CROWN VICTORIA, GRAND MARQ, AND LINCOLN TOWN CARS WITH SPEED CONTROL AS PER RECALL-REPAIR SPEED CONTROL AC
INSTALL KIT PER RECALL

SERVICE INSTALLED SPEED CONTROL SWITCH PER RECA

58475 99S15B 0.5 HRS. SPEED CONTROL SWITCH RECA

99S15

RECALL 99S15

RECALL 99S15

RECALL 99S15

COMPLETE RECALL 99S15

99S24 RECALL 99S15 INSTALL NEW SWITCH AND SHELL CONNECTOR

INSTALL SPEED CONTROL SWITCH PER RECALL 99S15

1 PERFORMED RECALL 99S15 SPEED CONTROL CABLE REPLACE SWITCH AND CONNECTOR.

REPLACED DEACTIVATION SW PER RECALL

PERFORM RECALL

OPEN RECALL PERFORM 99S15 RECALL

RNR DEACTIVATION SWITCH PERFORM RECALL 99S15

COMPL: RECALL 99S15,

CAUSE: SPEED CONTROL DEACTIVATION SWITCH.

CORRE: PERFORM RECALL

PERFORMED RECALL

INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL

RECALL 99 S 15

99S15 RECALL PERFORMED 99S15

99S15E RECALL 99S15E PERFORME

RECALL 99S15 99S15 RECALL PERFORM MODIFICATIONS

PERFORM RECALL

121140 INSTALL 99S15 SPEED CONTROL DEACTIVATION

INSPECT AND REPLACE SWITCH AND CONNECTOR PER RECALL

PERFORMED RECALL 99S15 AS REQUESTED.

14787 RECALL 99S15 RECALL 99S15

RECALL 99S15 COMPLETED

REPLACED SWITCH FOR CRUISE CONTROL AND HARDSHELL CONNECTOR AS INSTRUCTED BY PROGRAM 99S15

99S15 99S15

21478 REPLACED SWITCH PER RECALL TECH 306

97308 99S15 B 0.5 REPL CRUISE DEAC SW

RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.

RECALL SPEED CONT SWITCH PERFORM RECALL 99S15

REPLACED THE CRUISE DEACTIVATION SWITCH

INSTALL DEACTIVATION SWITCH 99S15 RECALL PER FORD INSTRUCTIONS

1 COMPLETED RECALL

1 COMPLETED

PERFORM RECALL

33447 RECALL W INSTALL SWITCH AND CONNECTOR 98S15 GA

98S15 98S15 RECALL PERFORMED

40848 RECALL DID RECALL REPLACED SWITCH AND WIRES TECH 10

9

PERFORM RECALL 98S15

98902 RECALL 98S15 PERFORMED RECALL 98S15 REPLACED CRUISE DEACTIVATION SWITCH

INSTALL SPEED CONTROL DEACTIVATION SWITCH PER RE

PERFORMED RECALL

PERFORMED RECALL

REPLACED SWITCH PER BULLETIN

RECALL 98S15

- MODIFY PER RECALL 98S15

PERFORM RECALL

COMPLETED RECALL 98S15

RECALL CRUISE CONTROL RECALL 98S15

REPL SPD CNTRL DEACTIVATION SW

AB9 98S2 82 787 98S10B .5 ADMIN .1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR

1 1 PERFORM DEACTIVATION SWITCH RECALL

RECALL LETTER PERFORMED RECALL AS PER FACTORY INSTRUCTIONS

98S15 RECALL PERFORMED 98S15

WE PERFORMED RECALL 4287

98S15 98S15 REMOVE TAPE SECURE THE SPEED CONTROL SWITCH

REPAIR AS PER RECALL

DID RECALL ON SWITCH BLEED BRAKES CHECKED OK..

COMPLETED RECALL

98S15 98S15

RPLC CRUISE DEACTIVATION SWITCH & PLUG PER 98S15, BLEED BRAKES

CONTROL DEACTIVATION SWITCH RECALL

PERFORMED RECALL AS PER 98S15

PERFORM RECALL

PERFORMED RECALL 98S15-INSTALL SWITCH

COMPLETE PERFORMED RECALL, R&R DEACTIVATION SWITCH

PERFORMED RECALL

98S15 REPLACED SWITCH AND CONNECTOR

COMPLETE RECALL 98S15

98S15 98S15

REPLACE CONN AND SWITCH PER RECALL INSTRUCTIONS

1 PERFORMED RECALL 98S15 REPLACE SPED CONTROL DEACTIVATION SW

72975 REPLACE SWITCH AS PER 98S15 RECALL

REPLACE SPEED CONTROL SWITCH AND CONNECTOR

RECALL 98S15

1 TECH REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL 98S15

135435 RECALL DONE RECALL TECH 638

98S15 98S15
62023 79 PERFORM 98S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST JH

REPLACED CRUISE DEACTIVATION SWITCH
REPLACE CRUISE DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH

98S15 98S15
43883 RECALL W 0.5 HRS 0.1 ADMG INSTALL SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15 OPER 98S15-B
98S15 98S15

INSTALL SPEED CONTROL DEACTIVATION SWITCH.
REPLACED DEACTIVATION SWITCH AS PER RECALL INSTRUCTIONS
REPAIR AS PER RECALL
RECALL REPLACE SWITCH AND HARDSHELL CONNECTOR

RECALL 98S15 RECALL 98S15 REPLACE SWITCH
78445 RECALL WARRANTY INSTALL SPEED CONTROL DEACTIVATION SWITCH
RECALL COMPLETED

RECALL 98S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 98S15
PERFORM RECALL
COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL
PERFORMED RECALL
108418 REPLACED SWITCH
REPLACE SPEED CONTROL SWITCH

61608 W REPLACE SWITCH PER RECALL ME
REMOVED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15 PERFORMED RECALL 98S15
1 REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER 98S15
78577 SAFETY RECALL 98S15, REPLACE SWITCH AND CONNECTOR PER 98S15, ROAD TESTED OK AFTER REPAIRS.

RECALL COMPLETED
INSTALLED SWITC

PERFORMED RECALL
58083 TECH 158 RECALL 98S15 98S15B(0.5)
PERFORMED RECALL 98S15, 98S15B .5HRS LABOR FRONT BRAKES AT 2MM, RECOMMEND REPLACING BRAKES

RECALL 98S15 98S15 REPLACE SPEED CONTROL SWITCH
34528 INSPECTED AND REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL.
138407 PERFORMED RECALL 98S15
PERFORM RECALL

98S15 98S15 REPLACE SWITCH AND CONNECTOR
COMPLETED RECALL PER INSTRUCTIONS
COMPLETED RECALL PER INSTRUCTIONS
74803 98S15 REPLACED SW AND CONNECTOR
REPLACE SWITCH AND CONNECTOR
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
98S15 98S15
INSTALLED CRUISE CONTROL CUTOFF SWITCH PERFORMED RECALL 98S15
PERFORM RECALL

RECALL 98S15 PERFORMED RECALL 98S15
RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.
REPLACED SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL
RECALL REPLACE DEACTIVATION SWITCH
REPL SPD CNTRL DEACTIVATION SW
98188 RECALL 98S15 WPC RECALL 98S15
RECALL 98S15 RECALL
RECALL PERFORM ALL DONE

RECALL 98S15 REPLACE BRAKE REPAIR KIT
SPEED CNTRL DEACTVTN SWITCH REPLCMTPERF SAFETY RECALL 98S15
PERFORM 98S15 RECALL AS INSTRUCTED

COMPLETED AS PER FMC
1 PERFORMED RECALL 98S15

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.
PERFORMED RECALL 98S15-INSTALL SWITCH
98S15 PERFORM RECALL

REPLACED SWITCH PER RECALL
REPLACED SPEED DEACTIVATION SWITCH PER RECALL 98S1
INSTALLED SWITCH PER RECALL
PER FORD RECALL NOTICE. FORD RECALL COMPLETE PER INSTRUCTIONS.
REPLACE SPEED CONTROL SWITCH #804#
RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
PERFORM 98S15 RECALL. REPLACED SPEED CONTROL CAB
98S15 98S15 INSTALLED SPEED CONTROL DEACTIVATION SWITCH
COMPLETED RECALL 98S15
RECALL DONE
83752 RECALL 98S188 .50 TEC 182 INSTALL NEW SWITCH AND CONNECTION
PERFORMED RECALL AS PER INSTRUCTIONS
RECALL 98S15 - SPEED CONTROL DEACTIVATION SWITCH INSPECTED SPEED CONTROL DEACTIVATION SWITCH. REPLACED DEACTIVATION SWITCH AND

PERFORM RECALL
PERFORM RECALL 98S15 PER TECHNICAL INSTRUCTIONS
PERFORM RECALL 98S15
46186 WARR DIAG REPLACE SPEED CONTROL DEACTIVATOR AS PER RECALL 98S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL BULLETIN
RPLC DEACTIVATION SWITCH & HARDSHELL CONN PER 98S15
98S15 RECALL 98S15 RECALL
40850 98S16B 0.5 0.5 PERFORM 98S15

PERFORM RECALL TO REPLACE PRESSURE SWITCH AND CON NECTOR
RECALL COMPLETED

C. PERFORM RECALL

PERFORM RECALL PER TECHNICAL INSTRUCTIONS IN RECALL BULLETIN REMOVE, TAPE AND SECURE SPEED CONTROL DEACTIVATION SWITCH
RC RC

131622 REPLACED CRUISE CONTROL DEACTIVATION SWITCH FOR RECALL

RECALL 88S15 REPLACE SWITCH AND CONNECTOR

REPLACE DEACTIVATION SWITCH PER RECALL

88S15 REPLACE DEACTIVATION SWITCH AND CONNECTOR

87628 REC WARR 627 PERFORM RECALL 88S15

REPLACE SPEED CONTROL SWITCH INBOM

INSTALL NEW SWITCH AND CONNECTOR 88S15

RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

PERFORMED RECALL 88S15 CRUISE DE-ACTIVATION 205

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 88S15

REPL SPD CNTRL DEACTIVATION SW

REPLACE SWITCH AND CONNECTOR

PERFORMED RECALL

PERFORMED RECALL

88S15 COMPLETED

REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL

INSTALLED SPEED DEACTIVATION SWITCH

RECALLED BY FORD

PERFORMED RECAL

PERF. RECALL

RECALL

PERFORMED RECAL

128938 RECALL 88S15 REPLACE CRUISE CONTROL SWIT

1 REPLACED SWITCH

PER RECALL

88S15

COMPLETED RECALL

RECALL

RECALL

1 PERFORM RECALL AS REQUIRED

PERFORMED RECALL 88S15B

PERFORMED RECALL 88S15 REPLACED CRUISE DEACTIVATOR SWITCH

OPEN RECALL COMPLETED

RECALL

RECALL

REPLACE SWITCH AND HARD SHELL

PERFORM RECALL 88S15 PERFORM DEACTIVATION SWITCH RECALL

RUR CRUISE DEACTIVATION SWITCH & HARD SHELL PER RECALL

RECALL

88S15

RECALL PERFORMED

REPLACED DEACTIVATION SWITCH

RECALL

REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL

PERFORMED RECALL

PERFORM RECALL 88S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

RECALL

PERFORM RECALL 88S15

REPLACED CRUISE DEACT SWITCH
98S15 REPL CABLE

RNR DEACTIVATION SWITCH PERFORM RECALL 98S15
OPEN RECALL PERFORM RECALL
REPLACE CONNECTOR AND SWITCH

RECALL COMPLETE

PERFORM RECALL

98S15 RECALL 98S15 RECALL - CRUISE RECALL

RECALL 98S15

REPL SPD CNTRL DEACTIVATION SW

COMPLETE RECALL

PERFORM RECALL

PERFORM RECALL

REPLACED CRUISE CONTROL DEACTIVATION SWITCH

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 98S15 RECALL INSTRUCTIONS

RECALL PERFORMED RECAL

REPLACE SWITCH

RECALL COMPLETE

PERFORM RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR AS PER THE TECHNICAL INSTRUCTIONS

REPLACED CRUISE SWITCH

PERFORMED RECALL

REPLACED CRUISE BRAKE SWITCH

REPLACED THE SWITCH PER RECALL 98S15

RECALL 98S15

RECALL 98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

PERFORM 98S15 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR

RECALL 98S15

PERFORMED RECALL 98S15

INSTALLED KIT

98S15 RECALL PERFORMED

60282 INSPECTED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL

98S15

98S15

RECALL

98S15

81011 98S15 WARR REPLACED SWITCH AND CONN

REPLACE SWITCH

RECALL

98S15 REPLACE SWITCH AND CONNECTOR

62829 RECALL 98S16B .50 TECK 182 INSTALL NEW SWITCH AND CONNECTION PER RECALL

COMPLETED 98S15

PERFORM RECALL 98S15

PERFORMED RECALL

RECALL REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR

RESISTIVE SHORT. PERFORM RECALL-ONP PER FOMOCO INSTRUCTIONS.

98S15

PERFORM RECALL

INSTALL SPEED CONTROL SWITCH PER RECALL

RECALL 98S15 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH

OPEN RECALL PERFORM RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL PERFORM RECALL
RECALL 99S15
PERFORM RECALL

99S15 REPLACED DEACTIVATOR SWITCH PER RECALL

PERFORM RECALL 99S15

1 COMPLETED RECALL

RECALL 99S15 PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH

PERFORMED RECALL 99S15-REPLACED CRUISE CONTROL DEACTIVATION SWITCH

82308 RECALL 99S15 COMPLETED

46286 CRUISE BRAKE PRESSURE SW PIN POINT CONCERN FOUND FUSE BLOWN, INSTALL CIRCUIT BREAKER TESTER AND PIN POINT TEST, FOUND INTER

PERFORMED RECALL

PERFORM RECALL

REMOVED AND REPLACED PRESSURE SWITCH PERFORMED RECALL 99S15

RNR DEACTIVATION SWITCH PERFORM RECALL 99S15

RECALL 99S15 99S15 COMPLETED RECALL

99390 RECALL 99S15B J5, ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL

79423 PERFORMED RECALL 99S15

RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL

99S15 PERFORM RECALL

1 PERFORM RECALL

PERFORMED RECALL 99S15

RECALL 99S15

RECALL 99S15 REPLACE C-C SW

127207 99S15B 0.5HR ADMIN 0.1HR PERFORMED RECALL REPLACED SWITCH AND CONN

REPLACE CRUISE DEACTIVATION SWITCH PER RECALL

113324 RECALL 99S15 REMOVED OLD SPEED CONTROL DEACTIVATION SWITCH INSTALLED NEW DEACTIVATION SWITCH & HARD SHELL CONNECTOR

RECALL COMPLETED

3 PROGRAM SPW XREF RO 80011 DTD 10-7-99 AOC MILEAGE (267) L53 33 (93652) INSPECT, FOUND LOOSE BRAKE SWITCH, REPLACE SWITCH, CLEAN OIL FF

C INSTALL SWITCH AS PER RECALL

RNR DEACTIVATION SWITCH PERFORM RECALL 99S15

RECALL 99S15 REPLACE C-C SW

99S15 RECALL

REPAIR AS PER RECALL 99S15

PERFORM 99S15 RECALL

RECALL 99S15

PERFORMED RECALL 99S15

106706 RECALL W REPLACE DEACTIVATION SWITCH AND CONNECTOR PER 99S15B 0.5 + 0.1

8824 CRUISE CONTROL DEACTIVATION SWITCH RECALL

99S15 CRUISE CONTROL RECALL

REPLACE BRAKE SWITCH PER RECALL

RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

1 REPLACE DEACTIVATOR SW. WARRANTY-RECALL-BILL

RECALL
CONNECTOR
RECALL 99S15
RECALL
RECALL 99 S 15
99S15
REPLACE CRUISE CONTROL SWITCH PER RECALL
99S15 RECALL
PERFORMED RECALL
1 PERFORMED RECALL
RECALL 99S15

99S16 REPLACE C-C SW
99S15
INSTALL BRAKE SWITCH
99S15B

154894 REPLACED CRUISE CONTROL DEACTIVATION SWITCH & HARDSHELL CONNECTOR FOR RECALL
REMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PERFORMED RECALL 99S15
PERFORM RECALL
AS PER RECALL
99S15
REPLACE SPEED CONTROL SW AND CONNECTOR PER RECALL
99S15 RECALL COMPLETED
PERFORMED RECALL
39411 99S15 & REPLACE SWITCH AND CONNECTOR PER RECALL
73027 99S15 W RENEW BRAKE VLV. SW. & HARDSHELL CONN. AS PER RECALL
99S221. RECALL 99S15B INSTALLED CRUISE DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 99S15B 0.5, ADMIN 0.1
99S15
99S15
RPL CRUISE SWITCH PER RECALL 99S15

REPLACE CRUISE SWITCH AND CONNECTOR AS PER 99S15 RECALL
99S15
REPLACE SWITCH
OPEN RECALL
99S15 RECALL
COMPLETE RECALL
99S15
REPL CRUISE CONTROL SWITCH AS PER RECALL
INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
37104 INSTALLED BRAKE KIT PER RECALL
COMPLETED RECALL 99S15-INSTALLED DEACTIVATION SWITCH
INSTALL SWITCH AND CONNECTOR PER RECALL 99S15
99S15 RECALL
99S15 RECALL COMPLETE
INSTALLED SWITCH
63451 RECALL 99S15 INSTALL UPDATED SPEED CONTROL DE-ACTIVATION SWITCH AND CONNECTOR
PERFORMED RECALL 99S15. 4.5HRS LABOR
REMOVED AND REPLACED BRAKE SWITCH, BLEED SYSTEM RT OK
REPLACE SWITCH PER RECALL
INSTALLED SWITCH
REPLACE SPEED CONTROL SWITCH PER RECALL 99S15
1 PERFORM RECALL 99S15 BRAKE SWITCH

X
INSTALLED NEW DEACTIVATION SWITCH PER RECALL
PERFORMED RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH
RECALL 99S15 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL
99S15 RECALL
99S15 REPAIRED AS PER RECALL

98857 RECALL 0.5 98815B INSTALLED RECALL
 RECALL 98815 RECALL COMPLETED
 RECALL 98815B PERFORM RECALL 98815B
 98848 RECALL 98815 INSTALLED CRUISE CONTROL SWITCH PER RECALL 98815
 1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98815B .8
 98815 98815
 RECALL 98815 RECALL PERFORME
 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

RECALL PERFORMED RECALL
 REPLACED SWITCH
 INSPECTED SWITCH NESSARY TO REPLACE SWITCH AS PER RECALL

COMPLETED CAMPAIGN COMPLETED OP 98815B
 98815 98815 REPLACE CRUISE CONTROL SWITCH PER RECALL 98815
 PERFORMED 98815
 98815 PERFORMED 98815.
 RECALL 98815 RECALL COMPLETED
 98108 RECALL 98158 RECALL REPLACED CRUISE DEACTIVATION SWITCH
 RECALL 98815 RECALL PERFORME
 REPLACED SW

RECALL IS REQUIRED COMPLETE RECALL
 PERFORMED RECALL
 RECALL 98815 COMPLETED
 INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN
 RECALL PERFORMED RECAL
 RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL
 98815 REPLACE CRUISE CONTROL PRESSURE SWITCH PER RECALL
 RECALL 98815 98815
 RECALL REPL S-C DEACTIVATION SW PER RECALL
 PERFORMED RECALL
 98458 98815 W SPEED CONT. SWITCH

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR. TEST DROVE TO CHECK FOR NORMAL OPERTAION.
 PERFORMED 98815 RECALL

RECALL REPLACED SWITCH AND CONNECTOR

1 PERFORM RECALL 98815 SPEED CONTROL DEACT. SWITCH 98815B

98815B RECALL 98815B RECALL

98815 98815

RECALL REPLACED SWITCH

98757 RECALL W REPLACE SWITCH GA

98815 98815

31143 WARRANTY PERFORMED ENGINE PERFORMANCE WORKSHEET. FOUND EBP SENSOR AND TUBE CLOGGED. R&R EBP, R&I EBP TUBE AND CLEANED

REPLACE SPEED CRTL SWITCH AND CONNECT

AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

PERFORMED RECALL

COMPL: RECALL 98815, CAUSE: SPEED CONTROL DEACTIVATION.

CAUSE: REPLACE DEACTIVATION SWITCH AND CONNECTOR

APROX

RECALL 99S15 COMPLETED

REPLACED BRAKE DEACTIVATION SWITCH

PERFORM RECALL

PERFORM RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

91048 SAFTY RECALL PERFORMED RECALL 99S15 DEACTIVATION SWITCH REPLACEMENT ALSO TEST DROVE VEHICA

115529 99S15 RECALL R+R DEACTIVATION SWITCH

REPLACE SWITCH AND HARD SHELL

94420 REPAIRED SPEED CONTROL PER RECALL

99S15 SPEED CONTROL DEATVATION 99S15

AS PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

PERFORM 99S15

19745 RECALL 99S15 PERFORMED RECALL

99295 SPEED CONTROL RECALL 99S15B 0.5 0.5 REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH.

0

99S15 PROGRAM

REPLACED DISENGAGE SWITCH PER RECALL 99S15.

REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL 99S15

RECALL 99S15 COMPLETED

RECALL 99S15 PERFORMED 1

REPAIR AS PER RECALL

COMPLETED RECALL

RECALL

99S15

TECH INSTALLED NEW CRUISE DE ACTIVATION SWITCH PER FORD RECALL

COMPLETED RECALL

INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL

PERFORM RECALL 99S15

128200 RECALL 99S15 0.5 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15.

DEACTTVATION SWITCH

99S15

RECALL

99S15

REPLACE CRUISE DEACTIVATION SWITCH AS PER 99S15 RECALL

PERFORM RECALL

REPLACE CRUISE SWITCH PER RECALL

PERFORM RECALL

PERFORMED RECALL 99S15 FUSE FOR BRAKE SHIFT INTERLOCK BLOWN FROM HITTING WIRE WHEN CHANGING CONNECTION REPLACED FUSE ROAD TE

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH ASSEMBLY, CHECK NORMAL OPERATION.

PERFORMED RECALL 99S15-INSTALL SWITCH

PERFORMED RECALL

RECALL

REMOVE TAPE AND SECURE THE SPEED CONTROL DEACTIVATION SW

PERFORM RECALL

99S15

99S15 REPLACE CRUISE SWITCH PER RECALL

99S15

R+R SW & CONNECTOR

REPLACED DEACTIVATION SWITCH AS PER RECALL

99S15-225 99S15

PERFORM RECALL 98S15 T101

DONE AS PER INSTRUCTIONS

1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98S15B .5

101017 RECALL 98S15 0.5 INSTALL SPEED CONTROL DEACTIVATION SWITCH PER RECALL

COMPLETE RECALL

00

RECALL 98S15

PERFORMED RECALL

SPD CTRL DEACTIVATION SW REPLACE PERFORMED RECALL 98S15

1 INSTALLED SPEED CONTROL SWITCH 1

REPLACE CRUISE SWITCH AND CONNECTOR

88287 RECALL 98S15 RECALL 98S15

REPLACED CC BRAKE SWITCH AS PER RECALL 98S15

SPEED CONT

REPL SWITCH

98S15

REPLACE CRUISE CONTROL SWITCH PER RECALL

98S15

98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL C

AS PER RECALL DEACTIVATOR SWITCH

PERF RECALL 98S15

PERFORMED RECALL 98S15 (SPEED CONTROL)

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER SAFETY RECALL 98S15.

52178 RECALL 98S15 INSTALLED RECALL 98S15.

RECALL 98S15

98S15

PERFORMED RECALL ...INSTALLED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR ...AS PER RECALL ...M

RECALL 98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR

COMPLETED CAMPAIGN COMPLETED CP 98S15B

98S15 COMPLETED

98S15 COMPLETE

RECALL PERFORMED

DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORM RECALL

98S15

98S15 COMPLETED

48874 RECALL 98S15 CC42 W PERFORMED RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH

INSTALL SWITCH AND HARNESS PER RECALL

DONE AS PER INSTRUCTIONS

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR - 98S15B .5

INSTALLED DEACTIVATION SWITCHES, PER RECALL RD TEST OK

1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 98S15B X5

1 REPLACED BRAKE SWITCH CONNECTOR

78213 REPLACED BRAKE SWITCH AND HARD SHELL CONNECTOR. NOTE: AIR SUSPENSION LIGHT ON DIMLY ON DASH.

78189 RECALL PERFORMED RECALL 98S15

REPLACE CRUISE SWITCH AND CONNECTOR

RECALL

PERFORMED RECALL 98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

1 PERFORM RECALL AS REQUIRED

REPLACE DEACTIVATION SWITCH AND CONNECTOR

RECALL

REPLACE CRUISE DEACTIVATION SWITCH

INSTALL SWITCH PER RECALL LETTER

98S15 RECALL

COMPLETED

101017-001 0000

X RECALL
CHECKED AND REPLACED VACUUM RELEASE
0 COMPLETE RECALL
REPLACE SWITCH AND CONNECTOR PER RECALL
RECALL 99S15 RECALL COMPLETED
REPLACED SPEED CONTROL SWITCH
99S15 PERFORMED 99S
PERFORMED RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH
99S15B RECALL 99S15B REPLACED CRUISE DEACTIVATION SWITCH RECALL
REPLACE SWITCH AS PER RECALL
PERF RECALL 99S15
INSPECT AND REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
RECALL COMPLETED PERFORM CAMPAIGN PER FORDS SPECIFICATIONS AND INSTRUCTIONS 99S15B FOR .5 AND .1 FOR ADMIN TIME
PERFORMED RECALL 99S15. ALL OK AT THIS TIME
REPLACE CRUISE DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
RECALL RECALL
M RC 99S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
REPLACED CSWITCH AND CONNECTOR. 1
RECALL 99S15 RECALL COMPLETED
AE PERFORM RECALL REPL DEACTIVATION SWITCH AND CONNECTOR
102720 99S15 W PERFORMED RECALL 99S15 SPEED DEACTIVATION SWITCH.
PERFORMED RECALL 99S15
REPLACED CRUISE CONTROL SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPL SWITCH PER RECALL
RECALL 99S15 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO
RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REPLACE CRUISE DEACTIVATION SWITCH
REPLACED CRUISE DEACTIVATION SWITCH PER RECALL 99S15
RECALL 99S15 RECALL COMPLETED

RECALL PERFORMED RECAL
PERFORMED RECALL
REPLACE SWITCH AND CONNECTOR PER RECALL
PERFORMED RECALL AS REQUIRED
53746 REPLACED SPEED CONTROL DEACTIVATION SW, S-2 8274
REPLACE BRAKE PRESSURE SWITCH PER RECALL
PERFORMED RECALL 99S15
92887 REPLACED SWITCH & CONNECTOR PER 99S15.
1 PERFORMED RECALL 99S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL RETEST OK
PERFORM RECALL

RECALL PER FORD
78829 PERFORMED RECALL 90S15
PERF RECALL 90S15
COMPLETED RECALL 90S15. REMOVED AND INSTALLED NEW SPEED CONTROL SWITCH AND WIRE HOUSING. . TECH 272-8364

81122 RECALL WARRANTY COMPLETED RECALL 90S15, ROAD TEST - O.K.
COMPLETED RECALL 90S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ... 90S15B .5 + .1
90S15B RECALL DONE 90S15B REPLACED CRUISE DEACTIVATION SWITCH
PERFORMED RECALL AS BY FACTORY PERFORMED RECALL REPLACED DEACTIVATION SWITCH
RECALL 90S15
REPLACE SW AND CONNECTOR
REPLACED DEACTIVATION SWITCH PER RECALL
CRUISE SWITCH RECALL. REMOVED AND REPLACED CRUISE SWITCH RECALL.

81840 REPLACED CRUISE DEACTIVATION SWITCH PER RECALL
PERFORMED RECALL 90S15 INSTALLED SWITCH AND CONNECTOR PER RECALL 90S15

PERF RECALL 90S15

87071 90S15 90S15B .5 .5 REPLACE CONECTOR, SWITCH, BLEED BRAKES
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL
RECALL 90S15 PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH
PERFORM SAFETY RECALL
129782 RECALL ON SPEED DEACTIVATION SWICHTH WARR. COMPLETED
INSPECT SPEED CONTROL SYSTEM AND COMPLETE LABOR OPERATION ACCORDINGLY COMPLETED SPEED CONTROL DEACTIVATION CAMPAIGN
90S15 COMPLETED 90S15 COMPLETED
INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL
RECALL PERFORMED RECALL 90S15 REPLACED SWITCH
86738 RECALL W 0.5 HRS ADMS 0.1 INSTALLSPEED CONTROL SWITCH PER RECALL 90S15 OPERATION 90S15- B
1 PERFORMED A SAFETY RECALL AS TO REMOVE AND REPLACE THE DEACTIVATOR SWITCH
90S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH
97665 90S15 W REPLACED SWITCH
41857 RECALL COMPLETE
1 PERFORM RECALL
90S15 90S15 90S15
FORD SAFETY RECALL REPLACED SPEED DEACTIVATION SWITCH
183944 RECALL 90S15
RECALL PERFORMED RECALL
INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL
RECALL 90S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

90S15B RECALL 90S15B REPLACED DEACTIVATION SWITCH
RECALL 90S15 RECALL
118048 RECALL SWITCH
81857 R-R SPEED CONTROL SWITCH.
REPLACED DISENGAGE SWITCH PER RECALL 90S15.
90S15 90S15 REPLACE CRUISE SWITCH PER RECALL 90S15

00S15 00S15
PERFORM RECALL
PERFORMED RECALL
REPLACED DEACTIVATION SWITCH PER RECALL 1
1 REPLACE DEACTIVATION SWITCH. RETEST OK
00S15 00S15
RECALL 00S15
REPL CRUISE CONTROL DEACTIVATION SWITCH
RECALL REPLACED CRUISE SW
REPLACE SWITCH RECALL 00S15
X REPLACE SPEED CONTROL SWITCH AND CONNECTOR
REPLACE CRUISE CONTROL DEACTIVATION SWITCH.

RECALL REPL DEACTIVATION SW PER RECALL

PERFORMED RECALL
107275 00S15 REPLACE SWITCH PER 00S15B 0.5 HRS
07644 WARR DONE RECALL 00S15 REPLACE BRAKE REPAIR KIT
71421 REPLACE SWITCH AS PER RECALL
REPLACE SPEED CONTROL CABLE AS PER RECALL
0763 RECALL 00S15 RECALL 00S15
PERF RECALL 00S15
RECALL REPLACED CONTROL SWITCH PER RECALL
COMPLETED RECALL 00S15 1
RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
RECALL INSTALLED UPDATED DEACTIVATION SWITCH
PERFORM RECALL 00S15
REPLACED SWITCH AND CONN. PER RECALL

COMPLETE RECALL REPAIRS

RECALL 00S15 RECALL 00S15 COMPLETED
INSPECT AND REPLACE CRUISE CONTROL DEACTIVATOR SWITCH AS PER RECALL 00S15
PERFORM RECALL
PERFORM RECALL
REMOVED DEACTIVATOR SWITCH THREADS COMING OUT WITH SWITCH-REPLACED WIRING CONNECTOR-REPLACED BRAKE DEACTIVATOR BLOCK AND
INSTALL CRUISE SWITCH
00882-43-114008 DO RECALL 00S15 PUT IN NEW SW AND WIRE COND
REPLACE DEACTIVATION SWT PER RECALL
RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL
REPLACE SPEED CONTROL SWITCH PER RECALL 00S15
110667 REPLACE SWITCH & WIRE CONNECTOR AS PER 00S15.
REPLACE CRUISE SWITCH AND CONNECTOR PER RECALL
RECALL 00S15 PERFORMED RECALL 00S15
REPLACE SPEED CONTROL SWITCH
COMPLETE RECALL
INSTALL DEACTIVATION SWITCH PER RECALL 00S15

1 COMPLETE RECALL
PERFORMED RECALL 99S15. INSTALLED NEW BRAKE REPAIR KIT OPERATIN OK. . TECH 71-2498
80800 RECALL WARRR REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99S15.

99S15 REPLACED DEACTIVATION SWITCH AS PER RECALL
REPLACED SWITCH AND CONN
RECALL PERFORMED RECAL
. REPLACE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR 99S15B .5
TECH 812 PERFORMED RECALL SPEED CONTROL DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL
RECALL 99S15 SPEED CONTROL DEACTIVATOR SWITCH
1 REPLACE CRUISE CONTROL SWITCH
REPLACE CRUISE SWITCH AND CONNECTOR
INSPECT AND INSTALL SPEED CONTROL DEACTIVATION SWITCH CONNECTOR
47316 RECALL 99S15 DONE DEACT SWITCH SPEED CONTROL
99S15 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL C
PERFORMED RECALL 99S15, R-R SWITCH, HARD-SHELL, AND BLEED.
1 PERFORM RECALL 99S15
99S15 COMPLETED 99S15 COMPLETED
PERFORMED RECALL 99S15-INSTALL SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL
PERFORMED RECALL
78808 RECALL 99S15B 0.5 HR INSTALL SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15
1 PERFORMED RECALL 99S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER 99S15 RECALL
54273 RECALL 99S15 RECALL 99S15 REPLACE SPEED CONTROL SWITCH AND HARD SELL
RECALL COMPLETED ALL OK.
99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
REPLACE SPEED CONTROL SWITCH ASY

PERFORM RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER SAFETY RECALL 99S15.
PERFORMED RECALL
PERFORMED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH
PERFORM FACTORY RECALL THANK YOU
COMPL: 99S15, CAUSE: 9915, CORRE: SPEED CONTROL DEACTIVATION APROX TIME: 0.5 HRS
RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL
99S15 99S15 REPLACED CRUISE DEACTIVATION SWITCH
99S15 RRECALL 99S15 REPLACE DEACTIVATION SWITCH AS PER RECALL
6766 SPEED CONTROL SWITCH RECALL
REPLACE SPEED CONTROLE SWITCH AND CONNECT
6766 .5 99S15 COMPLETE
98244 RECALL 99S15 W 7823 VERIFIED RECALL INSTALLED DEACTIVATION SWITCH
PERFORM RECALL

REPAIR AS PER RECALL 99S15.
108457 99S15

- 1 REPLACED SPEED CONTROL DEACTIVATION SWITCH
INSTALLED DEACTIVATION SWITCH AS PER 99S15
- 1 REPLACE CRUISE DEACTIVATION SWITCH.

RECALL 99S15 REPLACE C-C SW

108881 PERFORMED RECALL 99S15
1 INSTALLED CRUISE DEACTIVATION SWITCH
REPLACED DEACTIVATION SWITCH
PERFORMED RECALL REPLACED SPEED DEACTI SWITCH
PERFORMED RECALL

99S15B 99S15B

PERFORM RECALL 99S15
REPLACED C CONTROL DEACTIVATION SWITCH PER 99S15 RECALL
107421 R+R CRUISE SWITCH
31867 99S15 PERFORM RECALL
PERFORM RECALL 99S15

OK Y REPLACE CC DEACTIVATION SWITCH

99S15E REMOVE TAPE AND SECURE THE SPEED CONTROL DEACTIVATION SWITCH .3 PLUS .1 ADMIN COMPLETED SERVICE AS REQUESTED

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR - 99S15B .5

RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

RECALL 99S15 RECALL

99S15 99S15

81804 99S15B 0.5 HRS. SPEED CONTROL RECALL

REPLACED DEACTIVATION SWITCH

RECALL PERFORM CRUISE CONTROL DEACTIVATION SW. RECALL CRUISE INOP. PRIOR

REPLACE SPEED CONTROL SWITCH

COMPLETE AS PER INSTRUCTED

REPLACED SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

RECALL COMPLETE

X PERFORMED RECAL

99S15 RECALL NOTIFICATION 99S15 RPL DEACTIVATION SWITCH AND HARDSHELL CONN PER RECALL

97833 99S15 99S15 .5 .5 REPLACE SWITCH & CONECTOR PER RECALL

PERFORM RECALL 99S15

REPLACED BRAKE SWITCH AND CONN. PER RECALL 99S15

PERFORMED RECALL 99S15

99S15 REPLACE DEACTIVATION SWITCH

RECALL REPLACED DEACTIVATION SW AND BLED BRAKES

RECALL R+R DEAC SW, INSTALLED NEW CONNECTOR, RECD OK.

82805 RECALL 0.5 PERFORM RECALL 99S15

PERFORMED RECALL 98S15. 5HRS LABOR
74807 RECALL 98S15B 0.5 REPLACE SPEED CONTROL DEACTIVATOR SWITCH AND CONNECTOR.
INSTALLED SPEED DEACTIVATION SWITCH
RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SW.
COMPLETED RECALL
RECALL COMPLETE

INSTALLED DEACTIVATION SWITCH
PERFORMED RECALL 98S15 REPLACED CRUISE SWITCH
REPLACED SC DEACTIVATION SWITCH 98S15
RECALL COMPLETE
COMPLETED RECALL 98S15, SPEED CONTROL DEACTIVATION SWITCH
1 COMPLETED RECALL
RECALL PERFORMED RECALL 98S15
PERFORM RECALL
PERFORMED RECALL

PERFORM RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO
REPLACE SPEED CONTROL DEACTIVATION SWITCH
REMOVE AND REPLACE CRUISE CABLE PER RECALL
OPEN RECALL PERFORMED 98S15 RECALL
1 PERFORMED SPEED CONTROL DEACTIVATION SWITCH RECALL
98S15 COMPLETED 98S15 COMPLETED
RECALL 98S15
RECALL 98S15 PERFORMED RECALL. REPLACED C-C DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPLACE SWITCH
RECALL 98S15
94065 OPEN RECALL 98S15 REPLACE SWITCH DONE
23710 RECALL WARR REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15
REPLACED CRUISE CONTROL DEACTIVATION SWITCH
84115 RECALL PERFORMED RECALL 98S15 CC42 CUSTOMER DECLINE RECOMENDED SERVICE
RECALL 98S15 PERFORMED RECALL 98S15
PERFORM RECALL 98S15
24474 98S15 W REPLACED SPEED CONTROL DEACTIVATION SWITCH 0837
FACTORY RECALL. REPLACED DEACTIVATION SWITCH AS PER RECALL
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 98S15
RECALL DND RECALL

102857 RECALL 98S15B 0.5 SPEED CONTROL DEACTIVATION SWITCH RECALL 98S15
REMOVED AND REPLACED HARNESS CONNECTOR PERFORMED RECALL 98S15
RECALL CRUISE CONTROL RECALL 98S15
REPLACE SWITCH AND CONNECTION PER RECALL

RECALL 99S15 REPLACE CRUISE DEACTIVATION SWITCH PER RECALL 99S15
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15

PERFORM RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO
99S15 RECALL SERVICE

PERFORM RECALL 99S15
REPLACE SPEED CONTROL SWITCH
RECALL REPAIR AS PER RECALL 99S15

REPLACED THE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR AS PER FORD
99S15 99S15
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99S15.
RECALL REPAIR
RAR SPEED CONTROL DEACTIVATION SWITCH PER 99S15
DEACTIVATION SWITCH MTIME TO DIAG CONCERN, REPLACE DEACTIVATION SWITCH

RECALL PERFORMED RECALL 99S15
99S15 99S15 COMPLETED
99S15 99S15 RECALL PERFORMED
REPLACE SPEED CONTROL DEACTIVATION SWITCH...
SPEED CONTROL SWITCH 99S15 RECALL
A DONE
RECALL 99S15 RECALL 99S15
PERFORMED RECALL

48118 RECALL W REPLACE SWITCH AND PLUG GA

REPLACED SC DEACTIVATION SWITCH 99S15
INSOECT FOR RECALL 99S15
PERF RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR OPERATION 99S15B TIME .5 PERFORM RECALL 99S15 AS PER INSTRUK
RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
PERFORM RECALL PER MANUFACTURER REPLACED DEACTIVATION SW.
REPLACE SPEED CONTROL DEACTIVATION SWITCH
99S15 REPL SWITCH & CONNECTOR
99S15B REPLACE DEACTIVATION SWITCH PER RECALL 99S15B 0.5 ADMIN 0.1

99S15 RECALL 99S15 RECALL COMPLETE
INSOECT FOR RECALL 99S15
99S15B REPLACE SWITCH
PERFORMED RECALL 99S15
REMOVED AND REPLACED BRAKE SWITCH PERFORMED RECALL 99S15

COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
PERFORMED RECALL PERFORMED RECAL

99S15 99S15 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH

98S15 REMOVE OLD SPEED CONTROL SWITCH REPLACE WITH NEW ONE AS PER

98S15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT
PERFORM RECALL REPLACE SWITCH

RECALL 98S16 REPLACE CRUISE CONTROL DEACTIVATION SW.
PERFORMED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL.

RECALL PERFORM RECALL
REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL PERFORMED
PERFORMED RECALL 98S15
PERFORMED RECALL
PERF RECALL 98S16
RECALL COMPLETE

1 REPLACE SWITCH & CONNECTOR BLEED SYSTEM
PERFORM RECALL
RECALL COMPLETED

REPLACED DEACTIVATION SWITCH PER FACTORY RECALL
1 1 REPL SPEED CONTROL SWITCH.

PERFORMED RECALL

COMPLETE RECALL
98S15 RECALL SPEED CONTROL DEACTIVATION SWITCH
RECALL RECALL
PERFORM 98S15 98S15
98001 RECALL 98S15. PERFORMED RECALL 98S15 AND CHECKED;OK
98S15 RECALL 98S15 SPEED CONTROL SWITCH
RECALL COMPLETE
98287 RECALL W INSTALL KIT GA
PERFORM RECALL
98S15 COMPLETED 98S15 COMPLETED
REPLACED SPEED CONTROL DEACTIVATION SWITCH
RECALL COMPLETE
INSPECT FOR RECALL 98S15
PERFORMED RECALL
RECALL COMPLETED
REPLACE CRUISE DEACTIVATION SWITCH
RECALL . PERFORM RECALL

100029 PERFORMED RECALL

REPLACE CONNECTOR AND SWITCH

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99S15.

193679 REMOVE AND REPLACE DEACTIVATION SWITCH AND WIRE CONNECTOR AND BLEED BRAKE

A SHORT IN THE SPEED CONTROL SWTH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLING THE CRUISE ALSO A FIRE COULD DEVOPE. REPLACE

REPLACE SPEED CONTROL DEACTIVATION SWITCH

DIAGNOSIS AND INSPECT FOR CAMPAIGN PERFORM CAMPAIGN AS PER NOTICE REPLACED SWITCH

C PERFORMED RECAL

REPLACE CRUISE SWITCH

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99S15 RECALL INSTRUCTIONS
99S15 REPLACE SPED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15

99S30 RECALL 99S15. PERFORMED RECALL 99S15 AND CHECKED OK.

PERFORMED RECALL

REPLACED BRAKE DEACTIVATION SWITCH AND CONNECTOR 99S9

SPEED CNTRL DEACTVTN SWTH RPLCMTPERF SAFETY RECALL 99S15

78787 RECALL 99S15 REPLACED DEACTIVATOR SWITCH AND CONNECTOR

REPLACED DEAC. SWITCH PER RECALL

COMPLETED RECALL 99S15 REPLACE CRUISE CONTROL DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

REMOVED AND REPLACED BRAKE SWITCH PERFORMED RECALL 99S15

PERFORMED RECALL

RECALL REPLACE SWITCH

REPLACE SWITCH AND CONNECTOR PER RECALL

REPLACED BRAKE SWITCH AND CONN PER RECALL 99S15

PERFORMED SPEED CONTROL RECALL

PERFORM SPEED SWITCH RECALL 99S15

99S15 RECALL 99S15 RECALL

102290 PERFORM RECALL AS PER FOMOCO

161670 RECALL 99S15B 0.5 0.5 RECALL

99S30 RECALL 99S15, REPLACE SWITCH

PERFORM RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH

X

99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

51614 W. REPLACE CRUISE SWITCH PER RECALL (99S2)

99718 RECALL WP30 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

PERFORMED RECALL 99S15

PERF RECALL

REPLACED SC DEACTIVATION SWITCH 99S15

99S15B

SPEED CNTRL DEACTVTN SWTH RPLCMTPERF SAFETY RECALL 99S15

REPAIR AS PER RECALL

99S15 RECALL SERVICE

REPLACED SPEED CONTROL DEACTIVATION SWITCH
INSTALLED SWITCH PER RECALL

RECALL 98S15

RECALL PERFORMED 98S15

RECALL INSTALL SWITCH

PERF RECALL

98S15 COMPLETED 98S15 COMPLETED

COMPLETED AS PER RECALL

COMPLETED RECALL REPLACED SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 98S15 RECALL INSTRUCTIONS

PERFORMED RECALL 98S15 REPLACED SWITCH AND CONNECTOR

PERFORM RECALL 98S15

PERFORMED RECALL 98S15

PERFORM RECALL

REPL SPEED CONTROL SWITCHES

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.

98S15

98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH

87913 RECALL 98S15 W PERFORMED RECALL 98S15; REMOVED AND REPLACED DEACTIVATION SWITCH AND CONNECTING WIRES, BLEED AIR FROM SYS

INSTALLED NOT TO COMPLETE

PERFORMED THE RECALL 98S15

98S15 RECALL PERFORMED

PERFORM RECALL AS PER NOTICE

PERFORMED RECALL

PERFORMED 98S15 RECALL

PERFORMED RECALL

RECALL COMPLETE

INSTALLED PART PER RECALL

47358 78 PERFORM 98S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONENCTOR ROAD TEST

74256 REPLACED SPEED CONTROL SWITCH AND CONNECTOR PER RECALL

PERFORMED RECALL

PERFORMED RECALL

PERFORMED RECAL

RECALL

98S15 PERFORMED DEACTIVATION SWITCH RECALL

1 PERFORMED RECALL

PERFORM RECALL 98S15

RECALL

REPLACE CRUISE CONTROL DEACTIVATION SWITCH RECALL

REPL DEACTIVATION SWITCH 98S15

REPLACE SWITCH PER RECALL

PERFORM RECALL 98S15

85757 RECALL 98S15 REPLACED SWITCH AND HARD SHELL CONNECTOR

PERF RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL 99S15 RECALL 99S15
99S15 COMPLETED 99S15 COMPLETED
PERFORMED RECALL 99S15 NEEDS FRT BRAKES CUSTOMER ADVISED
PERFORMED RECALL AS PER 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
99S15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT
RECALL 99S15 RECALLED SWITCH

130379 REPLACED SWITCH AND CONNECTOR PER RECALL
RECALL 99S15 RECALL 99S15

REPLACED SWITCH AND CONNECTOR PERFORM 99S15 RECALL

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL
INSTALL SWITCH PER RECALL

PERFORMED RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH
1 PERFORMED RECALL 99S15 REPLACED DEACTIVATION SWITCH
DIAG AND PERFORMED RECALL 99S15 REPLACED DEACTIVATION SWITCH ON VEHICLE CRUISE OK NOW
RECALL 99S15 REPLACED DEACTIVATOR SWITCH AND HARDSHELL CONNECTOR
REMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PERFORMED RECALL 99S15
PERFMD RECALL 99S15
PERFORMED RECALL 99S15B
73205 PERFORMED RECALL 99S15 AND ROADTESTED
90102 99S15B 0.5 0.5 PERFORM 99S15
RECALL DONE

REPLACE SW PER RECALL INSTRUCTIONS
PERFORMED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH
REPAIR AS PER RECALL
99S15 COMPLETED 99S15 COMPLETED

1 REPLACED SENSOR AND CONNECTOR

1 PERFORM RECALL 99S15
PERFORMED RECALL 99S15B REPLACED DEACTIVATION SWITCH
PERFORM RECALL
SWITCH REPLACE SPEED CONTROL SWITCH
37838 RECALL INSTALL DEACTIVATION SWITCH
PERF RECALL

PERF RECALL
70733 RECALL 99S15 INSTALL NEW SPEED CNTRL SWTC
7 COMPLETED RECALLS-CAMPAIGN 99S15
RECALL COMPLETE

RECALL COMPLETE

PERFORMED RECALL 99S15-INSPECTED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH

1 PERFORM RECALL 99S15 BRAKE SWITCH

045 REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR

REPL SPEED CONTROL SWITCH

1 PERFORM RECALL 99S15

RECALL

PERFORMED RECALL

99S15 RECALL

COMPLETE RECALL

RECALL

99S15 COMPLETD RECALL

28200 99S15 DONE *28

0

REPLACED SWITCH PER RECALL

99S15 RECALL

99S15 REPLACE SWITCH AS PER RECALL

REPLACED SPEED CONTROL SWITCH.

64420 RECALL WARR REPLACE CRUISE DEACTIVATOR SWITCH AND CONNECTOR

78778 79 PERFORM 99S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST

102558 99S15 RECALL REPLACE BRAKE SWITCH AND CONNECTOR PER RECALL

REPLACED CONTROL CONTROL DEACTIVATION SWITCH PER RECALL 99S15. CONSEQUENTIAL DAMAGE TO VALVE BLOCK, SWITCH WAS STRIPPED AND P

1 PERFORM SPEED CONTROL DEACTIVATION SWITCH

INSTALL BRAKE SWITCH KIT

COMPLETED 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACE SPEED CONTROL SWITCH

DEACTIVATION SWITCH 99S15

64424 REPLACE SWITCH AND CONNECTOR BLEED REAR BRAKES

REPLACE DEACTIVATION SWITCH AS PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

0

99S15 PROGRAM

PERFORM RECALL

REPLACE SWITCH

PERFORMED RECALL

RECALL 99S15 INSTALLED MODIFICATION FOR CRUISE CONTROL

99S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

11538 RECALL 99S15 RECALL 99S15 REPLACE SWITCH AND HARD SELL

RECALL

99S15

RECALL REPLACED CRUISE DEACTIVATION SWITCH PER RECALL

REPLACE SPEED CONTROL SWITCH PER RECALL 98S15
 PERFORM RECALL 98S15, REPLACE CRUISE DEACTIVATE SWITCH.
 PERFORM RECALL AS OUTLINE BY FOMOCO
 PERFORM RECALL AS PER NOTICE
 PERFORMED RECALL
 81782 RECALL WP40 PERFORMED 98S15 RECALL, REPLACED SPEED CONTROL DEACTIVATION SWITCH.
 REPLACED DEACTIVATION SWITCH
 98S82 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL
 REPLACED SWITCH PER RECALL
 TECHNICIAN COMPLETED RECALL 98S15 - SPEED CONTROL DEACTIVATION SWITCH
 RECALL REPL SW.
 PER NOTIFICATION RECALL 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 98S15 RECALL INSTRUCTION
 RECALL SPEED CONT DEACTIVATION M
 CAMPAIGN COMPLETED
 PERFORMED CRUISE CONTROL SWITCH RECALL
 PERFORMED RECALL BY INSPECTION AND REPLACING SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER
 REPLACE SWITCH AS PER RECALL
 PERFORM 98S15 RECALL
 RECALL SW REPLAC
 REPLACED SWITCH FOR SPEED CONTROL DEACTIVATION PER RECALL
 PERFORMED RECALL
 PERFORM RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR AS PER THE TECHNICAL INSTRUCTIONS
 RECALL 98S15
 98S15 RECALL PERFORMED
 1 JOB COMPLETED
 REPLACED DEACTIVATION SWITCH

 PERFORMED RECALL 98S15, REPLACED DEACTIVATION SWITCH AND REWIRED PIGTAIL
 INSTALL SWITCH AND CONNECTOR
 34328 REC WARR 827 PERFORM RECALL 98S15
 DID RECALL 98S15B
 1 REPLACED DEACTIVATION SWITCH
 PERFORM SPEED CONTROL DEACTIVATION SWITCH RECALL
 REPLACE SPEED CONTROL SWITCH AND HARD SHELL CONNECTOR PER RECALL 98S15.
 REPLACED SPEED CONTROL CABLE PER RECALL
 98S15 98S15
 RECALL RECALL
 00851 RECALL 98S15 REPLACED SWITCH
 RECALL DONE

 1 REPLACED CONNECTOR & SWITCH

 PERFORMED RECALL

 RECALL SW REPL
 REPLACE SWITCH
 REPLACE DEACTIVATION SWITCH AS PER RECALL
 78381 98S15 SPEED CONTROL RECALL 0.5 98S15B PERFORMED RECALL AS PER RECALL

PERFORMED RECALL
 1 COMPLETED RECALL
 47284 PERFORMED SPEED CONTROL RECALL 99S15
 PERFORM RECALL 99S15 COMPLETED
 PERFORMED RECALL 99S15 CRUISE DEACTIVATION 5 HR 2058
 78071 PERFORM 99S16 RECALL , REPLACED SWITCH
 PERFORMED RECALL 99S15
 48824 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONECTOR
 28217 REPLACED SPEED CONTROL DEACTIVATION SWITCH, S-2 8274
 REPLACE DEACTIVATION SWITCH AS PER RECALL
 MAINTENANCE RECALL COMPLETE
 RECALL SW SW REPLACE
 1 REPLACE HARD SHELL CONNECTOR
 PERFORMED RECALL
 RPELSAEC CC CONNETOR AND SWITCH
 PERFORM RECALL
 RECALL COMPLETE
 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
 PERFORM RECALL=99S15
 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
 93124 RECALL 99S16 RECALL 99S15 REPLACE SWITCH AND HARD SHELL
 1 PERFORM RECALL
 83118 RECALL PERFORMED RECALL 99S15
 INSTALL SWITCH AND HARD SHELL
 99S15 REPLACE CRUISE DEACTAVATION SWITCH
 39708 SAME PERFORM RECALL 99S15 7158
 78215 RECALL 99S16 REPLACE THE DEACTIVATOR SWITC
 28890 RECALL INSPECT AND REPLACE SPEED CONTROL SWITCH JH
 1 INSTALL CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
 PERFORM RECALL 99S15

PERFORMED THE RECALL 99S15

A SHORT IN THE SPEED CONTROL SWITCH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLING THE CRUISE ALSO A FIRE COULD DEVOPE. REPLACE
 99S16 99S16
 83197 99S15 REPLACED CRUISE SWITCH
 REPLACE CRUISE SWITCH
 105291 PERFORMED RECALL 99S15.
 132820 PERFROM RECALL 99S15 INSTALL DECTIVATION SWITTH

PERFORM RECALL 99S15
 99S15 99S15
 PERFORMED RECALL
 1 RECALL 99S15B
 3 REPLACE SPEED CONTROL DEACTIVATION SWITCH
 PERFORM RECALL 99S16 CRUISE CONTROL SWITCH
 REPLACED DEACTIVATION SWITCH AND CONNECTOR
 COMPLETED RECALL 99S15 REPLACEMENT OF SPEED CONTROL DEACTIVATION SWITCH

112780 PERFORM RECALL 99S15B, (REPLACE CRUISE SWITCH AND CONNECTOR)
PERFORMED RECALL
PERFORMED RECALL AS NEEDED ALL OK

1 REPL CONN AND DEACT SWTHCH
85452 RECALL W INSTALL SWITCH AND CONNECTOR ME
INSTALL DEACTIVATION SWITCH AS PER 99S15

VERIFY RECALL AND PERFORM PER INST
55170 PERFORM 99S15 RECALL
REPLACED THE SWITCH PER RECALL 99S15
99S15 99S15 RECALL
OTHER 99S15 PERFORM RECALL
RECALL COMPLETED
99S15 99S15
85480 99S15 RECALL W PERFORM 99S15 RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH

0 99S15 PROGRAM

INSOECT FOR RECALL 99S15
REPLACE SWITCH
112800 RECALL W REPLACE DEACTIVATION SWITCH AS PER RECALL 99S15
PERFORMED RECALL 99S15
INSTALL SPEED CONTROL SYSTEM
REPLACE SWITCH PER RECALL
87801 DID RECALL 99S15 CRUISE CONTROL .

99S15 COMPLETED
RECALL RECALL
RECALL 99S15 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO
RECALL 99S15
RECALL COMPLETED ALL OK.
RECALL SW REPL, CRUISE SW
78205 99S15 WARR REPLACED SWITCH AND CONN

PEROFRMED RECALL 99S15B.

88328 99S15 NECC TO REPLACESPEED CONTROL DEAC SW PER RECALL
REPLACE CRUISE SWITCH PER RECALL
REPLACE SPEED CONTROL SWITCH
COMPL: RECALL 99S15 CAUSE: SPEED CONTROL
REPLACE SWITCH PER RECALL

CORRE: REPLACE DEACTIVATION SWITCH AND C

1 REPLACED CRUISE SWITCH. BLEAD BRAKES. TEST DROVE

PERFORM RECALL REPL DEACTIVATION SWITCH
RECALL COMPLETE, REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
87821 REPLACED DEACTIVATION SWITCH AS PER RECALL 98S15B 0.5HR ADMIN 0.1HR
98S15 PERFORMED RECALL
98S15 PERFORMED RECALL 98S15
PERFORMED RECALL
REPLACE SW AND CONNECTOR
A PERFORM RECALL

PERFORMED RECALL
F RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
84887 REPLACED BRAKE CONTROL KIT AS PER RECALL 98S15
123208 98S15 WAIVER VERIFIED RECALL PERFORMED RECALL 98S15 NOTE DRIVERS GLASS INOP PRIOR TO REPAIRS 2321
98S15 REPL SWITCH & CONNECTOR
INSTALL NEW DEACTIVATION SWITCH AND HARDSHELL CONNECTOR 98S15
RECALL 98S15 COMPLETED
PERFORMED RECALL
78803 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER 98S15 RECALL
REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR
98S15 98S15 DONE
PERFORMED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

1 PERFORM RECALL
INSTALLED DEACTIVATING SWITCH AS PER RECALL 98S15 . TECH 43-2418
85585 98S15 C-CONTROL RECALL & TEST DROVE & HAD NO PROBLEMS
PERFORMED RECALL
PERFORMED RECALL
REPLACED SC DEACTIVATION SWITCH 98S15
RECALL 98S15B PER RECALL INSTRUCTIONS.
98S15 98S15 RECALL PERFORMED

AS PER RECALL REPLACE BRAKE SWITCH PER RECALL
SPEED CNTRL DEACTVTN SWITCH REPLCMTPERF SAFETY RECALL 98S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL
REPLACED DEACTIVATION SWITCH
REPAIRED AS PER RECALL SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL 98S15
A SHORT IN THE SPEED CONTROL SWTH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLING THE CRUISE ALSO A FIRE COULD DEVOPE. REPLACE
1 PERFORM RECALL
REPLACE SWITCH AND HARD SHELL
RECALL 98S15 COMPLETED
INSTALLED NEW CONNECTOR AND BRAKE PRESSURE SWITCH BLEED SYSTEM AND CHECKED AND OK
COMPLETED RECALL 98S15
X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
RECALL COMPLETED
REPLACED DEACTIVATION SWITCH
RECALL REPLACE SWITCH, HARDSHELL CONNECTOR & BLEED BRAKES

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
PERFORMED RECALL 99S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL
25410 RECALL REPLACED CRUISE SW. 99S15B—.5 HR.
REPLACE SPEED CONTROL SWITCH

PERFORM RECALL
1 PERFORMED RECALL 99S15
REPLACED SPEED CONTROL SWITCH.
COMPLETED RECALL 99S15
83604 PERFORMED RECALL 99S15 INSTALL NEW DEAVTIVATION SWITCH AND CONNECTOR
REPLACED DEACTIVATION SWITCH PER RECALL
RECALL 99S15

1 COMPLETED RECALL AS REQUESTED.
73627 W REPLACED SPEED CONTROL SWITCH PER RECALL 99S15.
PERFORM RECALL
PERFORM RECALL 99S15
X COMPLETED
PERFORMED SPEED RECALL 99S15
PERFORMED RECALL AS PER INSTRUCTIONS
REPLACE KIT PER RECALL
150066 42 WP40 99S15 RECALL REPLACE SWITCH

PERFORMED RECALL 99S15

PERFORM RECALL 99S15 REPLACE CRUISE DUMP SWITCH BLEED BRAKES
PERFORM RECALL
86394 W REPLACED SPEED CONTROL SWITCH PER RECALL 99S15.
REPLACED DEACTIVATION SWITCH
RECALL SW CRUISE SW
PERFORMED CRUISE CONTROL RECALL 99S15
RECALL PERFORM RECALL 99S15
RECALL 99S15 COMPLETED RECALL 99S15
SHORT MAY DIASABLE SPEED CONTROL OR CAUSE BRAKE LIGHT FUSE TO OPEN DISCONNECT CONNECTOR FROM CRUISE DEACTIVATION SWITCH & PRX
1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15 - MILES OUT 89001
112892 WARRANTY PERFORMED RECALL 99S15 AS PER RECALL INSTR. ROAD TEST OK,
PERFORM RECALL REPLACE SWITCH
32458 REPLACED CRUISE CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99S15
78334 RECALL 99S15 RECALL 99S15
94650 PERFORMED RECALL 99S15
RECALL PERFORM RECALL 99S15 SPEED CONTROL
REPLACED DEACTIVATION SWITCH
PERFORMED RECALL 99S15 - CHECK AND REPALCED DEACTIVATION SWITCH AND REHCEKC OK
PERFORMED RECALL
INSTALLED DEACTIVATION SWITCH PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

17024 RECALL 99S15 INSTALL NEW SWITCH AND CONNECTOR

PERFORMED RECALL 99S15B.

97396 INSTALLED NEW CONNECTOR AND SWITCH AS PER RECALL

1 00 REPLACED SWITCH

CABLE

PERFORM RECALL

99S15 RECALL

99S15 RECALL, REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDS

COMPLETED RECALL

PERFORMED RECALL

PERFORMED RECALL 99S15

PERFORMED RECALL

PERFORMED RECALL

PERFORMED RECALL

INSTALL DEACTIVATION SWITCH PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

REPLACE SPEED CONTROL SWITCH PER RECALL 99S15

99S15 RECALL 99S15 INSTALLED UPDATED SPEED CONTROL DEACTIVATION SWITCH, CHECKS OK

REPLACED DEACTIVATION SWITCH & CONNECTOR HOUSING AS PER 99S15

99S15

REC

RECALL

99S15

1 PERFORM RECALL

RECALL ELECT CK OUT TIME AND REPL CC FLUID SW PER RECALL WF TEC300

PERFORM RECALL

RECALL 99S15 COMPLETED

PERFORMED 99S15

X

REPLACE SPEED CONTROL SWITCH AND CONNECTOR

REPLACE KIT PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

1 PERFORMED RECALL

PERFORMED RECALL

COMPLETED RECALL PER INSTRUCTIONS

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER SAFETY RECALL 99S15.

PERFORM RECALL 99S15

REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

PERFORM RECALL

X

99S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

CHECK FOR RECALL, PERFORM RECALL

INSTALL SWITCH AND CONNECTOR

41188 INSTALLED NEW SPEED DEACTIVATION SWITCH TO COMPLETE RECALL 99S15

99S15 COMPLETED REPLACED SWITCH

REPLACED SPEED CONTROL, DEACTIVATION SWITCH PER RECALL 99S15

REPLACE SWITCH AND CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

RECALL

PERFORM RECALL 99S15

28498 98S15 W REPLACE SPEED CONTROL SWITCH AND CONNECTOR ROAD TEST. RECOMMEND HOSE REPLACEMENT TECH NUMBER 2853 GA
PERFORMED RECALL PER BULLETIN #98S15
PERFORM RECALL

RECALL RECALL
27389 RECALL 98S15 INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH PER INST
RECALL REPLACE DEACTIVATION SWITCH SPEED CONTROL
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15

X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
PERFORMED OPEN RECALL 98S15

REPLACE SWITCH AND CONNECTOR PER RECALL
RECALL CRUISE SW REPLACE
RECALL REPLACE SWITCH ASY.

94004 RECALL 98S15
REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 98S15
1 PERFORMED RECALL

REPLACED SPEED CONTROL SWITCH PER RECALL
RECALL COMPLETED

SPEED CONTROL DEACTIVATION RECALL
REPLACE SWITCH AND CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15

126990 INSTALLED RECALL
INTERIM REPAIR REMOVED TAPE SECURE THE SPEED CONTROL DEACTIVATION SWITCH LABOR OP 98S15E 0.3 HRS PERMANENT REPAIR REPLAC
98S15 98S15

PERFORMED RECALL 98S15
98264 RECALL 98S15B .5, ADMIN .1 REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL

RECALL 98S15 COMPLETED
98S15 REPLACE DEACTIVATION SWITCH AND CONNECTOR
PERFORMED RECALL

98S15 RECALL INSTALLED MODIFICATION FOR CRUISE CONTROL
RECALL RECALL

JS PERFORM RECALL REPL DEACTIVATION SWITCH AND CONNECTOR
INSTALL SWITCH

98S15 98S15
FACTORY RECALL REMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
85273 RECALL DONE

RECALL 98S15 COMPLETED
RECALL DONE
182105 WARR REPLACED SPEED-CONTROL DEACTIVATION SWITCH
RECALL ASDFSDAFADSFASDFD
REPLACED DEACT. SWITCH BLEED SYSTEM PER RECALL
RECALL COMPLETED
INSTALLED NEW DEACTIVATION SWITCH PER RECALL

. -DONE 98S15
REPLACED CRUISE DEACTIVATION SWITCH
PERFORMED RECALL

1 REPLACED SWITCH

RECALL 98S15- REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

REPLACED SWITCH AND CONECTOR

79745 RECALL DO RECALL 98S15

PERFORMED RECALL 98S15

PERFORMED RECALL

RECALL 98S15 INSTALL SPEED CONTROL DEACTIVATION SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH

RECALL 98S15 RECALL PERFORME

43885 PERFORMED SPEED CONTROL RECALL REPLACED THE SWITCH AND CONNECTOR

RECALL REPLACE DECT SWITCH PER RECALL

RESISTIVE SHORT. PERFORM RECALL-ONP PER FOMOCO INSTRUCTIONS.

INSTALL CONNECTOR AND SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PERMANENT REPAIR ADMIN 10 4 90

VERIFY R&R SPEED CONTROL HARD SHELL CONNECTOR PER RECALL

78210 W DID RECALL 98S15

REPLACED SPEED CONTROL SWITCH PER RECALL

RECALL 98S15 98S15

127778 98S15 PERFORMED RECALL

A RECALL COMPLETE

72146 DO RECALL 98S15. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARED SHEEL CONNITER. BLEED BRAKE SYSTEM AND ROAD TEST. BR

REPLACE SPEED CONTROL SWITCH PER RECALL

RECALL 98S15 COMPLETED

RECALL 98S15. REPLACE CRUISE CONTROL DEACTIVATION SWITCH & HARDSHELL CONNECTOR PER RECALL 98S15.

107280 PERFORMED RECALL

PER NOTIFICATION RECALL 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 98S15 RECALL INSTRUCTION

98S15 RPL SWITCH

REPL SPEED CONTROL CABLE 98S15

1 COMPLETED RECALL

RECALL 98S15 RECALL 98S15

RECALL 98S15 RECALL 98S15

PERFORMED RECALL 98S15

98S15 RECALL 98S15 RR SPEED CONTROL SWITCH AS PER RECALL

45280 RECALL WA REPLACE SWITCH AND CONNECTOR

PERFORMED RECALL

106596 PERFORMED RECALL-REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR-ROADTESTED VEHICLE-ALL IS OK.

RECALL COMPLETED

RECALL RECALL

REPLACED DEACTIVATION SWITCH AS PER RECALL

INSTALL CRUISE CONTROL CABLE

RECALL 98S15 REPLACED DEACTIVATION SWITCH

RECALL REPLACED SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH

RECALL 98S15

RECALL REPLACED CRUISE DEACTIVATION SWITCH PER RECALL

RECALL 98S15

1 CHECK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

88715 RECALL 98S15 PERFORMED RECALL. REPLACED DEACTIVATION SWITCH AND CONNECTOR.

RECALL RECALL

58977 RECALL W PERFORM RECALL 98S15 GA

REPLACE SWITCH & CONNECTOR PER RECALL

149382 PERFORMED RECALL

1 OK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH & PLUG

REPLACED SPEED CONTROL PER RECALL

98S15 RECALL 98S15 RECALL

RECALL 98S15 SPEED CONTROL RECALL PERFORMED.

RECALL PERFORMED RECALL 98S15

REPLACED SWITCH AS PER RECALL

RECALL COMPLETED.

RECALL RECALL

RECALL PERFORMED RECALL

Q RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

98S15

98S15 RECALL

98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR. ROAD TEST.

TECH COMPLETED RECALL AS REQUIRED

1 REPLACE SPEED CONTROL SWITCH AND CONNECTOR

RECALL 98S15 PERFORMED RECALL

RECALL PERFORMED 98S15 RECALL REMOVED AND REPLACED CRUISE DEACTIVATION SWITCH

72271 RECALL WARR REPAIR REPLACE BRAKE SWITCH PER RECALL. OLD PART TURNED INTO PARTS DEPARTMENT.

42 98S15

RECALL PERFORMED RECALL 98S15. C

RECALL REPAIR

PERFORMED RECALL

ADD AJI INSTALL DEACTIVATION SW PER RECALL.

98S15 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL C

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

REPLACE SPEED CONTROL CONNECTOR PER RECALL

RECALL REPLACE CRUISE DEACT SWITCH AND CONNECTOR

98S15 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL C

— PERFORMED RECALL

COMPLETED 98S15 RECALL

RECALL 98S15

PER RECALL PERF RECALL

REPLACE CRUISE CONTROL SWITCH

REPLACED SWITCH AND CONNECTOR

REPLACE SPEED CONTROL SWITCH

REPLACED SWITCH

RECALL

PERFORM RECALL 98S15 SPEED CONTROL SWITCH

RECALL

RECALL

99S15

99S15

RECALL 99S15

PERFORMED RECALL

99S15

99S15

PERFORMED RECALL 99S15

RECALL 99S15 PERFORM AS INSTRUCTED

PERFORM RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

101131 RECALL 99S15 CC42 W PERFORMED RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH.

PERFORM RECALL

INSTALL CRUISE DEACTIVATION SWITCH AS PER RECALL NUMBER 99S15

24850 REPLACE SWITCH AND CONNECTOR PER RECALL

INSPECTED AND INSTALLED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL 99S15 . TECH 35-1133

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL

42

99S15

PERFORMED RECALL 99S15 99S15

1 PERFORMED SPEED CONTROL DEACTIVATION SWITCH RECALL

REPLACE DEACTIVATION SWITCH RECALL

REPL SWITCH

#99S15

99S15 99S15 PERFORM RECALL

REPLACE SWITCH PER RECALL

120742 PERFORMED RECALL 99S15 SPEED CONTROL SWITCH

RECALL SPEED CONTROL REPLACE DEACTIVATION SWITCH CONECTOR

51385 CHECK AND INSPECT PERFORMED RECALL 99S15

PERFORMED RECALL

REPLACE SWITCH PER RECALL

51485 PERFORMED RECALL NO. 99S15

REPL SPEED CONTROL CABLE 99S15

REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99S15

112873 PERFORMED 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL 99S155 .5 ADMIN .1

INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN

INSTALL CRUISE CONTROL DEACTIVATION SWITCH.

RECALL

99S15

FORD SAFETY RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPLACED THE BRAKE PRESSURE SWITCH PER RECALL 99S15

03249 RECALL RECALL 99S15

SPEED CNTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 99S15

REPLACE SWITCH.

79288 RECALL 99S15 W 7823 INSTALLED DEACTIVATION SWITCH

PERFORM RECALL

128676 99S15 99S15 .5 REPLACE SWITCH & CONECTOR
SERVICE CAMPAIGNS SERVICE CAMPAIGNS REPLACED BRAKE DEACTIVATION SWITCH-THREADS CAME OUT OF JUNCT

PERFORMED RECALL

99441 RECALL 99S15 DONE DEACT SWITCH REPLACE

COMPLETED RECALL 99S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 99S15B .5 + .1

PERFORM 99S15

PER NOTIFICATION RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL 99S15 INSTRUCT

PERFORMED RECALL 99S15

RECALL

99S15 DONE

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED

PERFORMED RECALL

99S15

REPLACED DEACTIVATION SWITCH

99S15 REPL DEACT SWITCH 99S15 REPLACE DEACTIVATION SWITCH PER RECALL

INSTALLED BRAKE SHIELD PER RECALL RETESTED OK. NO OTHER CONCERN AREAS EVIDENT AT THIS TIME.

136394 W REPLACE SWITCH RAT.

REPLACE BRAKE PRESSURE SWITCH

RECALL

99S15 RECALL REPLACED SWITCH

RECALL

99S15 REPLACE SWITCH

81998 RECALL 99S15B .5 .5 HRS REPLACE CRUISE DE- AC. SWITCH

99S15 RECALL

99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

101948 RECALL DONE

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER RECALL 99S15.

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99S15.

PERFORM RECALL

REPLACE DEACTIVATION SWITCH AND CONNECTOR

81283 REPLACED SPEED CONTROL DEACTIVATION SWITCH 99S15B .5 HRS. ADMIN ALLOW .1 HRS.

REPLACED SWITCH PER RECALL 99S15

PERFORM RECALL 99S15

PERFORMED RECALL 99S15-REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR

ADD

DONE

REMOVED AND REPLACED SPEED CONTROL SWITCH AS PER RECALL

REPLACE SPEED CONTROL SWITCH

RECALL 99S15

99S15

PERFORMED RECALL 99S15

RECALL

99S15 RECALL

REPLACE SWITCH AND CONNECTOR

RECALL R-R DEAC SW, INSTALLED NEW, AND CONN.

72727 WARR DONE RECALL 99S15 REPLACE BRAKE REPA

RECALL R EPAIR

99S15 REPL DEACT SWITCH 99S15 COMPLETED RECALL

REPLACED DEACTIVATION SWITCH

79349 99S15 R AND R SWITCH AND CONNECTOR FOR RECALL

COMPL: REPLACE DEACTIVATION SWITCH

CAUSE: RELACE DEACTIVATION SWIT

CORRE: PERFORME RECALL

97728 RECALL 99S16B 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL

REMOVE TAPE AND SECURE LABOR OP 99S16E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OP 99S16B .5 REMOVED TAPED AND SE

DEACTIVATION SWITCH 99S15

RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONN

1 RECALL COMPLETE

1 INSTALL SWITCH AND CONNECTOR

PERFORM RECALL

REPLACED CRUISE DEACTIVATION SWITCH PER RECALL

RECALL 99S15

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99S15.

RECALL 99S15 99S15 REPLACED SPEED CONTROL SWITCH

PERFORM RECALL

PERFORM RECALL

1 PERFORMED RECALL 1

99S200 REPLACE SPEED CONTROL SWITCH AND CONNECTOR PER RECALL 99S15

RECALL RECALL

SPEED CONTROL CONN 99S15 RECALL

INSTALL CRUISE CONTROL DEACTIVATION SWITCH.

74132 RECALL WAR REPLACE SWITCH AND CONNECTOR GA

99S15 99S15

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99S15.

FORD SAFETY RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

99S15 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL C

99S15

PERFORM RECALL

REPLACED DEACTIVATION SWITCH AS PER RECALL

RPL SPEED CONTROL SWITCH AND CONNECTOR PER 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH

SAFETY RECALL 99S15 -REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99S15.

1 PERFORMED RECALL REPLACED DEACTIVATION SWITCH

RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

79888 RECALL DONE

99S15 PERFORMED RECAL

1 PERFORMED RECALL 99S15B 1

101099 RECALL 99S15. WR PERFORM RECALL 99S15. REPLACE BRAKE PRESURE SWITCH AND CONNECTOR.

RECALL DID RECALL

RECALL COMPLETED

2002-025 0423

NB RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
1 PERFORMED RECALL 98S15

COMPLETED RECALL 98S15
84804 PERFORMED RECALL 98S15. INSTALLED NEW DEACTIVATION SWITCH AND HARDSHELL CONNECTOR. OK
REPLACE SWITCH AND CONN
REPLACED THE SWITCH PER RECALL 98S15
RECALL REPLACE DEACT SWITCH
130002 RECALL 98S15 WARR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
PERFORM RECALL
INSTALL REPAIR KIT
RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACEMENT
117797 RECALL 98S15 WARR INSTALL BRAKE SWITCH

RECALL 98S15 COMPLETED
PERFORMED 98S15 RECALL
REPLACE SPEED CONTROL SWITCH
PERFORMED RECALL
1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
1 PERFORMED DEACTOR SWITCH RECALL, INSTALLED NEW CRUISE DEACTOR SWITCH, AND CONNECTOR
RECALL PERFORM RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH
91632 RECALL 98S15 INSTALLED SWITCH AS PER RECALL 98S15
FACTORY RECALL COMPLETED RECALL
RPLC CRUISE CTRL DEACTIVATION SWITCH PER 98S15
RECALL 98S15
REPLACED DEACTIVATION SWITCH PER RECALL LABOR 98S15B 0.5, ADMIN 0.1
LETTER FROM FORD PERFORM RECALL #98S15
PERFORM 98S15 RECALL AS INSTRUCTED
31338 PREFORMED RECALL (CRUISE SWITCH)
PERFORMED RECALL 98S15
RECALL COMPLETE.
RECALL 98S15 - SPEED CONTROL DEACTIVATION SWITCH REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
REPLACE SWITCH PER RECALL
RECALL PERFORM RECALL
MAY CAUSE A SHORT INSTALL THE SPEED CONTROL DEACTIVATION SWITCH
INSTALL NEW DEACTIVATION SWITCH AND HARNESS PER RECALL
PERFORM RECALL
81189 RECALL #98S15 PREFORMED RECALL #98S15 INSTALLED REPLACEMENT SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.
RESISTIVE SHORT. PERFORM RECALL ONP PER FOMOCO INSTRUCTIONS.
7 PERFORMED 98S15 RECALL, INSTALLED KIT 98082, REPLACED SWITCH CONNECTOR, REPLACED SWITCH AND BLEED BRAKE SYS.
101894 RECALL INSTALL SW AND CONN AS PER RECALL.
RECALL 98S15 REPLACE C-C SW
REPLACE SPEED CONTROL DEACTIVATION AND HARD SHELL CONNECTOR

PERFORM RECALL 98S15

REMOVED AND REPLACED SPEED CONTROL SWITCH AS PER RECALL
RECALL 98S15 RECALL 98S15

98S15 RECALL REPLACED SWITCH
37252 PREFORMED RECALL - DEACTIVATION SWITCH

COMPLETE 98S15 RECALL
RECALL PERFORMED RECALL
REPLACED SENDER AND CONNECTOR
PERFORM RECALL 98S15
COMPLETE RECALL 98S15
42 98S15
REPLACED DEACTIVATION SWITCH PER RECALL LABOR 98S15B 0.5, ADMIN 0.1
INSTALL NEW DEACTIVATION SWITCH AND HARNESS PER RECALL
REPLACE SWITCH PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARSHHELL CONNECTOR AS PER RECALL
RECALL 98S16
REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

98S15 98S15
1 PERFORMED RECALL REPLACED SWITCH
RECALL 98S15 INSTALLED SWITCH
98S15 PERFORM RECALL 98S15
RECALL 98S15 INSTALLED SWITCH
98S15 98S15
COMPLETED RECALL 98S18
RECALL PERFORM RECALL
REPLACED SWITCH AND PLUG PER RECALL
PERFORMED RECALL 98S16
PERFORMED RECALL 98S15
PERFORMED RECALL 98S15
01732 CHRIS DO 98S15B
PERFORMED RECALL 98S16
REPLACE SPEED CABLE
REPLACED SPEED CONTROL SWITCH PER RECALL 98S16

REPLACE DEACTIVATION SWITCH AS PER RECALL
VERIFY AND PERFORM RECALL PER INST
REPLACE SPEED CONTROL SWITCH PER RECALL
COMPLETE RECALL IN TIME NEEDED TO REPLACE MELTED WIRES AND CONNECTORS
98S15 98S15 COMPLETED
PERFORMED RECALL 98S16
(PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 98S15B X5
98S15 98S15 RECALL
RECALL 98S15

REPLACED SWITCH AND PLUG AS PER RECALL
RECALL 98S15 SPEED CONTROL DEACT SWITCH

REPLACE CRUISE CONTROL SWITCH PER RECALL INSTRUCTIONS
 PERFORMED RECALL 99S15
 COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
 COMPLETED RECALL 99S15
 106419 PERFORMED RECALL 99S15 CAUSE RECALL 99S1
 RNR DEACTIVATION SWITCH PERFORM RECALL 99S15
 C PERFORMED RECALL
 95516 REPLACED SWITCH RECALL 99S15
 PERFORM RECALL
 RECALL 99S15 99X15
 RECALL PERFORM RECALL 99S15
 48184 RECALL WPB30 PERFORMED RECALL 99S15 INSPECT FOR RECALL NO FURTHER ACTION NEEDED
 REPLACED THE SWITCH PER RECALL 99S15
 53905 RECALL INSTALL DEACTIVATION SWITCH Y
 SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED E
 PERFORMED RECALL 99S15
 99S15 99S15
 REPLACED DEACTIVATION SWITCH
 COMPLETED RECALL PER RECALL INSTRUCTIONS
 19587 0.5 HR PERFORMED RECALL 99S15B REPLACED DEACT. SW. WITH NEW HARD SHELL CONN.
 RECALL 99S15B INSTALLED SWITCH
 61797 99S15 REPLACE SWITCH AND HARD SHELL
 RECALL REQUIRED PERFORM RECALL
 RECALLED BY FORD MOTOR COMPANY COMPLETED RECALL PER LETTER
 REPLACED DEACTIVATION SWITCH. PER RECALL
 PERFORMED RECALL 99S15
 RECALL COMPLETED
 RECALL COMPLETED
 1 REPLACE SPEED CONTROL SWITCH AND CONNECTOR
 RECALL COMPLETED
 99S15 RECALL 99S15 COMPLETED RECALL
 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
 PERFORM RECALL INSTALL SWITCH
 99S15B 99S15B
 1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 99S15B .B
 RECALL ON CRUISE CABLE
 115584 REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99S15
 RECALL COMPLETED
 PERF 99S15
 RECALL REPLACED DE-ACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL
 99S15 RECALL PERFORME
 1 CHECK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

 REPLACED SPEED CONTROL DEACTIVATION SWITCH, REPLACED CONNECTOR & BLEED BRAKES PER RECALL 99S15
 99S15 RECALL 99S15 RECALL

 PERFORMED RECALL 99S15
 53907 REPLACED SWITCH PER RECALL 99S15

97046 INSTALLED DEACTIVATION PER RECALL INSTRUCTIONS.
RECALL 99S15 RECALL; REPLACED DEACTIVATION SWITCH
145338 REPLACE SWITCH AND CONNECTOR.
SWITCH 99S15

23132 RECALL INSPECT AND REPLACE SPEED CONTROL SWITCH JH
RECALL SPEED CONTR DEACT SWITCH PERFORM RECALL 99S15, REPLACE SPEED CONTROL SWITCH & CONNECTOR
60685 RECALL W INSTALL SWITCH 99S15 GA
PERFORMED RECALL
RECALL 99S15
RECALL 99S15 REPLACE SPEED CONTROL CABLE
PERFORMED RECALL
1 RECALL 99S15 DONE
REPLACE SPEED CTRL CONNETOR AND SWITCH
SWITCH 99S15
PERFORM 99S15 RECALL, REPLACE SPEED CONTROL ACTIVATION DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
99S15 99S15
RECALL 99S15 INSTALLED SWITCH

RECALL RECALL
PERFORM RECALL 99S15
1 08 REPLACED SWITCH
33323 RECALL 99S15 REPLACE CRUISE CONTROL SWITCH AND PLUG
100706 RTECALL 0.50 PERFORMED RECALL 99S15 AS REQUIRED
RECALL 99S15 99S15
REPLACE SWITCH
OPEN RECALL PERFORM RECALL
PERFORM RECALL 99S15
REPLACED KIT. RECALL COMPLETED.
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
RNR DEACTIVATION SWITCH PERFORM RECALL 99S15
RECALL 99S15 99S15
RECALL COMPLETED
RECALL 99S15
RECALL 99S15 INSTALLED SWITCH
70676 REPLACE SPED CONTROL ACTIVATION SWITCH AND CONNECTOR PER RECALL
REWired AND REPLACED CONN,BLEED BRAKES

SPEED CONTROL FOUND SPEED CONTROL SWITCH MOUNTED CRACKED AND LEAKING, THREADS IN BRAKE PRES. CONTROL VALVE STRIPPED. REPLACE
INSTALLED NEW SWITCH AND WIRE AS PER RECALL 99S1
1 COMPLETED 99S15 RECALL 1
RECALL 99S15 CRUISE DEACTIVATION SWITCH

78810 W RECALL 99S15,REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR. 99S15B .5.1 ADMIN
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

99S15 RECALL CRUISE DEACTIVATION 99S15 RECALL CRUISE DEACTIVATION
99S15

182051 SAFETY RECALL 99S15 W COMPLETED SAFETY RECALL Y

1 PERFORMED RECALL 99S15 INSTALLED NEW SWITCH

87130 PERFORM RECALL 99S15 INSTALL BRAKE PRESSURE SWITCH

PERFORMED 99S15 RECALL

REPLACED DEACTIVATOR SWITCH PER RECALL

REPLACE CRUISE SWITCH 1

. REMOVE TAPE AND SECURE DEACTIVATION SWITCH 99S15E .3

104424 COMPLEAT 99S15

INSTALLED SWITCH PER RECALL

RECALL 99S15 REPLACED CABLE

PERFORM RECALL

REPLACED DEACTIVATION SWITCH PER RECALL

PERFORM RECALL

1 PERFORM RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH, CONNECTOR

198774 WARR DONE RECALL 99S15 BRAKE REPAIR KIT

202 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH RECALL 99S15

DONE AS PER INSTRUCTIONS

PERFORMED RECALL

PERFORMED RECALL 99S15

INSTALL CRUISE CONTROL DEACTIVATION SWITCH PER RECALL

RECALL PERFORMED

PERFORMED RECALL 99S15 - CHECK AND REPLACED DEACTIVATION SWITCH AND RECHECK OK

RECALL 99S15 REPLACE SWITCH PER RECALL

RECALL COMPLETED ALL OK

FACTORY RECALL COMPLETED RECALL

PERFORMED RECALL 99S15

PERFORMED RECALL

80330 REPLACED DEACTIVATE SWITCH AND CONNECTOR PER RECALL. ROAD TESTED TO CHECK OPERATION OF SPEED CONTROL SYSTEM

108431 RECALL .5 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15B

1 REPLACED SWITCH

OPEN RECALL PERFORMED RECALL

94370 INSTALL CRUISE CONTROL DEACTIVATION SWITCH

1 PERFORM RECALL

. INSTALLED CRUISE SWITCH AS PER RECALL 99S15

103887 99S15 C-CONTROL 99S15B .5HRS .5HRS REPLACED CRUISE DEACTIVATION SWITCH

RECALL 99S15 RECALL

151987 RECALL WARR PERFORM 99S15

37814 REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL

PERFORMED RECALL

RECALL PERFORMED RECALL AS PER FORD INSTRUCTION

INSTALL SPEED CONTROL DEACTIVATION SWITCH PER RECALL

OPEN RECALL PERFORM 99S15 RECALL

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
REPLACE SOPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
OPEN RECALL COMPLETED OPEN RECALL
RECALL 99S15 99S15
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 99S15B .8
X 99S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
REPLACED DEACTIVATION SWITCH
1 PERFORM RECALL 99S15

RECALL INSTALL DEACTIVATION SWITCH
1 RECALL PERFORM 99S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL

127810 REPLACE CRUISE DEACTIVATOR SWITCH & CONNECTOR PER 99S15 TECH 5323
99S70 RECALL 99S15 0.5 REPLACED CRUISE CONNECTOR
RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15
1 PERFORMED RECALL REPLACED SWITCH

REPLACE DEACTIVATION SWITCH AS PER RECALL
38421 REPL DEACTIVATION SW & CONN
RECALL 99S15 INSTALLED SWITCH

RECALL 99S15 99S15
REPLACED SWITCH AND HARDSHELL
INSTALLED SWITCH
SPEED CNTRL DEACTVTN SWITCH REPLCMTPERF SAFETY RECALL 99S15
99S15 99S15
INSTALLED SWITCH
REMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PERFORMED RECALL 99S15
RECALL RECALL
REPLACED DEACTIVATION SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL
99S15 99S15
REPLACED DEACTIVATION SWITCH
25604 99S15 W REPLACE SPEED CONTROL SWITCH AND CONNECTOR GA
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 99S15B .8
99S15 RECALL 99S15 RECALL COMPLETE
REPAIR AS PER RECALL DONE
REPLACE SWITCH AND HARD SHELL CONNECTOR

37590 RECALL 99S15 WARR REPLACED SWITCH AND CONNECTOR

48134 REPLACE CRUISE BRAKE SWITCH AS PER RECALL 99S15B
INSTALLED SWITCH
300666 PERFORM RECALL 99S15 REPLCRUISE DEACT SWITCH
PERFORMED RECALL 99S15
99S15 99S15 COMPLETED

INSTALLED CRUISE DEACTIVATION SWITCH AS PER RECALL 99S15
REPLACED DEACTIVATION SWITCH PER RECALL 99S15B.
PERFORM 99S15
PERFORMED RECALL 99S15

PERFORM RECALL

PERFORMED THE RECALL 99S15

PERFORM RECALL 99S15

PERFORM RECALL

REPLACED DEACTIVATION SWITCH

PERFORM RECALL 99S15

PERFORM RECALL

PERFORMED RECALL AS PER 99S15

PERFORM 99S15 AS INSTRUCTED

RECALL 99S15 RECALL REPLACED SWITCH

99S15 RECALL PERFORME

PERFORMED THE RECALL 99S15

97006 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15 FP99002

PERFORM RECALL

77886 RECALL RECALL 99S15

99S15B 0.5

REPLACE DEACTIVATION SWITCH

DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

99S15 RECALL REPLACED BRAKE SWITCH PER RECALL

INSTALLED NEW SWITCH

1 08 REPLACED SWITCH

RECALL 99S15 RECALL

118040 99S15 INSTALLED NEW SWITCH

REPLACE SWITCH

RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15

PERFORM RECALL

SYSTEM TESTED, CRUISE NOT WORKING, PERFORMED NGS DIAG, PASS PID MONITOR, PP TESTED FOUND PRESSURE SWITCH BAD, SERVICE

PERFORMED RECALL

39000 RECALL PERFORMED RECALL 99S15

OPEN RECALL PERFORM RECALL

99S15 99S15 REPLACED CRUISE CONTROL DEACTIVATION SWITCH

RMR CRUISE CONTROL SWITCH

RECALL 99S15 RECALL 99S15

1 PERFORMED RECALL

PERFORMED RECALL 99S15-INSTALL SWITCH KIT. NOTE FRONT END HAS DAMAGE HOOD WILL NOT CLOSE PROPERL

RECALL COMPLETED

RECALL 99S15 INSTALLED DEACTIVATION SWITCH PER RECALL

1 COMPLETED RECALL 99S15 1

RECALL 99S15 SPEED CONTROL

35831 RECALL. REPLACE SPEED CONTROL DE-ACTIVATION SWITCH PER RECALL 99S15.

99S15 99S15

OPEN RECALL PERFORM 99S15 RECALL

1002-2208 0430

98S15 RECALL 98S15 RECALL COMPLETE
RECALL COMPLETED
REPLACED CRUISE CONTROL DEACTIVATION SWITCH
UNKNOWN INSTALL CRUISE SWITCH AND CONNECTOR PER 98S15
98S15 RECALL WARR REPLACED DEACTVATING SW AS PER RECALL
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98S15B .8
RECALL 98S15
REPL SWITCH PER RECALL
102548 REPLACE DEACTIVATION SWITCH PER 98S15 RECALL
INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL
RECALL 98S15
PERFORM RECALL INSTALL SWITCH

OPEN RECALL 98S15 RECALL

REPLACED DEACTIVATION SWITCH
54589 PERFORM RECALL 98S15B INSTALL BRAKE PRESSURE SW ITCH
71177 PERFORMED RECALL 98S15
COMPLETED RECALL
PERFORMED RECALL
REPLACE SWITCH AND CONNECTOR
REPL SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
RECALL 98S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 98S15
181870 RECALL 98S15 RECALL 98S15

RECALL COMPLETE
98S15 COMPLETED RECALL 98S15

98S15 RECALL PERFORME
138037 WARR 98S15B .5 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
REPLACE SWITCH PER RECALL
REPLACED SWITCH & CONNECTOR PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL
COMPLETED RECALL
PERFORM RECALL
PERFORM SPEED CONTROL RECALL
98S15 - PERFORM RECALL REPLACED SWITCH AND CONNECTOR AND ROAD TEST
RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

98S15B
1 PERFORMED RECALL 98S15
81405 PERFORMED RECALL
PERFORM RECALL PER TECHNICAL INSTRUCTIONS IN RECALL BULLETIN REPLACE SPEED CONTROL DEACTIVATION SWITCH& HARDSHELL CONNECT

INSPECT AND OR PERFORM RECALL INSPECTED AND OR PERFORMED RECALL AS PER RECALL INSTRUCTIONS.

RECALL 98S15 REPLACED SWITCH
RECALL 98S15 INSTALLED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL

1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 99S15B X5
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 99S15B .8
R&R SWITCH AND CONNECTOR

RECALL REPLACE PRESSURE SWITCH AND HARNESS PER RECALL
DONE AS PER INSTRUCTIONS

72118 0.5 99S15B RECALL

REPLACE SPEED CONTROL SWITCH

RECALL REPLACE PREAS SWITCH AND CONNECTOR PER RECALL

REPL DEACTIVATION SWITCH PER RECALL

99S15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARSHHELL CONNECT

RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT COMPLETED

RECALL LETTER PERFORMED RECALL AS PER FACTORY INSTRUCTIONS

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTORS.

AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

99S15 RECALL PERFORME

99S15 PERFORMED RECALL 99S15

99S15 REPL SPEED CONTROL DEACTIVATION SWITCH

DEFECTIVE SPEED CONTROL 99S15 RECALL PERFORM REPLACEMENT

79153 RECALL WP40 PERFORM RECALL REPLACE BRAKE PRESSURE SWITCH AND CONNECTOR

100376 RECALL REPLACED SENSOR

RECALL REPLACE CRUISE SWITCH

92404 PERFORM RECALL REPLACE SWITCH AND CONNECTOR#1

99S15 RECALL CRUISE DEACTIVATION 99S15 RECALL CRUISE DEACTIVATION

REPLACED DEACTIVATION SWITCH PER RECALL

SPEED CONTROL SWITCH 99S15 RECALL

99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN.

REPLACED SPEED CONTROL DEACTIVATOR SWITCH PER RECALL LABOR 99S15B 0.5, ADMIN 0.1

72366 PERFORM RECALL 99S15 SPEED CONTROL

99S15 REPLACED CONNECTOR AND SWITCH

99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN.

PER RECALL 99S15

RECALL 99S15 COMPLETED RECAL

RECALL 99S15

COMPLETED RECALL 99S15

101003 RECALL 99S15B 0.5HRS REPLACE SWITCH AND CONECTOR TK372

REPLACE DEACTIVATION SWITCH AND CONNECTOR

1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 99S15B .8

DOOR LOCK SWITCH SWITCH ASSEMBLY-POWER DOOR LOCK - REPLACE

REPLACED SWITCH ASY

REPLACED SWITCH & CONNECTOR#4

PERFORM 99S15 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACEMENT RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH

99S15 99S15 PERFORMED RECALL

82367 RECALL 99S15 REPLACED SWITCH.

99S15 CC DE ACTIVATION SW RECALL 99S15 CC DE ACTIVATION SW RECALL

99S16 RECALL

REPLACED SWITCH AS PER RECALL

48470 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL INSTRUCTIONS

PERFORM RECALL 99S16

REPLACED SWITCH

1 PERFORM RECALL

PERFORMED RECALL 99S16

99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN.

REPLACE SWITCH PER RECALL

RECALL COMPLETED

OPEN RECALL COMPLETED OPEN RECALL

F RC 99S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

PERFORM RECALL 99S15- REPLACE CRUISE CONTROL DEACTIVATION SWITCH

1 REPLACED SWITCH PER RECALL 99S15

PERFORM RECALL 99S16

COMPLETED CAMPAIGN 99S15 REPLACED SPEED CONTROL CABLE

PERFORMED RECALL AS PER INSTRUCTIONS

103719 RECALL WP40 PERFORMED RECALL, REPLACED BRAKE PRESSURE SWITCH

SPEED CNTRL DEACTVTN SWITCH REPLCMTPERF SAFETY RECALL 99S16

CHECK AND REPAIR AS REQUIRED

REPLACE SPEED CONTROL SWITCH PER RECALL

82884 PERFORMED RECALL ON SPEED CONTROL DEACTIVATION SWITCH

PERFORMED 99S16 RECALL, REPLACED SWITCH AND CON NECTOR.

PERFORMED RECALL 99S15 REPLACED SWITCH AND SHELL CONNECTOR.

RECALL 99S16 COMPLETED

RECALL 99S15 RECALL, COMPLET

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL INSTRUCTIONS

REPLACE SWITCH AND CONNECTOR

1 0.6 REPL CC DEACTIVATION SWITCH PER RECALL

REPLACED SPEED CONTROL SWITCH

INSTALLED SWITC

COMPLETED PER INSTRUCTIONS

74382 RECALL 99S15 INSTALLED RECALL 99S16

REPLACE SPEED CONTROL DEACTIVATION SWITCH

99S16

99S15

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99S16 RECALL INSTRUCTIONS

1 REPLACED DEACTIVATION SWITCH AS PER RECALL 99S16 MILES OUT 88306

REPLACE SWITCH & CONNECTOR.

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACE DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

99S16 RECALL PERFORMED

PERFORM SAFETY RECALL

99S16 RECALL

99S15 RECALL, REPLACED SWITCH CONNECTOR AND BLEED SYSTEM

99S15

99S15 COMPLETED

98S16 98S15 COMPLETED
171638 RECALL REPLACE CRUISE DEACTIVATION SWITCH & CONN 04-
42 REPLACED DEACTIVATION SWITCH PER RECALL

104785 RECALL 98S15B 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL 98S15 BOX B
COMPLETE RECALL

1 PERFORM RECALL REPLACE SWITCH

REPLACE SWITCH PER RECALL 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 98S15B 0.5, ADMIN 0.1

98S18 PERFORMED RECALL 98S15

61200 RECALL PERFORMED CRUISE CONTROL DEACTIVATION SWITCH.

PERFORMED RECALL

F RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

REPL DEACTIVATION SWITCH

FACTORY RECALL COMPLETED RECALL

PER RECALL PER RECALL
EED CONTROL SENSOR RECALL 98S15

98S15 98S15
RECALL 98S16 RECALL 98S16 COMPLETED VERIFIED MILEAGE

87000 RECALL INSTALLED CRUISE CONTROL DEACTIVATION SWITCH AND BLEED REAR BRAKES AS PER RECALL

INSTALL CRUISE CONTROL DEACTIVATION SWITCH

RECALL LETTER PERFORMED RECALL AS PER FACTORY INSTRUCTIONS

98128 RECALL 98S15B 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL

REPLACED SPEED DEACT SWITCH 1AW RECALL # 98S15

98S16, REPLACE DEACTIVATOR SWITCH

RECALL 98S15 SPEED CONTROL ACTIVATION SWITCH REPLACEMENT COMPLETED

REPLACED SWITCH AND CONNECTOR

36380 98S15 W REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 8115

REPLACED DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

RECALL 98S15

REPLACED SWITCH

98S15 98S16 PERFORM RECALL
REPLACE SWITCH

1 REPLACED DEACTIVATION SWITCH AS REQUIRED

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 98S15B 0.5, ADMIN 0.1

46749 PERFORMED RECALL 98S15.

1 REPLACE DEACTIVATION SWITCH AS PER RECALL 98S

98S15 RECALL

98S15

08551 R R DEACTIVATOR SWITCH PER RECALL

RECALL 98S15

1 PERFORM RECALL

RECALL 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL 98S15 RECALL

10005 RECALL INSTALL CONNECTOR AND SWITCH,5383,2843

RECALL RECALL

B 98S15

INSTALL SPEED CONTROL REPAIR KIT

1 RECALL 98S15B C-C ABS CORR 42

RECL 98S15 PERF. RECALL, LAST VISIT IT WAS TEMP REPAIR, REPL SENSOR AND WIRING

ADD AJ REPLACED DEACTIVATION SW BLEED BRAKE SYSTEM RECALL 98S15...

NOTE: ORIGINAL COOLING SYSTEM HOSES, ALSO RECOMMEND THERMOSTAT, COOLING SYSTEM FLUSH AND POWER STEERING SYSTEM FLUSH (\$580

PERFORMED RECALL 1

100542 RECALL 98S15 RECALL 98S15 REPLACE BRAKE SWITCH AND HARD SHELL

RECALL 98S15 COMPLETED

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH

COMPLETED RECALL

PERFORMED RECALL

PERFORM RECALL

SPEED CONTROL SWITCH RECALL

RECALL SPEED CONTROL REPLACE DEACTIVATION SWITCH

98S15 RECALL COMPLETED RECALL

79123 R R SPEED SWITCH BLEED REAR BRAKES AND TEST DROVE

1 PERFORM RECALL 98S15

REPLACE SWITCH AND CONNECTOR PER 98S15

PERFORMED RECALL 98S15

129702 98S15

08443 RECALL WPC RECALL 98S15

RECALL 98S15

OPEN RECALL PERFORMED RECALL

PERFORMED RECALL

PERFORMED RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL RECALL

1 PERFORM RECALL

REPLA DEACTIVATION SW PER RECALL...

REPLACE SPEED CONTROL DEACTIVATION SWITCH

SPEED CTRL DEACTVTN SWITCH RPLCMNTPERF SAFETY RECALL 98S15

PERF RECALL 98S15

RECALL

DID RECALL

PERFORM SPEED CONTROL DEACT SW RECALL 98S15

1 PERFORMED RECALL

CHECK AND REPAIR AS REQUIRED

PERFORMED OPEN RECALL

86471 RECALL 98S15 INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH PER INST

RECALL SPEED CONTR SWITCH

PERFORM RECALL

PERFORMED RECALL 98S15

REPLACE 98S15B 0.5 ADMIN REMOVE, TAPE AND SECURE THE SPEED CONTROL DEACTIVATION SWITCH

62944 RECALL 98S15

PERFORM RECALL

1 1 PERFORMED RECALL 98S15

25745 98S15B .5 .5 RECALL

RECALL 98S15

REPLACE SWITCH PER RECALL

RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

98S15

PERFORM RECALL 98S15

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.

PERFORM RECALL

98S15B 0.5

REPLACED CRUISE DEACTIVATION SWITCH 98S15

INSTALL NEW CRUISE DEACTIVATION SWITCH AND HARD SHEL CONNCTOR PER RECALL 98S15.

87810 RECALL 98S15 5 W PERFORM RECALL 98S15

REPLACE SPEED CONTROL SWITCH INO88

REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL

1 08 REPLACED SWITCH

98S15

REPLACE CRUISE CONTROL SWITCH PER RECALL

RECALL 98S15

INSTALL SENSOR AND CONNECTOR

PERFORM RECALL

RECALL 98S15 DEACTIVATION SWITCH CCC2 BRAKE VALVE THREADS STRIPPED. CAUSE, ASSEMBLY FUNCTION TESTED. REMOVED DEACTIVATION SWITC

CHECK AND REPAIR AS REQUIRED

1 PERFORM RECALL REPLACE SWITCH

PERFORMED RECALL 98S15

29032 RECALL WARR PERFORMED RECALL 98S15

98S15 RECALL

CHECK AND REPAIR AS REQUIRED

RECALL COMPLETED

REPLACED BRAKE SWITCH. RECHECKED OKAY.

REPLACED THE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

PERFORM RECALL

SHORT MAY DIASABLE SPEED CONTROL OR CAUSE BRAKE LIGHT FUSE TO OPEN DISCONNECT CONNECTOR FROM CRUISE DEACTIVATION SWITCH & PRK
99S15 99S15

RECALL COMPLETE
REPLACED DEACTIVATION SW PER RECALL
RECALL 99S15 RECALL
REPLACED SPEED CONTROL SWITCH

1 INSTALLED SPEED SWITCH 1

PERFORMED RECALL
RECALL 99S15 COMPLETED,
99S15 79 PERFORM 99S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
1 RECALL COMPLETE
REPLACED CRUISE CONTROL SWITCH 7 CONNECTOR

PERFORMED RECALL
94416 RECALL 99S15B 0.5, ADMIN 0.1, REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
INSPECT & REPLACED DEACTIVATION SWITCH PER RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS DIRECTED BY 99S15 SAFETY RECALL
99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
REPLACED DEACTIVATION SWITCH AS PER RECALL

RECALL COMPLETE
PERFORM RECALL 99S15
49676 RECALL REPLACED BRAKE SWITCH
RECALL 99S15 REMOVED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15
COMPLETED 99S15B RECALL LABOR,ADMIN LABOR.1

RECALL 99S15

INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1
REPLACE DEACTIVATION SWITCH AND CONNECTOR
39730 REPAIR AS PER RECALL

1 REPLACED SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL
RECALL PERFORMED RECALL

79999 RECALL 99S15B 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
D RC 99S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
99S15 99S15

RECALL PERFORMED RECALL

1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 99S15B X5
REPLACE CRUISE DEACTIVATE SWITCH AND CONNECTORE PER RECALL

PERFORMED RECALL 98S15
98550 RECALL 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR LABOR ALLOWANCE .5 HRS LABOR OPER. 98S1
17191 PERFORM RECALL
PERFORMED CRUISE CONTROL RECALL 98S15

REPAIR AS PER RECALL
COMPLETE RECALL
PERFORM 98S15 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 98S15B .5 ADMINISTRATIVE ALLOWANCE ADMIN .1
1. PERFORMED RECALL
RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
98S15 98S15
93423 98S15 RECALL 98S15 REPLACE DEACTIVATOR SWITCH

REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER 98S15
REPLACED SWITCH & CONNECTOR PER RECALL
REPL DEACTIVATION SWITCH
98S15 98S15 RECALL COMPLETED
PERFORM RECALL
102232 REMOVED AND INSTALLED NEW BRAKE DEACTIVATION SWITCH PER RECALL 98S15.
REPLACED THE SPEED CONTROL DEACTIVATION SWITCH PER RECALL INSTRUCTIONS
REPLACED SPEED CONTROL DEACTIVATION SWITCH
AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS
PERFORMED RECALL AND REPLACED SPEED CONTROL DEACTIVATION SWITCH ASSY.
SAFETY RECALL 98S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH

98S15 R&R ACC CABLE
PERFORMED RECALL

PERFORMED RECALL 98S15 SPEED CONTROL SWITCH INSTALLED
REPLACED SPEED CONTROL, DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL
PERFORMED RECALL 98S15
REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR PER RECALL 98S15
REPLACE SPEED CONTROL SWITCH
RECALL RECALL
PERFORMED RECALL
RECALL PERFORMED RECALL 98S15

1 REPLACED SWITCH AS PER RECALL
RECALL REPLACE SPEED CONTR DEACT SW
A SHORT IN THE SPEED CONTROL SWITCH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUISE ALSO A FIRE COULD DEVOPE. REPLACE
RECALL 98S15 - B - RECALL
136834 RECALL 98S15B 0.5 0.5 REPLACE HARD SHELL CONN. AND DEACTIVATION SWITCH
RECALL 98S15 PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH

REPLACE DAMAGED BRAKE PROPORTIONING VALVE DAMAGED WHEN INSTALLING ORIGINAL RECALL PART
REMOVE FOR RECALL SWITCH BROKE OFF IN BLOCK HAD TO REPLACE BLOCK
REPLACE SWITCH
93215 COMPLETED RECALL 98S15.

55440 PERFORMED THE RECALL FOR THE SPEED CONTROL 98S15
 1 REPLACED CRUISE DEACTIVATION SWITCH AS PER RECALL 98S15
 PERF. RECALL
 PERFORMED RECALL
 AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS
 87332 RECALL WARR INSTALL SWITCH & BLEED BRAKES
 COMPLETED RECALL 98S15. REMOVED CONTROL SWITCH, INSTALLED NEW SWITCH. RETEST OK. TECH 836-1844
 INSP AND REPL SWTH AND CONN PER RECALL

SUPPLEMENT #1 6-99 INSPECTION OPERATION ADDED REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL
 REPLACED DEACTIVATION SWITCH
 98S15 CC DE ACTIVATION SW RECALL 98S15 CC DE ACTIVATION SW RECALL
 98S15 98S15
 BOX B 98S15
 98S15 98S15
 115431 REPLACED SWITCH
 RECALL 98S15 PERFORMED RECALL
 RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR
 RECALL 98S15 RECALL COMPLETED
 RECALL INSTALLED SPEED CONTROL DEACTIVATION SWITCH
 REPLACED DEACTIVATION SWITCH
 98S15 PERFORMED RECALL 98S15
 101601 4 REPLACE SPEED CONTROL DEACTIVATION SWITCH. RECHECK OK 7178
 RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR
 TECH 139 INSPECT AND REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL 98S15
 INSTALLED NEW SWITCH PER RECALL
 89482 PERFORM RECALL 98S15 INSPECT AND REPLACE CRUISE DUMP SWITCH AND BLEED REAR BRAKES
 78582 INSTALL CONN AND SW
 RECALL 98S15 RECALL COMPLETED
 INSTALL SWITCH
 PERFORM RECALL PER MANUFACTURER R-R SWITCH
 1 PERFORMED 98S15 RECALL
 RECALL RECALL

PERFORMED RECALL 98S15
 REPLACE SWITCH
 RECALL 98S15 RECALL 98S15
 COMPLETED 98S15 RECALL
 PERFORMED RECALL
 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL. OUT MILES 88018.
 SUPPLEMENT #1 6-99 INSPECTION OPERATION ADDED REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
 PERF. RECALL
 REPL SWITCH PER RECALL 98S15
 1 PERFORM DEACTIVATION SWITCH RECALL
 1 PERFORMED RECALL
 REPLACE DEACTIVATION SWITCH
 94815 RECALL WAR REPLACE SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

8862 SPEED CONTROL S-W RECALL WT PERFORMED S-W REPLACEMENT RECALL

98S15 REPLACED SWITCH

PERFORMED RECALL AS PER INSTRUCTIONS

PERFORMED OPEN RECALL

REPLACED CRUISE CONTROL SWITCH PER RECALL INSTRUCTIONS

PERFORMED RECALL 98S15 - CHECK AND REPLACED SWITCH AND RECHECK OK

1 PERFORMED RECALL

RECALL PERFORMED RECALL

REPLACED SWITCH PER RECALL

R&R BREAK SWITCH & HARD SHELL PER RECALL

60108 98S15B 0.5 HRS. SPEED CONTROL RECALL

72330 PERFORM RECALL 98S15 REPLACE SPEED CONTROL SWITCH

SPEED CTRL DEACTIVATION SW REPLACED/PERFORMED RECALL 98S15

REPLACE DEACTIVATION SWITCH AND CONNECTOR

VERIFY RECALL INSTALL CRUISE SWITCH AS PER FMC CHECK OK

SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPAIR AS PER RECALL 98S15

98S15 INSTALL RECALL KIT

REPLACED SWITCH AS PER RECALL

PERFORM RECALL

COMPLETED RECALL 98S15 AND INSTALLED SPEED DEACTIVATION SWITCH AND CONNECTOR PER RECALL

REPLACE CONNECTOR FOR HEATER RECALL

100880 REPLACE SWITCH AS PER RECALL

RECALL INSTALL DEACTIVATION SWITCH

98S15 98S15

W RECALL REPLACE SWITCH AND CONNECTOR FOR CRUISE CONTROL JS

. REPLACED CRUISE SWITCH AS PER RECALL 98S15

100880 INSTALLED CRUISE CONTROL CABLE DEACTIVATION SWITCH AS PER RECALL 98S15

RPL SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR, RECK OK

RECALL PERFORM SERVICE

TECH INSTALLED NEW CRUISE DEACTIVATION SWITCH PER FORD RECALL

98S15 R&R SWITCH & HARNESS CONNECTOR

REPLACE SWITCH PER RECALL

1 PERFORMED RECALL 98S15

98S15 PERFORMED RECALL

REPAIR AS PER RECALL 98S15.

PERFORM SAFETY RECALL

PERFORMED RECALL 98S15 - CHECK AND REPLACED DEACTIVATION SWITCH AND RECHECK OK

REPLACE SWITCH PER RECALL

. REPLACE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR 98S15B .5

PERFORM RECALL

83185 98S15 REPLACED SW AND CONNECTOR

182800 PERFORMED RECALL

98S15

98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR

REPLACED CRUISE SWITCH

PERFORMED RECALL 98S15

REPLACED SC DEACTIVATION SWITCH 98S15

98S15

98S15

R AND R BRAKE PRESS SWITCH PER RECALL 98S15.

REPLACE CRUISE DEACTIVATOR SWITCH AND CONNECTOR PER RECALL

RECALL

98S15 PERFORMED RECALL

RECALL COMPLETED

AE PERFORM RECALL REPL DEACTIVATION SWITCH AND CONNECTOR

PERFORMED RECALL 98S15

PERFORMED RECALL

PERFORMED RECALL INSTALLED NEW SWITCH AND CONNECTOR

COMPLETED RECALL 98S15. REPLACED CRUISE DE-ACTIVATION SWITCH 98S15B .5

INSTALL SWITCH

REPLACE SWITCH

REPLACE DEACTIVATION SWITCH

FACTORY RECALL COMPLETED

PERFORM RECALL 98S15 R&R CRUISE CONTROL DEACTIVATION SWITCH & CONNECTOR

RECALL PERFORMED RECALL 98S15

98S15 RECALL

105573 98S15B 0.5 HRS. SPEED CONTROL SWITCH RECALL

135532 98S15

PERFORMED RECALL

PERFORMED RECALL

PERFORMED RECALL

PERFORM RECALL

98S15

PERFORMED PER RECALL INSTRUCTIONS

PERFORMED RECALL 98S15

REPLACED THE HEADLIGHT SWITCH AND CONNECTOR PER RECALL

28106 RECALL 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND BLEED REAR BRAKES PER RECALL 98S15

88487 79 PERFORM 98S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST

PERFORM RECALL 98S15 INSTALL SPEED CONTROL DEACTIVATION SWITCH

98S15 RECALL

98S15 RECALL

REPLACE DEACTIVATION SWITCH

REPLACE SWITCH AND CONNECTOR HARD SHELL PER RECA

RECALL 98S15

PERFORM RECALL 98S15

REPLACE CRUISE CONTROL SWITCH PER RECALL

98442 RECALL WARR. REPLACE SWITCH PER 98S15.

SPEED CNTRL DEACTVTN SWITCH REPLCMT PER SAFETY RECAL 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.

REPLACED SWITCH PER RECALL

ASB COMPLETED

SWITCH SWITCH

SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

PERFORMED RECALL

85563 CC 42 98S15B 0.5- ADMIN 0.1 REPLACED SWITCH AND CONNECTOR.

80400 98S15

INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL RT OK

INSTALL KIT PER RECALL

88089 98S15B .5 INSTALL KIT

98S15 98S15

100967 RECALL 98S15B 0.6-HRS REPLACE SWITCH AND CONNECTOR TK372

1 RECALL COMPLETED

REPLACE SWITCH

SWITCH 98S15

SPO CTRL DEACTIVATION SW REPLCMNT PERFORMED RECALL 98S15

PERFORMED RECALL

PERFORM RECALL 98S15 REPLACED CRUISE DEACTIVATION SWITCH.

COMPLETED RECALL PER INSTRUCTIONS

REPLACED CRUISE DEACT SWITCH PER RECALL

SPEED CONTROL DEACTIVATION SWITCH PERFORMED RECALL 98S15

1 PERFORMED RECALL 98S15

REPLACE SWITCH PER RECALL

COMPLETED AS PER RECALL

REPL SPEED DEACTIVATION SWITCH 98S15

88088 PREFORMED RECALL ALSO BLED BRAKES.

REPLACE SPEED CRUISE CONTROL AND HARD SHELL CONNECTOR AS PER RECALL

R & REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

151037 INSTALL RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH

1 INSTALLED SWITCH & CONNECTOR

PERFORMED RECALL 98S15-INSTALL SWITCH

PERFORM RECALL

REPLACED DEACTIVATION SWITCH AS PER RECALL 98S15

98S15 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15

98-S-15 98-S-15 COMPLET

REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL 98S15

REPLACE DEACTIVATOR SWITCH AND CONNECTOR.

REMOVE TAPE AND SECURE LABOR OP 98S15E 0.3 HR 1280 REMOVED TAPED AND SECURED SPEED CONTROL DEACTIVATION SWITCH REPLACED SPEED

REPLACED DEACTIVATION SWITCH AND HARDSHELL PER RECALL

RECALL REPLACE DEACT SWITCH PER RECALL

1 98S15B .5 ADMIN .1

98S15 98S15

PERFORM RECALL 98S15

COMPLETED RECALL

RECALL

REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR AS PER RECALL

SUPPLEMENT #1 5-89 INSPECTION OPERATION ADDED REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

PERFORMED RECALL

INSTALL CRUISE CONTROL DEACTIVATION SWITCH PER 98S15

SUPPLEMENT #1 5-89 INSPECTION OPERATION ADDED REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL

98S15 PERFORMED SPEED CONTROL DEACTIVATION SWITCH RECALL

25S16 RECALL 98S15 98S15B .5 REPLACED SWITCH AND CONNECTOR PER RECALL

RECALL 98S15

98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

54200 RECALL WARR R AND R SPEED CONTROL DEACTIVATOR SWITCH PER RECALL INSTRUCTIONS.

PERFORMED RECALL

PERFORM RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AND ALSO REPLACE BRAKE BLOCK DUE TO IT BREAKING

63688 W.. REPLACE CRUISE SWITCH PER RECALL 98S1

PERFORM RECALL 98S16B REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

PERFORMED RECALL 98S15 AS REQUIRED

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL INSTRUCTIONS ROAD TESTED GOOD

INSTALLED SWITCH AND CONNECTOR 9149

RECALL

INSTALLED SPEED CONTROL DEACTIVATION SWITCH

RECALL PERFORMED

98700 RECALL 98S15 W R R SPEED CONTROL DEACTIVATION SWITCH

PERF. RECALL

REPLACED DEACTIVATION SWITCH PER RECALL

RECALL 98S15

98S15

98S15 PERFORMED INSTALLING DEACTIVATION SWITCH PER RECALL

PERFORM RECALL

PERFORMED RECALL

RECALL 98S15, SWITCH, CONNECTOR

100885 TECH 303 PERFORM RECALL 98S15 REPLACE CONNECTOR AND SWITCH FOR CRUISE 'TS

PERFORM RECALL

1 PERFORMED SPEED CONTROL DEACTIVATION SWITCH RECALL 98S15

98S16 RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL

RECALL R-R DEAC SW, R-R CONN. RECD OK.

98S15 RECALL

PERFORM RECALL

PERFORMED RECALL

PERFORM RECALL 98S15

RECALL

REPLACED DEACTIVATION SWITCH AS PER RECALL

REPLACED CRUISE SWITCH AND CONNECTOR PER RECALL 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL

REPLACED DISENGAGE SWITCH PER RECALL 98S15.

REPL DEACTIVATION SWITCH

REPL SPEED CONTROL KIT

71102 INSTALLED UPDATED SWITCH & CONNECTOR PER RECALL 2501

PERFORMED RECALL 98S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
98S15 RECALL PERFORMED 98S15 RECALL, INSTALLED A NEW DEACTIVATION SWITCH AND CONNECTOR, BLEED BRAKE SYS. VERIFY

REPLACED DEACTIVATOR SWITCH PER RECALL
REPLACED DEACTIVATION SWITCH
INSTALLED KIT ON UNIT CALS 98S52-LAB 98S15B-TIME .5-AD .1
98S15 DID RECALL 98S15 LABOR OF 98S15B 0.5 HRS. 10-27-99
SPEED CONTROL SWITCH 98S15 RECALL
INSTALL NEW SWITCH CONNECTOR 98S16
RECALL COMPLETED
PERFORM RECALL 98S15
PERFORMED RECALL
98S15 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL C
COMPLETED RECALL 98S15
REPLACED SWITCH PER RECALL
1 PERFORMED RECALL REPLACED SWITCH
NEEDED RECALL REPLACED BRAKE DEACTIVATION SWITCH AND CONECTOR INSPECT & CORRECT

REPLACED SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL 98S15
REPL SWITCH PER RECALL

COMPLETED RECALL 98S15B
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL 98S15
INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL
RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
RECALL COMPLETED

PERFORMED AS PER 98S15 RECALL
COMPLETED RECALL

98S15 RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
PER OASIS AND FCSD. PERFORMED LISTED RECALL
REPLACED SWITCH
RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO
PERFORM RECALL 98S15
REPLACE CRUISE SWITCH PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

PERFORMED 98S15
REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REPLACE CRUISE CONTROL DEACTIVATOR SWITCH PER RECALL. WAITING
PERFORM DEACTIVATION SWITCH AS PER 98S15
PERFORMED RECALL 98S15
RECALLED BY FORD PERFORMED RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR AS PER RECALL
RECALL DONE

REPLACE CRUISE DEACTIVATION SWITCH

1 COMPLETED RECALL 99S15 1

RECALL 99S15 REMOVED AND REPLACED DEACTIVATION SWITCH AND CONNECTOR ASSEMBLY AS PER RECALL 99S15

COMPLETED RECALL

RECALL COMPLETED

99S15 99S15

COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

RECALL COMPLETED ALL OK

REPLACED SWITCH AND CONNECTOR

99S15 REPLACE DEACTIVATION SWITCH PER RECALL

REPLACED THE SPEED CONTROL SWITCH PER RECALL 99S

2082 REPLACED CRUISE CONTROL DEACTIVATION SWITCH

INSPECT & REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR PER RECALL

1 PERFORMED RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH

99S15 99S15 PERFORMED INSTALLING CRUISE DEACTIVATION SWITCH PER RECALL

REPLACED SPEED CONTROL KIT

RECALL PERFORMED RECAL

PERFORMED RECALL AS BY FACTORY PERFORMED RECALL

COMPLETED RECALL 99S15

RECALL PERFORMED RECAL

REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S1

REPLACE SWITCH KIT

COMPLETED RECALL 99S15

99S15 REPLACE DEACTIVATION SWITCH PER RECALL

DONE AS PER INSTRUCTIONS

40800 INSTALLED REPLACEMENT SPEED CONTROL SWITCH AND SWITCH CONNECTOR 99S15.

RECALL REPAIR AS PER RECALL 99S15 DEACTIVATION SWITCH REPLACEMENT

77515 RECALL 99S15B 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL

PERFORMED RECALL 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

PERFORM RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SW

RECALL RECALL

REPLACE SWITCH PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

PER 99S15 REPLACE SPEED CONTROL SWITCH PER RECAL

REPLACED SWITCH AND CONNECTOR

INSTALL CONTROL DEACTIVATION SWITCH AS PER RECAL

99S15 RECALL 99S15 RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

72506 DID RECALL 99S15 LABOR OP.— 99S15B— 0.5 HRS. 10-15-00

G RC 99S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

99S15 REPLACE CRUISE CONTROL SWITCH PER RECALL

99S15 RECALL OK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL

73722 PERFORM 99S15 CRUISE DEACTIVATION SWITCH RECALL

RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15

RECALL 98S15
98S15 98S15 PERFORMED INSTALLING CRUISE SWITCH PER RECALL
98S15 REPLACE DEACTIVATION SWITCH
98S15
58840 98S15B .5 PERFORM RECALL 98S15

REPLACE SWITCH
78725 RECALL 98S15 REPLACED VACUUM SWITCH FOR CRUISE CONTROL
98S15 98S15
28054 98S15 W PERFORMED SERVICE 98S15
PERFORM SAFETY RECALL 98S15
REPLACED SC DEACTIVATION SWITCH 98S15
REPLACE SWITCH
REPLACED CRUISE DEACTIVATION SWITCH AS PER ARECALL 98S15
98S15 REPLACE DEACTIVATION SWITCH
REPLACED BRAKE SWITCH
RNR DEACTIVATION SWITCH PERFORM RECALL 98S15

REPLACE SWITCH & CONNECTOR
PERFORM RECALL
INSTALLED NEW DEACTIVATION SWITCH AS PER RECALL 98S15 . TECH 406-0845 E
REPLACE SPEED CONTROL DEACTIVATION SWITCH
D RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
PERFORM RECALL 98S15. REMOVED AND REPLACED DEACTIVATION BRAKE SWITCH AND CONNECTOR. BLEED BRAKES AND ROAD TEST VEHICLE. AND C
98890 98S15B .5 INSTALL SWITCH AND HARDSHELL
PERFORM RECALL
PERFORMED INSPECTION AND REPLACEMENT OF SPEED CONTROL DEACTIVATION SWITCH
71285 W PERFORM RECALL 98S15 REPLACE DEACT SWITCH CAN NOT REPLACE PLUG SOME BODY CHANGED BY A DIFERENT KIND OF PLUG

PERFORM RECALL 98S15
REPL SPEED SWITCH 98S15

RECALL COMPLETED

REPLACE DEACTIVATOR SWITCH AND CONNECTOR PER RECALL
1 PER RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH.
PERFORMED RECALL 98S15
98S15 98S15

PERFORM RECALL 98S15 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL
98S15 98S15B
93271 RECALL 98S15B 0.5HRS REPLACE SWITCH AND CONECTOR TK372
COMPLETED RECALL 98S15. REPLACED CRUISE DEACTIVATION SWITCH. 98S15B .5
98S15 COMPLETED
110036 DEACTIVATION SWITCH AS PER RECALL
98S15 98S15

COMPLETE RECALL

PER RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONNECTOR

RECALL 98S15-DEACTIVATION SWITCH 98S15

PER RECALL PERFORM RECALL

RECALL 98S15 - B - RECALL

37631 98S15 SPEED CONTROL DEACTIVATION SWITCH WARRANTY REPLACE SPEED CONTROL DEACTIVATION SWITCH FOR RECALL 98S15

PERFORM RECALL

RECALL DONE

98S15B

83800 RECALL 98S15 WARRANTY REPLACE SPEED CONTROL DO TO RECALL 3720

REPLACE SPEED CONTROL DEACTIVATION SWITCH.

118371 PERFORMED CRUISE SHUT OFF SWITCH RECALL

RECALL 98S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 98S15

PERFORMED RECALL 98S15

1 REPLACE BROKEN SWITCH PER RECALL

REPLACE CRUISE SWITCH PER RECALL

AS PER FORD SPECIFICATIONS PERFORMED RECALL NUMBER 98S15

RECALL COMPLETE

PERFORMED RECALL 98S15 INSTALL CRUISE DEACTIVATION SWITCH FOUND CRUISE CABLE HAD BEEN CUT SPECIAL ORDERED CRUISE CABLE

RECALL 98S15 PERFORMED RECALL

45030 RECALL 98S15 REPLACE CRUISE CONTROL SWITCH AND PLUG

REPLACED CRUISE SWITCH PER RECALL

INSTALL SWITCH KIT

PERFORM RECALL 98S15

1 PER RECALL REPLACE DEACTIVATION SWITCH AND REPAIR WIRING.

105388 98S15B 0.5 HRS- SPEED CONTROL RECALL

58434 TECH 342 CC-RECALL-CA-03882 PERFORM RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH.

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

COMPLETE RECALL

CONNECTOR 98S15

PERFORMED RECALL 98S15

REPLACED DEACTIVATION SWITCH AS PER RECALL

CS STS 98S15 PERFORM RECALL

1 PERFORMED RECALL REPLACED SWITCH

INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS REPLACED SPEED CONTROL SWITCH OK NOW

PERFORMED RECALL 98S15

RECALL 98S15

REPAIRED PER RECALL

98S15 98S15B .5 .5 RECALL

RECALL 98S15

PERFORM RECALL 98S15

INSPECTED DEACTIVATION SWITCH

RESISTIVE SHORT. PERFORM RECALL-ONP PER FOMOCO INSTRUCTIONS.

RECALL 98S15 COMPLETED

R REPLACE SWITCH

1 PERFORMED RECALL

PERFORMED RECALL 99S15. REPLACED SPEED CONTROL DEACTIVATION SWITCH.
PERFORMED RECALL 00
1 PUT KIT IN 77 STEVE
99S16 RECALL

TEST AND REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

110154 RECALL 99S15 PERFORMED RECALL 99S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL

REPLACED DEACTIVATION SWITCH AND PLUG

REPLACED SWITCH, BLEED BRAKES

INSTALL SWITCH AND HARD SHELL

RECALL 99S15

99S15 INSTALL SPEED CONTROL DEACTIVATION SWITCH

RECALL 99S15 RECALL

PERFORMED SPEED CONTROL RECALL

REPLACE SWITCH PER RECALL

97801 99S15 W REPLACED SPEED CONTROL DEACTIVATE SW 2745

99S15 99S15 RECALL

99S15 99S15

REPLACED CRUISE DEACT SWITCH, BLEED SYSTEM PER RECALL

PERFORMED RECALL

PERFORM RECALL REPLACE SWITCH

REPLACE SPEED CONTROL ASY

INSTALLED SWITCH KIT

RECALL PERFORM RECALL

99S15 99S15

REPLACE SWITCH REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. 99S15.

PERFORMED RECALL # 99S15

REPLACE SWITCH

ADD DONE

99S15 RECALL REPLACED SWITCH

PERFORMED RECALL SWITCH AND CONNECTOR

139499 RECALL 99S15 WPC RECALL 99S15

99S15 B .5 ADMIN .1 PERFORMED RECALL ACCORDING TO FACTORY GUIDELINES

83084 PERFORM RECALL 99S15

99S15 REPLACE SWITCH AS PER RECALL

1 RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH 99S15B

PERFORM RECALL 99S15, INTERIM OR PERMANENT AFTER MID JUNE 99 PERFORMED RECALL 99S15

PERFORM RECALL 99S15

REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER 99S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

PERFORMED RECALL REPLACED THE SWITCH AND CONNECTOR

RECALL 99S15B PERFORM RECALL 99S15B

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACED SWT PER RECALL

PERFORMED RECALL

PERFORM RECALL 99S15. REPLACE SWITCH.

RECALLED BY FORD PERFORMED RECALL

1 RECALL COMPLETE

82642 RECALL INSPECT AND REPLACE DEACTIVATION SWITCH AND CONNECTOR PER RECALL
RECALL COMPLETED.
DO RECALL 98S15 PUT IN NEW BRAKE SW AND NEW WIRE COND
PERFORM RECALL
REMOVE AND REPLACED DEACTIVATION SWITCH.
312 SPEED CONTROL RECALL 98S15B 0.5 0.5 REPLACED SPEED CONTROL DEACTIVATION SWITCH
98S15 98S15
RECALL 98S15 98S15
PERFORMED SAFETY RECALL 98S15
48385 RECALL 98S15 DONE REPLACE DEACT SWITCH
PERFORM RECALL INTALL SWITCH
REPLACED SWITCH AND CONNECTOR
RECALL PERFORM RECALL INSTALL CRUISE CONTROL DEACTIVATION SWITCH

PERFORM RECALL 98S15 INSTALL CRUISE DEACTIVATION KIT

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
RECALL 98S15 PERFORMED RECALL 98S15
123071 RECALL REPLACE CRUISE SWITCH AND CONNECTOR
PERFORM RECALL 98S15, REPL BRAKE DEACTIVATION SW, BLEED BRAKES.
32249 INSTALL SPEED CONTROL DEACTIVATION SWITCH
REPLACED BRAKE SWITCH AND CONN. PER RECALL 98S15
RECALL 98S15 INSTALL DEACTIVATION SWITCH PER RECALL
PERFORM RECALL
RECALL 98S15
REPLACED SWITCH AND PLUG AS PER RECALL
OPEN RECALL PERFORM RECALL
RECALL 98S15 PERFORM RECALL 98S15

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR - 98S15B .5
98S15 RECALL NOTIFICATION LETTER 98S15 RECALL NOTIFICATION INSTRUCTIONS SPEED CONTROL SWITCH

COMPLETE RECALL
1 PERFORMED RECALL 98S15 REPLACE BRAKES SW. 98S15B
95048 98S15 WARR REPLACED SWITCH AND CONN
REPLACE DEACTIVATION SWT PER RECALL
98S15 REPLACE SWITCH PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL
RECALL PERFORMED
41835 98S15B 0.5 HRS. SPEED CONTROL RECALL
PERF. RECALL
PERFORMED 98S15
INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS --THANK YOU-DARREN GREEN TEAM--
RECALL 98S15 98S15

121381 SAME PERFORM RECALL 98S15 7158

91668 RECALL 99S15 PERFORMED RECALL 99S15
99S15. REPLACE CRUISE DEACTIVATION SWITCH.

23087 REPLACE SWITCH AND CONNECTOR

RECALLED BY FORD PERFORMED RECA
110708 RECALL TECH 1029 REPAIR AS PER RECALL #99S15
REPLACE CRUISE DEACTIVATION SWITCH PER RECALL
PERFORM RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH.
RECALL 99S15 REPLACED DEACTIVATER SWITCH AS PER RECALL 99S15
REPLACE SWITCH PER RECALL

99S15 99S15
REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99S15
PERFORMED RECALL
AS PER RECALL 99S15 RECALL TO INSTALL DEACTIVATION AND CONNECTOR
RECALL -- PERFORMED RECALL # 0178
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
RECALL REPLACE CRUISE DEACTIVATION SWITCH
PERFORM RECALL
REPLACE SPEED CONTROL SWITCH
INSTALL SWITCH PER RECALL 99S15
99S15 REPLACE CRUISE CONTROL SWITCH PER RECALL
REPLACE SPEED CONTROL SWITCH AND CONNECTOR
82235 LABOR 99S15B .5***ADMIN.1***REPLACED DEACTIVATION SWITCH PER RECALL
97752 PERFORM RECALL 99S15
PERFORMED RECALL 99S15
REPLACE CRUISE DEACTIVATION SWITCH

PERFORMED RECALL
132717 RECALL 99S15 WARR REPLACED DEACTIVATION SWITCH AS PER RECALL
PERFORM RECALL
SPEED CONT REPL SWITCH
REPLACE SWITCH PER RECALL
REPLACE CRUISE CONTROL DEACTIVATION SWITCH
94048 PERFORMED CRUISE BRAKE SWITCH RECALL #99S15B
29423, RECALL 99S15B
RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO
RECALL 99S15
106205 99S15 99S15 .5 .5 REPLACE SWITCH & CONNECTOR PER RECALL
PERFORM RECALL
PERFORMED RECALL 99S15
1 99S15B-A99 INSTALL SWITCH
- MODIFY PER RECALL 99S15
115- SPD CONTROL SWITCH RECALL - 99S15 -REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL PERFORMED RECALL 99S15
99S15

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH HARD SHELL CONNECTOR
00799 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR. 98S15

PEFROM RECALL 98S15
97873 RR RECALL 98S15
58442 RECALL .5 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15B
PERFORMED RECALL 98S15
REPLACE DEACTIVATION SWITCH AS PER RECALL
RECALL INERTIA SWITCH BRACKET REPLACED SWITCH PER RECALL
RECALL 98S15

PER RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH PLUG
PERFORMED RECALL # 98S15
REPLACED SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH
TECH 101 PERFORM RECALL 98S15 INSTALL SWITCH
RECALL 98S15
89820 SAME PERFORM RECALL 98S15 7158 JH
REPLACE SWITCH REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR.98S15.
1 R AND R THE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
131301 RECALL W- RECALL 98S15 REPLACED CRUISE DEACT SWITCH.
. REMOVE,TAPE AND SECURE DEACTIVATION SWITCH 98S15E .3
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 98S15
98S15 98S15
SWITCH REPL SWITCH

29138 PERFORMED RECALL NO. 98S15
1 REPLACED SPEED CONTROL DEACTIVATION SWITCH ASSEMBLY. CHECK NORMAL OPERATION.
REPALEC SPD CONNETOE AND WIRING EXTRA TIME NEEDED FOR WIRING REPAIR WIRES WERE FUSED TOGETHER
PERFORM RECALL
CHECKED AND FOUND VEH NEEDED CRUISE DEACT SWITCH PER RECALL REPLACED SWITCH PER RECALL 98S15 CHECKED SWSTEM OK
REPLACE DEACTIVATION SWITCH AS PER RECALL

REPLACE SPEED CONTROL DEACTAVIATION SWITCH AS PER RECALL 98S15
PERFORMED RECALL 98S15 SPEED CONTROL DEACTIVATIO
RECALL PERF RECALL-REPLACE SPEED CONTROL SWITCH
PERFORMED RECALL 98S15-INSPECTED VEHICLE AND REPLACED SPEED CONTROL DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH
AS PER RECALL 98S15 RECALL TO INSTALL SPEED CONTROL SWITCH & HARDSHELL CONNECTO
RECALL 98S15. REPLACE SPEED CONTROL DEACTIVATOR SWITCH AS PER RECALL 98S15.

PERFORM 98S15 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACEMENT RECALL
REPLACE CRUIS BRAKE SWITCH PER RECALL
COMPLETED RECALL
COMPLETED RECALL
1 1 PERFORMR ECALL 98S15
PERFORM RECALL

PERFORM SPEED CONTROL RECALL
 PERFORM SPEED CONTROL DEACT SW RECALL
 99S15-0792 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
 REPLACE SPEED CONTROL SWITCH PER RECALL
 72587 RECALL .5 REPLACE SPEED CONTROL DEACTIVATION SWITCH 99S15B
 PERFORM RECALL.....
 114223 PERFORM RECALL
 PERFORMED RECALL
 RECALL REPLACE SWITCH & HARDSHELL CONNECTOR & BLEED BRAKES
 99S15 99S15
 PERFORMED RECALL 99S15
 COMPLETED 99S15
 99710 CRUISE SWITCH RECAL RENEW CRUISE DEACTIVATION SWITCH FOR RECAL 23
 1 PERFORM RECALL 99S15 RNR DEACTIVATION SWITCH 99S15B
 67400 RECALL DID RECALL 99S15
 PERFORM RECALL 99S15
 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15
 RECALL 99S15 99S15
 RECALL 99S15 COMPLETED
 1 CHECK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
 RECALL 99S15 REMOVED AND REPLACED DEACTIVATION SWITCH AND CONNECTOR ASSEMBLY AS PER RECALL 99S15
 40266 REPLACE SWITCH AND CONNECTOR PER RECALL

 COMPLETED RECALL 99S15
 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
 REPLACED DEACTIVATION SWITCH AS REQD
 REPLACED SPEED CONTROL DEACTIVATION SWITCH
 PERFORM RECALL 99S15 CHANGE DEACTIVATION SWITCH

 REPLACE DEACT SWITCH AND BLEED HYD PER RECALL
 RECALL 99S15 COMPLETED RECAL
 RECALL 99S15 PERFORM RECALL 99S15
 REPLACED SWITCH AS PER RECALL
 RECALL 99S15 99S15 INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
 PERFORM RECALL 99S15
 99S15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT
 REPLACE DEACTIVATION SWITCH PER RECALL
 00 99S15E
 INSTALL SWITCH PER RECALL
 PERFORMED RECALL 99S15
 RECALL 99S15
 INSTALL SWITCH AND CONNECTOR PER RECALL
 92066 RECALL WARR INSTALLED DEACTIVATING SW AS PER RECALL 99S15
 INSTALLED SWITCH
 99S15 RECALL

 RECALL 99S15 REPLACED SWITCH AND CONNECTOR PER RECALL

PERFORM RECALL.....

83018 PERFORM 98S15

102019 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CON, S-2 0274

REPLACED SWITCH AND CONNECTOR

PERFORMED RECALL 98S15 - CHECK AND REPLACED CRUISE CONTROL CABLE

98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

1 PERFORMED RECALL

PERFORMED RECALL ALL OKAY. NEW BRAKE SWITCH OPERATING PROPERLY.

SPEED CONT REPL SWITCH

REPLACE CRUISE SWITCH PER RECALL

PERFORM RECALL

60823 REPL DEACTIVATION SW

REPL CRUISE CONTROL SWITCH ASSY

PERF. RECALL

98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15

140220 LABOR 98S15B .5**ADMIN .1**INSTALLED DEACTIVATION SWITCH FOR CRUISE CONTROL PER RECALL 98S15***PLEASE NOTE: VEH IS MISSING TW

INSTALLED KIT FOR SPEED CONTROL PER RECALL 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

RECALL INSTALLED SWITCH

1 REPLACE DEACTIVATION SWITCH AS PER RECALL 98S

PERFORMED RECALL 98S15

PERFORMED RECALL 98S15

RECALL 98S15

INSTALL CRUISE CONTROL DEACTIVATION SWITCH

RECALL 98S15 RECALL

98S15 REPLACE DEACTIVATION SWITCH

DIAG AND PERFORMED RECALL 98S15 INSTALLED NEW DEACTIVATION SWITCH OK NOW

RECALL 98S15

138543 RECALL 98S15B 0.5HRS REPLACE SWITCH AND CONNECTOR TKS72

61108 RECALL WARR REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15

RECALL 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH

98S15 98S15

COMPLETED RECALL 98S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 98S15B .5 + .1

COMPLETE RECALL 98S15

RECALL 98S15

1 PER RECALL REPLACE DEACTIVATION SWITCH AND WIRING.

RECALL 98S15

RECALL 98S15 RECALL COMPLETED

INSTALL CRUISE SWITCH AND HARNESS CONNECTOR AS PER 98S15 RECALL

DEACTIVATION SWITCH & CONNECTOR COMPLETED AS PER RECALL

SPEED CONTROL SWITCH 98S15 RECALL

PER NOTIFICATION RECALL 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 98S15 RECALL INSTRUCTION

PERFORMED RECALL 98S15

PERFORMED RECALL 99S15
REPAIR AS PER RECALL 99S15.
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL 99S15. TIME 0.5 HOURS LABOR
99S15 SAME PERFORM RECALL 99S15 7158 JH
99S15 99S15 REPLACED SWITCH AND CONNECTOR
99S15 99S15 RECALL
REPLACED SWITCH AND CONNECTOR BLEED BRAKES
REPLACE SWITCH PER RECALL

RECALL 99S15 RECALL

REPLACED PER RECALL 99S-15B 1
RECALL RECALL
99S15 RECALL 99S15
PERFORMED RECALL PER FORD INSTRUCTIONS. 1
154210 99S15 REPLACED SWITCH & CONN PER RECALL
99S15 RECALL 99S15 RECALL
SAFETY RECALL 99S15 -REPLACE SPEED CONTROL DEACTIVATION SWITCH

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99S15.
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS DIRECTED BY 99S15 SAFETY RECALL.

RECALL 99S15 COMPLETED
OK AND PERFORM RECALL PER INST FOR SPEED SWITCH RECALL

RPL SWITCH AND CONN 99S15 RECALL
PERFORM RECALL
PERFORMED RECALL
99S15 99S15 REPLACED SWITCH AND CONNECTOR
RECALL 99S15 - B - RECALL
PERFORMED RECALL
99S15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT
99S15 RECALL 99S15 RECALL COMPLETE
REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99S15
RECALL 99S15 RECALL COMPLETED
REPLACE SWITCH AS PER 99S15
99S15 79 PERFORM 99S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST
PERFORM RECALL
99S15 99S15
REPLACE CRUISE SWITCH
99S15 RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

SPEED CONTROL DEACTIVATION SWITCHES MAY DEVELOP RESISTIVE SHORT IN ELECTRICAL CIRCUIT THAT MAY CAUSE UNDERHOOD FIRE.
RECALL CRUISE CONTROL RECALL CRUISE CONTROL
99S15 RECALL 99S15 RECALL COMPLETE
1 1 PERFORMED RECALL 99S15
RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT COMPLETED

RECALL REPLACE SWITCH
98S15 REPLACED CONNECTOR AND SWITCH
REPLACED DEACTIVATION SWITCH
PERF. RECALL

98S15 98S15
REPLACED SPEED CONTROL SWITCH AS PER 98S15
RECALL REPL SW
REPLACE SWITCH

R&R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR SHELL PER RECALL 98S-15

1 PERFORM DEACTIVATION SWITCH RECALL
REPLACED SWITCH FOR COARSE DEACTIVATION
43847 PERFORM RECALL AS REQUESTED REPLACE SWITCH AND CONNECTOR TEST OK OK
1 COMPLETED REQUESTED RECALL AS PER FORD INSTRUCTIONS

88004 98S15S 0.6 ADMIN 0.1

47121 INSTALL SWITCH AND BLEED BRAKES PER RECA

45198 PER FORD INSTAL CRUISE CONTROL HYDRAULIC SWITCH AND WIRING CONNECTOR
REPLACED SWITCH AS PER RECALL 98S15

70600 98S15

98S15 98S15

1 COMPLETED RECALL

RECALL 98S15

RECALL COMPLETE

10084 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15 5314

RECALL COMPLETED

RECALL 98S15 PERFORM RECALL 98S15. REPL SPEED CONTROL DEACTIVATION SWITCH.

REPLACED CRUISE CONTROL SWITCH

RECALL DONE

RECALL 98S15 PERFORM RECALL-NOTE THIS CAR NEEDS A NEW IGNITION KEY AND TUMBLE

RECALL COMPLETE

80177 RECALL 98S15S .5 REPLACED SPEED CONTROL DEACTIVATION SWITCH

62087 42 WP40 98S15 RECALL REPLACE SWITCH

98S15 REPLACE DEACTIVATION SWITCH

1 COMPLETED THE RECALL 98 S 15

RECALL 98S15 RECALL 98S15

PERFORMED RECALL

RECALL COMPLETED

PERFORM SPEED CONTROL SWITCH 98S15

REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL

98396 AS RECALL

REPLACED DEACTIVATION SWITCH AND CONNECTOR.

98S15 REPLACED SWITCH AND CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15

PERFORMED RECALL 98S15E.

OPEN RECALL PERFORMED RECALL
PERFORMED RECALL
REPLACE SPEED CONTROL SWITCH PER RECALL
RNR DEACTIVATION SWITCH PERFORM RECALL 98S15
PERFORMED SPEED CONTROL RECALL 98S15
RECALL 98S15
COMPLETE RECALL REPAIRS
RECALL 98S15 SPEED CONTROL SWITCH PERFORM RECALL 98S15 SPEED CONTROL SWITCH.
PERFORM 98S15
37067 RECALL PERFORM 98S15 AND REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR AND BLEED BRAKES 98S15B-0.5

RECALL 98S15 RECALL COMPLETED
INSPECT SWITCH AND CONNECTOR FOUND BAD REPLACED SPEED CONTROL SWITCH AND CONNECTOR PER RECALL
PERFORMED RECALL
1 PERFORMED RECALL 98S15 FOR SPEED CONTROL DEACTIVATION SWITCH REPLACED SWITCH
RECALL COMPLETED
AS PER FORD SPECIFICATIONS PERFORMED RECALL NUMBER 98S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR
1 INSTALL BRAKE PRESURE SWITCH AND CONNECTOR AS PER RECALL
98300 RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH REPLACED SPEED CONTROL CABLE DEACTIVATION SWITCH AND CONNECTOR PER RECALL
98S15 98S15
71474 PERFORMED RECALL 98S15
62998 RECALL DONE
COMPLETED RECALL
78820 CC 42 98S15B 0.5- ADMIN 0.1 REPLACED SWITCH AND CONNECTOR.
78308 RECALL WPB40 INPSETC FOR RECALL 98S15 NO FURTHER ACTION NEEDED
X COMPLETED
98885 RECALL 98S15 WARR PERFORMED RECALL 98S15; REMOVED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTING WIRES.
REPLACED CRUISE CONTROL DEACTIVATION SWITCH
RECALL 98S15 RECALL COMPLETED
RECALL COMPLETED
PERFORMED FACTORY RECALL 98S15
82356 RECALL 98S15 0.5 REPLACED CRUISE CONNECTOR
98S15 98S15 PERFORM RECALL
PERFORMED RECALL
REPLACE CRUISE CONTROL SWITCH AND CONNECTOR PER RECALL
PERFORMED RECALL 98S15
98S15 - PERFORM DEACTIVATOR SWITCH RECALL. REPLACED SWITCH & CONN.
INSTALL CRUISE CONTROL DEACTIVATION SWITCH
107330 RECALL 98S15 WARR. PERFORMED SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT RECALL 98S15.
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
REMOVE TAPE AND SECURE LABOR OF 98S15E 0.8 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 98S15B .5 REMOVED TAPED AND SE
REPL CRUISE CONTROL DEACTIVATION SWITCH
RECALL REPL SW
SPEED CONTROL DEACTIVATION SWITCH PERFORM RECALL AS DIRECTED.
PERFORMED AS PER RECALL
RECALL PERFORM RECALL
INSTALLED SPEED CONTROL DEACTIVATION KIT PER RECALL

SOP 11-04-1999 AT 110887 MILES

99S15 99S15 CRUISE CONTROL RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH

PERFORM RECALL 99S15

74104 SAME PERFORM RECALL 99S15 7158 JH

73621 WARR DID SPEED CONTROL RECALL REPLACE SWITCH AND HARD SHELL.

RECALL 99S15

RECALL SW REPL CRUISE

REPLACE CRUISE CONTROL SWITCH AS PER RECALL

REPL BRK PRSS SWITCH

85689 RECALL INSPCT AND RECALL

CHECKED OASIS. INSTALLED SPEED CONTROL DEACTIVATION SWITCH

99S15 99S15 REPLACE CRUISE SWITCH PER RECALL

PERFORM RECALL 99S15 RECHECK FOR LEAKS NO LEAKS FOUND SYSTEM OK 1

MISC PERFORMED RECAL

RECALL REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL

PER RECALL PERF RECALL

INSTALL SWITCH AND WIRING

RECALL PERFORM RECALL 99S15

OPEN RECALL 99S15 RECALL

99S15 99S15 PERFORM RECALL

RECALL PERFORMED RECALL

102057 RECALL R-R CRUISE SWITCH AS PER RECALL

102057 RECALL R-R CRUISE SWITCH AS PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR

RECALL PERFORMED RECALL 99S15 2068

RPL SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR, RECK OK

PERFORMED RECALL

PER RECALL PERF RECALL

10626 COMPLETED RECALL

PERFORM RECALL

REMOVE AND REPLACE CRUISE DEACTIVATION SWITCH PER RECALL 99S15

REPLACED SWITCH PER RECALL

90287 RECALL WPR40 INSTALL CRUISE CONTROL DISCONNECT SWITCH

RECALL 99S15 NO 174037 RMI NEW CRUISE DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL

REPLACED SWITCH

108094 RECALL 99S15 WARR INSTALLED A NEW DEACTIVATION SWITCH AND WIRE CONNECTOR PER RECALL 99S15

99S15 RPL SPEED CONTROL DEACTIVATION SWITCH

39600 INSTALL SPEED CONTROL SWITCH PER RECALL

99S15 99S15 REPLACE CRUISE SWITCH

INSTALL SWITCH AND HARDSHELL CONNECTOR BLEED BRAKES PERFORM RECALL

REPLACED SC DEACTIVATION SWITCH 99S15

1 PERFORM RECALL PER INSTRUCTIONS

A SHORT IN THE SPEED CONTROL SWITCH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUISE ALSO A FIRE COULD DEVOPE. REMOVE,1

RECALL 99S15 REPLACE SWITCH PER RECALL

PERFORMED RECALL

EMO-825 0457

INSTALL SPEED CONTROL SWITCH 98S15 RECALL
REPLACED CRUISE CONTROL DEACTIVE SWITCH
SPEED CNTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 98S15
88109 RECALL WARR REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15
98S15 RECALL 98S15 RECALL COMPLETED
40600 INSTALL RECALL KIT
REPAIRED AS PER RECALL SPEED CONTROL DEACTIVATION SWITCH
RECALL 98S15 RECALL
1 PERFORM RECALL
PERFORM RECALL 98S15
PERFORMED RECALL 98S15 - CHECK AND REPLACED DEACTIVATION SWITCH
PERFORMED RECALL 98S15
RECALL 98S15
98S15E REPLACE BRAKE PRESS AW AND
SWITCH 98S15
COMPLETE RECALL
INSTALL DEACTIVATION SWITCH PER 98S15 RECALL

PERFORM RECALL 98 S15 REPLACED SWITCH AND HARD SHELL CONNECTOR
1 REPLACED CRUISE DEACTIVATOR SWITCH PER RECALL
REPL DEACTIVATION SWITCH PER RECALL
RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL
84070 RECALL (#17) REPLACE SWITCH AND HARDSHELL, BLEED BRAKE S AS PER RECALL
REPLACED DEACTIVATION SWITCH AND CONNECTOR
A RECALL DONE
DID RECALL 98S15 ON CRUISE CONTROL
PERFORMED RECALL 98S15
SPEED CNTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 98S15
98S15 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

ADMIN 1 COMPLETED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH
1 PERFORMED RECALL
REPLACED DEACTIVATION SWITCH PER RECALL
98S15 COMPLETE
98377 REPLACE SWITCH AS PER RECALL
43245 PERFORMED RECALL, INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH
REPLACE CRUISE CONTROL DEACTIVATION SWITCH
PERFORMED RECALL 98S15B PERFORMED 98S15B RECALL-SPEED CONTROL DEVIATION SWITCH
REPLACE SPEED CONTROL SWITCH PER RECALL 98S15
OPEN RECALL COMPLETED OPEN RECALL
RECALL 98S15 COMPLETED
24889 PERFORM RECALL
PERFORM RECALL 98S15
55885 RECALL WARR REPLACE DEACTIVATOR SWITCH AND CONNECTOR
PERFORMED RECALL 98S15
PERFORMED RECALL

1 PERFORM RECALL 99S15 SPEED CONTROL SESER AND BLEED SYSTEM AS AS PER RECALL CHECK OK AT THIS TI

PERFORMED RECALL

RECALL COMPLETED

PERFORMED RECALL

PERFORMED RECALL

REPLACE DEACTIVATION SWITCH AS PER RECALL

43800 PERFORM RECALL SPEED CONTROL DEACTIVATION SWITCH

99S15 PERFORM RECALL 99S15

PERFORMED RECALL 99S15

RECALL REPL SPEED CONTROL DEACTIVATION SWITCH

REPLACE SPEED CONTROL SWITCH

79884 INSTALLED DEACTIVATION SW AS PER RECALL 99S15

REPLACED CRUISE DEACTIVATION SWITCH PER RECALL NOTICE.

PERFORMED RECALL

REPLACED SWITCH AND CONNECTOR AS PER RECALL

130499 INSTALL RECALL 99S15 OPER # 99S15B LABOR .8

99S15B-0.5- RECALL 99-S-15 (CC42) INSTALL SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

99799 RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL 99S15

99S20 W REPLACED SWITCH

PERFORM RECALL 99S15 COMPLETE

92202 REPALCED SPEED CONTROL DEACTIVATION SWITCH RECALL 99S15

99S15 99S15 REPLACED SWITCH AND CONNECTOR

99195 0.5 RECALL 99S15 SPEED CONTROL DEACTIVATION REPLACE D

99121 RECALL INSTALLED NEW SWITCH

99S15 RECALL 99S15 RECALL PERFORMED

111614 99S15 99S15B 0.5 0.5 REPLACE DEACTIVATION SWITCH AND CONNECTOR

DO RECALL 99S15

RECALL 99S15. REPAIRED IN A/W RECALL 99S15.

74878 RECALL 99S15-B LABOR OPERATION... PERFORMED A BRAKE INSPECTION AND REPAIR REPLACEMENT, BLEED ASSY...COMPLETED... N O T E : PRI

RECALL 99S15 REPLACED DEACTIVATER SWITCH AS PER RECALL 99S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER SAFETY RECALL 99S15.

PERFORMED RECALL 99S15

OTHER REPLACE SPEED CONTROL DEACTIVATION SWITCH AND

HARDSHELL CONNECTOR PER FORD RECALL

RECALL COMPLETE

REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR AS PER 99S15 RECALL

REPLACED SWITCH AND CONNECTOR

DIAG AND PERFORMED RECALL 99S15 INSTALLED DEACTIVATION SWITCH OK NOW

X 99S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER 99S15

REPLACED CRUISE CONTROL DE-ACTIVATOR SWITCH PERFORMED RECALL 99S15

PERFORMED RECALL 99S15

RECALL RECALL

RECALL 99S15

PERFORM RECALL RENEW DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

85184 99S15 99S15 .5 .5 REPLACE SPEED CONTROL SWITCH & CONNECTOR

117218 PERFORMED RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORM RECALL 99S15
PERFORMED RECALL 99S15 CRUISE DE-ACTIVATION SWITCH 5832
REPLACE SWITCH PER FORD RECALL
1 PERFORM RECALL PER INSTRUCTIONS
24823 RECALL REPLACE DEACTIVATION SWITCH REPLACEMENT PER RECALL
INSPECT AND REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

SUPPLEMENT #1 5-88 INSPECTION OPERATION ADDED REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
OK AND REPAIR PER RECALL INFO

PERFORMED RECALL 99S15. REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH.
125126 DUE RECALL 99S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
99973 REPLACE SWITCH AS PER RECALL
RECALL 99S15

CHECKED OASIS. INSTALLED SPEED CONTROL DEACTIVATION SWITCH
1 PERFORM RECALL REPLACE DEACTIVATE
REPLACED DEACTIVATION SWITCH.
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
REPLACE SWITCH AND CONNECTOR
99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARDSHELL CONNECT

1 RECALL COMPLETE
RECALL 99S15 REPLACE DEACTIVATION SWITCH PER RECALL INSTRUCTIONS
REPLACED SWITCH AS PER RECALL 99S15 RECALL COMPLETE
76660 RECALL 99S15B 0.5 REPLACE SPEED CONTROL DEACTIVATION SWITCH.
PERFORM RECALL

PERFORMED RECALL 99S15 B 1
REPLACE SPEED CONTROL SWITCH AND CONNECTOR
50484 RECALL 99S15 INSTALL NEW SWITCH AND CONNECTOR
76269 REPLACE SPEED CONTROL SWITCH AND CONNECTOR PER RECALL 99S15
REPLACE SWITCH AND HARD SHELL
WF INSTALLED NEW SWITCH AND CONNECTOR.
PERFORM RECALL PER TECHNICAL INSTRUCTIONS IN RECALL BULLETIN REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARDSHELL

COMPLETED CAMPAIGN 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL 99S15
PERFORMED RECALL 99S16
INST DEACTIVATION SW AS PER 99S15 NORMAL CRUISE OP AT THIS TIME. TECH 408-0545
6347 WARR REPLACED CRUISE DEACTIVATION SWITCH
PERFORMED 99S16 RECALL AS PER INSTRUCTIONS
REPAIR AS PER RECALL 99S16.
122054 RECALL INSTALLED NEW CRUISE DEACTIVATION SWITCH PER RECALL
PERFORMED RECALL
INSTALL DEACT SWITCH

REMOVE AND REPLACE AS PER RECALL (98S15B) REPLACE AS PER RECALL
1 PERFORM RECALL PER INSTRUCTIONS
SWITCH REPL DEACTIVATION SWITCH
RECALL REPAIR

98S15 REPLACE SPEED CONTROL SWITCH & CONNECTOR
1 REMOVE AND REPLACE SPEED CONTROL SWITCH PER RECALL
103805 REPLACED CRUISE SWITCH
RECALL PERFORM RECALL
PERFORMED RECALL
PERFORMED RECALL AS NEEDED ALL OK
NA REPLACED SWITCH AND CONNECTOR
98S15 RECALL PERFORM RECALL
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98S15B .6
REPLACED BRAKE SWITCH KIT
REPLACED CRUISE CONTROL SWITCH PER RECALL
98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL OUT MILES 81018.
REMOVED AND REPLACED SPEED CONTROL SWITCH
X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
1 PERFORM RECALL 98S15
REPLACED SPEED CONTROL CABLE AS PER RECALL 98S15

REPLACE AS PER RECALL 98S15
98S15 PERFORMED PER RECALL INSTRUCTIONS
PERFORMED RECALL PER INSTRUCTIONS
94020 RECALL 98S15 WT DONE
REPLACE SWITCH AND CONNECTOR
RECALL 98S15
REPLACE CRUISE SWITCH
COMPLETE RECALL
RECALL PERFORMED
98S15B PERFORMED RECALL - REPLACED SPEED CONTROL DEACTIVATION SWITCH
CHECK AND TEST CRUISE CONTROL AFTER RECALL WAS PERFORMED.FOUND DEACTIVATION SWITCH NOT WORKING,REPLACE SWITCH.
1 INSPECTED SYSTEM AND REPLACED SWITCH W- NEW CONNECTER HOUSING 3418
98S15 98S15 RECALL

282715 98S10B .6 INSTALL CRUISE SWITCH AS PER RECALL
110864 REPLACED DEACTIVATION SWITCH AS PER RECALL, RETESTED-OK
REPLACE BRAKE SWITCH. PERFORM RECALL PER INSTRUCTIONS.
135888 INSTALLED SWITCH
REPLACE CRUISE DEACTIVATION SWITCH AND CONN BLEED BRAKES
PERFORMED RECALL
RECALL 98S15 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO
180884 INSTALL HARDSHELL AND SWITCH FOR CRUISE CONTROL
RECALL 98S15
REPAIR PER 98S15 RECALL

138410 RECALL REPLACE DEACTIVATION SWITCH

100886 REPLACE DEACTIVATE SWITCH PER RECALL
REPLACE SPEED CONTROL SWITCH PER RECALL 98S15
RECALL COMPLETED
PER NOTIFICATION RECALL 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 98S15 RECALL INSTRUCTION
RECALL CRUISE SW REPL
PERFORMED RECALL 98S15
REPLACE SWITCH
PERFORM RECALL AS PER NOTICE
RECALL -- PERFORMED RECALL # 8178
31224 WARR. RECALL 98S15. REPLACE CRUISE SWITCH AND CONNECTOR.
RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL

PERFORMED RECALL
PERFORMED RECALL
TECH 141 PERFORM RECALL 98S15 REPLACE SWITCH
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.
PERFORM RECALL 98S15-SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
PERFORM RECALL 98S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED
RECALL COMPLETED
98S15 98S15
PERFORMED RECALL 98S15
PER FORD INSTALLED CABLE
50499 RECALL 98S15 8310 REPLACE DEACTIVATION SWITCH & PLUG GA
THERE HAS BEEN A KEY PUNCH ERROR ON WRO #72891-1, THIS MILEAGE 52273, IS THE CORRECT MILEAGE.
PERF RECALL 98S15
RECALL SPEED CONTROL SWITCH REPLACE DEACTIVATION SWITCH
DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
PERFORMED RECALL 98S15
REPLACE CRUISE SWITCH PER RECALL
18217 REPLACE DEACTIVATION SWITCH PER 98S15 RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15
REPLACE SWITCH PER RECALL
REPLACED SWITCH AND CONNECTOR

RECALL 98S15
73828 98S15 REPLACE DEACTIVATION SWITCH AND CONNECTOR
PERFORM RECALL
98S15B 0.5
SPEED CONTROL SWITCH RECALL PERFORM RECALL 98S15
PERFORM RECALL 98S15
RPL CRUISE DEACTIVATION SWITCH
88600 REPLACE CRUISE DEACTIVATE SWITCH AND CONNECTOR PER RECALL

REPLACE DEACTIVATION SWITCH AS PER RECALL 98S15
R&R SPEED CONTROL DEACTIVATION SWITCH PER RECALL
PERFORMED RECALL # 98S15
98S15 98S15

99S15 99S15 REPLACE SWITCH AS PER RECALL
INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL
PERFORMED RECALL
99S15B 0.5
REPLACE SPEED CONTROL DEACTIVATION SWITCH
PERFORM SPEED CONTROL SAFETY RECALL AS INSTRUCTE
REPLACED SWITCH AND CONNECTOR
1 PERFORMED RECALL 99S15
SPEED CONT REPL DEACTIVATION SWITCH
RECALL 99S15 RECALL 99S15
37208 RECALL W REPLACE SWITCH AND PLUG GA
REPLACED DEACTIVATION SWITCH
PERFORM RECALL
PERFORMED RECALL

PERFORMED RECALL REPLACED THE SWITCH AND CONNECT OR BLEED THE BRAKE SYSTEM NOTE THE BRAKES PULSATE AND LEFT FRONT POWER SE A
99S15 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15
1 REPLACED DEACTIVATION SWITCH PER RECALL
PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99S15 RECALL INSTRUCTIONS

PERFORMED RECALL
PERFROM RECALL
130477 DONE WITH RECALL 99S15
RECALL 99S15 REPLACED SWITCH AND CONNECTOR AND ROAD TESTED
RECALL SPEED CONTROL REPLACE SWITCH AND CONECTOR
RECALL 99S15
R&R BRAKE SWITCH & HARD SHELL PER RECALL
99S15 99S15
39779 SAME PERFORM RECALL 99S15 7158 JH

X REPLACE SPEED CONTROL SWITCH.
RECALL COMPLETED
OLD STYLE CRUISE WITH VACCUM DONT HAVE BRAKE SWITCH
99S15-42-41091 DO RECALL 99S15 PUT IN NEW SW AND WIRES COND
99S15 99S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH
SPEED CNTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 99S15
COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
COMPLETED RECALL 99S15.
PERFORM RECALL AS PER LETTER
PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99S15 RECALL INSTRUCTIONS
71134 PERFORMED RECALL CRUISE
REPLACED THE SWITCH PER RECALL 99S15
PERFORM RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO
99S15 RECALL 99S15 COMPLETED RECALL
PERFORMED RECALL 99S15
52888 RECALL W REPLACE SWITCH AND PLUG GA
R&R SPEED CONTROL DEACTIVATION SWITCH PER RECALL

RECALL 98S15 PERFORM RECALL 98S15, ADD SWITCH
 REPLACED DEACTIVATOR SWITCH PER RECALL
 REPLACED SWITCH CAUS 98S2-LAB 98S15B-TIME .5-AD .1
 104207 RHR SW
 PERFORMED RECALL REPLACED THE SWITCH AND COONEC TOR
 REPLACED SPEED CONTROL DECELERATION SWITCH PER RECALL
 61181 INSTALLED NEW SWITCH AND CONNECTOR AS PER RECALL
 RECALL COMPLETE
 COMPLETED 98S15 INSTALLED KIT
 RECALL REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
 DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
 REPLACE SWITCH RECALL 98S15
 PERFORMED 98S15 RECALL PERFORMED RECAL
 REPLACE SWITCH AND CONNECTOR PER RECALL
 REPLACE SWITCH AND CONNECTOR
 . INSTALLED SWITCH AS PER RECALL 1
 REPLACED THE SWITCH PER RECALL 98S15
 98S15 RECALL 98S15 RECALL - REPLACED SPEED CONTROL DEACTIVATION SWITCH
 98S22 RECALL 98S15
 . 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
 RECALL 98S15 RECALL, REPLACE SWITCH
 RECALL 98S15
 80452 RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH
 65898 W REPLACE SWITCH GA
 1 PERFORM RECALL AS PER INSTRUCTIONS
 RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARDSHELL CONNECTOR
 PERFORM RECALL PER FORD

FORD RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL
 REMOVE TAPE AND SECURE LABOR OP 98S15E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OP 98S15B .5 REMOVED TAPED AND SE
 INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1
 INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1
 REPLACE SWITCH PER RECALL 98S15
 RECALL 98S15 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH CONNECTOR
 RECALL COMPLETED
 RECALL PERFORMED RECAL
 121003 RECALL REPLACE DEACTIVATION SWITCH PER RECALL 98S15
 PERFORMED RECALL 98S15 SPEED CONTROL
 WF INSTALLED NEW SWITCH AND CONNECTOR
 PERFORMED RECALL 98S15 REPLACED SWITCH
 28843 SAME PERFORM RECALL 98S15 7158 LA
 98S15 98S15 REPLACE CRUISE SWITCH PER RECALL
 30584 REPLACED SWITCH PER RECALL .5
 REPLACED DEACTIVATION SWITCH
 RECALL REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR
 RECALL 98S15
 REPLACE CRUISE CONTROL DEACTIVATION SWITCH

RECALL
98S15 INSTALL SWITCH
REPLACE DEACTIVATION SWITCH

RECALL COMPLETE
PERFORMED RECALL

RECALL 98S15 INSTALLED CRUISE CONTROL SWITCH

88310 REPLACED SWITCH AND WIRING PER RECALL

98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL

58712 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15

PER FORD INSTALLED SWITCH

1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98S15B .8

X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

PERFORM RECALL

RECALL 98S15 REPLACED DEACTIVATOR SWITCH AS PER RECALL 98S15

REPLACED DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

NEC TO REPLACE DEACTIVATION SWITCH BLEED BRAKES AS PER 98S15

98S15 98S15

98S15 INSTALL DEACTIVATION SWITCH AS PER RECALL

80010 RECALL 98S15, SPEED CONTROL SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL SPEED CONTROL SWITCH REPLACE SWITCH PER 98S15

X COMPLETED

PERFORM RECALL REPL DEACTUATOR SWITCH

RECALL COMPLETE

PERFORMED CRUISE SWITCH RECALL T

CHECKED AND INSTALLED KIT AS PER RECALL

160886 RECALL 98S15 .5 INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL FIN

PERFORM RECALL

REPLACED THE SWITCH PER RECALL 98S15.

PERFORMED RECALL

1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 98S15B X3

REPLACE SPEED CONTROL CABLE

REMOVE TAPE AND SECURE LABOR OF 98S15E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 98S15B .5 REMOVED TAPED AND SE

114867 INSTALL NEW SWITCH AND CONNECTOR END

78485 RECALL 98S15 .5 INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL FIN

72020 RECALL W REPLACE SWITCH GA

2777-183 PERFORM RECALL 98S15

57126 98S15-42 .5 REPLACED SWITCH

PERFORMED RECALL PER INSTRUCTIONS

PROG 98S15

REPLACED THE SWITCH PER RECALL 98S15

RECALL 98S15 - B - RECALL

REMOVE TAPE AND SECURE LABOR OF 98S15E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 98S15B .5 REMOVED TAPED AND SE

125747 TECH 181 98S15B-0.5 REPLACE SPEED CONTROL DEACTIVATION SWITCH

A RECALL DONE

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTION.
SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED E
RECALL COMPLETED

PERFORMED RECALL 98S15
RECALL COMPLETED
RECALL 98S15 COMPLETED
RECALL COMPLETED

46578 PERFORM RECALL 98S15 REPLACE SPEED CONTROL SWITCH AND CONECTOR
OPEN RECALL PERFORMED RECALL
PERFORMED RECALL NEEDS: TUNE AND FILTERS \$164.95 NEEDS: INJECTOR SERVICE AND INDUCTION SERVICE \$ 110 NEEDS BELT \$100
104308 PERFORMED RECALL 98S15
98062, PERFORMED 98S15B
57804 RECALL 98S15 W/R REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL
RECALL REPLACED SPEED CONTROL SWITCH PER RECALL
110082 RECALL REPLACED SWITCH BLEED
REPLACE DEACTIVATION SWITCH PER RECALL
15005 PERFORMED RECALL 98S15, REPLACED DEACTIVATION SWITCH, OK.
48285 RECALL, INSPECT AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL X99 RECALL
RECALL PERFORM SERVICE
98S15 RECALL 98S15 COMPLETED RECALL
PER NOTICE PERFORM RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER SAFETY RECALL 98S15.
98007 DONE RECALL OPER# 98S15B 0.5 HR
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

46567 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH
208088 DO RECALL 98S15
DIAGNOSIS AND INSPECT FOR CAMPAIGN PERFORM CAMPAIGN AS PER NOTICE REPLACED SPEED CONTROL DEACTIVATION SWITCH
REPLACED PARTS PER RECALL
DID RECALL 98S15B
REMOVE TAPE AND SECURE LABOR OF 98S15E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 98S15B .5 REMOVED TAPED AND SE
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL.

157305 RECALL WARR PERFORMED RECALL 98S15
RECALL: REPLACED CRUISE CONTROL DEACTIVATION SWITCH AND HARNESS CONNECTOR AS PER RECALL.
RECALL 98S15 INSTALLED SWITCH
1 TECH INSTALLED CRUISE DEACTIVATION SWITCH AS PER RECALL 98S15
COMPLETED RECALL
INSTALL NEW DEACTIVATE SWITCH.
RECALL 98S15 SPEED CONTROL 98S15-PERFORM MODIFICATIONS
PERFORMED RECALL 98S15 - CHECK AND REPLACED CRUISE CONTROL CABLE

94085 RECALL 98S15 98S15B .5 REPLACED SWITCH AND CONNNECTOR PER RECALL
G RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
98S15 PERFORMED 98S15 RECALL

INSTALL SWITCH PER RECALL 98S15
REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
98S15 98S15
REPLACE SPEED CONTROL CABLE AS PER RECALL 98S15
REPLACE ACC SWITCH AND BLEED HYD RETEST DRIVE OK
RECALL 98S15 RECALL
OPEN RECALL PERFORM RECALL

RECALL REPAIR

REPLACE DEACTIVATE SWITCH PER RECALL
1 COMPLETE RECALL
98124 R+R SPEED CONTROL DEACTIVATION SWITCH
PERFORM RECALL 98S15
98884 PERFORM RECALL 98S15
78287 INSTALL RECALL
98S15 98S15
84440 RECALL 0.5 PERFORM RECALL 98S15
RECALL 98S15 REPLACED SWITCH
PERF. RECALL
CHECK AND INSTALL CRUISE SWITCH PER RECALL
RECALL 98S15 DEACTIVATION SWITCH
RECALL PERFORM RECALL
82897 RECALL 98S15
PERFORMED RECALL 98S15
REPLACE DEACT SWITCH PER 98S15
PERFORM RECALL
RECALL 98S15 98S15 RECALL PERFORMED
PERFORM RECALL 98S15 R+R BRAKE SWITCH PER RECALL 98S15
X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
100808 DID RECALL 98S15 TECH 3213
PERF RECALL 98S15
87988 RECALL 98S15 TECH 9177 PERFORM RECALL 98S15 INSTALL CONNECTOR
PERFORMED RECALL
RECALL 98S15 DONE
- MODIFY PER RECALL 98S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

PERFORMED RECALL
REPLACED DEACTIVATION SWITCH
112347 RECALL REPLACED SPEED DEACTIVATION SWITCH AND BLEED
DO RECALL 98S15 MILEAGE 72713 R/R ONE 98852 CRUISE DEACTIVATION SWITCH PER RECALL

98S15 REPLACE CRUISE CONTROL SWITCH PER RECALL
PERFORM RECALL 98S15
97103 W REPLACE DEACTIVATE SWITCH GA
PERFORMED RECALL 98S15
REPLACED SWITCH CONNECTOR

REPLACED SWITCH AND CONNECTOR
INSTALL SPEED CONTROL SWITCH.

RECALL 98S15

80885 RECALL 98S15 INSTALL SWITCH 98S15B .5HRS

REPLACE CRUISE CONTROL DEACTIVATION SWITCH

INSTALLED SPEED DEACTIVATION SWITCH PER RECALL

98S15 98S15

PERFORMED RECALL

PERFORM RECALL 98S15

TECH INSTALLED NEW CRUISE DEACTIVATION SWITCH PER FORD RECALL

1 RECALL 98S15B C-G ADD CORR 42

INSTALL CRUISE DEACTIVATION SWITCH PER RECALL 98S15. 6536

CHECK FOR RECALL, NEEDED, PERFORM RECALL

75729 98S15 W REPLACED SPEED CONTROL DEACTIVATION SWITCH 98S15

98289 RECALL 98S15 PERFORMED CRUISE CONTROL RECALL

SWITCH 98S15

REPLACED CRUISE CONTROL SWITCH PER RECALL

CONNECTOR 98S15

RECALL 98S15 INSTALLED SWITCH

PERFORM RECALL AS PER NOTICE

PERFORM RECALL RECALL

RECALL 98S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 98S15

RECALL COMPLETE

PERFORM SPEED CONTROL SAFETY RECALL AS INSTRUCTED

CRUISE DEACTIVATION SWITCH REPLACE CRUISE DEACTIVATION SWITCH

RECALL COMPLETED ALL OK

RECALL 98S15 REPLACED SWITCH

RECALL 98S15 INSTALLED SWITCH

98S15 98S15

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 98S15 RECALL INSTRUCTIONS

REPLACE SPEED CONTROL CABLE AS PER RECALL 98S15

RECALL RECALL

98S15 SPEED CONTROL RECALL 98S15

REPLACE CRUISE DEACTIVATION SWITCH PER RECALL

SWITCH 98S15

PERFORMED RECALL 98S15

REPLACED SWITCH PER RECALL

INSTALL CONNECTOR AND SWITCH PER RECALL 98S15

28254 98S15B 0.5 HRS REPLACE SPEED CONTROL DEACTIVATION SWITCH

INSPECT AND REPLACED SPEED CONTROL SWITCH TO COMPLETE RECALL

87247 INSTALL DEACTIVATION SWITCH + CONNECTOR

INSTALL CRUISE DEACTIVATION SWITCH PER RECALL 98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15

PERFORMED RECALL AS PER 98S15

88126 RECALL 88S15 PERFORMED RECALL 88S15
INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN
REPLACE SWITCH
SWITCH REPLACE SWITCH AND CONNECTOR
COMPLETED RECALL ON DEACTIVATION SW...

INSTALL RECALL KIT

88S15 PERFORM RECALL 88S15
PERFORMED RECALL PER BULLETIN
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR. CHECK NORMAL OPERATION.
REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL 88S15 PERFORM RECALL 88S15
RECALL COMPLETED
REPLACE HARNESS ASSEMBLY AS PER RECALL
COMPLETED RECALL
PER NOTICE PERFORM RECALL
PERFORMED RECALL 88S15
PERFORM RECALL 88S15 SPEED CONTROL
RECALL REPAIR
88600 RECALL 88S15B 0.5 PERFORM RECALL, REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR.
112680 INSTALL SWITCH
88S15 RECALL PERFORM RECALL
SPEED CONTROL SWITCH 88S15 RECALL
REPLACED SWITCH & CONNECTOR.
88S15
RECALL REPAIR
8811 PERFORM RECALL 88S15, REPLACE DEACTIVATION SWITCH AND PLUG HARNESS
SUPPLEMENT #1 5-88 INSPECTION OPERATION ADDED REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REMOVE & REPLACE SPEED CONTROL DEACTIVATION SWIT
88S15 REPLACED CONNECTOR AND SWITCH
REPLACE SWITCH PER RECALL
- DONE 88S15.
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
REPLACED SC DEACTIVATION SWITCH 88S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
COMPLETED RECALL 88S15 SPEED CONTROL DEACTIVATIO

88S15 INSPECT CRUISE CONTROL SWITCH - OK AT THIS TIME - PER RECALL
REPL SPD CNTRL DEACTIVATION SW
REPLACE SPEED CONTROL DEACTIVATION SWITCH
1 PERFORMED RECALL
PERFORM RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
88S15 RECALL SPEED CONTROL SWITCH
RECALL 88S15 RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL 98S16
98S15 RECALL 98S15 RECALL COMPLETE
REPLACED SWITCH ASSEMBLY PER RECALL
COMPLETED RECALL 98S15

PERFORM RECALL PER TECH INSTRUCTIONS

PERFORMED RECALL 98S15
RECALL 98S15 INSTALLED SWITCH
PERFORMED 98S15 RECALL
REPLACED SWITCH PER RECALL
REPLACED CRUISE SWITCH AS PER RECALL 98S15

RECALL 98S15 INSTALLED SWITCH

FACTORY RECALL COMPLETED
RECALL REPAIR
87735 RECALL PERFORMED RECALL 98S15 CC42
RECALL PERFORM RECALL 98S15
RECALL 98S15 INSTALLED SWITCH

74100 RECALL 98S15 0.5 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15.
PERFORM RECALL 98S11
104004 INSTALLED CRUISE SWITCH AND HARDSHELL
IMPROPER OPERATION REPLACE SWITCH. OP NOT LISTED IN SLTS
PERFORM 98S15 RECALL
98S15 98S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 98S15B 0.5, ADMIN 0.1
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 98S16B 0.5, ADMIN 0.1

PERFORM RECALL DEACTIVE SWITCH PER INST
REPLACED SWITCH CONNECTION
98S15 REPLACED CONNECTOR AND SWITCH
RECALL 98S15 PERFORM RECALL 98S15
98S15 98S15
REPLACE SPEED CONTROL SWITCH PER RECALL
INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN
OPEN RECALL COMPLETED OPEN RECALL
120020 RECALL 98S15 REPLACED DEACTIVATION SWITCH PER RECALL
98S15 REPLACE CRUISE CONTROL SWITCH PER RECALL
REPLACED CRUISE CONTROL BRAKE SWITCH
REPLACE SWITCH PER RECALL
RECALL 98S15 RECALL 98S15
RECALL PERFORM RECALL 98S15 SPEED DEACTIVATION SWITCH
SPEED CNTRL DEACTVTN SWITCH RPLCMTPRF SAFETY RECALL 98S15

INSTALL SPEED CONTROL DEACTIVATION SWITCH
INSTALL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL
PERFORM RECALL 98S15
98S15 RECALL SPEWED CTRL SWITCH
A RECALL DONE
48687. RECALL 98S15B SPEED CONTROL DEACTIVATION SWITCH
RECALL 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH
98S15 RECALL 98S15 REPAIR AS PER RECALL
REPLACED DEACTIVATION SWITCH AND CONNECTOR.
PERFORM RECALL 98S15. 98S15 RECALL COMPLETE
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
1 PERFORM RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
98S15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT

RECALL 98S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 98S15
40245 W PERFORM RECALL 98S15
1 PERFORMED RECALL AS OUTLINE
98S15 REPLACE CRUISE CONTROL SWITCH PER RECALL

98S15 PERFORMED PER RECALL INSTRUCTIONS
151743 RECALL 98S15 DEACTIVATION SWITCH COMPLETE
1 REPLACE CRUISE DEACTIVATION SWITCH AND HARDSHELL PER RECALL
AS PER RECALL 98S15 RECALL TO INSTALL SWITCH AND HARDSHELL CONNECTOR
PERFORM RECALL
INSTALLED CRUISE CONTROL SWITCH PER RECALL
PERFORM RECALL 98S15 COMPLETE
PERFORM RECALL 98S15.

X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
SPEED CONTROL REPL CABLE
70835 REPLACE SWITCH AND CONNECTOR
REPLACED SPEED CONTROL CABLE
98S15 98S15
RECALL 98S15 98S15 REPLACE SPEED CONTROL SWITCH
REPL DEACTIVATION SWITCH PER RECALL
PERF 98S15

PERFORM RECALL
85888 REPLACE SPEED CONTROL SWITCH AND CONECTOR RECAL 98S15B LA
RECALLED BY FORD PERFORMED RECALL
83433 RECALL 98S15 WR PERFORM RECALL 98S15 INSTALL SPEED CONTROL SWITCH
PERFORM RECALL
REPLACED DEACTIVATION SWITCH AND HARDSHELL PER RECALL

PERFORM RECALL 99S15
PERFORMED RECALL
99S15 99S15
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15
OPEN RECALL PERFORMED RECAL
PERFORM RECALL 99S15
RECALL 99S15 - B - RECALL
42927 RECALL WR RECALL 99S16
AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS
1 REPLACE CRUISE DEACTIVATION SWITCH.

REPLACE SPEED CONTROL SWITCH
79674 RECALL WARR PREFORMED RECALL 99S15
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15
PERFORMED RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL SENT BY WPI.

REPLACE SWITCH
RECALL PERFORMED RECALL 99S15
RECALL PERFORMED RECALL 99S15
47744 PREFORM RECALL
PERFORM RECALL 99S15
RECALL PERFORM RECALL
81568 REPLACED SWITCH AND CONNECTOR HARDSHELL PER REC ALL-TECH 542
PERFORM SAFETY RECALL
50522 RECALL 99S15 INSTALLED UPDATED SPEED CONTROL CUTOFF SWITCH CHECKS OK
RECALL 99S15.

PERFORMED SPEED CONTROL RECALL 99S15
RPL SPD CONTROL DEACTIVATION SWITCH, RECK OK
PERFORMED RECALL 99S15B PERFORM RECALL PER INSTRUCTIONS.
REPLACE SPEED CONTROL SWITCH PER RECALL 99S15
RECALL 99S15 REPLACED DEACTIVATION SWITCH
125083 W PERFORM RECALL 99S15

1 PERFORMED RECALL
99S15 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL

127508 99S15 RECALL ADD ON OKD BY F.A.B. PREFORMED RECALL 99S15, INSTALLED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR. BLED
REPLACED SWITCH
SERVICE PUBLICATION 99S15 REPLACED SWITCH
C PERFORMED RECAL
SWITCH 99S15
171264 99S16 PREFORMED 99S15 PER INSTRUCTIONS
99S15 99S15
REPLACED DEACTIVATION SWITCH
1355 RECALL 99S16 PERFORM RECALL 99S15 REPLACING BRAKE PRESSURE SPEED CONTROL DEACTIVATION SWITCH *SWP
INSTALL SPEED CONTRL DEACTIVATION SWITCH

REPLACED THE SWITCH PER RECALL 98S15
RECALL 98S15 INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
INSTALLED KIT 98S15 RECALL PERFORMED
98S15 RECALL 98S15 RECALL COMPLETE
98S15 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL C

REPLACE SPEED CONTROL SWITCH PER RECALL 98S15
PERFORM RECALL 98S15
43701 RECALL 98S15 RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH FLAG TO TECH 5419

COMPLETED RECALL
PERFORMED RECALL 98S15

ADD PERFORM RECALL 98S15
REPLACE SWITCH
REPLACED THE SWITCH PER RECALL 98S15
PERFORM RECALL 98S15
91677 TRIED TO R&R DEACTIVATION SWITCH. FROZEN IT PULLED THREADS OUT OF PROVALVE. HAVE TO ORDER 812- REMOVED LEFT SIDE INNER FENDER
108848 RECALL 98S15 REPLACE CRUISE CONTROL SWITCH AND PLUG
1 1 INSTALL SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
1 REPLACE DEACTIVATION SWITCH AS PER RECALL 98S
REPL BRAKE SWITCH AND CONNECTOR PER RECALL...

84477 RECALL 98S15 PERFORMED RECALL 98S15
1 REPLACE DEACTIVATION SWITCH AS PER RECALL 98S
REPLACE SPEED CONTROL SWITCH

98S15 98S15
INSTALLED KIT PER RECALL
REPLACE VALVE AND BLEED BRAKE ADDITIONAL TIME REQUESTED
110572 PERFORMED RECALL
90481 98S15B 0.5 HRS REPLACE SPEED CONTROL DEACTIVATION SWITCH.
COMPLETE RECALL 98S15
INSTALLED KIT 98S15 RECALL PERFORMED
COMPLETE AS PER RECALL 98S15
PERFORM SAFETY RECALL
98S15 COMPLETED 98-S-15-
RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONECTOR, RECALL
AS PER 98S15 INSTALLED SPEED CONTROL DEACTIVATION SWITCH.

REPLACED SW AND CONNECTOR

X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH
INSTALLED SWITCH PER RECALLS
PERFORM RECALL
PERFORMED RECALL 98S15

RECALL 99S15 INSTALL SWITCH PER RECALL
REPLACE CRUISE CONTROL SWITCH AS PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH.
REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL
REPLACE SWITCH PER RECALL
PERFORMED RECALL 99S15

99S15 PERFORM RECALL -CRUISE SWITCH
RECALL 99S15 PERFORMED RECALL
REPAIR PER 99S15 REPLACED SWITCH
RECALL 99S15 REMOVE,TAPE & SECURE THE SPEED CONTROL DEACTIVATION SWITCH
PERFORM RECALL
RECALL REPLACE SWITCH ASSY

1 REPLACED SPEED CONTROL DE-ACTIVATION SWITCH PER RECALL.
RECALL 99S15 - B - RECALL
121882 RECALL 99S15 CRUISE CONTROL SWITCH RECALL 99S15 CRUISE CONTROL SWITCH

99S15 REPLACE DEACTIVATION SWITCH

99S15 PERFORM RECALL 99S15
99S15 INSPECT CRUISE CONTROL SWITCH PER RECALL
99S15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT
RECALL 99S15 - B - RECALL
INSTALL CRUISE BRAKE KIT
RECALL PERFORMED RECALL 99S15

1 RECALL #99S15.

PERFORM RECALL 99S15
REPLACE SWITCH AND HARNESS FOR CRUISE PER RECALL
42062 REPLACE CRUISE DEACTIVATION SWITCH PER RECALL INSTRUCTIONS
99S15B 0.6
1 REPLACE SWITCH & PLUG BLEED BRAKES
1 COMPLETED RECALL 99S15
RECALL 99S15

36185 RECALL W REPLACE SWITCH AND CONNECTOR PER RECALL 99S15 GA

99S15 REPAIRED AS PER RECALL, NECESSARY TO REPLACED WIRE TERMINALS
REPLACE DEACTIVATION SWITCH AS PER RECALL
RECALL 99S15
PERFORMED RECALL 99S15 -- CHECK AND REPLACED DEACTIVATION SWITCH AND RECHEKC OK
PERFORMED RECALL AS INSTRUCTED.
OPEN RECALL COMPLETED OPEN RECALL
99S15 99S15
1 PERFORM RECALL

98S15 98S15 RECALL
RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR. ROAD TEST.

PERFORM RECALL 98S15
RECALL REPLACE DEACT SWITCH PER RECALL
REPLACE CRUISE CONTROL DEACTIVATION SWITCH
PERFORMED 98S15 RECALL
REPLACED SWITCH PER RECALL
PERFORM RECALL 98S15
PERFORM RECALL
PERFORMED RECALL 98S15
RPL SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR, RECK OK
RECALL 98S15 COMPLETED
REPLACE SPEED CONTROL SWITCH #10XW
98S15 REPLACED SWITCH
SUPPLEMENT #1 6-99 INSPECTION OPERATION ADDED REPLACE SOLED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
PERFORMED RECALL 98S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR

RECALL 98S15 - B - RECALL
RECALL 98S15
REPL SPD CNTRL DEACTIVATION SW
REPLACE SPEED CONTROL SWITCH
1. REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98S15B .1
REPLACED SPEED CONTROL DEACTIVATION SWITCH
98S15 REPLACED CRUISE CONTROL DEACTIVATION SWITCH
85534 TECH 101=RECALL=98S15=0.5 REPLACE BRAKE PRESURE SWITCH & CONECTOR.

05100 PERFORMED RECALL
INSTALL NEW SWITCH
COMPLETED RECALL
PERFORM RECALL

98S16 98S15
08 REPLACED SWITCH
13285 RECALL 98S15B .5, ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL
PERFORMED RECALL
83847 RECALL .5 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15B
RECALL PERFORMED
RECALL PERFORMED
78407 REPLACE SWITCH PER RECALL
177159 PERFORM RECALL 98S15
PERFORMED RECALL 98S15
RECALL 98S15 98S15 RECALL COMPLETED REPLACED SWITCH
RECALL 98S15 REPLACED DEACTIVATION SWITCH
RECALL 98S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND ELECTRICAL CONNECTOR TEST DRIVE

98643 PERFORMED RECALL 98S15 REPLACED SWITCH
RECALL 98S15 DONE

98S15 98S15

PERFORM RECALL

98S15 98S15

RECALL 98S15 REPLACED CRUISE CONTROL SWITCH PER RECALL

98S15 REPLACED CRUISE CONTROL SWITCH

RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT

PERFORMED RECALL REPLACED SWT AND CONECTOR END LABOR OP 98S15B TECH 1737

98606 98S15 RECALL 98S15 REPLACE DEACTIVATOR SWITCH

RECALL 98S15

PERFORM RECALL

RECALL REPLACED DEACT. SWITCH.

INSTALL NEW SWITCH CONNECTOR 98S15

RECALL 98S15 REPLACED CRUISE CONTROL SWITCH PER RECALL

PERFORMED RECALL 98S15.

PERFORM RECALL

REPL SPD CONTROL DEACTIVATION SW

REPLACE SPEED CONTROL CONNECTOR

98S15 98S15

REPLACED BRAKE DEACTIVATION SWITCH AND CONNECTOR

PERFORM 98S15 RECALL CRUISE CONTROL DEACTAVATION SWITCH 98S15B .5 ADMINISTRATIVE ALLOWANCE ADMIN .1

TECH 241 PERFORMED 98S15 RECALL

RECALL COMPLETED

67341 RECALL 98S15 PERFORM RECALL 98S15 REPLACING BRAKE PRESSURE SPEED CONTROL DEACTIVATION SWITCH 75 WP

REPLACED PER RECALL

108638 98S15B-.5 .5 REPLACE SPEED CONTROL SWITCH AS PER RECALL 98S15

36135 RECALL INSPECT AND REPLACE DEACTIVATION SWITCH AND CONNECTOR PER RECALL X98 RECALL

PERFORM RECALL

SWITCH RECALL REPLACE SWITCH

1 PERFORMED RECALL 98S15

69075 98S15 W REPLACED SPEED CONTROL DEACTIVATION SWITCH 2745

REPLACE CRUISE SWITCH PER RECALL 98S15

RECALL 98S15 COMPLETED RECAL

SWITCH RECALL 98S15

RECALL 98S15 INSPECT AND REPLACE SWITCH PER RECALL

RECALL RECALL

INSTAL SWITCH

FACTORY RECALL COMPLETED RECALL

PERFORMED RECALL

INSPECTED AND REPLACED SPEED CONTROL SWITCH PER RECALL

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.

98607 INSTALL SWITCH AS REQ.

73774 REPLACED SWITCH

REPLACED BRAKE DEACTIVATION SWITCH AND CONNECTOR

79168 RECALL WARR REPLACED DEACTVATING SW AS PER RECALL 98S15

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.

PERFORMED RECALL
REPLACE SWITCH ASSY
REPLACED THE SWITCH PER RECALL 99S15
48132 99S15 RECALL. INSTALL UPDATED SPEED CONTROL DEACTIVATION SWITCH AS PER 99S15.
50 99S15

PERFORMED RECALL 99S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL. LABOR 99S15B 0.5, ADMIN 0.1
1 ACCESS INSPECT & REPL DEACTIVATION SWITCH & CONNECTOR AS PER RECALL 99S15

RECALL 99S15
INSTALLED DEACTIVATION SWITCH PER RECALL
RECALL 99S15
REPLACE SWITCH PER RECALL 99S15
PERFORM RECALL 99S15
PERFORM RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.
RECALL COMPLETE
INSTALLED SWITCH PER RECALL
OPEN RECALL PERFORM RECALL
SPEED CONT INST SWITCH ASS
120068 RECALL 99S15 INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH PER INST
102433 RECALL 99S15 WARR INSTALL SWITCH PER RECALL
PERFORMED RECALL
RECALL 99S15 99S15 RECALL PERFORMED
1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
1 PERFORM RECALL E
INSTALL CRUISE DEACTIVATION SWITCH
82233 RECALL 99S15 .8 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR FOR RECALL 99S15
PERFORMED RECALL 99S15 - CHECK AND REPLACED SPEED CONTROL CABLE
57844 WARR RECALL REPLACE SPEED CONTROL SWITCH AND CONNECTOR
RNR SPEED CONTROL DEACT SWITCH 99S15 REPAIRED PER RECALL
X COMPLETED

PERFORMED RECALL 99S15-INSTALL SWITCH
PERFORM RECALL
REPLACED C CONTROL DEACTIVATION SWITCH PER RECALL 99S15
PERFORMED RECALL
INSTALL DEACTIVATION SWITCH
99S15 RECALL
99S15 REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
99S15 99S15

99S15 RECALL
1 COMPLETED REQUESTED RECALL AS PER FORD INSTRUCTIONS
1 PERFORM RECALL FOR DEACTIVATION SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER INSTRUCTIONS
99S15 INSTALL DEACTIVATION SWITCH

REPLACE SWITCH

80409 RECALL WP40 PERFORMED RECALL, REPLACED BRAKE PRESSURE SWITCH.
PERFORM RECALL 99S15

REPLACE BRAKE VALVE RECALL 99S15

PERFORMED RECALL 99S15

REPLACED SWITCH & CONNECTORS

80480 42 WP40 COMPLETE RECALL 99S15 REPLACE CRUISE CONTROL SWITCH AND CONNECTOR

80448 PERFORMED RECALL 99S15

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

RECALL 99S15 - B - RECALL

RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

REPLACE SWITCH AND CONNECTOR

OPEN RECALL COMPLETED OPEN RECALL

PERFORMED RECALL

INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN

PERFORMED RECALL PER INSTRUCTIONS

PERFORMED RECALL 99S15

COMPLETE RECALL 99S15

1 PERFORMED RECALL 1

REPLACE SWITCH PER FORD RECALL INSTALL SWITCH

RECALL 99S15

PERFORMED RECALL 99S15

RECALL PERFORMED

7 COMPLETED RECALL 99S15

INSTALLED SPEED CONTROL DEACTIVATION SWITCH

99S15 99S15

REPLACE CRUISE DEACTIVATION SWITCH PER RECALL

1 REMOVE AND REPLACE CRUISE CONTROL SWITCH PER RECALL

REPLACED SWITCH AND CONNECTOR

REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL

145194 RECALL 99S15 REPLACE SPEED CONTROL DEACT SWITCH PER RECALL 99S15

88708 INSTALL DEACTIVATION SWITCH

PERFORM RECALL

45885 RECALL 0.5 99S15B INSTALLED SPEED SWITCH PER RECALL

PERFORMED RECALL 99S15 INSTALLED BRAKE PRESSURE SWITCH. ROAD TEST AFTER RECALL.

99S15 99S15

87880 RECALL 99S15 W PERFORMED RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH.

INSPECT AND REPLACE SWITCH AS PER RECALL

REPLACED SWITCH AS PER RECALL AND BLEED BRAKES AS PER RECALL

REPLACED CRUISE CONTROL DEACTIVATION SWITCH

R&R SPEED DEACTIVATION SWITCH

150606 RECALL 12 WR PERFORM RECALL 99S15

RECALL 99S15 RECALL-R&R CRUISE CONTROL DEACTIVATION SWITCH & CONNECTOR
PERFORMED RECALL 99S15
REPLACED DEACTIVATION SWITCH AND CONNECTOR HARD SHELL ROAD TEST BEFORE AND AFTER REPAIR NOTED OFF SWITCH INTERMITTENT OPERATI

REPLACED CRUISE DEACTIVATION SWITCH PER RECALL 7
PERFORMED RECALL 99S15

INSTALL SPEED CONTROL DEACTIVATION SWITCH

1 PERFORMED RECALL 99S15

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99S15.
140063 RECALL INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH AND BLEED BRAKES AS STATED BY RECAL

1 PERFORMED RECALL 99S15 REPLACED CRUISE CONTROL DEACTIVATION SWITCH
PERFORM RECALL

130038 REPLACED SWITCH PER RECALL 99S15

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99S15.
RECAL 99S15

1 PERFORMED RECALL 99S15 FOR THE SPEED CONTROL.
PERFORM RECALL 99S15 - CHECK AND REPLACED CRUIS
REPLACED CRUISE DEACTIVATION SWITCH
49480 INSTALL SPEED CONTROL SWITCH PER RECALL.

REPLACED CRUISE DEACTIVATION SWITCH AS PER RECAL
REMOVE TAPE AND SECURE LABOR OP 99S15E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 99S15B .5 REMOVED TAPED AND 8E
PERFORM RECALL 99S15 REPLACED SWITCH AND CONNECT

RECALL 99S15 PERFORMED RECALL 99S15

RECALL 99S15

COMPLETED RECALL 99S15 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 99S15B .5 + .1
INSPECT AND OR PERFORM RECALL INSPECTED AND OR PERFORMED RECALL AS PER RECALL INSTRUCTIONS.

PERFORM RECALL 99S15

PERFORMED RECALL 99S15. REPLACED SWITCH AND CONNECTOR.

99S15 99S15

VERIFY RECALL REPLACE CRUISE SWITCH AS PER FMC CHECK OK

SAFETY RECALL 99S15 -REPLACE SPEED CONTROL DEACTIVATION SWITCH

106617 RECALL ON SPEED DEACT. SWITCH 99S15 W PERFORMED RECALL REPLACED SWITCH

REPLACE AS PER RECALL 99S15

RECALL - SPEED CONTROL SWITCH PERFORM RECALL 99S15, REPLACE SPEED CONTROL SWITCH & CONECTOR

OPEN RECALL PERFORMED RECAL

RECALL 99S15

PERFORMED RECALL 99S15

99S14 CC 42 NOT OPERATING PROPERLY TIME TO CK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15.

114400 RECALL W REPLACE SWITCH AND PLUG MA

99S15 99S15

INSPECTION PERFORMED RECALL AND INSTALLED SWITC
REPLACE SWITCH PER RECALL

99S15 99S15 RECALL
 192634 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL INSTRUCTIONS
 REPLACE DEACTIVATION SWITCH AS PER RECALL
 PERFORMED RECALL PERFORMED RECALL REPLACED SWITCH & CONNECTOR
 RECALL 99S15 PERFORMED RECALL 99S15
 99S15 RECALL 99S15 RECALL COMPLETE
 1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 99S15B X5
 REPLACE SPEED CONTROL SWITCH PER RECALL 99S15
 42570 RECALL WARR REPAIR PERFORM RECALL PROCEDURES FOR SWITCH REPLACEMENT
 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
 88448 PERFORM RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH
 COMPLETED RECALL 99S15 1 1
 99S15 RECALL 99S15 REPLACE SPEED CONTROL SWITCH-PER RECALL
 RECALL RECALL
 INSTALLED SWITCH AND CONNECTOR PER RECALL
 COMPLETE RECALL 99S15
 RECALL PERFORMED
 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

 REPLACED DEACTIVATION SWITCH AND PLUG
 99S15 OK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL
 24081 INSTALLED NEW RECALLED SWITCH AND PLUG, TEST DROVE AND WORKS PROPERLY
 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

 99S15 - PERFORMED RECALL REPLACED SWITCH & CONNECTOR & RD. TEST.
 99S15-RECALL 99S15 REMOVE AND REPLACE SPEED DEACTIVATION SENSOR
 PERFORMED RECALL
 REPLACE AS PER RECALL 99S15
 53820 SPEED CONTROL S-W RECALL WT PERFORMED SPEED CONTROL S-W REPLACEMENT RECALL
 PERFORM RECALL 99S15
 99S15B 99S15B
 99S15 REPALE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15
 REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99S15.
 54825 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL AND BLEED BRAKES AS PER RECALL
 97323 TECH 113 99S15B 0.5 REPLACE DEACTIVATION SWITCH AND CONNECTOR
 RECALL 99S15
 99S15 RECALL COMPLETE
 1 PERFORMED RECALL 99S15 REPLACE SPEED CONTROL CABLE
 REPLACE CONNECTOR AND SWITCH PER RECALL
 COMPLETED RECALL
 RECALL 99S15 PERFORMED SPEED CONTROL DEACTIVATION SWITCH
 1 COMPLETED REQUESTED RECALL AS PER FORD INSTRUCTIONS
 99S15 99S15 REPLACE DEACTIVATION SWITCH
 PERFORM RECALL 99S15 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND PLUG AS PER RECALL
 PERFD RECALL 99S15
 REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL
 PERFORM RECALL 99S15
 REPLACE SWITCH AND CONNECTOR PER RECALL

REPLACE SPEED CONTROL SWITCH AS PER RECALL

04548 RECALL 98S15B .50 TECK 182 INSTALL NEW SWITCH AND CONNECTOR
98S15 REPL SPEED CONTROL DEACTIVATION SWITCH
X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
2 PROGRAM 98S15 PERFORM RECALL AS OUTLINED
REPLACE CRUISE DEACTIVATION SWITCH
PERFORM RECALL 98S15
REPLACE AS PER RECALL 98S15

1 COMPLETED RECALL

132006 WARR. 8045 PERFORMED RECALL 98S15, SPEED CONTROL DEACTIVAT
REPLACED DEACTIVATION SWITCH PER RECALL

PERFORMED RECALL 98S15

AS PER RECALL 98S15 REPLACED DEACTIVATOR SW. AND HARD SHELL CONN.
PERFORMED SPEED CONTROL DEACTIVATION RECALL
REPLACE DEACTIVATION SWITCH PER RECALL 98S15
98S15 REPL SPEED CONTROL DEACTIVATION SWITCH
PER RECALL REPLACE SWITCH PER RECALL
REPAIR PER RECALL 1

OPEN RECALL PERFORM RECALL

PERFORM RECALL

PERFORM RECALL

X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
98S15 98S15
81016 REPLACE DEACTIVATION SWITCH AND HARNESS CONNECTOR
RECALL 98S15 INSTALLED DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
SPEED CONT REPL SWITCH

REPLACED CABLES

88007 42 WP40 COMPLETE RECALL 98S15 REPLACE CRUISE CONTROL SWITCH AND CONNECTOR
105671 REMOVED CONNECTOR AND SWITCH REMOVED BRASS ADPT REPLACED BRASS ADAPTER PERFORMED RECALL
PERFORM RECALL AS PER FORDS INSTRUCTIONS
1 PERFORM DEACTIVATION SWITCH RECALL
REPLACE SWITCH 1
PERFORMED 98S15 RECALL
REPLACE SPEED CONTROL SWITCH AS PER RECALL
REPLACE SPEED CONTROL SWITCH PER RECALL 98S15
44513 79 PERFORM 98S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST NOTE SPEED CONTROL INOP CUSTOMER ADVISED

67270 INSTALL NEW PRESSURE SWITCH AND CONNECTOR PER 98S15

1 PERFORM RECALL
REMOVED AND REPLACED SPEED CONTROL SWITCH AS PER RECALL
RECALL COMPLETE.

99S15

RNR DEACTIVATION SWITCH PERFORM RECALL 99S15

REPLACE DEACTIVATION SWITCH AS PER RECALL

X REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

REPLACE SPEED CONTROL SWITCH PER RECALL

PER RECALL PERF RECALL

PERFORMED RECALL 99S15 B 1

COMPLETED RECALL 99S15

REPLACE DEACTIVATION SWITCH. REPLACED DEACTIVATION SWITCH.

REPLACE SPEED CONTROL SWITCH AS PER RECALL

REPLACED DEACTIVATION SWITCH PER RECALL

99S15 RECALL

RECALL 99S15

RECALL 99S15

UNKNOWN INSTALL CRUISE SWITCH AND CONNECTOR PER 99S15

REPLACED SC DEACTIVATION SWITCH 99S15

RECALL COMPLETE

COMPLETED RECALL 99S15.

RECALL 99S15

RECALL 99S15

99S15 99S15 PERFORM RECALL

PERFORM RECALL

PER RECALL 99S15 INSTALL SWITCH

FACTORY RECALL COMPLETED

RPL CRUISE SW PER RECALL 99S15

1 REPLACED CRUISE CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

FORD SAFETY RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

99S15

99S15 SPEED CONTROL DEACTIVATION SWITCH RECALL & RDTST

PERFORMED RECALL 99S15B...REPLACED SPEED CONTROL DEACTIVATION SWITCH ...MD

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

COMPLETE RECALL

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

PERFORMED 99S15 RECALL

REPLACED SC DEACTIVATION SWITCH 99S15

REPLACED SC DEACTIVATION SWITCH 99S15

... INSTALL BRAKE SWITCH.

INSTALL SPEED CONTROL PER RECALL 99S15

99S1 42 WP40 COMPLETE RECALL 99S15 REPLACE CRUISE CONTROL SWITCH AND CONNECTOR

99S15

99S15 REPLACE SPEED CONTROL DEACTIVATION

91802 REPLACE SWITCH PER RECALL 98S15

1 PERFORMED RECALL

PERFORMED RECALL 98S15-INSTALL SWITCH

SAFETY RECALL

REPLACED SWITCH & CONNECTOR

PERFORM RECALL 98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL PERFORMED RECAL

REPAIR AS PER RECALL 98S15

REPLACE CRUISE SWITCH

REPLACED CRUISE DEACTIVATION SWITCH PER RECALL

98S15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT

INSTALLED SWITCH

RECALL SPEED CONTROL DEACTIVATIONREPLACE DEACT SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

PERFORMED RECALL 98S15-INSTALL SWITCH NOTE CAR HAS ABS BRAKE LIGHT ON CAME IN THAT WAY

RECALL 98S15 PERFORMED AS PER RECALL AND REPAIRED WIREING

FORD SAFETY RECALL

1 PERFORMED RECALL

PERFORMED RECALL 98S15

REPLACE DEACTIVATION SWITCH AS PER RECALL

PERFORM RECALL 98S15- REPLACE CRUISE CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

98S15 RECALL

98S15 RECALL COMPLETE

REPLACE DEACTIVATION SWITCH

301149 RECALL INSTALL NEW DEACTIVATION SWITCH XXXXXXX

48748 REPLACED CRUISE DEACTIVATION SWITCH PER RECALL

REPL CRUISE CONTROL SWITCHES

68648 RECALL REPLACED C C DEACTIVATOR SWITCH AND CONECTOR X39 RECALL

COMPLETED RECALL 98S15.

133389 RECALL 98S15

COMPLETED RECALL

CAMPAIGN REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL INSTRUCTIONS.

RECALL SPEED CONTROL DEACTIVATION SWITCH

INSPECTED FOUND WRONG WIRE REPLACED BOTH WIRE ENDS,CONNECTOR AND SWITCH

RECALL 98S15

RECALL COMPLETED

RECALL 98S16 RECALL

98S15B RECALL PERFORMED RECAL

SWITCH 98S15

60971 98S15 586

REPLACED CRUISE DEACTIVATION SWITCH AS PER RECALL 98S15

98S15

RECALL

REPLACE SWITCH AND CONNECTOR AS PER RECALL
 PERFORM RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO
 47895 ADD ON REPAIR RAB 98S15 REPLACE DEACTIVATION SWITCH AND HARD SHELL CONN ECTOR PER RECALL INSTRUCTIONS
 UNKNOWN INSTALL CRUISE SWITCH AND CONNECTOR PER 98S15
 RECALL #98S15 REPL. SPEED CONTROL DEACTIVATION SWITCH
 45782 RECALL REMOVED THE BRAKE CRUISE CUT OFF SWITCH REPLACED WITH THE NEW RECALL PART ## WHEN UNDER HOOD NOTICED THAT THE BR
 98S15 98S15
 PERFORMED RECALL PER DEALER LETTER
 REPAIR AS PER RECALL
 RECALL 98S15 98S15
 INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1
 SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 98S15

 SPEED CNTRL DEACTVTN SWITCH RPLCMNTPERF SAFETY RECALL 98S15
 RECALL 98S15 98S15 - R & R SPEED CONTROL SWITCH
 PERFORMED RECALL
 RECALL CRUISE CONTROL RECALL CRUISE CONTROL

 98S15 98S15 REPLACE SPEED CONTROL SWITCH AND CONNECTOR
 INSTALL CRUISE SWITCH PER RECALL
 PERFORM RECALL 98S15
 129537 RECALL REPLACED CRUISE CONTROL BRAKE PRESS SWITCH AND CONNECTOR AS PER RECALL
 RECALL 98S15 RECALL
 98S15 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
 100888 RECALL REPLACED CRUISE CONTROL ACTIVATION SWITCH
 RECALL COMPLETE
 PERFORM DEACTIVATION SWITCH RECALL
 RECALL 98S15 RECALL COMPLETED
 . INSTALLED CRUISE CONTROL DEACTIVATION SWITCH.
 98S15 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH & HARDSHELL CON-
 103279 REPLACED CRUISE DEACTIVATION SW- PER RECALL 98S15.
 COMPLETED 98S15 INSTALLED KIT
 CHECK AND REPAIR AS REQUIRED
 112868 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
 PERFORMED RECALL
 INSTALL SPEED SWITCH PER RECALL
 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED
 PERFORMED THE RECALL 98S15
 50440 RECALL PERFORMED 98S15 SPEED DEATIVATION SWITCH RECALL CODE 42 TK574
 RECALL 98S15 INSTALLED CRUISE CONTROL DE-ACTIVATION SWITCH PER RECALL
 REPLACED SPEED CONTROL DEACTIVATION SWITCH
 REPLACE SWITCH AND CONNECTOR
 REPLACED DEACTIVATION SWITCH. PER RECALL
 INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL
 REPLACE BRAKE SWITCH AS PER RECALL
 1 REPLACED SWITCH AND RECHECKED OK. AS PER RECALL 98S15
 DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
 REPLACE SPEED CONTROL SWITCH PER RECALL 98S15

RPL DEACTIVATION SWITCH AND CONNECTOR

REPLACED THE SWITCH PER RECALL 99S15

RPL SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONNECTOR, RECK OK

54007 PERFORMED RECALL 99S15 INSTALLED A NEW CRUISE DEACTIVATION SWITCH AND CONNECTOR. BLED REAR BRAKES AND ROAD TESTED VEHICLE

115000 RECALL REPLACE DEACTIVATION SWITCH

51187 W REPLACE SWITCH GA

RECALL 99S15

99S15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT

X PERFORMED RECAL

115002 RECALL 99S15

REMOVED AND REPLACED SPEED CONTROL SWITCH AS PER RECALL

99S15 RECALL PERFORME

132945 RECALL 99S15 0.5 HRS DID 99S15B

99S15 REPLACED CRUISE CONTROL DEACTIVATION SWITCH

115877 REPLACE DEACTIVATION SWITCH PER RECALL 99S15B 0.5 ADMIN 0.1

99S15 PERFORM RECALL 99S15

REPLACE SPEED CONTROL SWITCH AND CONNECTOR

REPLACE SWITCH

92911 RECALL 99S15. REPLACED CRUISE DEACTIVATION SWITCH AND BLED REAR BRAKES AS PER RECALL

XXXXXXXXXX

54239 RECALL WAR REPLACE SWITCH AND CONNECTOR GA

PERFORMED RECALL

99S15 COMPLETED INSTALLED KIT

RECALL INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

1 INSTALLED SWITCH AND CONNECTOR AS PER RECALL

99S15 99S15 REPLACE CRUISE SWITCH PER RECALL

99S15 REPLACED CRUISE DISCONNECT SWITCH PER RECALL

PERFORM RECALL 99S15 REPLACE DEACTIVATION SW

REPLACE SWITCH AND HARD SHELL

1 INSTALL SWITCH AS PER RECALL

INSTALL SPEED CONTROL SWITCH PER RECALL 99S15

REPLACE SWITCH.

99S15 99S15 DONE

99S15 REPAIR AS PER RECALL 99S15

COMPLETED REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH

COMPLETE RECALL

INSPECTION INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL

PERFORMED RECALL 99S15

COMPLETED REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH

PERFORM RECALL ON SWITCH

DEFECTIVE SWITCH REPLACE SPEED SWITCH

99S15 INSTALL NEW PRESSURE SWITCH AND CONNECTOR PER 99S15

PERFORMED RECALL

REPLACED CRUISE DEACTIVATION SWITCH PER RECALL LETTER.
104888 RECALL 98S15, WR PERFORM RECALL 98S15. REMOVE AND REPLACE BRAKE PRESSURE SWITCH.
RECALL PERFORM RECALL PER PROGRAM 98S16, REPL DEAC SWITCH
THE SHORT MAY DISABLE THE SPEED CONTROL SYSTEM OR CAUSE A FUSE TO OPEN. AFTER INSPECTION, IF THE VEHICLE IS INVOLVED THE DEALER WILL
COMPLETE RECALL
RECALL 98S15
RMR DEACTIVATION SWITCH PERFORM RECALL 98S15
REPLACE SWITCH AND CONNECTOR
PERFORMED RECALL PER INSTRUCTIONS
RECALL REPLACE DEACT SWITCH PER RECALL.

PERFORM RECALL
RECALL PERFORMED RECALL 98S15
PERFORMED RECALL 98S15 -- CHECK AND REPLACED CRU
REPLACED SWITCH AND CONNECTOR ROAD TESTED
98S15 98S15 RECALL DO
REPLACED DEACTIVATION SWITCH & CONNECTION FOR PERMANENT REPAIR AS
RECALL COMPLETED
024 REPLACED CRUISE CONTROL DEACTIVATION SWITCH
88188 WPG40 INSTALL SPEED CONTROL SWITCH PER RECALL 98S15
REPLACE SPEED CONTROL SWITCH PER RECALL
RECALL 98S15
SPEED CNTRL DEACTVTN SWITCH RPLCMITPERF SAFETY RECALL 98S15
98S15 98S15
98S15 98S15
SPEED CNTRL DEACTVTN SWITCH RPLCMITPERF SAFETY RECALL 98S15
COMPLETED CAMPAIGN 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.
C INSTALL RECALL KIT
COMPLETED RECALL 98S15
REPL SPEED CONTROL DEACTIVATION SWITCH
RECALL REPLACE DEACTIVATION SWITCH PER RECALL.

DO RECALL 98S15
REPLCE DEACTIVATION SWITCH AS PER RECALL
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.
PERFORMED THE RECALL 98S15
1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
RECALL 98S15
RECALL 98S15 PERFORM RECALL 98S15
33588 W PERFORM RECALL
REPLACE SWITCH PER RECALL
RECALL 98S16 RECALL COMPLETED REPLACE SWITCH
PERFORM RECALL 98S15 CRUISE DEACTIVATION SWITCH

98S15B 0.5

84890 RECALL #98S15 MSPEED CONTROL SWITCH REPLACED SPEED CONTROL SWITCH AS PER RECALL #98S15
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.
RECALL REPLACE DEACT SWITCH PER RECALL
RBR DEACTIVATION SWITCH PER RECALL 98S15
RECALL 98S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 98S15
PERF RECALL 98S15
REPLACE DEACTIVATION SWITCH
PERFORM RECALL 98S15 COMPLETE
RECALL 98S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 98S15
CONNECTOR 98S15
98S15 98S15
131180 98S15 W REPLACED SPEED CONTROL SW 2745

RESISTIVE SHORT. PERFORM RECALL-ONP PER FOMOCO INSTRUCTIONS.
REPLACE DEACTIVATION SWITCH
REPLACE SWITCH AND HARDSHELL

88219 REPLACED CRUISE DEACTIVATION SW- PER RECALL 98S15.

RECALL RECALL
RECALL RECALL
98S15 98S15 RECALL
PERFORMED RECALL 98S15
X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
REPLACE SWITCH 98S15
INSTALL SWITCH AND CONNECTOR PER RECALL
48289 98S15 PERFORMED RECALL 98S15. TEST DROVE AND VERIFIED ALL OPERATING PROPERLY.
PERFORMED RECALL
PERFORMED RECALL PERFORMED RECALL
REPLACED CRUISE CONTROL CABLE PER RECALL 98S15
PER RECALL PER RECALL
PERF RECALL 98S15
PERFORM RECALL 98S15 TEST DRIVE
PERFORM RECALL 98S15 COMPLETE
REPLACED SPEED CONTROL DEACTIVATION SWITCH
COMPLETE RECALL
PERFORM SAFETY RECALL PERFORM SAFETY RECALL
RECALL REPAIR AS PER RECALL
AS PER FORD SPECIFICATIONS PERFORMED RECALL NUMBER 98S15
RECALL CHANGE SPEED CONTROL SWITCH
REPLACED DEACTIVATION SWITCH
PERFORMED RECALL
80832 RECALL 98S15 WF INSTALL SPEED CONTROL SWITCH

PERFORM RECALL
RECALL RECALL
PERFORMED RECALL

RECALL 98S15 REPLACE PLUG AND SWITCH
SPD CTRL DEACTIVATION SW REPLCMTPERF PERFORMED RECALL 98S15
SPEED CNTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 98S15
PERFORMED RECALL 98S15 DISABLED CRUISE CONTROL SYSTEM REMOV ED CONNECOTR AND SWITCHED WIRES TO NEW CONNECTOR REMOVED CUT
98S15 REPLACED SWITCH AND CONNECTOR
PERFORMED RECALL -98S15- SPEED CONTROL DEACTIVATION SWITCHES
INSPECT AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
RECALL #98S15 REPL SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL 98 S 15 FOR CRUISE SWITCH.
87178 REPLACED CRUISE BRAKE SWITCH AS PER RECAL

PERFORM 98S15
118013 RECALL PERFORM 98S15 AND REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR AND BLEED BRAKES. 98S15B-0.5
REPLACED CONNECTOR PER RECALL
PERFORMED THE RECALL 98S15
RECALL 98S15 INSTALLED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL
REPLACED CRUISE CONTROL CABLE PER RECALL 98S15
03019 98S15 RECALL 98S15 REPLACE DEACTIVATOR SWITCH
RECALL 98S15 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL

98S15 RPL SPEED CONTROL DEACTIVATION SWITCH
REPLACED SWITCH PER RECALL
INSTALL SWITCH

RECALL INSTALLED SPEED CONTROL DEATIVATION SWITCH AS PER RECALL
98S15 DEACTIVATION SWITCH 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND BLEED SYSTEM
INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1 —THANK YOU-DARRIN GREEN TEAM—T
15629 RECALL 98S15 WARR REPLACE CRUISE SWITCH

RECALL 98S15

PERFORM RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

85088 79 PERFORM 98S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST
DEFECTIVE SWITCH 98S15 RECALL REPLACE SWITCH

RECALL PERFORMED RECALL 98S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL COMPLETED SPEED CONTROL RECALL. W-C 98S15B .5 ,

PRODUCT MODIFICATION 98S15 - PERFORMED RECALL, REPLACED SPEED CONTROL DEACTIVATION SWI

PERFORMED RECALL 98S15

PERFORM RECALL 98S15

RECALL PERFORMED

SPEED CNTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 98S15

REPLACED SWITCH PER RECALL 98S15

INSTALL SWITCH PER RECALL

RECALL 98S15

PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH

98S15 RECALL

98S15 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-

98S14 RECALL

COMPLETE RECALL

103071 W RECALL 98S15,REPLACE SWITCH AND CONNECTOR 98S15B .5 .1 ADMIN

81032 REPLACED SWITCH
 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
 RECALL 98S15 MI OUT 82960 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL 98S1
 142476 WARRANTY, PERFORMED RECALL 98S15 AS PER RECALL INSTR,
 RECALL 98S15 PERFORM RECALL 98S15
 PERFORMED FACTORY RECALL INSTALLED KIT THANK YO
 1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98S15B .6
 COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
 RECALL 98S15 PERFORMED CRUISE CONTROL DEACTIVATION SWITCH
 REPLACED SPEED CONTROL DEACTIVATION SWITCH MANUAL REVIEW REQUESTED.....PREVIOUS ROW98067 WAS CHARGED BACK PER MY REQUE
 71880 REPLACE DEACTIVATOR SWITCH PER RECALL
 74022 RECALL WF40 REPLACE SPEED CONTROL PRESSURE SWITCH
 REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL
 98S15
 78121 REPLACE SWITCH & CONNECTOR
 PERFORM RECALL PER MANUFACTURER ?
 COMPLETED RECALL
 1 PERFORM RECALL 98S15
 98S15-
 REPLACED DEACTIVATION SWITCH

 1 PERFORM RECALL
 90027 98S15 SPEED CONTROL DEACTIVATION SWITCH RECALL WF4 REMOVED OLD SPEED CONTROL DEACTIVATION SWITCH HARNESS CONNECTOR, AN
 00000 REPLACED DE-ACTIVATION SWITCH AND CONNECTO
 81746 COMPLETED RECALL 98S15. 246
 1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98S15B .6
 PERFORMED RECALL 98S15
 64984 98S15 W/ REPLACED SPEED CONTROL SW 2746
 OWNER NOTIFICATION CRUISE CONTROL RECALL 98S15
 98S15 98S15 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND HARD SHELL C
 RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
 73013 98S15B 0.5 0.5 PERFORM 98S15
 RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTO
 REPLACE SPEED CONTROL DEACTIVATION SWITCH
 REPL CRUISE CONTROL SWITCH ASSY
 RECALL REPLACED SWITCH PER RECALL
 131424 REPLACED DEACTIVATION SWITCH AND CONNECTO
 SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 98S15
 REPLACED SWITCH PER RECALL 98S15
 D RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
 98S15 98S15
 INSTALL SPEED CONTROL DEACTIVATION SWITCH
 RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

 REPLACE SWITCH PER RECALL

 40196 98S15 98S15 .5 .5 REPLACE SENSOR & CONNECTOR
 PERFORMED RECALL 98S15

RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
PERFORMED RECALL
RECALL 98S15. CARRY OUT FACTORY RECALL AS DESCRIBED BY BULLETIN
AS PER RECALL 98S15 RECALL TO INSTALL DEACTIVATION SWITCH
98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
REPL SPEED CONTROL SWITCH AND CON98S15
98S15 RECALL COMPLETE RECALL
REPLACE AS PER RECALL 98S15

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 98S15
98S15 98S15
PERFORMED ECALL REPLACED SWITCH
 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL
95100 RECALLED REPLACED SWITCH AND CONNECTOR PER RECALL
REPLACE VALVE
RECALL 98S15 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH T
75342 R R SPEED SWITCH AND CONNECTOR BLEED REAR BRAKES AND TEST DROVE

RECALL 98S15 REPLACE DEACTIVATION SWITCH
98S15 RECALL COMPLETE RECALL
98S15 RECALL
RECALL REPLACED SWITCH PER RECALL
1 REPLACED DEACTIVATION SWITCH PER RECALL
98S15 98S15
REPLACED CRUISE CABLE PER RECALL98S15
98S15B
REPLACED SWITCH
PERFORMED AS PER RECALL
PERFORMED RECALL 98S15-INSPECTED-REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
COMPLETE RECALL
97699 RECALL 98S15 DONE DEACT SWITCH REPLACE
AS PER RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNE CTOR AS PER THE TECHNICAL INSTRUCTIONS
PERFORMED RECALL
98261 PERFORM 98S15
REPLACE SWITCH.
COMPLETED PER INSTRUCTIONS.
REPLACE SWITCH PER RECALL

1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
AS PER RECALL 98S15 RECALL TO INSTALL DEACTIVATION SWITCH
REPLACE BRAKE KIT PER RECALL
REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER98S15
34807 RECALL 98S15B .50 TECK 162 INSTALL NEW SWITCH AND CONECTOR
REPLACED CRUISE CONTROL SWITCH, BLEED BRAKES AT ALL 4 CORNERS VERIFIED CRUISE CONTROL OPERATION
104211 RECALL 98S15B 0.5 TK 9882 INSTALL DEACT SWITCH PER RECALL
RECALL PERFORM RECALL
PERFORM RECALL INSTALL SWITCH
49848 RECALL WARRANTY REMOVED AND REPLACED DEACTIVATION SWITCH AND PLUG PER RECALL

85394 PERFORMED RECALL 99S15-REPLACED SPEED CONTROL DEACTIVATION SWITCH.

19783 DID RECALL 99S15

COMPLETED RECALL

RECALL PERFORMED

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH

INSTALL DEACTIVATION SWITCH PER 99S15 RECALL

99S15B RPLCD GC DEACTIVATION SWITCH PER RECALL

PERFORMED RECALL 99S15-INSTALL SWITCH

PERFORMED RECALL, REMOVE TAPE AND SECURE THE SPEED CONTROL DIAG REPLACED SPEED CONTROL SWITCH, AND HARD SHELL CONNECTOR

71632 79 PERFORM 99S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST

1 REPLACE TH CRUISE CABLE AS PER RECALL

RECALL 99S15 PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH

REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99S15

99S15

99S15

RECALL 99S15

RECALL 99S15

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99S15.

REPAIR AS PER RECALL

REPAIR AS PER RECALL 99S15.

PERFORMED RECALL

1 REPLACE SWITCH

99S15B

99S15 RECALL COMPLETED

1 RECALL COMPLETE

PERFORMED RECALL AS PER INSTRUCTIONS

99S15 RECALL

PERFORMED RECALL

RECALL

PERFORM RECALL

REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99S15

100181 RECALL SPEED CONTROL DEACTIVATION SWITCH RECHECK OK 7178

130579 PERFORMED RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH

COMPLETED RECALL

RECALL

PERFORMED

99S15

SPEED CONTROL RECALL

SPEED CNTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 99S15

RECALL

REPLACE SWITCH AND CONNECTOR

INSTALL DEACTIVATION SWITCH PER RECALL

REPLACED RECALL CRUISE CONTROL SWITCH

99S15

RECALL PERFORME

REPLACED PARTS PER RECALL

PERFORMED RECALL 99S15-INSTALL SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15

116021 RECALL REPLACED SPEED CONTROL DEACTIVATION SW & CONNECTOR PER RECALL 99S15

77910 99S15B .5 HRS REPLACE SPEED CONTROL DEACTIVATION

AS PER RECALL

99S15 INSPECT AND REPLACED SPEED CONTROL SHUT OFF SWITCH

40028 REPLACED RECALL CRUISE BRAKE SWITCH AND CONN

COMPLETED RECALL

1 PERFORMED RECALL
 INSTALL DEACTIVATION SWITCH
 RECALLED 99S15 PERFORMED
 REPLACED CRUISE DEACT SWITCH
 08M43 RECALL W REPLACE SWITCH AND PLUG GA
 1 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
 REPLACE SPEED CONTROL SWITCH
 99S15 RECALL 99S15 REPAIR AS PER RECALL
 RPL SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONNECTOR, RECK OK
 REPLACE SPEED CONTROL SWITCH PER RECALL 99S15
 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR. ROAD TEST.
 87070 VERIFIED CONNECTOR SQUARE. REMOVED AND REPLACED CONNECTOR AND SWITCH, BLED ALL BRAKES. ROADTESTED OK
 RECALL 99S15 RECALL
 RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
 95119 W RECALL 99S15
 RECALL REPLACE SPEED CONTROL SWITCH PER RECALL 99S15
 PERFORMED RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
 PERFORMED RECALL
 108182 PERF 99S15, INST KIT.
 RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
 RECALL 99S15 INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
 PERFORMED RECALL TO REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN
 FORD SAFETY RECALL REPLACED SPEED DEACTIVATION SWITCH
 99S33 PERFORM RECALL-REPLACE SWITCH
 99S15 RECALL 99S15 RECALL COMPLETE
 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15.
 REPLACE SPEED CONTROL SWITCH PER RECALL
 R&R CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99S15
 RECALL RECALL
 PREFORM RECALL 99S15

 REPLACED DEACTIVATOR SWITCH AND CONNECTOR.
 REPLACED SPEED CONTROL DEACTIVATION SWITCH
 REPLACE DEACTIVATION SWITCH
 OWNER NOTIF PREFORM RECALL
 RECALL 99S15 PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH
 PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99S15 RECALL INSTRUCTIONS
 PERFORMED RECALL 99S15
 115392 TECH 113 99S15B 0.5 REPLACE SWITCH PER FORD
 PERFORMED RECALL 99S15. 5HRS LABOR
 PER RECALL 99S15-REPLACED SPEED CONTROL SWITCH.
 99S15 MO 73108 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL
 RECALL 99S15
 LETTER FROM FORD PERFORM RECALL 99S15
 SHORTED (RECALL 99S15 DONE AT STARKEY FORD, 7-7-99, AT 81,283 MILES, TEST CRUISE CONTROL AND REPLACED SWITCH
 102175 LABOR 99S15B .5***ADMIN .1***M1 .3***REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL*** PLEASE NOTE! SWITCH WAS SIEZED
 78825 99S15 REPLACED SWITCH
 52285 TECH 185 REPLACE DOOR PIECE .0

98S15 98S15
 RECALL 98S15 COMPLETED
 REMOVED AND REPLACED BRAKE PRESSURE SWITCH PER RECALL 98S15
 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
 RECALL 98S15 98S15
 PERFORMED RECALL
 RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACEMENT
 1 PERFORMED RECALL 98S15 DEACTIVATION SWITCH
 1 PERFORM RECALL
 1 REPLACED SPEED CONTROL SWITCH & CONNECTOR
 98S15 RECALL PERFORME
 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
 100679 RECALL 98S15B .50 TECH 162 CRUISE SWITCH RECALL
 REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.
 AS PER RECALL 98S15 RECALL TO INSTALL DEACTIVATION SWITCH
 RMR DEACTIVATION SWITCH PERFORM RECALL 98S15
 PERFORM RECALL 98S15 98S2
 REPLACED BRAKE SWITCH AND CONN. PER RECALL
 RECALL 98S15 COMPLETE RECALL 98S15
 REPLACE SWITCH PER RECALL
 PERFORMED THE RECALL 98S15
 SWITCH 98S15
 REPLACE SWITCH AND INSTALL NEW HARDSHELL AND BLE

 RMR DEACTIVATION SWITCH PERFORM RECALL 98S15
 83385 PERFORM RECALL 98S15 PER FORD.
 THE SHORT MAY DISABLE THE SPEED CONTROL SYSTEM OR CAUSE A FUSE TO OPEN. AFTER INSPECTION, IF THE VEHICLE IS INVOLVED THE DEALER WILL

 REPLACE SPEED CONTROL SWITCH PER RECALL 98S15
 REPLACED SPEED CONTROL SWITCH.
 11348 CHANGED 98S15 CRUISE CONTROL SWITCH

 RECALL REPLACED DEACTIVATION SWITCH PER RECALL
 97627 TECH 113 98S15B 0.5 REPLACE BRAKE SWITCH PER FORD
 INSTALL SWITCH
 98S15B PERFORMED RECAL
 RECALL 98S15 RECALL COMPLETED

 48168 REPLACE SWITCH AS PER RECALL 98S15 98S15B- .5 FOR TECH 158
 INSTALLED DEACTICATION SWITCH.
 98S15 RECALL PERFORME
 REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
 REPLACED SWITCH PER RECALL WPI
 12406 SPEED CONTROL RECALL 98S15B .5 TK 118 OP CODE 30 .5 PERFORMED RECALL 98S15
 PERFORM RECALL
 1 CHECK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
 98S15 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

1 REPLACE SWITCH AND CONNECTOR
PERFORMED RECALL FOR SPEED SWITCH DEACTIVATION AND HARD SHELL CONN

RECALL 99S15 REPLACED DEACTIVATER SWITCH AS PER RECALL 99S15
ORIGINAL COOLING SYSTEM HOSES, RECOMMEND REPLACING HOSES. COOLANT LEVEL IS LOW, RECOMMEND COOLING SYSTEM FLUSH, RECOMMEND
COMPLETED RECALL REPLACED CRUISE DEACTIVATION SWITCH
RECALL PERFORMED

PERFORM RECALL INSTALL DEACTIVATION SWITCH
99S15 - PERFORM RECALL, INSTALL DEACTIVATION SWITCH.
RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
50011 RECALL 99S14 INSTALLED RECALL 99S14
REPLACE SWITCH PER RECALL 99S15, SAME REPAIR VISIT AS R.O.#031209
REPLACE SPEED CONTROL CABLE ASY
PERFORM RECALL 99S15

99S15 99S15
1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
162505 RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH 5 WP
PERFORM RECALL

X 99S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
PERFORMED RECALL 99S15-INSPECTED-REPLACED SPEED CONTROL DEACTIVATION SWITCH

82071 PERFORM RECALL 99S15
RECALL 99S15 INSTALL SWITCH AND PLUG
COMPLETED RECALL 99S15

1 REPLACED CRUISE SWITCH AND CONNECTOR. BLEAD BRAKES.
NA 99S15 REPLACED DEACTIVATION SWITCH
DIAG, INSTALL CRUISE DEACTIVATION SWITCH PER RECA
RNR DEACTIVATION SWITCH PERFORM RECALL 99S15

78321 W REPLACE SWITCH GA
99S15 99S15
REPLACE 99S15B 0.5 ADMIN REMOVE, TAPE AND SECURE THE SPEED CONTROL DEACTIVATION SWITCH
REPLACE SWITCH AND HARD SHELL
1 PERFORM RECALL
78184 RECALL WT DONE
INSTALLED BRAKE REPAIR KIT

RECALL PERFORM RECALL PER PROGRAM 99S15, SPEED DEAC SWITCH

1 PERFORM RECALL
1 REPLACED SWITCH
REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL

99S15 99S15
99S15 99S15
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99S15.
1 INSTALL SPEED CONTROL MODIFICATION AS PER RECALL
99S15 99S15
PERFORMED RECALL 99S15

REPLACE SWITCH AND HARD SHELL PER RECALL

INSTALLED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL
98S15 98S15 REPLACED DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
RECALL 98S15 COMPLETED
OPEN RECALL COMPLETED OPEN RECALL
98S15 PER RECALL

08102 PREFORM RECALL 98S15
RECALL 98S15 98S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
AS PER RECALL

1 REPLACED SWITCH AS PER RECALL 98S15
OPEN RECALL COMPLETED OPEN RECALL
SPEED CNTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 98S15
48102 98S15 INSTALLED NEW CRUISE DEACTIVATION SWITCH AS PER RECALL INST.
INSPECTED SYSTEM, REPAIRED IF NECESSARY PER RECA
X PERFORMED RECALL

PERFORMED RECALL 98S15
PERFORMED RECALL AND REPLACED SPEED CONTROL DEACTIVATION SWITCH.
SWITCH REPL DEACTIVATION SWITCH
RECALL 98S15 RECALL

111119 RECALL REPLACED DEACTIVATION SWITCH PER RECALL T21
REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL
RECALL 98S15 RECALL 98S15
X 98S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
REPLACE SWITCH PER RECALL 98S15
REPLACED THE BRAKE PRESSURE SWITCH PER RECALL 98S15

98S15 98S15 RECALL
RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO
INSTALLED SWITCH PER RECALL
PERFORM RECALL

RECALL PERFORMED RECALL
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECT
PERFORM RECALL

RECALL 98S15 98S15
- MODIFY PER RECALL 98S15
REPLACED SC DEACTIVATION SWITCH 98S15
APPLIED RECALL 98S15
98S15 98S15 RECALL
RECALL RECALL
INSTALL SWITCH AND HARD SHELL
REPLACE CRUISE CONTROL DEACTIVATOR PER RECALL

98801 RECALLED REPLACED SWITCH AND CONNECTOR PER RECALL
RECALL 98S15 REPLACE C-C SW
1 PERFORMED RECALL 98S15
RECALL PERFORMED RECALL 98S15
100227 AS PER RECALL
INSTALL DEACTIVATION SWITCH PER RECALL 98S15.
65444 RECALL 98S15B .5 .5 REPLACED CRUISE CONTROL DE- ACTIVATION SWITCH AS PER RECALL.
RECALL INSTALL SWITCH
30885 REMOVE SPEED CONTROL PRESSURE DEACTIVATION SWITCH AND INSTALL NEW PRESSURE SWITCH 8828
RECALL COMPLETE
98S15 98S15
REPLACED DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED E
PERFORMED RECALL 98S15
RECALL REPLACE DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL
98S15 RECALL
AS PER RECALL 98S15 RECALL TO INSTALL SPEED CONTROL SWITCH
PERFORMED RECALL
40144 RECALL 98S15 REPLACE DEACTIVATOR SWITCH AS PER RECALL
SWITCH 98S15
RECALL 98S15 RECALL COMPLETED REPLACE DEACTIVATION SWITCH
1 PERFORM RECALL PER INSTRUCTIONS
COMPLETED RECALL
PERFORM RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO
4388 DID RECALL 98S15 LABOR OP.— 98S15B— 0.5 HRS. 11-19-99
COMPLETED SPEED DEACTIVATE SWITCH RECALL 98S15.

PERFORMED RECALL AS PER INSTRUCTIONS
RECALL 98S15 COMPLETED
INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL
PERFORM RECALL
90225 PERFORM RECALL AS PER 98S15

REPLACE SWITCH
PERFORMED RECALL REPLACE PRESSURE SWITCH AND CONNECTOR RETEST OK
REPLACED SPEED CONTROL SWITCH.
PERFORMED RECALL
PERFORMED RECALL

PERFORM DEACTIVATION SWITCH RECALL
98S15 RPL SPEED CONTROL DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER 98S15.
REPLACE CRUISE DEACTIVATION SWITCH PER RECALL
RECALL 98S15 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL 98S15

A RECALL DONE
 PERFORMED RECALL 99S15
 RECALL REPLACE SWITCH AND CONNECTOR
 99S15 99S15
 PERFORMED RECALL REPLACED THE SWITCH AND CONNECTOR
 RECALL 99S15 COMPLETED
 99S15 99S15 REPLACED SWITCH AND CONNECTOR
 REPAIRED AS PER RECALL SPEED CONTROL CABLE
 RECALL 99S15 COMPLETED
 RECALL 99S15
 1 PERFORMED RECALL
 RECALL 99S15 COMPLETED
 99S15 RECALL PERFORME
 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
 (99S15) REPLACED SWITCH ADS PER RECALL
 RECALL 99S15 PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH
 RECALL 99S15 REPL SPEED CONTROL SWITCH
 99S15 99S15
 INSPECT FOR RECALL 99S15
 99S15 99S15 REPLACE SWITCH AND INSTALL CONNECTOR
 RECALL REPLACE SWITCH AND CONNECTOR
 PERFORM RECALL

 PERFORM RECALL 99S15
 REPLACE SPEED DEACTIVATION SWITCH PER RECALL
 PERFORMED RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
 COMPLETED RECALL 99S15
 REPLACE DEACTIVATION SWITCH
 REPLACED DEACTIVATION SWITCH PER RECALL

 99S15 99S15 PERFORM RECALL
 99S15 RECALL 99S15 REPAIRED AS PER RECALL
 99S15 R-R SPEED CONTROL SWITCH
 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH
 COMPLETED RECALL 99S15
 111 RECALL SWITCH RECALL COMPLETED
 99S15 99S15
 RECALL 99S15
 REPLACED SWITCH & CONNECTOR 1
 INSTALLED SWITCH PER RECALL
 RECALL R&R SECONDARY SWITCH & HARD SHELL CONNECTOR AS PER 99S15.
 99S20 RECALL W REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR PER RECALL
 99S15 99S15 REPLACED SWITCH
 121877 RECALL 99S15 INSPECTED AND INSTALLE SPEED CONTROL DEACT. SW. AS PER INSTRUCTION IN RECALL 99S15
 PERFORM RECALL
 RECALL PERFORMED RECAL
 REPLACE SWITCH AND CONNECTOR
 RECALL RECALL

REPLACED SWITCH AND CONNECTOR AND BLEED BRAKES PER 99S15
RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

RECALL _____ RECALL _____
99S15 99S15
RECALL DID RECALL
COMPLETED RECALL ON SPEED CONTROL SWITCH
PERFORM RECALL 99S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH

INSTALLED SWITCH PER RECALL
PERFORM RECALL
SHIFTER LOOSE, VARIOUS PERFORMANCE PROBLEMS.
REPLACE HARD SHELL CONNECTOR AND DEACTIVATION SWITCH PER RECALL 99S15
AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

94199 W PERFORM RECALL SWITCH
99125 RECALL 99S15 .6 INSTALL SWITCH KIT
RECALL PERFORMED
99S15 RECALL PERFORME
REPLACE SWITCH AS PER RECALL
1 INSTALLED DEACTIVATION SWITCH
181998 REPLACE SWITCH
PERFORM RECALL 99S15 INSTALL BRAKE KIT PER RECALL 99S15
REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL 1
80350 RECALL WARR REPAIR REPLACE DEACTIVATION SWITCH PER RECALL
70714 PERFORMED 99S16 RECALL

PERFORMED RECALL

024 REPLACED CRUISE DEACTIVATION SWITCH
REPLACE SWITCH
PERFORM RECALL REPLACE SWITCH
RECALL REPLACE SWITCH AND CONNECTOR
REPLACED CRUZ CONTROL DEACTIVATION SWITCH PER RECALL 99S15
REPLACED BRAKE PRESURE SWITCH AND CONNECTOR AS PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
121006 PERFORMED RECALL
RECALL INSTALL CRUISE DEACTIVATION SWITCH & CONNECTOR PER RECALL
PERFORM RECALL INSTALL SWITCH
REPLACE SPEED CONTROL SWITCH
REPLACE DEACTIVATION SWITCH AND CONNECTOR
PERFORMED RECALL 99S15-INSTALL SWITCH
RECALL 99S15 - B - RECALL
99S15 99S15 REPLACED DEACTIVATION SWITCH

RECALL REPLACED SPEED DEACTIVATION SWITCH AS PER RECALL

COMPLETE RECALL AS DIRECTED DEACTIVATION SWITCH

INSTALLED SWITCH PER RECALL

SWITCH 99S15

RECALL 99S15

RECALL COMPLETE

99S15 99S15 PERFORM RECALL

RECALL -- PERFORMED RECALL # 0178

99S15B 0.5, TOTAL HRS 0.5, PERFORMED RECALL 99S15, REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR AS PER RECALL

RECALL R&R SECONDARY BRAKE SWITCH & HARD SHELL CONN,AS PER 99S15.

9548 RECALL RECALL 99S15

REPLACE DEACTIVATION SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH

JS RECALL 99S15 REPLACE SWITCH AND CONNECTOR PER RECALL

SPEED CONTROL DEACTIVATION SWITCH

99S15 RECALL PERFORME

REPLACE SPEED CONTROL DEACTIVATOR AS CAMPAING 99S15

REPLACED DEACTIVATION PER SAFETY RECALL 99S15.

1 PERFORMED RECALL 99S15

REPLACE BRAKE SWITCH AS PER RECALL

90743 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

OTHER REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL

CONNECTOR PER FORD RECALL

PERFORMED RECALL AS PER INSTURCTIONS

82220 MILES OR WRONG IS 82220 AS RECALL

99S15 REPLACE CRUISE CONTROL SWITCH PER RECALL

COMPLETE RECALL 99S15

RECALL COMPLETED

REPLACE DEACTIVATION SWITCH PER RECALL

REPLACED SPEED CONTROL SWITCH AS PER RECALL

117347 RECALL WAR REPLACED CRUISE DE-ACTIVATION SWITCH & CONNECTOR

INSPECT SPEED CONTROL SYSTEM AND COMPLETE LABOR OPERATION ACCORDINGLY COMPLETED SPEED CONTROL DEACTIVATION CAMPAIGN

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99S15.

INSTALLED BRAKE SWITCH AND BLEED BRAKES PER RECAL

99S15B RECALL 99S15B RECALL

COMPLETED RECALL

PERFORMED RECALL REPLACED THE SWITCH AND CONNEC TOR

99S20 PERFORMED RECALL 99S15

49780 99S15 RECALL W PERFORM 99S15 RECALL REPLACE DEACTIVATION SWITCH AND CONNECTOR

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99S15.

COMPLETED RECALL

COMPLETED RECALL 99S15B

REPLACE SWITCH

REPLACE SPEED CONTROL SWITCH PER RECALL 99S15

8919 025 0400

RECALL COMPLETED
SERVICE CAMPAIGNS SERVICE CAMPAIGNS REPLACED DEACTIVATION SWITCHES PER RECALL 99S15
PERFORM RECALL 99S15 SPEED CONTROL SWITCH

RECALL 99S15 PERFORM RECALL

99S15 RECALL

84584 WAR RECALL REPLA SWITCH AND CONNECTOR RAT

RECALL REPLACE CRUISE CABLE

RECALL 99S15 REPLACE C-C SW

1 PERFORMED RECALL 99S15

PERFORM RECALL

INSTALL CRUISE CONTROL DEACTIVATION SWITCH PER RECALL

RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15

44843 REPLACED SWITCH PER RECALL 99S15

103738 79 PERFORM 99S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST

REPLACE SPEED CONTROL SWITCH

1 COMPLETED RECALL

INSTALLED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL

99S33 RECALL PERFORMED RECALL 99S15

AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

SHORT MAY DIASABLE SPEED CONTROL OR CAUSE BRAKE LIGHT FUSE TO OPEN DISCONNECT CONNECTOR FROM CRUISE DEACTIVATION SWITCH & PRI

PERFORMED RECALL

1 REPL SWITCH

PERFORMED 99S15; INSTALLED UPDATED CRUISE DEACT SWITCH & CONNECTOR

PERFORM RECALL AS DESCRIBED

RECALL 99S15 REPLACED SWITCH NO CONNECTOR AS PER RECALL 99S15

112879 RECALL 99S15 REPLACE SPEED CONTROL SWITCH PER RECALL 99S15

RECALL 99S15B .1

99S15 RECALL REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL REPLACE DEACTIVATION SWITCH AND CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

DO 99S15 PUT IN NEW SW AND WIRE COND

REPAIR AS PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH

203589 99S15B .5 .5 RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

RECALL 99S15 RECALL 99S15

1 REPLACE DEACTIVATION SWITCH AS PER RECALL 99S

99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH

DEACTIVATION SWITCH 99S15

RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15

REPLACED DEACTIVATION SWITCH PER RECALL LABOR 99S15 0.5, ADMIN 0.1

RECALL 99S15

104534 WARR RECALL 99S15 REPLACE SPEED CONTROL SWITCH AND CONNECTOR JH

REPLACED SWITCH AND CONNECTOR

RECALL RECALL

80237 RECALL 98S15 DONE DEACT SWITCH
REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL
98S15 SPEED CONTROL DEACTIVATION REPLACED DEACTIVATION SWITCH PER RECALL 98S15
INSTALLED SWITCH AS PER RECALL 98S15.
TO PERFORM RECALL RECALL
REPAIR AS PER RECALL 98S15.
REPLACED SPEED CONTROL SWITCH
REPLACED SWITCH PER RECALL 98S15
SPEED CONT REPL SWITCH
PERFORMED RECALL 98S15-INSPECTED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH
COMPLETED RECALL ON CRUISE CONTROL 98S15
SPD CTRL DEACTIVATION SWITCH REPLPERFORMED RECALL 98S15
98S15 RECALL REPLACED SWITCH
88074 RECALL W PERFORM RECALL 98S15 REPLACE SWITCH AND CONNECTOR RETEST RAT
REPLACED SC DEACTIVATION SWITCH 98S15
RECALLR EPAIR

SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SOEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
PERFORM RECALL 98S15 - CHECK AND REPLACED DEACTIVATION SWITCH AND RECHECK OK
REPLACED BRAKE SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
PERFORM RECALL 98S15
REPL SPEED CONTROL SWITCH
98788 RECALL (#17)-REPLACE SWITCH & HARD SHELL, BLEED BRAKES AS PER RECALL.
98S15 REPLACED BRAKE SWITCH PER RECALL
1 COMPLETED RECALL
108838 98S15 42.5 REPLACED SWITCH ROAD TEST
AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

72391 REPLACE SWITCH AS PER RECALL,
INSTALL SWITCH

RECALL 98S15 INSTALL NEW SWITCH PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
RPL SPEED CONTROL SWITCH 98S15 RECALL
127418 98S15B 0.5 HRS. SPEED CONTROL RECALL

188082 DID 98S15 REPLACED SWITCH
REPLACED BRAKE SWITCH AND CONN. PER RECALL 98S15

REPLACE SWITCH AND CONNECTOR
RECALL 98S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
RPL CRUISE DEACTIVATION SWITCH
RECALL REPLACE CRUISE SWITCH PER RECALL.

88411 RECALL SPEED CONTROL DEACTIVATION SWITCH 98S15B .5 .5 TK 118 PERFORMED RECALL OP CODE 42
RECALL SPEED CONTROL DEACTIVATION SWITCH

1 REPLACE SPEED CONTROL SWITCH PER 98S15

RECALL 98S15 PERFORMED RECALL 98S15
REPLACED SC DEACTIVATION SWITCH 98S15
REPLACE DEACTIVATE SW AND CONNECTOR AS PER RECAL
98S15 RECALL 98S15 RECALL PERFORMED
PERFORMED RECALL AS INSTRUCTIONS

98S15 RECALL 98S15 RECALL PERFORMED
83634 RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH 5 WP
REPLACE SPEED CONTROL DEACTIVATION SWITCH F
REPLACE SPEED CONTROL DEACTIVATION SWITCH
REPLACED CRUZ CONTROL DEACTIVATION SWITCH PER RECALL 98S15
PERFORM RECALL 98S15
SPEED CONTROL DEACTIVATION SW PERFORM 98S15
AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS
98S15 98S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH
98S15 98S15
85174 RECALL 98S15B JHRL PERFORM RECALL
B 98S15
98S15 REPLACED SPEED CONTROL SWITCH
PERFORM RECALL
REPLACE DEACTIVATOR SWITCH AND CONNECTOR
REPL SPEED CONTROL SWITCH 98S15
RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

44784 PERFORM RECALL 98S15 SPEED DEACTIVATION SWITCH
REPLACED DEACTIVATION SWITCH
RECALL REPLACE CRUISE SWITCH
PERFORMED RECALL 98S15
88886 PERFORM RECALL
98S15 RECALL
PERFORMED RECALL
COMPLETED RECALL 98S15
292 REPLACED SPEED CONTROL DEACTIVATION SWITCH RECALL 98S15

PERFORM 98S15 RECALL
RECALL R AND R DEACTIVATION SWITCH AS PER RECAL
98S15 98S15 REPLACE CRUISE SWITCH PER RECALL CAMP
REPLACED DEACT SWITCH PER RECALL
1 REMOVE AND REPLACE CRUISE CONTROL SWITCH
187871 RECALL WARR REPLACE DEACTIVATOR SWITCH PER RECALL
RECALL REPL DEACTIVATION SWITCH

RECALL PERFORMED RECAL
78427 PERFORMED RECALL 98S15

PERFORMED RECALL 99S15

PERFORM RECALL

99716 RECALL #99S15 PERFORM RECALL #99S15 REPLACING BRAKE PRESSURE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 'S WP

124936 REPLACE DEACTIVATION SWITCH

99899 R R DEACTIVATOR SWITCH PER RECALL

99S16 RECALL INSTALL DEACTIVATION SWITCH

99600 99S15B 0.5 HRS REPLACE SPEED CONTROL DEACTIVATION SWITCH.

99S15 SPEED CONTROL RECALL 99S15

92542 RECALL 99S15 SPEED CONTROL SWITCH RECALL 99S15

PERFORM RECALL #99S15 REPLACE DEACTIVATION SWITCH

97434 PERFORM SPEED SHUT OFF RECALL

REPLACED SWITCH PER RECALL INSTRUCTIONS.

99S16 99S15 REPLACE SPEED CONTROL SWITCH

INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1

RECALL REPLACED CRUISE DEACTIVATION SWITCH PER RECALL

PERFORMED RECALL 99S16-INSTALL SWITCH

REPLACE SPEED CONTROL PER RECALL

RECALL #99S15; PERFORM RECALL #99S15; REPL BRK-PRESS. SWITCH;

99S15

RECALL 99S15 REPLACED SWITCH

PERFORM RECALL 99S15

REPLACE PRESSUR SENSOR

RECALL REPAIR AS PER RECALL 99S15 REPLACE DEACTIVATION SWITCH

70656 PERFORM RECALL 99S15 REPLACE DEACTIVATOR SWITCH AND HARD SHELL CONNECTOR

RECALL COMPLETED SWITCH REPLACEMENT PER RECALL

REPLACE SWITCH AND CONNECTOR.

191295 99S15 99S16 .5 .5 REPLACE SWITCH & CONNECTOR

RECALL 99S15

COMPLETED RECALL

RECALL REPL SW

78881 REPLACE SPEED CONTROL DEACTIVATION

SAFETY RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL 99S15

1 COMPLETED REQUESTED RECALL AS PER FORD INSTRUCTIONS

48150 TECH 158 PERFORMED RECALL 99S15 99S15B(0.5

99S16 RECALL INSTALL SWITCH PER RECALL

PERFORM RECALL 99S15

99S15 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH

87004 COMPLETED 99S15 CRUISE SWITCH

2002-0225 99S15

REPLACE SPEED CONTROL SWITCH
COMPL: SPEED CONTROL DEACTIVATION
REPLACED CRUISE SWITCH

CAUSE: 99S15

CORRE: PERFORM RECALL

99S15 RECALL PERFORM 99S15 RECALL AS PER INSTRUCTIONS
PERFORMED RECALL 99S15 SERVICED WITH PRIDE BY SHAWN TUCKER
05168 W REPLACED SPEED CONTROL DEACTIVATION SWITCH
RECALL 99S15- REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
RECALL 99S15 RECALL PERFORME
99S15 RECALL 99S15 RECALL COMPLETE
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
PERFORM RECALL 99S15
PERFORM RECALL

LETTER FROM FORD PERFORM RECALL #06M
99S15 RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
XXXXXXXXXXXXXXXXXXXXXXXXXXXX
UNKNOWN INSTALL CRUISE SWITCH AND CONNECTOR PER 99S15
COMPL: PERFORM RECALL 99S15.

CAUSE: REPLACE SPEED CONTROL DEACTIVATION SWITCH

CORRE: 99S15 RECALL I

PERFORM RECALL
PER FORD RECALL NOTICE. FORD RECALL COMPLETE PER INSTRUCTIONS.
1 REPLACED SPEED CONTROL DEACTIVATION SWITCH.
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99S15.
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED
1 PERFORMED RECALL 99S15.
133774 DID RECALL 99S15 LABOR OP.— 99S168— 0.5 HRS. 11-24-99
99S15 REPLACED CONNECTOR AND SWITCH
REPLACE DEACTIVATION SWITCH AND CONNEN.
120611 RECALL 99S15 REPLACED CRUISE DEACTIVATION SWITCH
99S15 B PERFORMED RECALL 1 E
99S15 RECALL
CONNECTOR 99S15
1 RECALL 99S15
REPLACED CRUISE CONTROL DEACTIVATION SWITCH RECL
RECALL 99S15 COMPLETED
MAINTENANCE 99S15 RECALL COMPLETE

RECALL 99S15 PERFORMED RECALL 99S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR PER- RECALL
PERFORMED RECALL PER FORD SPECS
COMPLETED 99S15
REPLACE AS PER RECALL 99S15
44607 RECAL REPLAC SWITCH AND HARNESS HARDSHELL, 6369, 2843

99S15 B .5 ADMIN .1 PERFORMED RECALL ACCORDING TO FACTORY GUIDELINES
07486 PERFORMED THE SPEED CONTROL RECALL FOR THE VEH
RECALL 99S15
INSTALLED BRAKE SWITCH PER RECALL

RECALL 98S15 COMPLETED RECALL 98S16
38844 98S15 REPLACED SW CONNECTOR FOR SW.
114386 .5 HOURS. INSTALL NEW SWITCH PER RECALL OP 98S15B. ANTILOCK LIGHT CAME ON BEFORE REPAIRS.
77762 WARRANTY RECALL 98S15 INSTALL RECALL SWITCH AND WIRE PLUG
REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL
98S15 RECALL 98S15 RECALL COMPLETE
98S15 98S15

1 PER RECALL REPLACE SWITCH
REPLACE DEACTIVATION SWITCH AS PER RECALL
F RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
RECALL 98S15 INSTALL SPEED CONTROL DEACTIVATION SWITCH
REPLACE SWITCH PER RECALL ADMIN.1
RECALL COMPLETE

INSTALLED SWITCH PER RECALL

RECALL COMPLETE
71882 RECALL 98S15B 0.5+ ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
RECALL REPAIR PER RECA
RECALL COMPLETE
RECALL 98S15 PERFORM RECALL 98S15
OPEN RECALL PERFORM RECALL
98S15B 98S15B-REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
RECALL 98S15 98S15
COMPLETE RECALL 98S15

REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
PERFORM RECALL INSTALL SWITCH
36835 PERFORMED RECALL 98S15
RECALL COMPLETE
RECALL PERFORM RECALL 98S15

PERFORMED RECALL
PERFORM 98S15. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR. B.5
7 PER RECALL 98S15. SPEED CONTROL SWITCH REPL.
RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL.
RECALL 98S15 COMPLETED
PERFORM 98S15 RECALL
98S15B 0.5. PERFORMED RECALL PER PROGRAM.
RECALL 98S15 PERFORMED AS PER RECALL.
PERFORM RECALL
61567 RECALL 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL INSTRUCTIONS
RECALL COMPLETE, REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL.
98S15 98S15 RECALL COMPLETED

REPLACED DEACTIVATION SWITCH PER RECALL
65766 RECALL 98S15B .5, ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL
PERFORM RECALL INSTALL SWITCH
RECALL ON CRUISE SWITCH
PERFORMED RECALL
INSTALLED CONTROL TO COMPLETE RECALL
98S15 RECALL
98S15 98S15
RECALL WAS PERFORMED AS PER SPECS.1714

PERFORM RECALL
101073 PERFORM 98S15 RECALL
98S15 REPLACE CRUISE CONTROL SWITCH PER RECALL
INSPECT SPEED CONTROL SYSTEM AND COMPLETE LABOR OPERATION ACCORDINGLY COMPLETED SPEED CONTROL DEACTIVATION CAMPAIGN
COMPL: RECALL 98S15 CAUSE: SPEED CONTROL DEACTIVATION SWITCH CORE: PERFORM RECALL
RECALL REPLACED BRAKE SWITCH
COMPLETED RECALL PER INSTRUCTIONS
98S15 98S15
RECALL 98S15 COMPLETED
98S15 RECALL PERFORME
128824 RECALL W PERFORM RECALL 98S15 REPLACE SWITCH AND CONNECT RAT.
REPLACED SPEED CONTROL SENSOR PER RECALL
1 REPLACE DEACTIVATION SWITCH PER RECALL
34886 CC 42 98S15B 0.5- ADMIN 0.1 REPLACED SWITCH AND CONNECTOR
REPL SPD CNTRL DEACTIVATION SW
RECOMMEND TRANSMISSION FLUID AND FILTER SERVICE - HAS BEEN NEARLY 40,000 MILES SINCE LAST CHANGE (PER THIS SHOP SERVICE RECORD); FU
184775 RECALL 98S15B .5, ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL
FORD CAMPAIGN REPLACE PRESSURE SWITCH PER RECALL 98S15.
RECALL REPLACED DEACTIVATION SWITCH.
1 REPLACED SWITCH AND CONN AS PER RECALL.

RECALL 98S15 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL
RECALL SPEED CONTROL SWITCH PERFORM RECALL 98S15, REPL SPEED CONTROL SWITCH & CONNECTOR
PERFORMED RECALL
DEACTIVATION SWITCH 98S15
RECALL RECALL
RECALL 98S15 COMPLETED RECALL 98S15
REPLACE SPEED CONTROL CABLE PER RECALL
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.
106685 RECALL 98S15B 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
111030 SPEED CONTROL RECALL 98S15B 0.5 0.5 REPLACED SPEED CONTROL DEACTIVATION SWITCH
INSTALLED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
REPLACED SWITCH
PERFORMED 98S15 RECALL AS PER FORD SPECIFICATION
REPLACE PRESSURE SWITCH AND CONNECTOR PER RECALL
INTERIM REPAIR REMOVED TAPE SECURE THE SPEED CONTROL DEACTIVATION SWITCH LABOR OP 98S15E 0.3 HRS PERMANENT REPAIR REPLAC

REPLACED CRUISE SWITCH

RECALL COMPLETE

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH ASSEMBLY. CHECK NORMAL OPERATION.

REPLACE SWITCH PER RECALL 99S15 A00

99S15 CC DE ACTIVATION SW RECALL 99S15 CC DE ACTIVATION SW RECALL

99S15 REPLACE CRUISE CONTROL SWITCH PER RECALL

REPLACED SPEED CONTROL CABLE PER 99S15

70123 PERFORM 99S15 RECALL, REPLACE SWITCHCPN TIME.....

1 PERFORMED RECALL 99S15-REPLACE DEACTIVATION SWITCH

RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH

COMPLETED RECALL 99S15.

RECALL 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

98734 99S15 COMPLETED

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15

SERVICED AS PER RECALL

70041 RECALL 99S15 INSTALLED NEW PRESSURE SWITCH AND CONNECTOR

RECALL 99S15

PERFORM RECALL

REPL SPEED DEACTIVATION SWITCH 99S15

PERFORM RECALL 99S15

103970 REPLACED RECALL 99S15

PERFORM RECALL REPL DEACTIVATION SWITCH

PERFORM RECALL 99S15

REPLACE SPEED CONTROL SWITCH

RECALL DEACTIVATION SWITCH REPLACE DEACTIVATION SWITCH

1 INSTALLED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL

REPLACE SWITCH AS PER RECALL

INSTALLED KIT 99S15 RECALL PREFORMED

99S15 RECALL

REPLACED BRAKE DEACTIVATION SWITCH

RECALL 99S15 RECALL

REPLACED SWITCH & CONNECTOR PER RECALL

1 COMPLETED RECALL 99S15

COMPLETED RECALL 99S15

REPLACED SPEED CONTROL AND CONNECTOR PER RECALL

33390 RECALL REPLACE CRUISE DEACTIVATION SWITCH RECALL 99S15 BLEED BRAKE SYSTEM

REPLACED SWITCH AND CONNECTOR PER RECALL 99S15

INSTALL SWITCH PER RECALL

INSTALL DEACTIVATION SWITCH

INSTALL SWITCH

INSTALL DEACTIVATION SWITCH

X

99S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

REPL PRESSURE SWITCH & CONECTOR. DECLINED HOOD EMBLEM REPLACEMENT.

RECALL 98S15 RECALL

PERFORMED RECALL

1 INSTALLED SWITCH AND CONNECTOR

98S15 98S15

PERFORMED RECALL

REPLACED SPEED DEACTIVATION SWITCH

PERFORMED RECALL 98S15

RECALL 98S15

98S15B 0.5

98S15 98S15

DO RECALL 98S15

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.

98S00 REPLACED SPEED CONTROL SWITCH PER RECALL

PERFORMED RECALL

PERFORMED RECAL

REPLACED SWITCH & CONNECTOR

PERFORMED RECALL 98S15

PERFORM SAFETY RECALL

REPLACE SWITCH PER RECALL

RECALL

PERFORMED RECAL

101800 RECALL .5 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15B

98S15 98S15 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

98S15 0.5 REPLACED SWITCH AND CONNECTOR

98S15 98S15

132727 98S15 REPLACE SWITCH AND HARD SHELL CONNECTOR

127744 PERFORM RECALL INSTALL BRAKE FLUID PRESSURE SENSOR AS PER RECA

PERFORMED RECALL 98S15-INSTALL SWITCH

48740 RECALL SWITCH RECALL COMPLETED

RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL

PERFORMED RECALL

REPLACE SWITCH AND CONNECTOR PER RECALL

X REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTO

RECALL 98S15 COMPLETED

INSTALLED DEACTIVATION SWITCH PER RECALL

1 COMPLETED PER FORD INSTRUCTIONS

RECALL 98S15

RECALL 98S15

108358 RECALL 98S15B PERFORMED RECALL 98S15B .5HRS. ADM.,1

OPEN RECALL

PERFORM RECALL

RECALL 98S15 COMPLETED

REPLACED SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL AS PER INSTRUCTIONS

PERFORMED RECALL 99 S 15

88414 RECALL 99S15

RECALL 99S15 INSTALLED SWITCH

- MODIFY PER RECALL 99S15

INSTALL SENDER AND CONNECTOR PER RECALL 99S15

CHECKED AND FOUND VEH NEEDED CRUISE DEACT SWITCH PER RECALL. REPLACED SWITCH AND CONECTOR PER RECAL
SPEED CONT INST SWITCH

99S15 DEATVATION SWITCH-CONN 99S15

PERFORMED RECALL

INSTALLED SWITCH.

REPLACED DEACTIVATION SWITCH AND CONNECTOR.

REPAIR AS PER RECALL 99S15.

74000 REPL DEACTIVATION SW. SPEED CONTROL FUNCTION OK.

REPL SPD CNTRL DEACTIVATION SW

RECALL 99S15 DEACTIVATION SWITCH

99S15 PER RECALL

REPAIR PER 99S15 RECALL

1 PERFORMED RECALL

PERFORM RECALL REPLACE SWITCH AND HARD SHELL

PERFORM RECALL INSTALL SWITCH

REPLACED CRUISE CONTROL SWITCH AND CONNECTOR PER RECALL 99S15B .50

82860 79 PERFORM 99S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST

REPL SPEED DEACTIVATION SWITCH 99S15

1 TECH INSTALL CRUISE DEACTIVATION SWITCH AS PER RECALL 99S15

INSTALLED NEW SWITCH

RECALL 99S15 - COMPLET

PERFORMED RECALL 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

INSTALL NEW SWITCH

PERFORMED RECALL 99S15. REPLACED DEACTIVATION SWITCH.

PERFORM RECALL

PERFORMED RECALL 99S15

PERFORM RECALL 99S15 T124

89781 99S15 99S15B .5 .5 REPLACED BRAKE SWITCH AND CONNECTOR

RECALL 99S15

PERFORMED RECALL 99S15

RECALL 99S15 PERFORMED AS PER RECALL

L RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHEEL CONNECTOR

RECALL INSTALLED BRAKE DEACTIVATION SWITCH AS PER RECALL

PERFORMED 99S15 RECALL

MAY CAUSE A SHORT INSTALL THE SPEED CONTROL DEATVATION SWITCH

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
RECALL PERFORM RECALL 99S15
REPLACE SPEED CONTROL CABLE PER RECALL

REPL SPEED DEACTIVATION SWITCH 99S15

INSTALL DEACTIVATION SWITCH KIT PER RECALL
122428 PERFORMED RECALL 99S15 DEACTIVATION SWIT
CAMPAIGN COMPLETED
99S20 PERFORMED RECALL 99S15
1 COMPLETE RECALL
REPLACE CRUISE DEACTIVATION SWITCH PER RECALL 99S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

RECALL 99S15 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO
REPLACE CRUISE DEACTIVATION SWITCH
76757 REPLACE SPEED CONTROL DEACTIVATION SWITCH. REC'D CK OK 7178
99S15-DEACTIVATION SWITCH 99S15-DEACTIVATION SWITCH
SPEED DEACTIVATION SWITCH MOD. 99S15 RECALL REPLACED HARD SHELL CONNECTOR AND REPLACED SPEED CONTROL DEACTIVATION SWITCH
80535 INSTALLED KIT PER RECALL
PERFORMED RECALL 99S15. REPLACED SPEED CONTROL DEACTIVATION SWITCH.
PERFORMED RECALL
PERFORM RECALL 99S15
AE PERFORMED RECALL 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH
127512 RECALL .5 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15B
REPLACE THE DEACTIVATION SWITCH PER RECALL 99S15 99S15B .50
99S15 PERFORMED RECALL, REPLACED SPEED CONTROL SWITCH
REPAIR AS PER RECALL

RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
SPD CTRL DEACTIVATION SW REPLACED PERFORMED RECALL 99S15

MISC PERFORMED RECALL

SPEED CONTROL DEACTIVE SWITCH
99S15 RECALL 99S15 REPAIRED AS PER RECALL
FOUND BRAKE FLUID LEAK FROM CRUISE DEACTIVATION SWITCH. THREADS STRIPPED.

PERFORMED RECALL
1 REMOVE AND REPLACE SPEED CONTROL DEACTIVATION SWITCH UNDER RECALL 99S15
PERFORM RECALL 99S15
RECALL 99S15
OPEN RECALL PERFORM RECALL
99S15 99S15 RECALL
DONE AS PER INSTRUCTIONS
RECALL PERFORM RECALL
RECALL 99S15 COMPLETE RECALL 99S15

REPLACED SPEED DEACTIVATOR SWITCH
 REPLACED THE SWITCH PER RECALL 98S15
 78774 RECALL DID RECALL REPLACED SWITCH WIRES TECH 10
 RECALL COMPLETE, INSTALLED DEACTIVATION SWITCH.
 REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR
 RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR
 RECALL 98S15 INSTALLED BRAKE SWITCH
 83518 RECALL WARR. REPLACE SWITCH PER RECALL 98S15.
 SPD CTRL DEACTIVATION SW REPLCMT PERFORMED RECALL 98S15
 PERFORM RECALL
 PERFORMED RECALL 98S15-INSPECTED AND INSTALLED SPEED CONTROL DEACTIVATION SWITCH
 RECALL 98S15 CRUISE CONTROL DEACT PERFORM RECALL, REPLACE DEACTIVATION SWITCH
 98S73 REPLACED CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL
 128451 98S15 RECALL PERFORM 98S15 RECALL AS PER INSTRUCTIONS
 REPLACE SWITCH PER RECALL, ADMIN 1
 RECALL 98S15
 RECALL 98S15
 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
 RECALL 98S15 RECALL PERFORME
 98S15 CC DE ACTIVATION SW RECALL 98S15 CC DE ACTIVATION SW RECALL
 RECALL 98S15 RECALL PERFORME
 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98S15
 D RC 98S15 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE.
 RECALL 98S15. REPLACE SPEED CONTROL DEACTIVATOR SWITCH AS PER RECALL 98S15.
 PERFORMED RECALL 98S15
 RECALL 98S15 INSTALLED CRUISE SWITCH
 PERFORMED RECALL 98S15
 78730 RECALL 98S15 REPLACE CRUISE CONTROL SWITCH AND PLUG
 COMPLETED RECALL 98S15
 REPLACE DEACTIVATION SWITCH
 RECALL PERFORM RECALL 98S15
 INSTALL SWITCH AND CONNECTOR
 58805 RECALL 98S15B 0.5, ADMIN D.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
 98S72 RECALL REPLACE DEACTIVATION SWITCH PER RECALL (WP) 23
 48071 RECALL 98S15B 0.5, ADMIN D.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
 REEPLACE BRAKE DEACTIVATION SW PER RECALL 98S15
 RECALL SPEED CONTROL DEACT SW REPLACE DEACTIVATION SWITCH
 PERFORM RECALL 98S15
 1 PERFORMED LATEST REPAIR PROCESS PERTAINING TO 98S15 PER RECALL INSTRUCTIONS
 REPLACED DEACTIVATION SWTH FOR SPEED CONTROL PER RECALL INSTRUCTIONS
 RECALL 98S15
 98S15 RPL SPEED CONTROL DEACTIVATION SWITCH
 33388 RECALL 98S15 REPLACED SWITCH
 81854 REPLACED CRUISE CONTROL DE-ACTIVATION SWITCH PER RECALL 98S15
 RECALL 98S15 98S15 SPEED CONTROL.....
 98S15 RPL SPEED CONTROL DEACTIVATION SWITCH
 COMPLETED RECALL ON SPEED CONTROL SWITCH
 PREPROBND RECALL

118364 R AND R SWITCH AND CONNECTOR FOR RECALL
 26277 98S15 RECALL 98S15 REPLACE DEACTIVATOR SWITCH
 RECALL REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 98S15
 REPL BRK PRESSURE SWITCH
 98S15 98S15 RECALL
 98S15 RECALL PERFORMED 98S15 RECALL PERFORMED
 RECALLED 98S15 PERFORMED
 PERFORMED RECALL 98S15
 INSTALL SWITCH
 101008 TECH 342-CA-RECALL-CA9852 PERFORM RECALL 98S15 SPEED CONTROL DEACTIVATION SWITCH
 98S15 98S15
 44082 98S15 WARR REPLACED SWITCH AND CONN
 110069 RECALL WR RECALL 98S15
 98S15 98S15
 60303 RECALL 98S15 INSTALL NEW SWITCH AND CONNECTOR
 74783 RECALL 98S15 INSTALL NEW SWITCH AND CONNECTOR
 REPLACED DEACTIVATION SWITCH
 RECALL 98S15
 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
 98S15 COMPLETED
 CUSTOMER REQUESTS PERFORM RECALL PERFORMED RECA
 114836 RECALL WA REPLACE DEACTIVATOR SWITCH AND CONNECTOR
 REPLACE CRUISE DEACTIVATION SWITCH ASSY. PER RECALL 98S15.
 TEST AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH
 PERFORMED RECALL 98S15
 00 98S15E
 1 REMOVE AND REPLACE SPEED CONTROL DEACTIVATION SWITCH UNDER RECALL 98S15
 RECALL 98S15 - B - RECALL
 98S15 REPLACED SWITCH AND CONNECTOR
 33301 W REPLACE SWITCH RAT
 PERFORMED RECALL
 98S15 PERFORM CRUISE RECALL
 PER RECALL PERFORM RECALL
 SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED E
 44330 RECALL 98S15 INSTALL NEW SWITCH AND CONNECTOR

DDOME = DEALER SELF APPROVAL

8777 PERFORMED 98S15 RECALL
 SAFETY RECALL 98S15 INSPECT AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
 COMPLETED RECALL PER INSTRUCTIONS
 REPLACE SPEED CABLE PER RECALL 2 OF 2 ROS.
 REPLACED DEACTIVATION SWITCH PER RECALL INST. INCLUDING CONN.
 REPLACED BRAKE SWITCH
 22008 CHANGED OUT THE SPEED CONTROL DEACTIVATION SWITCH PER 98S15
 RECALL 98S15 REPLACED CRUISE CONTROL DISCONNECTION SWITCH PER RECALL
 COMPL: RECALL 98S15, CAUSE: SPEED CONTROL DEACTIVATION SWITCH CORRE: PERFORM RECALL
 92301 INSTALLED PARTS PER RECALL

APPROX TIME: 0.5 HR

PER RECALL REPLACE DEAC SWITCH
X 99S15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
REPLACE DEACTIVATION SWITCH AS PER RECALL
PERFORM RECALL
REPLACE DEACTIVATION SWITCH PERFORM RECALL 99S15
87501 99S15B 0.5 REPLACED CONNECTOR AND SWITCH PER RECALL

REPLACED THE SWITCH PER RECALL INSTRUCTIONS
INSTALLED KIT PER RECALL
PERFORMED RECALL 99S15
PERFORMED RECALL
OPEN RECALL PERFORM SERVICE REPAIR PER RECALL MESSAGE

RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL
REPLACE SPEED CONTROL SWITCH
99S15B 0.5

RECALL REPL. SPEED CONTROL DEACT. SWITCH
152843 RECALL 99S15 REPLACED RECALL 99S15
182227 RECALL .4 B REPLACED SWITCH
REPLACED BACK PRESSURE SWITCH PER RECALL 99S15
SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED E
REPLACE SPEED CONTROL DISABLE SWITCH PER RECALL
INSPECTED AND INSTALLED BRAKE REPAIRS KIT AS NEEDED FOR RECALL REPAIRS

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
MISC PERFORMED RECALL
PERFORMED RECALL 99S15. REPLACED THE DEACTIVATION SWITCH.
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99S15
WAR REPLACED CRUISE CONTROL DEACTIVATOR SWITCH PER RECALL
PERFORM RECALL
RECALL COMPLETE
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
99S15 SPEED CONTROL DEACTIVATION
PERFORMED RECALL 99S15
INSPECT AND INSTALLED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
COMPLETED RECALL 99S15, DEACTIVATION SWITCH
99S15 99S15
1 PERFORM CAMPAIGN PER FORDS SPECIFICATIONS AND INSTRUCTIONS 99S15B .5

PERFORM RECALL 99S15
RECALL PERFORMED

PERFORM RECALL REPLACE SWT
1 REPLACED SWITCH AND CONNECTOR
RECALL REPLACED SWITCH
RECALL 98S15 REPLACED DEACTIVATION SWITCH
REPLACED PRESSURE SWITCH AND CONNECTOR AS PER RECALL
20197 98S15B .5 REPLACE SPEED CONTROL SW. AS PER RECALL
REPLACED DEACTIVATION PER SAFETY RECALL 98S15.
REPL SPD CNTRL DEACTIVATION SW
131738 RECALL WARR REPLACE DEACTIVATOR SWITCH AND CONNECTOR
38804 RECALL WARR INSTALL RECALL SWITCH
98S15 RECALL
DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER R ECALL 98S15.
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 98S15.
1 COMPLETED RECALL
RECALL REPAIR PER RECA

98S15 98S15 PERFORM RECALL
DID RECALL DEACTIVATION SW COMPLETED.

REPLACE SPEED CONTROL SWITCH

CHECKED OASIS. INSTALLED SWITCH PER RECALL
RECALL 98S15 REPLACED DEACTIVATOR SWITCH AS PER RECALL 98S15
REPLACE SWITCH AND CONNECTOR PER RECALL
1 PERFORMED RECALL
REPLACED DISENGAGE SWITCH PER RECALL 98S15.
SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED E
PERFORM RECALL 98S15
PERFORM RECALL

PERFORM RECALL 98S15
1 PERFORM RECALL
98712 REPAIR PER 98S15B 0.5
RECALL PERFORMED
PERFORMED RECALL 98S15
COMPLETED RECALL
RECALL COMPLETED.
CRUISE SWITCH RECALL
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98S15.
98S15 98S15 REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR
PERFORMED RECALL
REPAIR AS PER RECALL 98S15.
REPLACED PRESSURE SWITCH AND CONNECTOR AS PER RECALL

98S15 98S15
 REPLACED DEACTIVATION SWITCH PER RECALL 98S15.
 RECAL REPLACED CRUISE CONTROL DEACTIVATION SWITCH
 PERFORMED 98S15 RECALL REPLACED SWITCH AND CONN ECTOR AS PER RECALL
 PERFORMED RECALL 98S15
 COMPLETED RECALL 98S15 INSTALLED KIT FOR SPEED CONTROL
 REPLACE CRUISE CONTROL DEACTIVATOR SWITCH AND WIRING CONNECTOR
 RECALL REPLACE CRUISE CONTROL SWITCH AND CONNECTOR PER RECALL 98S15
 REPLACED CRUISE CONTROL DEACTIVATION SWITCH
 98S15 PERFORM 98S15
 AS PER RECALL
 84423 RECALL 98S15 REPLACED RECALL 98S15 W-NEW PART

PERFORMED THE RECALL 98S15
 SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED E

REPLACED SPEED CONTROL DEACTIVATION SW AND CONNECTOR...
 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 98S15B 0.5, ADMIN 0.1
 RECALL 98S15
 REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL 98S15
 RECALL PERFORM RECALL 98S15 REPLACED BRAKE SWITCH , CONNECTOR
 RECAL 98S15 PERFORMED RECALL 98S15
 REPLACE SPEED CONTROL DEACTIVATION SWITCH
 RECALL RECALL
 141495 98S15B 0.5 HRS. REPLACED SPEED CONTROL SWITCH
 49067 AS RECALL .

RECALL 98S15.
 REPLACE SPEED CONTROL DEACTIVATION SWITCH
 RNR DEACTIVATION SWITCH PERFROM RECALL 98S15
 98S15 98S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL 98S15
 PERFORM RECALL

RECALL 98S15 PERFORM RECALL 98S15
 RECALL REPLACED CRUISE BUTTONS AS PER RECALL
 REPLACE CRUISE CONTROL SWITCH
 101824 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
 REPLACE DEACTIVATION SWITCH
 SPD CTRL DEACTIVATION SW REPLACED PERFORMED RECALL 98S15
 RECALL 98S15 RECALL
 REPLACE DEACTIVATION SWITCH AS PER RECALL
 PERFORMED RECALL 98S15. TECH 181.
 RECALL 98S15 REPLACE DEACTIVATION SWITCH
 101120 98S15 R+R BRAKE SWITCH
 REPLACED DEACTIVATION SWITCH
 PERFORMED THE RECALL 98S15