EA02-025

FORD 10/27/03
APPENDIX N
BOOKS 9 OF 61
PART 4 OF 4

RECALL 96\$15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99\$15 PERFORM RECALL COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL PERFORMED RECALL

108418 REPLACED SWITCH REPLACE SPEED CONTROL SWITCH

81698 W REPLACE SWITCH PER RECALL ME REMOVED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99816 PERFORMED RECALL 99815 1 REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER 99815 79577 8AFTEY RECALL 86315, REPLACE SWITCH AND CONNECTOR PER 96315, ROAD TESTED OK AFTER REPAIRS.

RECALL COMPLETED

NSTALLED SWITC

PERFORMED RECALL

58063 TECH 156 RECALL 99815 996158(0.5)

PERFORMED RECALL 98515, 98515B .5HRIS LABOR FRONT BRAKES AT ZWM, RECOMMEND REPLACING BRAKES

RECALL DOG 16 90\$16 REPLACE SPEED COTNROL SWITCH

34628 INSPECTED AND REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL

139407 PERFORMED RECALL 99815

PERFORM RECLAL

99915

98815 REPLACE SWITCH AND CONNECTOR COMPLETED RECALL PER INSTRUCTIONS

COMPLETED RECALL PER INSTRUCTIONS

74803 99815 REPLACED SW AND CONNECTOR

REPLACE SWITCH AND CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

99815

INSTALLED CRUISE CONTROL CUTOFF SWITCH PERFORMED RECALL 99815

PREFORM RECALL

RECALL 99S15 PERFORMED RECALL 99S15

RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99815.

REPLACED SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

RECALL REPLACE DEACTIVATION SWITCH

REPL 8PD CNTRL DEACTIVATION 8W 98189 RECALL 99815 WPC RECALL 99815 **RECALL 99615** RECALL

RECALL PERFORM ALL DONE

RECALL 19915 REPLACE BRAKE REPAIR KIT

SPEED CHIRL DEACTVIN SWITCH RPLCMTPERF SAFETY RECALL 98816

化氯磺胺磺胺 医大大性 医大大性 医水黄 鐵路線 经工作 医二氏性细胞 电电流 经收入 人名英格兰人姓氏克特

11010

COMPLETED AS PER FMC 1 PERFORMED RECALL 09816

SPEED CONTROL DEACTIVATION BWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 98815.

PERFORMED RECALL 99615-INSTALL SWITCH

99815

PERFORM RECALL

REPLACED SWITCH PER RECALL

REPLACED SPEED DEACTIVION SWITCH PER RECALL 9981.

INSTALLED SWITCH PER RECALL

PER FORD RECALL NOTICE. FORD RECALL COMPLETE PER INSTRUCTIONS.

REPLACE SPEED CONTROL SWITCH ##X##

RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

PERFORM 19815 RECALL, REPLACED SPEED CONTROL CAS

99815

99815 INSTALLED SPEED CONTROL DEACTIVATION SWITCH

COMPLETED RECALL 99815 DONE

RECALL

83752 RECALL 009 558 .50 TEC 162 INSTALL NEW SWITCH AND CONNECTION

PERFORMED RECALL AS PER INSTRUCATIONS

RECALL 99318 - SPEED CONTROL DEACTIVATION SWITCH INSPECTED SPEED CONTROL DEACTIVATION SWITCH, REPLACED DEACTIVATION SWITCH AND HARDSHI

PERFORM RECALL

PERFORM RECALL 99815 PER TECHNICAL INSTRUCTIONS

PERFORM RECALL 99816

46198 WARR DIAØ REPLACE SPEED CONTROL DEACTVATOR, AS PER RECALL 89615

REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL BULLETIN.

RPLC DEACTIVATION SWITCH & HARDSHELL CONN PER 99816

99S15 RECALL

99S16 RECALL

49959 99S15B 0.5 0.5 PERFORM 99S15

PERFORM RECALL TO REPLACE PRESSURE SWITCH AND CON NECTOR

RECALL COMPLETED

C PERPORM RECALL

PERFORM RECALL PER TECHNICAL INSTRUCTIONS IN RECALL BULLETIN REMOVE, TAPE AND SECURE SPEED CONTROL DEACTIVATION SWITCH

131522 REPLACED CRUISE CONTROL DEACTIVATION SWITCH FOR RECALL

RECALL 99815 REPLACE SWITCH AND CONNECTOR

REPLACE DEACTIVATION SWITCH PER RECALL

98815 REPLACE DEACTIVATION SWITCH AND CONNECTOR

87828 REC WARR 827 PERFORM RECALL 99816 REPLACE SPEED CONTROL SWITCH #KX## INSTALL NEW SWITCH AND CONNECTOR 99815

```
RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
PERFORMED RECALL 99816 CRUISE DE-ACTIVATION 205
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815
REPL SPD CNTRL DEACTIVATION 8W
REPLACE SWITCH AND CONNECTOR
PERFORMED RECALL
PERFORMED RECALL
               99613 COMPLETED
REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL
INSTALLED SPEED DEACTIVATION SWITCH
RECALLED BY FORD
                       PERFORMED RECAL
PERF. RECALL
RECALL
                   PERFORMED RECAL
129938 RECALL 99815 REPLACE CRUISE CONTROL SWIT
1 REPLACED SWITCH
PER RECALL
                    99515
COMPLETED RECALL
                  RECALL
RECALL
1 PERFORM RECALL AS REQUIRED
PERFORMED RECALL 99915B
PERFORMED RECALL 99915 REPLACED CRUISE DEACTIVATOR SWITCH
```

OPEN RECALL COMPLETED
RECALL RECALL
REPLACE SWITCH AND HARD SHELL
PERFORM RECALL 19818 PERFORM DEFACTIVATION SWITCH RECALL
RAR CRUISE DEACTIVATION SWITCH & HARD SHELL PER RECALL
RECALL 99815
RECALL PERFORMEND
REPLACED DEACTIVATION SWITCH
RECALL REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
PERFORMED RECALL
PERFORMED

PERFORMED RECALL

RECALL PERFORM RECALL 99815

REPLACED CRUISE DEACT SWITCH 99915 REPL CABLE

RNR DEACTIVATION SWITCH PERFORM RECALL 98915

OPEN RECALL PERFORM RECALL

REPLACE CONNECTOR AND SWITCH

RECALL COMPLETE PREFORM RECALL

99815 RECALL - CRUISE RECALL - CRUISE RECALL

E962-825 11812

boxfles QLD1

RECALL 99815
REPL 9PD CNTRL DEACTIVATION SW
COMPLETE RECALL
PERFORM RECALL
PERFORM RECALL

REPLACED CRUISE CONTROL DEACTIVATION SWITCH

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 98815 RECALL INSTRUCTIONS

RECALL PERFORMED RECAL

REPLACE SWITCH RECALL COMPLETE

PERFORM RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR AS PER THE TECHNICAL INSTRUCTIONS

REPLACED CRUISE SWITCH

PERFORMED RECALL

REPLACED CRUISE BRAKE SWITCH

REPLACED THE SWITCH PER RECALL 99815

RECALL 00816

RECALL 99815

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

PERFORM 98315 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR.

RECALL 99816 PERFORMED RECALL 99816
INSTALLED KIT 99816 RECALL PREFORMED

60292 INSPECTED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL.

99315 99315

RECALL 99815

81011 98816 WARR REPLACED SWITCH AND CONN

REPLACE SWITCH

RECALL 99815 REPLACE SWITCH AND CONNECTOR

82829 RECALL 998158 .50 TECK 162 INSTALL NEW SWITCH AND CONNECTION PER RECALL

COMPLETED 99815 PERFORM RECALL 96915

PERFORMED RECALL

RECALL REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR.
RESISTIVE SHORT. PERFORM RECALL-ONP PER FOMOCO INSTRUCTIONS.

90816

PERFORM RECALL

INSTALL SPEED CONTROL SWITCH PER RECALL.

RECALL 19815 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH

OPEN RECALL PERFORM RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH

1.7 7.57%

RECALL

PREFORM RECALL

RECALL 99816

PERFORM RECALL

99815

REPLACED DEACTIVATOR SWITCH PER RECALL

382-825 11613

```
PERFORM RECALL 99815
1 COMPLETED RECALL
RECALL 99815
                      PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH
PERFORMED RECALL 99615-REPLACED CRUISE CONTROL DEACTIVATION SWITCH
82303 RECALL 60S15 COMPLETED
45255 CRUISE BRAKE PRESSURE SWIPIN POINSP CONCERN FOUND RUSE BLOWN, INSTALL CIRCUIT BREAKER TESTER AND PIN POINT TEST, FOUND INTERMITTIN C
PERFORMED RECALL
PERFORM RECALL
REMOVED AND REPLACED PRESSURE SWITCH PERFORMED RECALL 89815
RINE DEACTIVATION SWITCH
                            PERFORM RECALL 99815
RECALL 99915
                      99815 COMPLETED RECALL
66350 RECALL 898158 .8, ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL,
79428 PERFORMED RECALL 90815
RECALL
                   REPLACED DEACTIVATION SWITCH AS PER RECALL
99815
                  PERFORM RECALL
1 PERFORM RECALL
PERFORMED RECALLIESS15
RECALL
                   99815
RECALL
                   99815 REPLACE C-C 6W
127207 99S16B 0.5HR ADMIN 0.1HR PREFORMED RECALL REPLACED SWITCH AND CONN.
REPLACE CRUISE DEACTIVATION SWITCH PER RECALL
118824 RECALL 99316 REMOVED OLD SPEED CONTROL DEACTIVATION SWITCH INSTAALED NEW DEACTIVATION SWITCH & HARD SHELL CONECTOR.
RECALL COMPLETED.
3 PROGRAM SPW XREF RO 80011 DTD 10-7-99 ACC MLAGE (297) L63 33 (9G652) INSPECT, FOUND LOOSE BRAKE SWITCH, REPLACE SWITCH, CLEAN OIL FROM CAR,
C INSTALL SWITCH AS PER RECAL
RINR DEACTIVATION SWITCH
                            PERFORM RECALL 99815
RECALL
                   99915 REPLACE C-C SW
90816 RECALL
RÉPAIR AS PER RECALL 99315
PERFORM 99315 RECALL
RECALL
                   99815
PERFORMED RECALL 09815
108705 RECALL W REPLACE DEACTIVATION SWITCH AND CONNECTOR PER 998158 0,5 + 0.1
6924 CRUISE CONTROL DEACTIVATION SWITCH RECALL
8636 CRUISE CONTROL RECALL
REPLACE BRAKE SWITCH PER RECALL
RECALL 99815 REPLACE SPPED CONTROL DEACTIVATION SWITCH AND CONNECTOR
1 REPLACE DEAVTIVATER SW.WARANTY-RECALL ---- BILL
RECALL
                   96815 REPLACE C-C SW
```

CONNECTOR

RECALL

99815

....

RECALL 99815

RECALL 99 S 15

99815

993158

INSTALL BRAKE SWITCH

REPLACE CRUISE CONTROL SWITCH PER RECALL. 99916 RECALL REPLACED 6WITCH PERFORMED RECALL 1 PERFORMED RECALL RECALL 99915

154894 REPLACED CRUISE CONTROL DEACTIVATION SWITCH & HIARDSHELL CONNECTOR FOR RECALL. REMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PERFORMED RECALL 99816

PERFORM RECALL

AS PER RECALL

REPLACE SPEED CONTROL SW AND CONNECTOR PER RECALL

99815

99815 RECALL COMPLETED

PERFORMED RECALL

38411 99818.5 REPLACE SWITCH AND CONNECTOR PER RECALL

73927 99\$15 W RENEW BRAKE VLV. \$W. & HARD\$HELL CONN. AS PER RECALL.

88221, RECALL 99S168 INSTALLED CRURSE DEACTIVATION SWITCH

REPALACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 99S15B 0.5, ADMIN 0.1

98816 99615

RPL CRUISE SWITCH PER RECALL 99815

RÉPLACE CRUISE SWITCH AND CONNECTOR AS PER 99S15 RECALL

29815

REPLACE SWITCH

OPEN RECALL

99815 RECALL

COMPLETE RECALL

99615

REPL CRUISE CONTROL SWITCH AS PER RECALL

INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98315

87194 INSTALLED BRAKE KIT PER RECALL

COMPLETED RECALL 99S15-INSTALLED DEACTIVATION SWITCH

INSTALL SWITCH AND CONNECTOR PER RECALL 99815 99815 RECALL |

99315 RECALL COMPLETE

INSTALLED SWIFCH

65451 RECALL 99315 INSTALL UPDATED SPEED CONTROL DE-ACTIVATION SWITCH AND CONNECTOR.

PERFORMED RECALL 69815. .SHRS LABOR

RÉMOVED AND REPLACED BRAKE SWITCH BLEED SYSTEM.RT OK

REPLACE SWITCH PER RECALL

INSTALLED SWITCH

REPLACE SPEED CONTROL SWITCH PER RECALL 99S15

1 PERFORM RECALL INS15 BRAKE SWITCH

INSTALLED NEW DEACTIVATION SWITCH PER REGALL PERFORMED RECALL 99815 SPEED CONTROL DEACTIVATION SWITCH RECALL 98515 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL 99815 RECALL 99815 REPAIRED AS PER RECALL 00857 REGALL 0.5 998156 INSTALLED RECALL

RECALL 99815 RECALL COMPLETED

RECALL 99\$19B PERFORM RECALL 99\$19B

66549 RECALL 96615 INSTALLED CRUISE CONTROL SWITCH PER RECALL 99816

ß 11816

1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR BISHEB .B

99615

99\$15

RECALL 99515

RECALL PERFORME

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

RECALL PERFORMED RECALL

REPLACED SWITCH

INSPECTED SWITCH NESSARY TO REPLACE SWITCH AS PER RECALL

COMPLETED CAMPAIGN COMPLETED OF 998158

99815 99815 REPLACE CRUISE CONTROL SWITCH PER RECALL 99815

PERFORMED 99815

99815 PERFORMED 99815.

RECALL

99815 RECALL COMPLETED

9915B RECALL

9915B RECALL REPLACED CRUISE DEACTIVATION SWITCH

RECALL 99915

RECALL PERFORME

REPLACED SW

RECALL IS REQUIRED COMPLETE RECALL

PERORMED RECALL

RECALL 99S15 COMPLETED

INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN

RECALL PERFORMED RECAL

RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL

99615 RÉPLACE CRUISE CONTROL PRÉSSURE SWITCH PER RECALL

RECALL 99815

R9X16

RECALL

REPL S-C DEACTIVATION SWIPER RECALL

PERFORMED RECALL

58458 99815 W SPEED CONT. SWITCH

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR, TEST DROVE TO CHECK FOR NORMAL OPERTAION.

PERFORMED 99815 RECALL

RECALL REPLACED SWITCH AND CONNECTOR.

1 PERFORM RECALL 09916 SPEED CONTROL DEACT. SWITCH 99916B

999158 RECALL 998158 RECALL

00815

99815

RECALL

REPLACED SWITCH

59757 RECALL W REPLACE SWITCH GA

99815 9981

31148 WARRANTY PERFORMED ENGINE PERFORMANCE WORKSHEET, FOUND EBP SENSOR AND TUBE CLOGGED, R&R EBP, R&L EBP TUBE AND CLEANED OUT, RE

REPLACE SPEED CRIL SWITCH AND CONNECT

AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

PERFORMED RECALL

COMPL: RECALL 89815, CAUSE: SPEED CONTROL DEACTIVATION.

CAUSE: REPLACE DEACTIVATION SWITCH AND CONNECTOR

APROX TIME; 0.5

RECALL 08515 COMPLETED

```
REPLACED BRAKE DEACTIVATION SWITCH
PERFORM RECALL
PERFORM RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH
91048 SAFTY RECALL PERFORMED RECALL 99815 DEACTIVATION SWITCH REPLACEMENT ALSO TEST DROVE VEHICA:
115629 96815 RECALL R+R DEACTIVATION SWITCH
REPLACE SWITCH AND HARD SHELL
84420 REPAIRED SPEED CONTROL PER RECALL
99615 SPEED CONTROL DEATIVATION 99815
AS PER RECALL
                      REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
PERFORM 99615
19746 RECALL 99316 PERFORMED RECALL
66235 SPEED CONTROL RECALL 99815B 0.5 0.5 REPLACED SPEED CONTROL DEACTIVATION SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH.
               96616 PROGRAM
REPLACED DISENGAGE SWITCH PER RECALL 99S15.
REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL 98815
RECALL 99515 COMPLETED
RECALL 99$16 PERFORMED 1
REPAIR AS PER RECALL
COMPLETED RECALL
RECALL
                   00815
TECH INSTALLED NEW CRUISE DE ACTIVATION SWITCH PER FORD REGALL
COMPLETED RECALL
INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECAUL
PERFORM RECALL 98615
12:200 RECALL 99815 0.5 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99815.
DEACTIVATION SWITCH
                          99315
RECALL
                   99815
REPLACE CRUISE DEACTIVATION SWITCH AS PER 99S15 RECALL
PERFORM RECALL
REPLACE CRUISE SWITCH PER RECALL
PERFORM RECALL
PERFORMED RECALL 99815 FUSE FOR BRAKE SHIFT INTERLOCK BLOWN FROM HITTING WIRE WHEN CHANGING CONNECTION REPLACED FUSE ROAD TEST OKT
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH ASSEMBLY, CHECK NORMAL OPERATION.
PERFORMED RECALL 99815-INSTALL SWITCH
PERFORMED RECALL
RECALL
                  REMOVE TAPE AND SECURE THE SPEED CONTROL DEACTIVATION SW
PERFORM RECALL
99515
                 99815 REPLACE CRUISE SWITCH PER RECALL
REPLACED DEACTIVATION SWITCH AS PER RECALL
JPERFORM RECALL 99815 T101
```

```
DONE AS PER INSTRUCTIONS
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 988158 .6
101617 RECALL #09$15 0.5 INSTALL SPEED CONTROL DEACTIVATION SWITCH PER RECALL
COMPLETE RECALL
                                          OΩ
RECALL 99816
PERFORMED RECALL
SPD CTRL DEACTIVATION SW REPLACE PERFORMED RECALL 98515
1 INSTALLED SPEED CONTROL SWITCH 1
REPLACE CRUISE SWITCH AND CONNECTOR
88297 RECALL 99815 RECALL 99816
REPLACED CC BRAKE SWITCH AS PER RECALL 99815
8PEED CONT
                     REPL SWITCH
99615
                  REPLACE CRUISE CONTROL SWITCH PER RECALL
89615
                  69616 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL C
AS PER RECALL DEACTIVATOR SWITCH
PERF RECLAL 99816
PERFORMED RECALL 99815 (SPEED CONTROL)
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER SAFETY RECALL 98815.
62178 RECALL 09816 INSTALLED RECALL 99815.
RECALL 99816
PERFORMED RECALL ...INSTALLED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR ... AS PER RECALL ....M
                     REPLACE 8PEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR
RECALL 99615
COMPLETED CAMPAIGN COMPLETED OF 998158
66815 COMPLETED
                        B9815 CCOMPLETE
RECALL PERFORMED
DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH.
PERFORM RECALL
99815
                  99815 COMPLETED
48674 RECALL 99315 CC42 W PERFORMED RECALL 98315 SPEED CONTROL DEACTIVATI ON SWITCH
INSTALL SWITCH AND HARNES PER RECALL.
DONE AS PER INSTRUCTIONS
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR - 998159 .5
INSTALLED DEATIVATION SWITCHES, PER RECALL RD. TEST OK.
1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 99S150 X5
1 REPLACED BRAKE SWITCH CONNECTOR.
76213 REPLACED BRAKE SWITCH AND HARD SCHELL CONNECTOR, NOTE: AIR SUSPENSION LIGHT ON DIALLY ON DASH.
76169 RECALL PERFORMED RECALL 99815
REPLACE CRUISE SWITCHA ND CONNECTOR
                   PERFORMED RECALL 99815
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
1 PERFORM RECALL AS REQUIRED
REPLACE DEACTINATION SWITCH AND CONNECTOR
RECALL
                   REPLACE CRUISE DEACTIVATION SWITCH
```

P1811 529-7040

INSTALL SWITCH PER RECALL LETTER

And the second property of the

```
E382-828 11518
```

```
99615 RECALL
                     COMPLETTED
                RECALL
CHECKED AND REPLACED VACUUM RELEASE
               COMPLETE RECALL
REPLACE SWITCH AND CONNECTOR PER RECALL
RECALL
                   99315 RECALL COMPLETED
REPLACED SPEED CONTROL SWITCH.
99815
                 PERFORMED 998
PERFORMED RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH
                     99815B REPLACED CRUISE DEACTIVATION SWITCH RECALL
RRS158 RÉCALL
REPLACE SWITCH AS PER RECALL
PERF RECALL 99615
INSPECT AND REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
RECALL COMPLETED PERFORM CAMPAIGN PER FORDS SPECIFICATIONS AND INSTRUCTIONS 903158 FOR .5 AND .1 FOR ADMIN. TIME
PERFORMED RECALL 80916. ALL OK AT THIS TIME.
REPLACE CRUISE DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815
RECALL
                   RECALL
                RC 69915 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
REPLACED CONTECTOR, 1
                   99815 RECALL COMPLETED.
AE PERFORM RECALL REPL DEACTIVATION SWITCH AND CONNECTOR
102720 99S15 W PERFORMED RECALL 99S15 SPEED DIACTIVATION SWITCH.
PERFORMED RECALL 19815
REPLACED CRUISE CONTROL SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH
REPLOWITCH PER RECALL
RECALL
                   99815 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO
RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL.
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
REPLACE CRUISE DEACTIVATION SWITCH
REPLACED CRUISE DEACTIVATION SWITCH PER RECALL 99915
RECALL
                  88815 RECALL COMPLETED
RECALL
                  PERFORMED RECAL
```

PREFROMED RECALL

REPLACE SWITCH AND CONNECTOR PER RECALL

PERFORMED RECALL AS REQUIRED

53746 REPLACED SPEED CONTROL DEACTIVATION SW. 8-2 6274

REPLACE BRAKE PRESSURE SWITCH PER RECALL.

PERFORMED RECALL 98815

92987 REPLACED SWITCH & CONNECTOR PER 99815.

1 PERFORMED RECALL 99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL RETEST OK. PERFORM RECALL RECALL PER FORD 78220 PERFORMED RECALL 99315 PERF RECALL 99518

COMPLETED RECALL 90\$15, REMOVED AND INSTALLED NEW SPEED CONTROL SWITCH AND WIRE HOUSING. TECH 272-9354

81122 RECALL WARRANTY COMPLETED RECALL 98815, ROAD TEST - O.K. COMPLETED RECALL 99815 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ... 198158 .5 + .1 99615B RECALL DONE 99815B REPLACED CRUISE DEATCIVATION SWITCH PERFORMED RECALL AS BY FACTORY PERFORMED RECALL REPLACED DEACTIVATION SWITCH RECALL DOS15 REPLACE SW AND CONNECTOR REPLACED DEACTIVATION SWITCH PER RECALL CRUISE SWITCH RECALL. REMOVED AND REPLACED CRUISE SWITCH RECALL.

61840 REPLACED CRUISE DEACTIVATION SWITCH PER RECALL PERFORMED RECALL 89815 INSTALLED SWITCH AND CONNECTOR PER RECALL 89815

PERF RECALL 99815

87071 99815 99815B & & REPLACE CONECTOR, SWITCH, BLEED BRAKES REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL RECALL 09815 PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH PERFORM SAFETY RECALL 120792 RECALL ON SPEED DEACTIVATION SWICTH WARR COMPLETED DISPECT SPEED CONTROL SYSTEM AND COMPLETE LABOR OPERATION ACCORDINGLY COMPLETED SPEED CONTROL DEACTIVATION CAMPAIGN 99816 COMPLETED 99\$16 COMPLETED INSTALLED SPEED CONTROL DE ACTIVATION SWITCH PER RECALL RECALL PERFORMED RECAL 9915 REPLACED SWITCH 55788 RECALL W 0.5 HRS ADMS 0.1 INSTALLSPIED CONTROL SWITCH PER RECALL 99S15 OPERATION 89S15-B 1 PEFORMED A SAFETY RECALL AS TO REMOVE AND REPLACE THE DEACTIVATOR SWITCH 99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH 97565 99816 W REPLACED SWITCH

41857 RECALL COMPLETE

1 PERFORM RECALL

99816

00915 00915

FORD BAFETY RECALL REPLACED SPEED DEACTIVATION SWITCH

103344 RECALL 98815

RECALL PERFORMED RECAL

INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO RECALL 99915

99516B REPLACED DEATTVATION SWITCH 99816B RECALL

RECALL 99615 RECALL 90815

REPLACED DISENGAGE SWITCH PER RECALL 985154

PERFORM RECALL
PERFORMED RECALL
REPLACED DEACTIVATION SWITCH PER RECALL 1

\$1857 R-R SPEED CONTROL SWITCH .

1 REPLACE DEACTIVATION SWITCH RETEST OK

98915 99815

116648 RECALL SWITCH

RECALL 99815

REPLORUISE CONTROL DEACTIVATION SWITCH
RECALL REPLACED CRUISE SW
REPLACE SWITCH RECALL 98815

X REPLACE SEED CONTROL SWITCH AND CONNECTOR

REPLACE CRUISE CONTROL DEACTIVATION SWITCH.

RECALL

REPL DEACTIVATION SW PER RECALL

99\$15 REPLACE CRUISE SWITCH PER RECALL 99\$16

PERFORMED RECALL.

107275 99816 REPLACE SWITCH PER 998158 0.5 HRS

97644 WARR DONE RECALL 99S15 REPLACE BRAKE REPAIR KIT

71421 REPLACE SWITCH AS PER RECALL

REPLACE SPEED CONTROL CABLE AS PER RECALL

5768 RECALL 99815 RECALL 99815

PERF RECALL 99615

RECALL REPLACED CONTROL SWITCH PER RECALL

COMPLETED RECALL 99815 1

RECALL REPLACED SPEED CONTROL DEACTIVASTION SWITCH AS PER RECALL.

RECALL INSTALLED UPDATED DEACTIVATION SWITCH

PERFORM RECALL 99815

REPLACED SWITCH AND CONN. PER RECALL

COMPLETE RECALL REPAIRS

RECALL 99816

RECALL 99815 COMPLETED

INSPECT AND REPLACE CRUISE CONTROL DEACTIVATOR SWITCH AS PER RECALL 99916

PERFORM RECALL.....

PERFORM RECALL

REMOVED DEACTIVATOR SWITCH THREADS COMING OUT WITH SWITCH-REPLACED WIRING CONNECTOR-REPLACED BRAKE DEACTIVATOR BLOCK AND BLEED &

NETALL CRUSE SWITCH

9G652-42-114508 DO RECALL 96615 PUT IN NEW 8W AND WIRE COND

REPLACE DEACTIVATION SWIT PER RECALL

RECALL

REPLACED DEACTIVATION SWITCH AS PER RECALL

REPLACE SPEED CONTROL SWITCH PER RECALL 90816

boxffee OLD1

```
REPLACE CRUIZE SWITCH AND CONNECTOR PER RECALL
RECALL 98815
                     PERFORMED RECALL 99815
REPLACE SPEED CONTROL SWITCH
COMPLETE RECALL
INSTALL DEACTIVATION SWITCH PER RECALL 09S16
                COMPLETE RECALL
PERFORMED RECALL 99515, INSTALLED NEW BRAKE REPAIR KIT OPERATIN OK. . TECH 71-2498
80800 RECALL WARR REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 90816
SPEED CONTROL DEACTIVATION SWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99815.
99815
                 REPLACED DEACTIVATION SWITCH AS PER RECALL
REPLACED SWITCH AND CONN
RECALL
                   PERFORMED RECAL
. REPLACE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR 99$158.5
TECH 812 PERREORMED RECALL SPEED CONTROL DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL.
RECALL 99S15
                                      SPEED CONTROL DEACTIVATOR SWITCH
1 RÉPLACE CRUISE CONTROL SWITCH.
REPLACE CRUSIE SWITCH AND CONNECTOR
INSPECT AND INSTALL SPEED CONTROL DEACTIVATION CWITCH CONNECTOR.
47316 RECALL 99615 DONE DEACT SWITCH SPEED CONTROL
                 99918 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHEEL C
PERFORMED RECALL 99515, R-R SWITCH, HARDSHELL, AND BLEED.
1 PERFORM RECALL 90816
99815 COMPLETED
                        99815 COMPLETED
PERFORMED RECALL 99615-INSTALL SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL
PERFORMED RECALL
78858 RECALL 99815B 0.5 HR INSTALL SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99815
1 PERFORMED RECALL 98816
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER 99815 RECALL
54273 RECALL 98915 RECALL 99915 REPLACE SPEED CONTROL SWITCH AND HARD SELL.
RECALL COMPLETED ALL OK.
                 REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
99815
REPLACE SPEED CONTROL SWITCH ASY
PERFORM RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER SAFETY RECALL 88815.
PERFORMED RECALL
PERFORMED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH
PERFORM FACTORY RECALL THANK YOU
COMPL: 80915, CAUSE: 8915, CORRE: 8PEED CONTROL DEACTIVATION
                                                             APROX TIME: 0.5 HRS
```

118867 REPLACE SWITCH & WIRE CONNECTOR AS PER 99815.

RECALL
98815 REPLACED CRUISE DEACTIVATION SWITCH AS PER RECALL
98815 REPLACED CRUISE DEACTIVATION SWITCH
98815 REPLACE DEACTIVATION SWITCH AS PER RECALL
6796 SPEED CONTROL SWITCH RECALL
REPLACE SPEED CONTROLE SWITCH AND CONNECT
67656 .5 99815 COMPLETE
98244 RECALL 99815 W 7923 VERIFIED RECALL INSTALLED DEACTIVATION SWITCH
PEFORM RECALL
REPAIR AS PER RECALL 99815.
106457 99815

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH
. INSTALLED DEACTIVATION SWITCH AS PER 00916

1 REPLACE CRUISE DEACTIVATION SWITCH.

RECALL

99315 REPLACE C-C SW

106881 PERFORMED RECALL 89815
1 INSTALLED CRUISE DEACTIVATION SWITCH
REPLACED DEACTIVATION SWITCH
PERFORMED RECALL REPLACED SPEED DEACTI SWITCH
PERFORMED RECALL
998158 998158
PERFORM RECALL 99815
REPLACED C CONTROL DEACTIVATION SWITCH PER 89815 RECALL
107421 R-R CRUISE SWITCH
31867 98815 PERFORM RECALL
PERFORM RECALL 99815

CK Y REPLACE CO DEACTIVATION SWITCH
99815E REMOVE, TAPE AND SECURE THE SPEED CONTROL DEACTIVATION SWITCH .3 PLUS .1 ADMIN COMPLETED SERVICE AS REQUESTED
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR — 968168 .6

RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

RECALL 99815 RECALL

99815 99815

81804 998158 0.5 HRS. SPEED CONTROL RECALL

REPLACED DEACTIVATION SWITCH.

RECALL PERFORM CRUISE CONTROL DEACTIVATION SW.RECALL CRUISE INOP.PRIOR

REPLACE SPEED CONTROL SWITCH COMPLETE AS PER INSTRUCTED

REPLACED SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

RECALL COMPLETE

X PERFORMED RECAL

99815 RECALL NOTIFICATION 99815 RPL DEACTIVATION SWITCH AND HARDSHELL CONNIPER RECALL

97638 99815 99815 .5 .5 REPLACE SWITCH & CONECTOR PER RECALL

DEC-020-11000

PERFORM RECALL 99815

REPLACED BRAKE SWITCH AND CONN. PER RECALL 99815

PERFORMED RECALL 99615

99816 REPLACE DEACTIVATION SWITCH RECALL REPLACED DEACTIVATION SW AND BLED BRAKES

RECALL R-! DEAC SW, INSTALLED NEW CONNECTOR, RECKD OK. 82905 RECALL 0.5 PERFORM RECALL 98015

PERFORMED RECALL 99815. JHRS LABOR

74507 RECALL 98S15B 0.5 REPLACE SPEED CONTROL DEACTIVATOR SWITCH AND CONNECTOR.

INSTALLED SPEED DEACTIVATION SWITCH

RECALL 98S15 REPLACE SPEED CONTROL DEACTIVATION SW.

COMPLETED RECALL RECALL COMPLETE

INSTALLED DEACTIVATION SWITCH

PERFORMED RECALL 99815 REPLACED CRUISE SWITCH

REPLACED SC DEACTIVATION SWITCH 89816

RECALL COMPLETE

COMPLETED RECALL 99815, SPEED CONTROL DEACTIVATION SWITCH

1 COMPLETED RECALL

RECALL PERFORMED RECALL 99815

PERFORM RECALL

PERFORMED RECALL

PERFORM RECALL 89S15 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REMOVE AND REPLACE CRUSIE CABLEE PER RECALL

OPEN RECALL PERFORMED 96S15 RECALL

1 PERFORMED SPEED CONTROL DEACTIVATION SWITCH RECALL

29818 COMPLETED

00915 COMPLETED

RECALL

68915

RECALL 99315

PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPLACE SWITCH

RECALL 99S15

94965 OPEN RECALL 89515 REPLACE SWITCH DONE

23710 RECALL WARR REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 09816

REPLACED CRUSSE CONTROL DEACTIVATION SWITCH

64116 RECALL PERFORMED RECALL 98816 CC42 CUSTOMER DECLINE RECOMENDED SERVICE

5-002-000 11E24

RECALL 99815 PREFORMED RECALL 99815 PERFORM RECALL 00015 24474 99\$15 W REPALCED SPEED CONTROL DEACTIVATION SWITCH 0937 FACTORY REGALL REPLACED DEACTIVATION SWITCH AS PER RECALL SPD CTRL DEACTIVATION SW REPLCMINTPERFORMED RECALL 99315 RECALL. DID RECALL

102657 RECALL 999158 0.5 SPEED CONTROL DEACTIVATION SWITCH RECALL 99915 REMOVED AND REPLACED HARNESS CONNECTOR, PERFORMED RECALL 9981 5 RECALL CRUISE CONTROL RECALL 99615 REPLACE SWITCH AND CONNECTION PER RECALL

RECALL 99815 REPLACE CRUISE DEACTIVATION SWITCH PER RECALL 89815 8PD CTRL DEACTIVATION SW REPLCIANTPERFORMED RECALL 99815

PERFORM RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO 89515 RECALL SERVICE

PERFORM RECALL 88815 REPLACE SPEED CONTROL SWITCH RECALL

REPAIR AS PER RECALL 99815

REPLACED THE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR AS PER FORD

99615

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98815.

RECALL REPAIR

RAIR SPEED CONTROL DEACTIVATION SWITCH PER 09\$15

DEACTIVATION SWITCH MITME TO DIAG CONCERN, REPLACE DEACTIVATION SWITCH

RECALL PERFORMED RECALL 99815 99615 99315 COMPLETED

89916 99815 RECALL PERFORMED REPLACE SPEED CONTROL DEACTIVATION SWITCH... 99815 RECALL

SPEED CONTROL SWITCH

DONE

RECALL 99815 RECALL 99915

PERFORMED RECALL

48118 RECALL W REPLACE SWITCH AND PLUG GA

REPLACED 9C DEACTIVATION SWITCH 99815 INSOECT FOR RECALL 90815

PERF RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR OPERATION 998158 TIME .5 PERFORM RECALL 99815 AS PER INSTRUCTIONS

RECALL NOTICE REGALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED PERFORM RECALL PER MANUFACTURER REPLACED DEACTIVATION SW. REPLACE SPEED CONTROL DEACTIVATION SWITCH 68228 REPLACE DEACTIVATION SWITCH PER RECALL B6S15B 0.5 ADMIN 0.1

99616 RECALL 99615 RECALL COMPLETE INSOECT FOR RECALL 92916 68716 REPLACE SWITCH PERFORMED RECELL 99815

REMOVED AND REPLACED BRAKE SWITCH PERFORMED RECALL 88815

COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PERFORMED RECALL PERFORMED RECAL REPLACE SPEED CONTROL DEACTIVATION SWITCH

99S15 REMOVE OLD SPEED CONTROL SWITCH REPLACE WITH NEW ONE AS PER.

99915 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT PÉRÉORM RECALL REPLACE SWITCH

RECALL 99816 PERFORMED RECALL REPLACE CRUISE CONTROL DEACTIVATION SW.

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

RECALL PERFORM RECALL REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL PERFORMED

PERFORMED RECALL 99315

PERFORMED RECALL PERF RECALL 09815 RECALL COMPLETE

1 REPLACE SWITCH & CONNECTOR BLEED SYSTEM PERFORMD RECALL RECALL COMPELTED

REPLACED DEACTIVATION SWITCH PER FACTORY RECALL 1 1 REPLISPEED CONTROL SWITCH.

PERFORMED RECALL

COMPLETE RECALL 99816 RECALL SPEED CONTROL DEACTIVATION SWITCH

```
RECALL RECALL PERFORM 98818 RES16
```

88001 RECALL 99S16. PERFORMED RECALL 99S15 AND CHECKED;OK.

99815 RECALL 99815 SPEED CONTROL SWITCH

RECALL COMPLETE

58267 RECALL W INSTALL KIT GA

PERFORM RECALL

99815 COMPLETED 99815 COMPLETED REPLACED SPEED CONTROL DEACTIVATION SWITCH

RECALL COMPLETE

INSOECT FOR RECALL 99815

PERFORMED RECALL

RECALL COMPLETED.

REPLACE CRUISE DEACTIVATION SWITCH

RECALL PREFORM RECALL

108029 PERFORMED RECALL

REPLACE CONNECTOR AND SWITCH

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99816.

193679 REMOVE AND REPLACE DEACTIVATION SWITCH AND WIRE CONNECTOR AND BLEED BRAKE

A SHORT IN THE SPEED CONTROL SWITH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUISE ALSO A FIRE COULD DEVOPE, REPLACE SPEED CI

REPLACE SPEED CONTROL DEACTIVATION SWITCH

DIAGNOSIS AND INSPECT FOR CAMPAIGN PERFORM CAMPAIGN AS PER NOTICE REPLACED SWITCH

C PERFORMED RECAL.

REPLACE CRUISE SWITCH

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 89315 RECALL INSTRUCTIONS

99816 REPLACE SPPED CONTROL DEACTIVATION SWITCH AS PIER RECALL 89816

59839 RECALL 99615, PERFORMED RECALL 99815 AND CHECKED:OK.

PERFORMED RECALL

REPLACED BRAKE DEACTIVATION SWITCH AND CONNECTOR 8589

SPEED CNTRL DEACTIVE SWITCH RPLCMTPERF SAFETY RECALL 98815

79767 RECALL 00816 REPLACED DEACTIVATOR SWITCH AND CONNECTOR

REPLACED DEAC, SWITCH PER RECALL

COMPLETED RECALL 99S15 REPLACE CRUISE CONTROL DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER REGALL 98815

REMOVED AND REPLACED BRAKE SWITCH PERFORMED RECALL 99\$15.

PERFORMED RECALL

RECALL REPLACE SWITCH

REPLACE SWITCH AND CONNECTOR PER RECALL

REPLACED BRAKE SWITCH AND CONN PER RECALL 89815

PERFORMED SPEED CONTROL RECALL

PERFORM SPEED SWITCH RECALL 99516

99815 RECALL

99815 RECALL

102290 PERFORM RECALL AS PER FOMOCO

161670 RECALL 99615B 0.5 0.5 RECALL

E462-825 11827

69639 RECALL 99S15, REPLACE SWITCH

PERFORM RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH

¥

198516 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98515

61814 W., REPLACE CRUISE SWITCH PER RECALL(CC82)

95715 RECALL WP50 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.

PERFORMED RECALL

98815

PERF RECALL

REPLACED SC DEACTIVATION SWITCH 89815

993168

SPEED CNTRL DEACTIVEN SWITCH RPLOMIFIERF SAFETY RECALL 90\$15

REPAIR AS PER RECALL

99815 RECALL SERVICE

REPLACED SPEED CONTROL DEACTIVATION SWITCH

INSTALLED SWITCH PER RECALL

RECALL 99815

RECALL PERFORMED 99815

RECALL INSTALL SWITCH

PERF RECALL

99615 COMPLETED

98S15 COMPLETED

COMPLETED AS PER RECALL

COMPLETED RECALL REPLACED SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99816 RECALL INSTRUCTIONS

PERFORMED RECALL 99816 REPLACED SWITCH AND CONNECTOR.

PERFORM RECALL 99815

PERFORMED RECALL 86615

PERPORM RECALL

REPL SPEED CONTROL SWITCHES

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 89915.

00315

99815

REPLACE SPEED CONTROL DEACTIVATION SWITCH

87013 RECALL 10816 W PERFORMED RECALL 19815; RÉMOVED AND REPLACED DEACTIVATION SWITCH AND CONNECTING WIRES, BLEED AIR FROM SYSTEM.

INSTALLED KIT TO COMPLETE

PEROFMRED THE RECALL 99815

99615 RECALL PERFORMED

PERFORM RECALL AS PER NOTICE

PERFORMED RECALL

PERFORMED 99816 RECALL

762-826 11628

PERFORMED RECALL
RECALL COMPLETE
INSTALLED PART PER RECALL

47656 79 PERFORM 98615 R R SPEED CONTROL DEACTIVATION SWITCH AND CONENCTOR ROAD TEST
74256 REPLACED SPEED CONTROL SWITCH AND CONNECTOR PER RECALL
PERFORMED RECALL
PERFORMED RECALL
RECALL
90816 PERFORMED DEACTIVATION SWITCH RECALL

1 PERFORMED RECALL PERFORM RECALL 99616

RECALL REPLACE CRUISE CONTROL DEACTIVATION SWITCH RECALL

REPL DEACTIVATION SWITCH 99915

REPLACE SWITCH PER RECALL PERFORM RECALL 98816

85757 RECALL 99S15 REPLACED SWITCH AND HARD SHELL CONNECTOR

PERF RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL 98815 RECALL 98815
98615 COMPLETED 98816 COMPLETED
PERFORMED RECALL 98615 NEEDS FRT BRAKES CUSTOMER ADVISED

PREFORMED RECALL AS PER 98815

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR 90816 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT RECALL 99816 REPLACED SWITCH

130379 REPLACED SWITCH AND CONNECTOR PER RECALL RECALL 99315 RECALL 99315

REPLACED SWITCH AND CONNECTOR PERFORM 98915 RECALL

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL INSTALL SWITCH PER RECALL

PERFORMED RECALL 99815 REPLACED DEACTIVATION SWITCH.

1 PERFORMED RECALL 99815 REPLACED DEACTIVATION SWITCH

DIAG AND PERFORMED RECALL 99816 REPLACED DEACTIVATION SWITCH ON VEHICLE CRUISE OK NOW

RECALL REPLACED DEACTIVATOR SWITCH AND HARDSHELL CONNECTOR

REMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PERFORMED RECALL 99815

PREMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PERFORMED RECALL 99815

PERFORMED RECALL 99815B.

73296 PERFORMED RECALL 99815 AND ROADTESTED,

90102 988158 0.5 0.5 PERFORM 99615

B252-620 11829

RECALL DONE

REPLACE SWIPER RECALL INSTRUCTIONS
PERFORMED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH,
REPAIR AS PER RECALL
99815 COMPLETED 99815 COMPLETED

1 REPLACED SENSOR AND CONNECTOR

PERFORM RECALL 99815
PERFORMED RECALL 998158 REPLACED DEACTIVATION SWITCH
PERFORM RECALL
SWITCH REPLACE SPEED CIONTROL SWITCH
37838 RECALL INSTALL DEACTIVATION SWITCH
PERF RECALL

PERF RECALL
76733 RECALL 96815 INSTALL NEW SPEED CNTRL SWTC
? COMPLETED RECALLS-CAMPAIGN 99815
RECALL COMPLETE
RECALL COMPLETE
RECALL COMPLETE
PERFORMED RECALL 99815-INSPECTED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH
1 PERFORM RECALL 99815 BRAKE SWITCH
1 PERFORM RECALL 99815 BRAKE SWITCH AND CONNECTOR
REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR
REPLACED CONTROL SWITCH
1 PERFORM RECALL 99815

RECALL RECALL
PERFORMED RECALL
98815 RECALL 69815 COMPLETO RECALL
COMPLETE RECALL

28200 99515 DONE *28

() | REPLACED SWITCH PER RÉCALL 98815 RECALL | 98815 REPLACE SWITCH AS PER RECALL REPLACED SPEED CONTROL SWITCH.

64420 RECALL WARR REPLACE CRUISE DEACTIVATOR SWITCH AND CONNECTOR

78779 78 PERFORM 99815 R.R. SPEED CONTROL, DEACTIVATION SWITCH AND CONNECTOR ROAD TEST 102656 99815 RECALL REPLACE BRAKE SWITCH AND. CONNECTOR PER RECALL

REPLACED CONTROL CONTROL DEACTIVATION SWITCH PER RECALL 88815, CONSEQUENCIAL DAMAGE TO VALVE BLOCK, SWITCH WAS STRIPPED AND PULLED TI-

SCOTT COS-2265

1 PERFORM SPEED CONTROL DEACTIVATION SWITCH
BNSTALL BRAKE SWITCH KIT
COMPLETED 99816
REPLACE SPEED CONTROL DEACTIVATION SWITCH
REPLACE SPEED CONTROL SWITCH
DEACTIVATION SWITCH 99816
64424 REPLACE SWITCH AND CONNECTOR BLEED REAR BRAKES

REPLACED SWITCH FOR SPEED CONTROL DEACTIVATION PERRECALL

REPLACE DEACTIVATION SWITCH AS PER RECALL.
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL.

99315 PROGRAM PERFORM RECALL REPLACE SWITCH PERFORMED RECALL RECALL 98S15 INSTALLED MODIFICATION FOR CRUISE CONCTROL 11536 RECALL 99815 RECALL 99815 REPLACE SWITCH AND HARD SELL RECALL 99915 RECALL REPLACED CRUISE DEACTIVATION SWITCH PER RECALL REPLACE SPEED CONTROL SWITCH PER RECALL 90815 PERFORM RECALL 99815, REPLACE CRUSE DEACTIVATE SWITCH. PERFORM RECALL AS OUTLINE BY FOMOCO PERFORM RECALL AS PER NOTICE PERFORMED RECALL 81782 RECALL WP40 PEFORMED 99815 RECALL, REPLACED SPEED CONTROL DEACTIVATION SWITCH. REPLACED DEACTIVATION SWITCH 98892 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL. REPLACED SWITCH PER RECALL TECHNICIAN COMPLETED RECALL 89816 - SPEED CONTROL DEACTIVATION SWITCH RECALL REPL SW. PER NOTIFICATION RECALL 99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99815 RECALL INSTRUCTIONS RECALL SPEED CONTIDEACTIVATION IN CAMPAIGN COMPLETED PERFORMED CRUISE CONTRO SWITHC RECALL PERFORMED RECALL BY INSPECTION AND REPLACING SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER REPLACE SWITCH AS PER RECALL PERFORM 99315 RECALL RECALL SW REPLAC

PERFORM RECALL. REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR AS PER THE TECHNICAL INSTRUCTIONS

RECALL 99816 99815 RECALL PERFORMED

PERFORMED RECALL

1 JOS COMPLETED REPLACED DEACTIVATION SWITCH

PERFORMED RECALL 98815, REPLACED DÉACTIVATION SWITCH AND REWIRED PIGTAIL INSTALL SWITCH AND CONNECTOR

94326 RÉC WARR 627 PERFORM RECALL 98816
DID RÉCALL 998158
1 REPLACED DEACTIVATION SWITCH
PERFORM SPEED CONTROL DEACTIVATION SWITCH RECALL
REPLACE SPEED CONTROL SWITCH AND HARD SHELL CONNECTOR PER RECALL 99815.
REPLACED SPEED CONTROL CABLE PER RECALL
99815 98615
RECALL 99815 RECALL 99815 REPLACED SWITCH
RECALL 99815 RECALL 99815 REPLACED SWITCH

1 REPLACED CONNECTOR & SWITCH

PERFORMED RECALL

RECALL SW REPL REPLACE SWITCH REPLACE DEACTIVATION SWITCH AS PER RECALL 78381 98816 SPEED CONTROL RECALL 0.5 998158 PERFORMED RECALL AS PER RECALL PERFORMED RECALL 1 COMPLETED RECALL 47264 PERFORMED SPEED CONTROL RECALL 99815 PERFORM RECALL 88815 COMPLETED PERFORMED RECALL 99815 CRUISE DEACTIVATION .6 HR 2058 70071 PERFORM 99815 RECALL , REPLACED SWITCH PERFORMED RECALL 98815 48624 REPLACE SPEED CONTROLL DEACTIVATION SWITCH AND CONECTOR. 20217 REPLACED SPEED CONTROL DEACTIVATION SWITCH, 8-2 8274 REPLACE DEACTIVATION SWITCH AS PER RECALL MAINTENANCE RECALL COMPLETE RECALLSW SW REPLACE 1 REPLACE HARD SHELL CONNECTOR PERFORMED RECALL RPELSAEC CC CONNETOR AND SWITCH PERFORM RECALL RECALL COMPLETE REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98815 PERFORM RECALL=98815 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815 93124 RECALL 99915 RECALL 99615 REPLACE SWITCH, AND HARD SHELL 1 PERFORM RECALL

E782-625 118

63118 RECALL PERFORMED RECALL 98815 INSTALL SWITCH AND HARD SHELL 88815 REPLACE CRUISE DEACTAVATION SWITCH 39708 SAME PERFORM RECALL 99815 7158 76215 RECALL 99515 REPLACE THE DEACTIVATOR SWITC 26800 RECALL INSPECT AND REPLACE SPEED CONTROL SWITCH JH 1 INSTALL CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL PERFORM RECALL 00915

PEROFMREDE THE RECALL 99815

A SHORT IN THE SPEED CONTROL SWITH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUISE ALSO A FIRE COULD DEVOPE. REPLACE SPEED CI 99815 99815 63197 99615 REPLACED CRIUSE SWITCH REPLACE CRUISE SWITCH 105291 PERFORMED RECALL 99816. 132520 PERFROM RECALL BOS15 INSTALL DECTIVITION SWICTH

PERFORM RECALL 98815 99S15 99815 PERFORMED RECALL 1 RECALL 988159 3 REPLACE SPEED CONTROL DEACTIVATION SWITCH PERFORM RECALL 99815 CRUISE CONTROL SWITCH REPLACED DEACTIVATION SWITCH AND CONNECTOR COMPLETED RECALL 98515 REPLACEMENT OF SPEED CONTROL DEACTIVATION SWITCH

112780 PERFORM RECALL 96815B. (REPLACE CRUSE 6WITCH AND CONNECTOR) PERFORMED RECALL PERFORMED RECALL AS NEEDED ALL OK

1 REPL CONN. AND DEACT SWITHCH 85452 RECALL W INSTALL SWITCH AND CONNECTOR ME INSTALL DEACTIVATION SWITCH AS PER 98815

VERIFY RECALL AND PERFORM PER INST. 55170 PERFORM 99815 RECALL REPLACED THE SWITCH PER RECALL 98815 99815 99815 RECALL OTHER 88815 PERFORM RECALL RECALL COMPLETED

65469 99815 RECALL W PERFORM 99815 RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH

0 99815 PROGRAM

ů

REPLACE SWITCH 112850 RECALL W REPLACE DEACTIVATION SWITCH AS PER RECALL \$9815 PERFORMED RECALL 99815 INSTALL SPEED CONTROL SYSTEM REPLACE SWITCH PER RECALL 87801 DID RECALL 90S15 CRUISE CONTROL.

INSOECT FOR RECALL 09S15

99815 COMPLETED

RECALL

RECALL

RECALL

99916 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO

RECALL

99315 RECALL COMPLETED ALL OK.

RECALL SW

REPL, CRUISE 8W

78205 99S15 WARR REPLACED SWITCH AND CONN

PEROFFIMED RECALL 99816B.

86326 88615 NECC TO REPLACESPEED CONTROL DEAC 8W PER RECALL

REPLACE CRUISE SWITCH PER RECALL

REPLACE SPEED CONTROL SWITCH

REPLACE SWITCH PER RECALL

COMPL; RECALL 89816

CAUSE: SPEED CONTROL

CORRE: REPLACE DEACTIVATION SWITCH AND CONNECT

1 REPLACED CRUISE SWITCH, BLEAD BRAKES, TEST DROVE

PERFORM RECALL REPL DEACTIVATION SWITCH

RECALL COMPLETE REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL.

57621 REPLACED DEACTIVATION SWITCH AS PER RECALL 90S156 0.5HR ADMIN 0.1HR

PERFORMED RECAL 99815

99815 PERFORMED RECALL 99815

PERFORMED RECALL

REPLACE SW AND CONNECTOR

PERFROM RECALL

PERFORMED RECALL

IRC 99815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

84687 REPLACED BRIKE CONTROL KIT AS PER RECALL 99815.

123288 RSS15 WARR VERIFIED RECALL PERFORMED RECALL 98815 NOTE DRIVERS GLASS INOP MYOR TO REPAIRS 2321

REPL SWITCH & CONNECTOR

INSTALL NEW DEACTIVATION SWITCH AND HARDSHELL CONNECTOR, 89S15

RECALL 99815 COMPLETED

PERFORMED RECALL

78803 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER 99815 RECALL

11634

99815 99815 DONE

PERFORMED RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

1 PERFORM RECALL

INSTALLED DEACTIVITING SWITCH AS PER RECALL 99815 , TECH 49-2418 85565 99815 C-CONTROL RECALL .5 TEST DROVE & HAD NO PROBLEMS

PERFORMED RECALL

PERFORMED RECALL

REPLACED SC DEACTIVATION SWITCH 99815

RECALL 998168 PER RECALL INSTRUCTIONS.

99815

99615 RECALL PERFORMED

AS PER RECALL

REPLACE BRAKE SWITCH PER RECALL

SPEED ONTRUDEACTIVEN SWITCH RELIGNITIVERS SAFETY RECALL 99315

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL

REPLACED DEACTIVATION SWITCH

REPAIRED AS PER RECALL.SPEED CONTROL DEACTIVATIONSWITCH

PERFORMED RECALL 99515

A SHORT IN THE SPEED CONTROL SWITH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUSSE ALSO A FIRE COULD DEVOPE, REPLACE SPEED CA

1 PERFORM RECALL

REPLACE SWITCH AND HARD SHELL

RECALL 99815 COMPLETED

INSTALLED NEW CONNECTOR AND BRAKE PRESSURE SWITCH BLED SYSTEM AND CHECKED AND OK

COMPLETED RECALL 99815

X 99615 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

RECALL COMPLETED

REPLACED DEACTIVATION SWITCH

RECALL REPLACE SWITCH.HARDSHELL CONNECTOR& BLEED BRAKES

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

PERFORMED RECALL 99915

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL

REPLACE SPEED CONTROL SWITCH

PERFORM RECALL

1 PERFORMED RECALL 66815

REPLACED SPEED CONTROL SWITCH.

COMPLETED RECALL 89S15

82504 PERFORMED RECALL 19315 INSTALL NEW DEAVTIVATION SWITCH AND CONNECTOR

REPLACED DEACTIVATION SWITCH PER RECALL

RECALL

99915

The product of the

1 COMPLETED RECALL AS REQUESTED.

COURT COM-1708G

73827 W REPLACED SPEED CONTROL SWITCH PER RECALL 69315.
PERFORM RECALL 99316
X COMPLETED
PERFORMED SPEED RECALL 99616
PERFORMED RECALL AS PER INSTRUCTIONS
REPLACE KIT PER RECALL
150060 42 WP40 99316 RECALL REPLACE SWITCH

PERFORMED RECALL 90\$15

INSTALL DEACTIVATION SWITCH PER RECALL

PERFORM RECALL 99815 REPLACE CRUISE DUMP SWITCH BLEED BRAKES PERFORM RECALL 88394 W REPLACED SPEED CONTROL SWITCH PER RECALL 98315. REPLACED DEACTIVATION SWITCH RECALL SW CRUISE SW PERFORMED CRUISE CONTROL RECALL 90816 RECALL PERFORM RECALL 99815 RECALL 98615 COMPLETED RECALL 99615 SHORT MAY DIASABLE SPEED CONTROL OR CAUSE BRAKE LIGHT FUSE TO OPEN DISCONNECT CONNECTOR FROM CRUISE DEACTIVATION SWITCH & PROTE CT 51 1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99815 - MILES OUT 88001 112562 WARRANTY PERFORMED RECALL \$6815 AS PER RECALL INSTR. ROAD TEST OK, PERFORM RECALL REPLACE SWITCH 32458 REPLACED CRUISE CONTROL DEACTICATION SWITCH AND HARD SHELL CONNECTOR PER 99815 73334 RECALL 98516 RECALL 99616 94850 PERFORMED RECALL 99815 PERFORM RECALL 99815 SPEED CONTROL RECALL REPLACED DEACTIVATION SWITCH PERFORMED RECALL 90815 - CHECK AND REPALCED DEACTIVATION SWITCH AND REHCEKC OK PERFORMO RECALL. INSTALLED DEACTIVATION SWITCH PER RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL 17024 RECALL 99815 INSTALL NEW SWITCH AND CONNECTOR PERFORMED RECALL 80615B. 97586 INSTALLED NEW CONNECTOR AND SWITCH AS PER REGALL. 1 DE REPLACED SWITCH CARLE PERFORM RECALL 99815 RECALL 99815 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDS COMPLETED RECALL PERFORNED RECALL PERFORMED RECALLIBERS 15 PERFORMED RECALL PREFORMED RECALL PERFORMED RECALL

1. Car. May 11.

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

REPLACE SPEED CONTROL SWITCH PER RECALL 99315
68785 RECALL 99815 INSTALLED UPDATED SPEED CONTROL DEACTIVATION SWITCH, CHECKS OK

REPLACED DEACTIVATION SWITCH & CONNECTOR HOUSING AS PER 99815

98515 REC RECALL 98815

1 PERFORM RECALL

RECALL ELECTICK OUT TIME AND REPLICE PLUID SWIPER RECALL WE TECSOO.

PERFORM RECALL

. RECALL 99815 COMPLETED

PERPORMED 99515

X REPLACE SEED CONTROL SWITCH AND CONNECTOR

REPLACE KIT PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

1 PERFORMED RECALL

PERFORMED RECALL

COMPLETED RECALL PER INSTRUCTIONS

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER SAFETY RECALL 98816.

PERFORM RECALL 99815

REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

PERFORM RECALL

X 88815 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

CHECK FOR RECALL PERFORM RECALL

NSTALL SWIYCH AND CONNECTOR

41189 INSTALLED NEW SPEED DEACTIVATION SWITCH TO COMPLETE RECALL 69815

99816 COMPLETED REPLACED SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99816

REPLACE SWITCH AND CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

RECALL PERFORM RECALL 99815

28498 90815 W REPLACE SEED CONTROL SWITCH AND CONNECTOR ROAD TEST, RECOMMEND HOSE REPLACEMENT TECH NUMBER 2853 GA

PREFORMED RECALL PER BULLETIN #00515

PERFORM RECALL

RECALL RECALL

27888 RECALL 99815 INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH PER INST

RECALL REPLACE DEACTIVATION SWITCH SPEED CONTRO

REPLACE BPEED CONTROL DEACTIVATION SWITCH PER RECALL 88815

X 99815 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR.

PERFORMED OPEN RECALL 99815

REPLACE SWITCH AND CONNECTOR PER RECALL

RECALL CRUISE

SW REPLACE

```
RECALL REPLACE SWITCH ABY.
94004 RECALL 99815
REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 98516
1 PERFORMED RECALL
REPLACED SPEED CONTROL SWITCH PER RECALL
RECALL COMPLETED
SPEED CONTROL DEACTIVATION RECALL
REPLACE SWITC AND CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815
126330 INSTALLED RECALL
INTERN REPAIR REMOVED TAPE SECURE THE SPEED CONTROL. DEACTIVATION SWITCH. LABOR OF 99615E 0.3 HRS. PERMANENT REPAIR REPLACED SP.
98815
PERFORMED RECALL
                         00915
69264 RECALL 993168 .5, ADMIN .1 REPLACED DEACTIVATION SWITCH AND CONNECTOR FER RECALL
RECALL 99815
                     COMPLETED
19815 REPLACE DEACTIVATION SWITCH AND CONNECTOR
PERFORMED RECALL
99815 RECALL INSTALLED MODIFICATION FOR CRUISE CONTROL
RECALL
                     RECALL
J8 PERFORM REGALL REPL DEACTIVATION SWITCH AND CONNECTOR
INSTALL SWITCH
BVS15
                 00815
FACTORY RECALL REMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL.
86273 RECALL DONE.
RECALL 98815 COMPLETED
```

RECALL DONE
182105 WARR REPLACED SPEED-CONTROL DEACDIVATION SWITCH
RECALL ASDESDAFADSFASDED
REPLACED DEACT, SWITCH, BLEED SYSTEM PER RECALL
RECALL COMPLETED
INSTALLED NEW DEACTIVATION SWITCH PER RECALL

. -DONÉ 90\$15
REPLACED CRUISE DEACTIVATION SWITCH
PERFORMED RECALL
1 REPLACED SWITCH

RECALL 99816- REPLACE SPEED COONTROL DEACTIVATION SWITCH
78745 RECALL 00 RECALL 99816
PERFORMED RECALL 99816
PERFORMED RECALL 99815 INSTALL SPEED CONTROL DEACTIVATION SWITCH
RECALL 99816 RECALL PERFORME
RECALL 99816 RECALL PERFORME
43965 PERFORMED SPEED CONTROL RECALL, REPLACED THE SWITCH AND CONNECTOR

REPLACE DECT SWITCH PER RECALL

RESISTIVE SHORT. PERFORM RECALL-ONF PER FOMOCO INSTRUCTIONS.

INSTALL CONNECTOR AND SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHIEL CONNECTOR PERMANENT REPAIR ADMIN 10 4 90

VERIFY RAR SPEED CONTROL HARD SHELL CONNECTOR PER RECALL

76210 W DID RECALL 99815

REPLACED SPEED CONTROL SWITCH PER RECALL

RECALL 98315

DOS 15

127778 90915 PERFORMED RECALL

RECALL COMPLETE

72148 DO RECALL 99815. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARED SHEEL CONNITER. BLEED BRAKE SYSTEM AND ROAD TEST. BRAKES WC

REPLACE SPEED CONTROL SWITCH PER RECALL

RECALL 00815 COMPLETED

RECALL 88515. REPLACE CRUISE CONTROL DEACTIVATION SWITCH & HARDSHELL CONNECTOR PER RECALL 98515.

107290 PERFORMED RECALL

PER NOTIFICATION RECALL 99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99815 RECALL INSTRUCTIONS

99815 RPL EWITCH

REPL SPEED CONTROL CABLE 99815

1 COMPLETED RECALL

RECALL 99815

RECALL 99816 RECALL DRESS

RECALL 99815

PERFORMED RECALL 99815

99915 RECALL

99815 RR SPEED CONTROL SWITCH AS PER RECALL

45250 RECALL WA REPLACE SWITCH AND CONNECTOR

PERFORMED RECALL

108598 PERFORMED RECALL-REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR-ROADTESTED VEHICLE-ALL IS OK.

RECALL COMPLETED

RECALL RECALL

REPLACED DEACTVATION SWITCH AS PER RECALL

INSTALL CRUISE CONTROL CABLE

RECALL

98815 REPLACED DEACTIVATION SWITCH

RECALL REPLACED SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH

RECALL 60815

RECALL REPLACED CRUISE DEACTIVATION SWITCH PER RECALL

RECALL 99816

1 CHECK AND REPLACE SPEED CONTROL DEACTIVATION SWITICH AS PER RECALL.

66715 RECALL 99815 PERFORMED RECALL REPLACED DEACTIVATION SWITCH AND CONNECTOR.

RECALL

RECALL

56977 RECALL W PERFORM RECALL 99615 GA

REPLACE SWITCH & CONNECTOR PER RECALL

149302 PREFORMED RECALL

1 CK AND REPLACE SPÉED CONTROL DEACTIVATION SWITCH & PLUG

REPLACED SPEED CONTROL PER RECAUL

99S15 RECALL

98S15 RECALL

89\$15 SPEED CONTROL RECALL PREFORMED.

RECALL

PERFORMED RECALL 99315

REPLACED SWITCH AS PER RECALL RECALL COMPLETED.

TECHEL WORLPL

RECALL RECALL

RECALL PERFORMED RECALL

Ġ

RC 99815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

99815-----

99815 RECALL 99815 REPLACE SPEE

99815 REPLACE SPEEC CONTROL DEACTIVATION SWITCH AS PER RECAL

B6615 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL C

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR J ROAD TEST.

TECH COMPLETED RECALL AS REQUIREWD

1 REPLACE SPEED CONTROL SWITCH AND CONNECTOR

RECALL 99816

PERFORMED RECAL

RECALL PERFORMED 99S15 RECALL REMOVED AND REPLACED CRUISE DEACTIVATION SWITCH

72271 RECALL WARR REPAIR REPLACE BRAKE SWITCH PER RECALL OLD PART TURNED INTO PARTS DEPARTMENT.

42 99515

RECALL PERFORMED RECALL 19815. C

RECALL REPAIR

PERFORMED RECALL

ADD AJ RINSTALL DEACTIVATION SW PER RECALL...

99815 99615 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL C

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

REPLACE SPEED CONTROL CONNECTOR PER RECALL

RECALL 99815 REPLACE CURISE DEACT SWITCH AND CONNECTOR

-- PERFORMED RECALL

COMPLETED 98915 RECALL RECALL 99815

RECALL PER RECALL

PERF RECALL

REPLACE CRUISE CONTROL SWITCH

REPLACED SWITCH AND CONNECTOR
REPLACE SPEED CONTROL SWITCH

REPLACED SWITCH

RECALL

PERFORM RECALL 99815 SPEED CONTROL SWITCH

RECALL

RECALL

99816

99815

RECALL 00815

PERFORMED RECALL

96816

90315

PERFORMED RECALL 00515

RECALL 99815 PERFORM AS INSTRUCTED

12-625 11646

PERFORM RECALL:

REPLACED SPEED CONTROL DEACTIVATION SWITCH

10/12/1 RECALL 99816 CC42 W PERFORMED RECALL 99815 SPEED CONTROL DEACTIVATION SWITCH.

PERFORM RECALL

INSTALL CRUISE DEACTIVATION SWITCH AS PER RECALL NUMBER 99615

24860 REPLACE SWITCH AND CONNECTOR PER RECALL

INSPECTED AND INSTILLED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL, 99S16. TECH 85-1193

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL

42 99815

PERFORMED RECALL 99816 99815

1 PERFORMED SPEED CONTROL BEACTIVATION SWITCH RECALL

REPLACE DEACTIVATION SWITCH RECALL

REPL SWITCH #600

99615 96615 PERFORM RECALL

REPLACE SWITCH PER RECALL

120742 PREFORMED RECALL 99816 SPEED CONTROL SWITCH

REPLACE DEACTIVATION SWITCH CONECTOR

51885 CHECK AND INSPECT PERFORMED REGALL 99815

PERFORMED RECALL

REPLACE SWITCH PER RECALL

61466 PERFORMED RECALL NO. 98515

REPL SPEED CONTROL CABLE 99815

REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL MISSIS

112973 PERFORMED 99915 REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL 998158 .5 ADMIN .1

INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN

INSTALL CRUISE CONTROL DEACTIVATION SWITCH.

RECALL

99815

FORD SAFETY RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPLACED THE BRAKE PRESSURE SWITCH PER RECALL \$9815

85249 RECALL RECALL 98S15

SPEED ONTRL DEACTYTH SWITCH RPLOMTPERF SAFETY RECALL 99815

REPLACE SWITCH.

79296 RECALL 99815 W 7929 INSTALLED DEACTIVATION SWITCH

PREFORM RECALL

120076 99815 99815 .5 REPLACE SWITCH & CONECTOR

SERVICE CAMPAIGNS SERVICE CAMPAIGNS REPLACED BRAKE DEACTIVATION SWITCH-THREADS CAME OUT OF JUNCT

PERFORMED RECALL

86441 RECALL 99815 DONE DEACT SWITCH REPLACE

COMPLETED RECALL 99815 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 999158 .5 + .1

DM2-620 11041

PERFORM 98815

PER NOTIFICATION RECALL 998(6 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL 998(5 INSTRUCTIONS PERFORMED RECALL 998(5

RECALL

99815 DONE

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHIELL CONNECTOR SERVICE REQUESTED COMPLETED

PERFORMED RECALL

99915

REPLACED DEACTIVATION SWITCH

99816 REPL DEACT SWITCH 99815 REPLACE DEACTIVATION SWITCH PER RECALL

136394 W REPLACE SWITCH RAT.

REPLACE BRAKE PRESSURE SWITCH

RECALL

99\$15 RECALL REPLACED SWITCH

RECALL

99815 REPLACE SWITCH

81908 RECALL 99816B JS .5 HRS REPLACE CRUISE DE-AC. SWITCH

98815 RECALL

99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

101948 RECALL DONE

SPEED CONTROL DEACTIVATION SWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-8HELL, CONNECTOR, PER RECALL, 99816.

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL MISS.

PERFORM RECALL

REPLACE DEACTIVATION SWITCH AND CONNECTOR

81283 REPLACED SPEED CONTRIOL DEACTIVATION SWITCH 998168 .5 HRS. ADMIN ALLOW .1 HRS.

REPLACED SWITCH PER RECALL 96815

PERFORM RECALL 00815

PERFORMED RECALL 98815-REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR.

A99

DONE

REMOVED AND REPLACED SPEED CONTROL SWITCH AS PER RECALL.

REPLACE SPEED CONTROL SWITCH

RECALL 99815

99615

PERFORMED RECALL 99615

RECALL

9815 RECALL

REPLACE SWITCH AND CONNECTOR.

RECALL R-R DEAC SW, INSTALLED NEW, AND CONN. 72727 WARR DONE RECALL 99815 REPLACE BRAKE REPA

RECALLR EPAIR

BBS15 REPL DEACT SWITCH

99815 COMPLETED RECALL

REPLACED DEACTIVATION SWITCH

79349 99815 R AND R SWITCH AND CONNECTOR FOR RECALL

COMPL: REPLACE DEACTIVATION SWITCH

CAUSE: RELACE DEACTIVATION SWIT

CORRE: PERFORME RECALL

MOT C70-728

97726 RECALL 988156 0.5. ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL REMOVE TAPE AND SECURE LABOR OF 99815E 0.8 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 99815B .5 REMOVED TAPED AND SECURED SF DEACTIVATION SWITCH BB\$15 RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONN 1 RECALL COMPLETE 1 INSTALL SWITCH AND CONNECTOR PERFORM RECALL REPLACED CRUISE DEACTIVATION SWITCH PER RECALL RECALL 99816 REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 00915. RECALL 99815 99815 REPLACED SPEED CONTROL SWITCH PERFORM RECALL PERFORM RECALL 1 PERFORMED RECALL 1 93200 REPLACE SPEED CONTROL SWITCH AND CONNECTOR PER RECALL 99S15 RECALL RECALL SPEED CONTROL CONN 99816 RECALL INSTALL CRUISE CONTROL DEACTIVATION SWITCH. 74182 RECALL WAR REPLACE SWITCH AND CONNECTOR GA 99845 99B15 SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99815. FORD SAFETY RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH 99815 88815 REPLACED SPEED CONTROL DEACTIVATION SWITTCH AND HARD-SHELL C 99815 PERFORM RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL RPL SPEED CONTROL SWITCH AND CONNECTOR PER 98816 REPLACE SPEED CONTROL DEACTIVATION SWITCH **SAFETY RECALL** 99815 - REPLACE SPEED CONTROL DEACTIVATION SWITCH REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 98616. 1 PERFORMED REGALL REPLACED DEACTIVATION SWITCH RECALL 99915 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO 7998B RECALL DONE 99815 PERFORMED RECAL 1 PERFORMED RECALL 993158 1 101000 RECALL 00S16, WR PERFORM RECALL 00S15, REPLACE BRAKE PRESURE SWITCH AND CONNECTOR. RECALL DID RECALL

RECALL COMPLETED

NB RC 80816 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

1 PERFORMED RECALL 99915

boxilles OLD1

COMPLETED RECALL 89815 64804 PERIFORMED RECALL 98815, INSTALLED NEW DEACTIVATION SWITCH AND HARDSHELL CONNECTOR. OK. REPKLACE SWITCH AND COMN REPLACED THE SWITCH PER RECALL 99816 RECALL REPLACE DEACT SWITCH 129002 RECALL 9815 WARR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PERFORM RECALL INSTALL REPAIR KIT RECALL 99815 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACEMENT 117797 RECALL 99815 WARR INSTALL BRAKE SWITCH

RECALL 98815 COMPLETED PERFORMED 99\$15 RECALL REPLACE SPEED CONTROL SWITCH PERFORMED RECALL

1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

1 PERFORMED DEACTOR SWITCH RECALL, INSTALLED NEW CRUISE DEACTOR SWITCH, AND CONNECTOR.

RECALL

PERFORM RECALL 99815 SPEED CONTROL DEACTIVATION SWITCH

91632 RECALL 98915 INSTALLED SWITCH AS PER RECALL 98915

FACTORY RECALL COMPLETED RECALL

RPLC CRUISE CTRL DEACTIVATION SWITCH PER 89815

RECALL

P0915

REPALCED DEACTIVATION SWITCH PER RECALL LABOR, 998169 0.5, ADMIN 0.1

LETTER FROM FORD PERFORM RECALL ##X##

PERFORM 99815 RECALL AS INSTRUCTED

31338 PREFORMED RECALL (CRUISE SWITCH)

PERFORMED RECALL 99515

RECALL COMPLETE..

RECALL 99815 - SPEED CONTROL DEACTIVATION SWITCH REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

REPLACE SWITCH PER RECALL

RECALL PERFORM RECALL

MAY CAUSE A SHORT INSTALL THE SPEED CONTROL DEATIVATION SWITCH

INSTALL NEW DEACTIVATION SWITCH AND HARNESS PER RECALL.

PERFORM RECALL

61169 RECALL \$86615 PREFORMED RECALL \$86615 INSTALLED REPLACMENT SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.

RESISTIVE SHORT. PERFORM RECALL-ONP PER FOMOCO INSTRUCTIONS.

? PERFORMED 99816 RECALL, INSTALLED KIT 9G852 REPLACED SWITCH CONNECTOR REPLACED SWITCH AND BLEED BRAKE SYS.

101994 RECALL INSTALL SW AND CONN AS PER RECALL...

RECALL 99616 REPLACE C-C SW

REPLACE SPEED CONTROL DEACTIVATION AND HARD SHEEL CONNECTOR

PERFORM RECALL 99815

REMOVED AND REPLACED SPEED CONTROL SWITCH AS PER RECALL

Š 1184 RECALL 99815

RECALL 66815

89815 RECALL

REPLACED SWITCH

37252 PREFORMED RECALL - DEACTIVATION SWITCH

COMPLETE 99S15 RECALL RECALL PERFORMED RECALL REPLACED SENDER AND CONNECTOR

PERFORM RECALL 99815 COMPLETE RECALL 98816 99315

REPLACED DEACTIVATION SWITCH PER RECALL LABOR 996168 (L6, ADMIN 0.1

INSTALL NEW DEACTIVATION SWITCH AND HARNESS PER RECALL

REPLACE SWITCH PER RECALL

RÉPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL

RECALL 99516

REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

20315

99315.

1 PERFORMED RECALL REPLACED SWITCH

99S15 INSTALLED SWITCH

99315 PERFORM RECALL 99815 RECALL 90615 INSTALLED SWITCH

99815 99515 COMPLETED RECALL 99S18

RECALL PERFORM REALL REPLACED SWITCH AND PLUG PER RECALL

PERFORMED RECALL 99815 PERFORMED RECALL 99815 PERFORMED RECALL 99815 61782 CHRIS DO 99816B PERFORMED RECALL 99815 REPLACE SPEED CABLE

REPLACED SPEED CONTROL SWITCH PER RECALL 99815

REPLACE DEACTIVATION SWITCHAS PER RECALL

VERIFY AND PERFORM RECALL PER INST

REPLACE SPEED CONTROL SWITCH PER RECALL.

COMPLETE RECALL IN TIME NEEDED TO REPLACE MELTED WIRES AND CONNECTORS

99815 99815 COMPLETED

PERFORMED RECALL 99815

IPERMANENT REPAIR) REPLACE SPIEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 965169 X5

99316 99315 RECALL

RECALL 98815

REPLACED SWITCH AND PLUG AS PER RECALL

E962-828 11045

96915 RECALL

boxfiles OLD1

```
RECALL 99315 SPEED CONTROL DEACT SWITCH
REPLACE CRUISE CONTROL SWITCH PER RECALL INSTRUCTIONS
PERFORMED RECALL 98$15
COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.
COMPLETED RECALL 99S15
106419 PERFORMED RECALL 99615 CAUSE RECALL 9981
RNR DEACTIVATION SWITCH
                           PERFORM RECALL 98815
Ċ
                PERFORMED RECAL
95615 REPLACED SWITCH RECALL 99S15
PERFORM RECALL
RECALL 99815
RECALL
                   PERFORM RECALL99S15
46184 RECALL WPB30 PERFORMED RECALL 99815 INSPECT FOR RECALL NO FURTHER ACTION NEEDED
REPLACED THE SWITCH PER RECALL 99515
58905 RECALL INSTALL DEACTMÁTION SWITCH Y
SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED BY FORD I
PERFORMED RECALL 99815
99815
                 98315
REPLACED DEACTIVATION SWITCH
COMPLETED RECALL PER RECALL INSTRUCTIONS
19587 0.5 HR PERFORMED RECALL 909158 REPLACED DEACT, SW. WITH NEW HARD SHELL CONN.
RECALL
                   99515 DISTALLED SWITCH
61737 98S16 REPLACE SWITCH AND HARD SHELL
RECALL REQUIRED
                        PERFORM RECALL
RECALLED BY FORD MOTOR COMPANY COMPLETED RECALL PER LETTER
REPLACED DEACTIVATION SWITCH, PER REGALL.
PERFORMED RECALL 99815
RECALL COMPLETED
RECALL COMPLETED
1 REPLACE SPEED CONTROL SWITCH AND CONNECTOR.
RECALL COMPLETED
                     99315 COMPLETED RECALL
99815 RECALL
REPLACE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
PERFORM RECALL
                        INSTALL SWITCH
99315B
                  99815B
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 99815B .6
RECALL ON CRUISE CABLE
115584 REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 98S15
RECALL COMPLETED
PERF 99815
RECALL REPLACED DE-ACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL
90815
                 RECALL PERFORME
1 CHECK AND REPLACE SPEED CONTROL DEACTIVATION SWITICH AS PER RECALL.
```

REPLACED SPEED CONTROL DEACTIVATION SWITCH, REP. LACED CONNECTOR & BLEED BRAKES PER RECALL 98815

99815 RECALL

PERFORMED RECALL 99818

53697 REPLACED SWITCH PER RECALL 99815

07046 INSTALLED DEACTIVATION PER RECALL INSTRUCTIONS.

RECALL 99515 RECALL; REPLACED DEACTIVATION SWITCH

146388 REPLACE SWITCH AND CONNECTOR.

SWITCH 99315

22/132 RECALL INSPECT AND REPLACE SPEED CONTROL SWITCH JH

RECALL SPEED CONTRIDEACT SWITCH PERFORM RECALL 99615, REPLACE SPIED CONTROL SWITCH & CONNECTOR

60696 RECALL W INSTALL SWITCH 99915 GA

PERFORMED RECALL

RECALL 99815

RECALL 99615 REPLACE SPEED CONTROL CABLE

PERFORMED RECALL

1 RECALL 88615 DONE

REPLACE SPEED CRIL CONNETOR AND SWITCH

SWITCH 99315

PERFORM 99815 RECALL, REPLACE SPEED CONTROL ACTIVATION DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

98515 98815

RECOALL 99815 INSTALLED SWITCH

RECALL RECALL

PERFORM RECALL 99S16 1 08 REPLACED SWITCH

33323 RECALL 99615 REPLACE CRUISE CONTROL SWITCH AND PLUG

100708 RYECALL 0.80 PERFORMED RECALL 99815 AS REQUIRED

RECALL 99815 99815

REPLACE SWICTH

OPEN RECALL PERFORM RECALL

PERFORM RECALL 99615

REPLACED KIT. RECALL COMPLETED.

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99616

RNR DEACTIVATION SWITCH PERFORM RECALL 00S15

RECALL 99815 99815

RECALL COMPLETED

RECALL 98315

RECALL 99815 INSTALLED SWITCH

70676 REPLACE SPPED CONTROL ACTIVATION SWITCH AND CONNECTOR PER RECALL

REWIRED AND REPLACED CONNUBLEED BRAKES

SPEED CONTROL FOUND SPEED CONTROL SWITCH MOUNTED CRACKED AND LEAKING, THREADS IN BRAKE PRES. CONTROL VALVE STRIPPED. REPLACED INSTALLED NEW ISWITCH AND WIRE AS PER RECALL 9981

1 COMPLETED 99816 RECALL 1

20000000

RECALL 98S15 CRUISE DEACTIVATION SWITCH

76910 W RECALL 99315, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR, 998168 .6 .1 ADMIN REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTION AS PER RECALL. 99315 RECALL CRUISE DEACTIVATION 99315 RECALL CRUISE DEACTIVATION 99315 162051 SAFETY RECALL INS 15 W COMPLETED SAFETY RECALLY

1 PREFORMED RECALL 99816 INSTALLED NEW SWITCH

87180 PERFORM RECALL 99815 INSTALL BRAKE PRESSURE SWITCH

PERFORMED 98815 RECALL

REPLACED DEACTIVATOR SWITCH PER RECALL

REPLACE CRUISE SWITCH 1

. REMOVE TAPE AND SECURE DEACTIVATION SWITCH 99815E.3

104424 COMPLEAT 99615

INSTALLED SWITCH PER RECALL

RECALL **20315 REPLACED CABLE**

PERFORM RECALL

REPLACED DEACTIVATION SWITCH PER RECALL

PERFORM RECALL

1 PERFORM RECALL

REPLACED SPEED CONTORL DEACTIVATION SWITCH, CONNECTOR.

199774 WARR DONE RECALL 99815 BRAKE REPAIR KIT

292 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH RECALL 99815

DONE AS PER INSTRUCTIONS

PERFORMED RECALL

PERFORMED RECALL 00815

INSTALL CRUISE CONTROL

DEACTIVATION SWITCH PER RECALL

RECALL PERFFRMED

PEROFRMED RECALL 99815 - CHECK AND REPLACED DEACTIVATION SWITCH AND RECHEKC OK

RECALL 99815 REPLACE SWITCH PER RECALL

RECALL COMPLETED ALL OK.

FACTORY RECALL COMPLETED RECALL

PERFORMED RECALL 99615

PERFORMED RECALL

50330 REPLACED DEACTIVATE SWITCH AND CONNECTOR PER RECALL ROAD TESTED TO CHECK OPERATION OF SPEED CONTROL SYSTEM.

106431 RECALL .5 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S168

1 REPLACED SWITCH

PERFORMED RECAL OPEN RECALL

94370 INSTALL CRIUSE CONTROL DEACTIVATION SWITCH

1 PERFORM RECALL

. INSTALLED CRUISE SWITCH AS PER RECALL 99815

103837 99915 C-CONTROL 999159 .5HRS .5HRS REPLACED CRUISE DEACTIVATION SWITCH

RECALL 99815

RECALL

181997 RÉCALL WARR PERIFMO 99815
97914 REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL
PERFORMED RECALL
RECALL PERFORMED RECALL AS PER FORD INSTRUCTION
INSTALL SPPED CONTROL DÉACTIVATION SWITCH PER R. ÉCALL
OPEN RECALL. PERFORM 99815 RECALL

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
REPLACE SOPEED CONTROL DEACTIVATION SWITCH PER RECALL 08815
RECALL 98815
SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
OPEN RECALL COMPLETED OPEN RECALL
RECALL 98815
REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 98816B.8
X 99815 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
REPLACED DEACTIVATION SWITCH
1 PERFORM RECALL 99815

RECALL INSTALL DEACTIVATION SWITCH

1. RECALL PERFORM 99615 - REPLACE SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL

127816 REPLACE CRUISE DEACTIVATOR SWITCH & CONNECTOR PER 99815 TECH 5223 93870 RECALL 99816 G.6 REPLACED CRUISE CONNECTOR RECALL 99815 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99815 1 PERFORMED RECALL REPLACED SWITCH

REPLACE DEACTIVATION SWITCH AS PER RECALL
38421 REPLIDEACTIVATION SW & CONN
RECALL 98815 INSTALLED SWITCH

RECALL 98315
REPLACED SWITCH AND HARDSHELL
. INSTALLED SWITC
SPEED CNTRL DEACTVTN SWTCH RPLONTPERF SAFETY RECALL 99815
98515
98515

NSTALLED SWITC

REMOVED AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PERFORMED RECALL 89S15

RECALL RECALL
REPLACED DEACTIVATION SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL

99815 99815

REPLACED DEACTIVATION SWITCH

25504 99815 W REPLACE SPEED CONTROL SWITCH AND CONNECTOR GA

1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 998159 .6

99816 RECALL 09915 RECALL COMPLETE

REPAIR AS PER RECALL

DONE

boxfiles_QLD1

REPLACE SWITCH AND HARD SHELL CONNECTOR

37590 RECALL 99S15 WARR REPLACED SWITCH AND CONNECTOR

40184 REPLACE CRUSE BRAKE SWITCH AS PER RECALL 998150

WATALLED SWITCH

300555 PERFOREM RECALL 99815 REPLCRUISE DEACT SWITCH

PERFORMED RECALL 99815

99815 99816 COMPLETED

INSTALLED CRUISE DEACTIVATION SWITCH AS PER RECALL 99615

REPLACED DEACTIVATION SWITCH PER RECALL 1929-159.

PERFORM 86815

PERFORMED RECALL 99\$15

PERFORM RECALL

PEROFMRED THE RECALL 90515

PERFORM RECALL 90515

PERFORM RECALL

REPLACED DEACTIVATION SWITCH

PERFORM RECALL 96616

PERFORM RECALL

PREFORMED RECALL AS PER 99815

PREFORM MIS15 AS INSTRUCTED

RECALL

99815 RECALL REPLACED SWITCH

99815

RECALL PERFORME

PEROFMRED THER RECALL 99815

97000 REPLACED SPIEED CONTROL DEACTIVATION SWITCH PER RECALL 99815 FP98652

PERFORM RECALL

77896 RECALL RECALL 99815

993159 0.5

REPLACE DEACTIVATION SWITCH

DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

99815 RECALL

REPLACED BRAKE SWITCH PER RECALL

INSTALLED NEW SWITCH

1.08 REPLACED SWITCH

RECALL

98515 RECALL

110040 90S15 INSTALLED NEW SWITCH

REPLACE SWITCH

RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15

PERFORM RECALL.

SYSTEM TESTED, CRUISE NOT WORKING, PERFORMED NGS DIAG, PASS PID MONITOR, PP TESTED FOUND PRESSURE SWITCH SAD, SERVICE

PERFORMED RECALL

30000 RECALL PERFORMED RECALL 90816

OPEN RECALL

PERFORM RECALL

69815

99816 REPLACED CRUIBE CONTROL DEACTIVATION SWITCH

DESTRUCTION AND ADDRESS OF

```
RAR CRUISE CONTROL SWITCH
RECALL 99815
                     RECALL 00915
1 PERFORMED RECALL
PERFORMED RECALL 99816-INSTALL SWITCH KIT. NOTE FRONT SND HAS DAMAGE HOOD WILL NOT CLOSE. PROPERL
RECALL COMPLETED
RECALL 99816 INSTALLED DEACTIVATION SWITCH PER RECALL
1 COMPLETED RECALL 98815 1
RECALL 99815 SPEED CONTROL
35631 REGALL, REPLACE SPEED CONTROL DE-ACTIVATION SWITCH PER RECALL 99315.
90815
                  P0615
OPEN RECALL PERFORM 98S15 RECALL
99615 RECALL
                     99815 RECALL COMPLETE
RECALL COMPLETED
REPLACED CRUISE CONTROL DEACTIVATION SWITCH
LINKNOWN
                     INSTALL CRUSE SWITCH AND CONNECTOR PER 988 16
95858 RECALL WARR REPLACED DEATIVATING SW AS PER RECALL
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 99S158 .6
RECALL BOS15
REPL SWITCH PER RECALL
102548 REPLACE DEACTIVATION SWITCH PER 99816 RECALL
INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL
RECALL
                   99815
PERFORM RECALL
                        INSTALL SWITCH
```

REPLACED DEACTIVATION SWITCH 54569 PERFORM RECALL 08509 INSTALL BRAKE PRESSURE SWITCH 71177 PERFORMED RECALL 98S15 COMPLETED RECALL PERFORMED RECALL REPLACE SWITCH AND CONNECTOR REPL SPEED CONTROL DEACTIVATION SWITCH PER RECALL #89816

RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15

99815 RECALL

161670 RECALL 99815 RECALL 99815

RECALL COMPLETE

OPEN RECALL

98815 COMPLETED RECALL 99815

00915 RECALL PERFORME

135037 WARR 998158 .5 REPLACE BPEED CONTROL DEACTIVATION SWITCH PER RECALL

REPLACE SWITCH PER RECALL

REPLACED SWITCH & CONNECTOR PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL

COMPLETED RECALL PERFORM RECALL

E063 8

11862

```
PERFORM SPEED CONTROL RECALL

98915 - PERFORM RECALL REPLACED SWITCH AND CONNECTOR AND ROAD TEST

RECALL

98815 REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

998158

1 PERFORMED RECALL 98915

51495 PERFORMED RECALL 98915

91495 PERFORMED RECALL

PERFORM RECALL PER TECHNICAL INSTRUCTIONS IN RECALL BULLETIN REPLACE SPEED CONTROL DEACTIVATION SWITCH& HARDSHELL CONNECT

INSPECT AND OR PERFORM RECALL INSPECTED AND OR PERFORMED RECALL AS PER RECALL INSTRUCTIONS.
```

RECALL 98915 REPLACED SWITCH

RECALL MOSTS INSTALLED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 998168 X5 1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 996168.6 R&R SWITCH AND CONNECTOR RECALL REPLACE PRESSURE SWITCH AND HARNESS PER RECALL DONE AS PER INSTRUCTIONS 72116 0.5 909158 RECALL REPLACE SPEED CONTROL SWITCH RECALL REPLACE PREAS SWITCH AND CONNECTOR PER RECALL 99815 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT RECALL 99815 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT COMPLETED RECALL LETTER PERFORMED RECALL AS PER FACTORY INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTORS. AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS RECALL PERFORME 99815 89865 PREFORMED RECALL 99915 69615 RPL SPEED CONTROL DEACTIVATION SWITCH DEFECTIVE SPEED CONTROL **DOS 15 RECALL PERFORM REPLACEMENT** 78153 RECALL WP40 PERFORM RECALL REPLACE BRAKE PRESSURE SWITCH AND CONNECTOR 100376 RECALL REPLACED SNSOR RECALL REPLACE CRUISE SWITCH 82404 PERFORM RECALL REPLACE SWITCH AND CONNECTOR#1 89816 RECALL CRUISE DEACTIVATION 99815 RECALL CRUISE DEACTIVATION REPLACED DEACTIVATION SWITCH PER RECALL SPEED CONTROL SWITCH 99315 RECALL 98815 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN. REPALCED SPEED CONTROL DEACTIVATOR SWITCH PER RECALL LABOR 998158 0.5. ADMIN 0.1 72365 PERFORM RECALL 99815 SPEED CONTROL 99\$15 REPLACED CONNECTOR AND SWITCH

99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN.
PER RECALL 99815

RECALL 89S15 COMPLETED RECAL

RECALL 90S15

COMPLETED RECALL 99615

101668 RECALL 698188 0.5HR8 REPLACE SWITCH AND CONICTOR TK372

REPLACE DEACTIVATION SWITCH AND CONNECTOR

1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 19816B .8

DOOR LOCK SWITCH

SWITCH ASSEMBLY-POWER DOOR LOCK - REPLACE

REPLACED SWITCH ASY

REPLACED SWITCH & CONNECTOR4

PERFORM 99S 15 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACEMENT RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH

98815

99815 PERFORMED RECALL

82357 RECALL 99815 REPLACED SWITCH.

98515 CCIDE ACTIVATION SW REGALLS8515 CCIDE ACTIVATION SW REGALL

90315 RECALL

REPLACED SWITCH AS PER RECALL

49/70 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL INSTRUCTIONS

PERFORM RECALL 99815

REPLACED SWITCH

1 PERFORM RECALL

PERFORMED RECALL 90815

99815

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN.

REPLACE SWITCH PER RECALL

RECALL COMPLETED

OPEN RECALL COMPLETED OPEN RECALL

RC 88815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

PERFORM RECALL 19916- REPLACE CRUISE CONTROL DEACTIVATION SWITCH.

1 REPLACED SWITCH PER RECALL 99816

PERFORM RECALL 99815

COMPLETED CAMPAIGN 99815 REPLACED SPEED CONTROL CABLE

PERFORMED RECALL AS PER INSTRUCTIONS

103713 RECALL WP40 PERFORMED RECALL REPLACED BRAKE PRESSURE SWITCH

SPEED CNTRL DEACTIVTIN SWITCH RPLCMTPERF SAFETY RECALL 99815

CHECK AND REPAIR AS REQUIRED

REPLACE SPEED CONTROL SWITCH PER RECALL

82864 PERFORMED RECALL ON SPEED CONTROL DEACTIVATION SWITCH

PERFORMED 69615 RECALL, REPLACED SWITCH AND CON NECTOR.

PERFORMED RECALL 99815 REPLACED SWITCH AND SHELL CONNECTOR.

RECALL 08915 COMPLETED

RECALL 98515

RECALL, COMPLET

REPLACE SPEED CONTROL DEACTIVATION SWITCH ASPER RECALL INSTRUCTIONS

REPLACE SWITCH AND CONNECTOR

1 0.6 REPL CC DEACTIVATION SWITCH PER RECALL

MO2-020 1100

REPLACED SPEED CONTROL SWITCH INSTALLED SWITC COMPLETED PER INSTRUCTIONS 74862 RECALL 99615 INSTALLED RECALL 99615 REPLACE SPEED CONTROL DEACTIVATION SWITCH 99315 PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99815 RECALL INSTRUCTIONS 1 REPALACED DEACTIVATION SWITCH AS PER RECALL 99816 MILES OUT 88308 REPLACE SWITCH & CONNECTOR. REPLACE SPEED CONTROL DEACTIVATION SWITCH REPLACE DEACTIVATION SWITCH AND HARDSHELL CONNECTOR. 99815 RECALL PERFORMED PERFORM SAFETY RECALL 99816 RECALL 99815 RECALL REPLACED SWITCH CONNECTOR AND BLEED SYSTEM 98515 99815 COMPLETED 90515 99815 COMPLETED 171838 RECALL REPLACE CRUISE DEACTIVATION SWITCH & CONIN 94

104765 RECALL 998169 0.6, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL

REPLACED DEACTIVATION SWITCH PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL 99815 BOX B COMPLETE, RECALL

1 PERFORM RECALL, REPLACE SWITCH

REPLACE SWITCH PER RECALL 99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 99815B 0.5, ADMIN 0.1

93518 PREPORMED RECALL 89815

91200 RECALL PERFORMED CRUISE CONTROL DEACTIVATION SWITCH.

PERFORMED RECALL

F RC 99815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE REPL DE ACTIVATION SWITCH

FACTORY RECALL COMPLETED RECALL

PER RECALL PER RECALL SENSOR RECALL SESSIS

97000 RECALL INSTALLED CRUISE CONTROL DEACTIVATION SWITCH AND BLED REAR BRAKES AS PER RECALL
INSTALL CRUISE CONTROL DEACTIVATION SWITCH
RECALL LETTER PERFORMED RECALL AS PER FACTORY INSTRUCTIONS
98126 RECALL 998158 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
REPLACED SPEED DEACT SWITCH IAW RECALL # 98515
98815, REPLACE DEACTIVATOR SWITCH
RECALL 99815 SPEED CONTROL ACTIVATION SWITCH REPLACEMENT COMPLETED

040-020 11674

REPLACED SWITCH AND CONNECTOR 36860 99815 W REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL, 6115 REPLACED DEACTIVATION SWITCH REPLACE SPEED CONTROL DESCRIVATION SWITCH RECALL 99315 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO RECALL 99815 REPLACED SWITCH 96615 99815 PERFORM RECALL

REPLACE SWITCH

1 REPLACED DEACTIVATION SWITCH AS REQUIRED REPLACED SPEED CONTROL DEACTIVATION SWITCH PER, RECALL LABOR 999168 0.5. ADMIN 0.1 45749 PERFORMED RECALL 99315. 1 REPLACE DEACTIVATION SWITCH AS PER RECALL 998 96815 RECALL 99815

88551 R R DEACTIVATOR SWITCH PER RECALL

RECALL 99915

1 PERFORM RECALL

RECALL 99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

99815 RECALL RECALL

108685 RECAL INSTALL CONNECTOR AND SWITCH,6383,2843

RECALL RECALL 99615

INSTALL SPEED CONTTROL REPAIR KIT

1 RECALL 99S158 C-C A99 CORR 42

RECU99815 PERF . RECALL, LAST VISIT IT WAS TEMP REPAIR, REPLISENSOR AND WIRING

ADD AJ REPLACED DEACTIVATION SWIBLEED BRAKE SYSTEM RECALL 99815...

NOTE: ORIGINAL COOLING SYSTEM HOSES, ALSO RECOMMEND THERMOSTAT. COOLING SYSTEM FLUSH AND POWER STEERING SYSTEM FLUSH (\$560.00 PART)

PERFORMED RECALL 1

100542 RECALL 99515 RECALL 99515 REPLACE BRAKE: SWITCH AND HARD SHELL

RECALL 99315 COMPLETED

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH

COMPLETED RECALL

PERFORMED RECALL PERFORM RECALL **SPEED CONTROL SWITCH RECALL**

RECALL SPEED CONTROL REPLACE DEACTIVATION SWITCH COMPLETED RECAL 99S15 RECALL 79123 R R SPEED SWITCH BLED REAR BRAKES AND TEST. DROVE 1 PERFORM RECALL 99816

PERFORMED RECALL 99815

129792 99615

68443 RECALL WPC RECALL 66815

RECALL

PGS15

OPEN RECALL PERFORMED RECAL

PERFORMED RECALL
PERFORMED RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL RECALL

1 PERFORM RECALL

REPLA DEACTIVATION SW PER RECALL.

REPLACE SPEED CONTROL DEACTIVATION SWITCH

SPEED CTRL DEACTYTH SWTCH RPLCMNTPERF SAFETY RECALL 99515

PERF RECALL 99615

RECALL

DID RECALL

PERFORM SPEED CONTROL DEACT SW RECALL MIS15

1 PERFORMED RECALL

CHECK AND REPAIR AS REQUIRED

PERFORMED OPEN RECALL

65471 RECALL 99515 INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH PER INST

RECALL SPEED CONTR SWITCH

PREFORM RECALL

PERFORMED RECALL 99815

REPLACE 89S15B 0.5 ADMIN REMOVE, TAPE AND SECURE THE SPEED CONTROL DEACTIVATION SWITCH

62944 RECALL 90315

PERFORM RECALL

1 1 PERFORMED RECALL 89\$15

25745 98815B .5 .5 RECALL

RECALL 89915

REPLACE SWITCH PER RECALL

RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

9815 PERFORM RECALL 99815

DELECTION PROPERTY MAY IN

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99815.

PREFORM RECALL

998168 0.5

REPLOED CRUISE DEACTIVATION SWITCH 99S16

INSTALL NEW CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL 99515.

67810 RECALL 99816 5 W PERFOM RECALL 99816

REPLACE SPEED CONTROL SWITCH #490##

REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL

1 08 REPLACED SWITCH

90815

REPLACE CRUISE CONTROL SWITCH PER RECALL

MO11 030-72

RECALL 89315

INSTALL SENSOR AND CONNECTOR

PERFORM RECALL

RECALL 99815 DEACTIVATION SWITCH CCC2 BRAKE VALVE THREADS STRIPPED. CAUSE, ASSEMBLY FUNCTION TESTED, REMOVED DEACTIVATION SWITCH FOR RECHECK AND REPAIR AS REQUIRED

1 PERFORM RECALL REPLACE SWITCH
PERFORMED RECALL 99515
29982 RECALL WARR PREFORMED RECALL 98515
99515 RECALL
CHECK AND REPAIR AS REQUIRED
RECALL COMPLETED
REPLACED BRAKE SWITCH, RECHECKED OKAY.
REPLACED THE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

PERFORM RECALL

SHORT MAY DIASABLE SPEED CONTROL OR CAUSE BRAKE LIGHT FUSE TO OPEN DISCONNECT CONNECTOR FROM CRUISE DEACTIVATION SWITCH & PROTE CT E: 96815

REGALL COMPLETE
REPLACED DEACTIVATION SW PER RECALL
RECALL 99815 RECALL

REPLACED SPEED CONTROL SWITCH

1 INSTALLED SPEED SWITCH 1

PERFORMED RECALL
RECALL 99S15 COMPLETED,
65861 79 PERFORM 99S16 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
1 RECALL COMPLETE
REPLACED CRUISE CONTROL SWITCH 7 CONNECTOR

PERFORMED RECALL

94410 RECALL 998168 0.5, ADMIN 0.1, REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL INSPECT & REPLACED DEACTIVATION SWITCH PER RECAL REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS DIRECTED BY 99815 SAPETY RECALL 99816 REPLACE SPIED CONTROL DEACTIVATION SWITCH REPLACED DEACTIVATION SWITCH AS PER RECALL.

RECALL COMPLETE
PERFORM RECALL 99S15
48675 RECALL REPLACED BRAKE SWITCH
RECALL 98S15 REMOVED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98S15

2002-026 11857

RECALL 998:15

INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1
REPLACE DEACTIVATION SWITCH AND CONNECTOR
36739 REPAIR AS PER RECALL

1 REPLACED SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR IPER RECALL

RECALL PERFORMED RECAL

79990 RECALL 983158 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL D RC 99315 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

99915 99915

RECALL PERFORMED RECAL

1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 998158 X8

REPLACE CRUISE DEACTIVATE SWITCH AND CONNECTORE PER RECALL

PERFORMED RECALL 99815

68550 RECALL 99615 REPLACED 8PEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CINNECTOR LABOR ALLOWANCE .5 HRS LABOR OPER 96515B ADMIN

17191 PERFORM ERCALL

PERFORMED CRUISE CONTROL RECALL 99815

REPAIR AS PER RECALL

COMPLETE RECALL

PERFORM 89815 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 988158 .5 ADMINISTRATIVE ALLOWANCE ADMIN .1

1 PERFORMED RECALL

RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL.

99815 99815

83423 99515 RECALL 98\$15 REPLACE DEACTIVATOR SWITCH

REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER 99815

REPLACED SWITCH & CONNECTOR PER RECALL

REPL DEACTIVATION SWITCH

99815 99815 RECALL COMPLETED

PREFORM RECALL

182232 REMOVED AND INSTALLED NEW BRAKE DEACTIVATION SWITCH PER RECALL 99815.

REPLACED THE SPEED CONTROL DEACTIVATION SWITCH PER RECALL INSTRUCTIONS

REPLACED SPEED CONTROL DEACTIVATION SWITCH

AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

PERFORMED RECALL AND REPLACED SPEED CONTROL DEACTIVATION SWITCH ASSY.

SAFETY RECALL

99815 - REPLACE SPEED CONTROL DEACTIVATION SWITCH

99S15 RAR ACC CABLE

PERFORMED RECALL

PERFORMED RECALL 99815 SPEED CONTROL SWITCH INSTALLED

REPLACED SPEED CONTROL, DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL.

PERFORMED RECALL 99815

REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR PER RECALL 99815

REPLACE SPEED CONTROL SWITCH

RECALL RECALL

PERFORMED RECALL

RECALL PERFORMED RECALL 09816

1 REPLACED SWITCH AS PER RECALL

RECALL REPLACE SPEED CONTRIDEACT SW

A SHORT IN THE SPEED CONTROL SWITH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUSE, ALSO A FIRE COULD DEVOPE, REPLACE SPEED C

RECALL 98815 - B - RECALL

135334 RECALL 99815B 0.5 0.5 REPLACE HARDSHELL, CONN. AND DEACTIVATION SWITCH

RECALL 99815

PERFORMED RECALL: REPLACED C-C DEACTIVATION SWITCH

REPLACE DAMAGED BRAKE PROPORTIONING VALVE DAMAGED WHEN INSTAILLING ORIGINAL RECALL PART

REMOVE FOR RECALL SWITCH BROKE OFF IN BLOCK HAD TO REPLACE BLOCK.

REPLACE SWITCH

83215 COMPLETED RECALL 98615.

55440 PERFORMED THE RECALL FOR THE SPEED CONTROL 99S1 5

1 REPLACED CRUISE DEACTIVATION SWITCH AS PER RECALL 88\$15.

PERF. RECALL

RECALL.

PERFORMED RECALL

AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

87332 RECALL WARR INSTALL SWITCH & BLEED BRAKES

COMPLETED RECALL 99815. REMOVED CONTROL 8WITCH, INSTALLED NEW SWITCH, RETEST OK. TECH 636-1844

INSP AND REPL SWITH AND CONN PER RECALL

RUPPLEMENT #1 640 INSPECTION OPERATION ADDED REPLACE SCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL

REPLACED DEACTIVATION SWITCH

89915 CC DE ACTIVATION 8W RECALL99815 CC DE ACTIVATION SW RECALL

99815 99815 BOX B 99915 99815 99815 115431 REPLACED SWITCH

RECALL 90815 PERFORMED RECALL

RECALL 99816 REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

RECALL 99815 RECALL COMPLETED

INSTALLED SPEED CONTROL DEACTIVATION SWITCH

REPLACED DEACTIVATION SWITCH

20\$15 PERFORMED RECALL 99\$15

101601.4 REPLACE SPEED CONTROL DEACTIVATION, SWITCH, RECHEIC OK 7178

762-625 1165

275.2

RECALL 99815

RÉPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

TECH 189 INSPECT AND REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL 9981

INSTALLED NEW SWITCH PER RECALL

89452 PERFORM RECALL 99515 INSPECT AND REPLACE CRUISE CUMP SWITCH AND BLEAD REAR BRAKES

78582 INSTALL CONN AND SW

RECALL

99\$15 RECALL COMPLETED

NSTALL SWITCH

PERFORM RECALL PER MANUFACTURER R-R-SWITCH

1 PERFORMED 99515 RECALL RECALL

RECALL

PERFORMED RECALL 99815

REPLACE SWITCH

RECALL 99816

RECALL 99815

COMPLETED 99815 RECALL

PERFORMED RECALL

66915 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL OUT MILES 69018.

SUPPLEMENT \$1,5-69 INSPECTION OPERATION ADDED REPLACE SCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

PERF. RECALL

REPL SWITCH PER RECALL 99815

1 PERFORM DEACTIVATION SWITCH RECALL

1 PERIFORMED RECALL

REPLACE DEACTIVATION SWITCH

94815 RECALL WAR REPLACE SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

6662 SPEED CONTROL 6-W RECALL WT PERFORMED 8-W REPLACEMENT RECALL

90915 REPLACED SWITCH

PERFORMED RECALL AS PER INSTRUCTIONS

PERFORMED OPEN RECALL

REPLACED CRUSIE CONTROL SWITCH PER RECALL INSTRUCTIONS

PEROFRMED RECALL 96815 - CHECK AND REPLACED SWITCH AND RECHECK OK

1 PERFORMED RECALL

RECALL PERFORMED RECALL

REPLACED SWITCH PER RECALL

58108 99815B 0.5 HRS. SPEED CONTROL RECALL

72550 PERFRIM RECALL 99815 REPLACE SPEED CONTROL SWICT H

SPD CYFIL DEACTIVATION SW REPLACHTPERFORMED REGALL 99S15

VERIFY RECALL INSTALL CRUISE SWITCH AS PER FMC CHECK OK

SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SOCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPAIR AS PER RECALL 98S16

80053 INSTALL RECALL KIT

REPLAND SWITCH AS PER RECALL

PERFORM RECALL

16586 REPLACE SWITCH AS PER RECALL

RECALL INSTALL DEACTIVATION SWITCH

99815 99815

W RECALL REPLACE SWITCH AND CONNECTOR FOR CRIUSE CONTROL JS

. REPLACED CRUISÉ SWITCH AS PER RECALL 90615

100866 INSTALLED CRUISE CONTROL CABLE DEACTIVATION SWITCH AS PER RECALL 98815

RPL 8PBED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR, RECK OK

RECALL PERFORM SERVICE

TECH INSTALLED NEW CRUISE DE ACTIVATION SWITCH PER FORD RECALL

69815 R&R SWITCH & HARNESS CONNECTOR

REPLACE SWITCH PER RECALL.

1 PERFORMED RECALL 99815

99615 PERFORMED RECALL

REPAIR AS PER RECALL 99615.

PERFORM SAFETY RECALL

PEROPRIMED RECALL 88615 -- CHECK AND REPLACED DEACTIVATION SWITCH AND RECHECK OK

REPLACE SWITCH PER RECALL

. REPLACE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR 998158 .5

PERFORM RECALL

83155 99815 REPLACED SWIAND CONNECTOR

182600 PERFORMED RECALL

30815

99815

REPLACE SPEED CONTROL DEACTIVEATION SWITCH AND HARD-SHELL CONNECTOR

REPLACED CRUISE SWITCH PERFORMED RECALL 99615

REPLACED SC DEACTIVATION SWITCH 99615

99315

89615

R AND R BRAKE PRESS SWITCH PER RECALL 90318.

REPLACE CRUISE DEACTIVATOR SWITCH AND CONNECTOR PER RECALL

RECALL 99815 PERFORMED RECALL

RECALL COMPLETED

AE PERFORM RECALL REPLIDENCTIVATION SWITCH AND CONNECTOR

PERFORMED RECALL 99816

PERFORMED RECALL PERFORMED RECALL INSTALLED NEW SWITCH AND CONNECTOR

COMPLETED RECALL 90S15, REPLACED CRUISE DE-ACTIVATION SWITCH 99S15B. 8

INSTALL SWITCH

REPLACE SWITCH

REPLACE DEACTIVATION SWITCH

FACTORY RECALL COMPLETED

RECALL PERFORMED RECALL 99515

boxfles_CLD1

```
99815 RECALL
105573 99815B 0.5 HRS. SPEED CONTROL SWITCH RECALL
135532,99515
PËRFORMED RECALL
PERFORMED RECALL
PERFORMED RECALL
PERFORM RECALL
89815
                  PERFORMED PER RECALL INSTRUCTIONS
PERFORMED RECALL 09816
REPLACED THE HEADLIGHT SWITCH AND CONNECTOR PER RECALL
29105 RECALL 99615 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND BLEED REAR BRAKES PER RECALL 89815
68497 79 PERFORM 99815 R.R. SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST
PERFORM RECALL 99818 INSTALL SPEED CONTROL DEACTIVATION SWITCH
99315 RECALL
                     99S15 RECALL
RÉPLACE DEACTIVATION SWITCH
RÉPLACE SWITCH AND CONNECTOR HARD SHELL PER RECA
RECALL 99815
                     PERFORM RECALL 99815
REPLACE CRUISE CONTROL SWITCH PER RECALL
98442 RECALL, WARR, REPLACE SWITCH PER 99815.
SPEED CATTRL DEACTVTN SWTCH RPLCMTPERF SAFETY RECAL 98815
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99815.
REPLACED SWITCH PER RECALL
ASS
                 COMPLETED
                   SWITCH
SUPPLEMENT #1 5-89 INSPECTION OPERATION ADDED REPLACE SCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
PERFORMED RECALL
65553 CC 42 99915B 0.5- ADMIN 0.1 REPLACED SWITCH AND CONNECTOR.
50400 96815
INSTALLED CRUISE DEACTAVSION SWITCH PER RECALL RT OK
INSTALL KIT PER RECALL
88089 98$158 .5 INSTALL KIT
99615
                  98815
100987 RECALL 99815B 0.5HR8 REPLACE SWITCH AND CONICTOR TK372
1 RECALL COMPLETED
REPLACE SWITCH
                   99315
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 98816
PERFORMED RCALL
PERFORM RECALL 99815 REPLACED CRUISE DEACTIVATION SWITCH.
```

982-825 1186

COMPLETED RECALL PER INSTRUCTIONS
REPLACED CRUISE DEACT SWITCH PER RECALL

boxflee OLD1

SPEED CONTROL DEACTIVATION SWITCHPERFORMED RECALL 99315

1 PERFORMED RECALL 99315

REPLACE SWITCH PER RECALL COMPLETED AS PER RECALL

REPL SPEED DEACTIVATION SWITCH 99815

68039 PREFORMED RECALL, ALSO BLED BRAKES.

REPLACE SPEED CRUSIE CONTROL AND HARD SHELL CONNECTOR AS PER RECALL

R & REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 181037 INSTALL RECALL 98815 SPEED CONTROL DEACTIVATION SWITCH

1 INSTALLED SWITCH & CONNECTOR

PERFORMED RECALL 99815-INSTALL SWITCH

PERFORME RECALL

REPLACED DEACTIVATION SWITCH AS PER RECALL 19815

99815 99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815

99-6-15 99-6-15 COMPLET

REPLACE SPEED CONTROL DEACTIVATION SWITCH.

PERFORMED RECALL 98815

REPLACE DEACTIVATOR SWITCH AND CONNECTOR.

REMOVE TAPE AND SECURE LABOR OF 96515E 0.3 HR 1290 REMOVED TAPED AND SECURED SPEED CONTROL DEACTIVATION SWITCH REPLACED SPEED CONTROL

REPLACED DEACTIVATION SWITCH AND HARDSHELL PER RECALL

REPLACE DEACT SWITCH PER RECALL

1 99815B .5 ADMIN .1

99815 99915

PERFORM RECALL 60815

COMPLETED RECALL

RECALL REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNTECTOR AS PER RECALL

SUPPLEMENT IN 5-99 INSPECTION OPERATION ADDED REPLACE SOCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

PERFORMED RECALL

INSTALL CRUISE CONTROL DEACTIVATION SWITCH PER 89815

SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

RECALL 99815 PERPORMED SPEED CONTROL DEACTIVATION SWITCH RECALL

28816 RECALL 20915 99915B .5 REPLACED SWITCH AND CONNECTOR PER RECALL

RECALL 99515 99615 REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

54209 RECALL WARR IR AND IR SPEED CONTROL DEACTIVATOR SWITCH PER RECALL INSTRUCTIONS.

PERFOREMO REÇALL

PERFORM RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AND ALSO REPLACE BRAKE BLOCK DUE TO IT BREAKING.

83886 W., REPLACE CRUSSE SWITCH PER RECALL 19951

PERFORM RECALL 998158 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

PERFORMED RECALL 99815 AS REQUIRED

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL INSTRUCTIONS ROAD TESTED GOOD

```
INSTALLED SWITCH AND CONNECTOR 9149
RECALL
                   INSTALLED SPPED CONTROL DEACTIVATION SWITCH
RECALL PERFORMED
88759 RECALL 99315 W R R SPEED CONTROL DEACTIVATION SWITCH
PERF. RECALL
REPLACED DEACTIVATION SWITCH PER RECALL
RECALL ROS15
99815
                  96815 PERFORMED INSTALLING DEACTIVATION SWITCH PER RECALL.
PERFORM RECALL
PREFORMED RECALL
RECALL 09815,6WITCH,CONNECTOR
100665 TECH 303 PERFORM REGALL 66815 REPLACE, CONNECTOR AND SWITCH FOR CRUISE "TS
PERFROM RECALL
1 PERFORMED SPEED CONTROL DEACTIVATION SWITCH RECALL 89915
                     REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTO.
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL.
RECALL R-R DEAC SW, R-R CONN, RECKD OK.
99815 RECALL
                     PERFORM RECALL
PERFORMED RECALL
PEFROM RECALL 98815
RECALL
                  REPLACED DEACTIVATION SWITCH AS PER RECALL
REPLACED CRUISE SWITCH AND CONNECTOR PER RECALL 80615
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL
REPLACED DISENBAGE SWITCH PER RECALL $6816.
REPL DEACTIVATIN SWITCH
REPLEPEED OONTROLKIT
71102 INSTALLED UPDATED SWITCH & CONNECTOR PER RECALL 2501
PERFORMED RECALL 99815
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.
99816 RECALL PERFORMED 99815 RECALLINSTALLED A NEW DEACTIVATION SWITCH AND CONNECTOR BLEED BRAKE SYS, VEREIFY
REPLACED DEACTIVATOR SWITCH PER RECALL
REPLACED DEACTIVATION SWITCH
INSTALLED KIT ON UNIT CAUS BG652-LAB 99615B-TEME .5-AD .1
98986 DED RECALL 99816 LABOR OP- 998158- 0.5 HRS. 10-27-99
SPEED CONTROL SWITCH
                           99815 RECALL
INSTALL NEW SWITCH CONNECTOR 99815
RECALL COMPLEATED
PERFORM RECALL 90816
PERFORMED RECALL
                 98815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL C
99815
COMPLETED RECALL 99815
```

362-828 LIBOR

REPLACED SWITCH PER RECALL

1 PERFORMED RECALL REPLACED SWITCH

NEEDED RECALL

REPLACED BRAKE DEACTIVATION SWITCH AND CONECTOR INSPECT & CORRECT

REPLACED SPEED CONTROL DEACTIVATION SWITCH.
PERFORMED RECALL 99615
REPL SWITCH PER RECALL.

COMPLETED RECALL 99815B

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL 89815 INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL RECALL COMPLEATED

PERFORMED AS PER 99815 RECALL COMPLETED RECALL

99815 RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH

PER CASIS AND FCSD. PERFORMED LISTED RECALL.

REPLACED SWITCH

RECALL 19816 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

PERFORM RECALL 98815

REPLACE CRUISE SWITCH PER RECALL.

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

PERFORMED DOS15

REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPLACE CRUISE CONTROL DEACTIVATOR SWITCH PER RECALL. WAITING

PERFORM DEACTIVATION SWITCH AS PER 89616

PERFORMED RECALL 99815

RECALLED BY FORD PERFORMED RECAL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR AS PER RECALL

RECALL

DÓNE

REPLACE CRUISE DEACTIVATION SWITCH

1 COMPLETED RECALL 99815 1

RECALL 99815 REMOVED AND REPLACED DEACTIVATION SWITCH AND CONNECTOR ASSEMBLY AS PER RECALL 99815

COMPLETED RECALL RECALL COMPLETED

98815

99915

COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.

RECALL COMPLETED ALL OK

REPLACED SWITCH AND CONNECTOR

99315 REPLACE DEACTIVATION SWITCH PER RECALL

REPLACED THE SPEED CONTROL SWITCH PER RECALL 998

2092 REPLACED CRUISE CONTROL DEACTIVATION SWITC

INSPECT & REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR PER RECALL

boxfiles_QLD1

```
1 PERFORMED RECALL 99816 SPEED CONTROL DEACTIVATION SWITCH
99815
                  99815 PERFORMED INSTALLING CRUISE DEACTIVATION SWITCH PER RECALL
REPLACED SPEED CONTROL KIT
RECALL
                   PERFORMED RECAL
PERFORMED RECALL AS BY FACTORY PERFORMED RECALL
COMPLETED RECALL 89815
RECALL
                   PERFORMED RECAL
REPLACED SWITCH AND CONNECTOR AS PER RECALL INST
REPLACE SWITCH KIT
COMPLETED RECALL 99815
                 REPLACE DEACTIVATION SWITCH PER RECALL
DONE AS PER INSTRUCTIONS
40800 INSTALLED REPLACEMENT SPEED CONTROL SWITCH AND SWITCH CONNECTOR 99816.
RECALL REPAIR AS PER RECALL 99815 DEACTIVATION SWITCH REPLACEMENT
77516 RECALL 998158 Q.S. ADMIN Q.1 REPLACE DEACTIVATION SWITCH & COMNECTOR PER RECALL
PERFORMED RECALL 96815
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815
PERFORM RECALLOGS 15 REPLACE SPEED CONTROL DEACTIVATION SW
                   RÉCALL
RECALL
REPLACE SWITCH PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
PER 99815 REPLACE SPEED CONTROL SWITCH PER RECAL
REPLACED SWITCH AND CONNECTOR
INSTALL CONTROL DEACTIVATION SWITCH AS PER RECAL
98815 RECALL
                     99815 RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH.
72506 DID RECALL 09315 LABOR OP .- 993158-- 0.5 HRS. 10-18-99
                RC 99315 INSTALL CRUSE CONTROL DEACTIVATION SWITCH KIT & REWIRE
a
99815
                  REPLACE CRUISE CONTROL SWITCH PER RECALL
99815 RECALL
                     CK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL
73722 PERFORM 99815 CRUISE DEACTIVATION SWITCH RECALL
RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15
RECALL
                   99815
99815
                  86615 PERFORMED INSTALLING CRUISE SWITCH PER RECALL.
99315
                 REPLACE DEACTIVATION SWITCH
89315
                  99815
56640 99615B .5 PERFORM RECALL 99615
```

REPLACE SWITCH
78726 RECALL 99815 REPLACED VACUM SWITCH FOR CRUISE CONTROL
99816 98516
26054 99815 W PERFORMED SERVICE 99815
PERFORM SAFETY RECALL 99815

REPLACE DEACTIVATION SWITCH

RNR DEACTIVATION SWITCH PERFORM RECALL 96816

REPLACE SWITCH'S CONNECTOR.

PERFORM RECALL

INSTALLED NEW DEACTIVATION SWITCH AS PER RECALL 89816 . TECH 406-0646 E

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACED SCIDEACTIVATION SWITCH 199315

RC 99815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

PERFORM RECALL 99815, REMOVED AND REPLACED DIACTIVATION BRAKE SWITCH AND CONNECTOR, BLEED BRAKES AND ROAD TEST VEHICLE, AND CONNECTOR 60890 998158 JS INSTALL SWITCH AND HARDSHELL

PREFORM RECALL

PERFORMED INSPECTION AND REPLACEMENT OF SPEED CONTROL DEACTIVATION SWITCH

71285 W PERRFORME RECALL 99815 REPLACE DEACT. SWITCH CAN NOT REPLACE PLUG SOME BODY CHANGED BY A DIFERENT KIND OF PLUG

PERFORM RECALL 99815

REPL SPEED SWITCH 86515

RECALL COMPLEATED

REPLACE DEACTIVATOR SWITCH AND CONNECTOR PER RECALL. 1 PER RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH.

PERFORMED RECALL 99315

98815

99615

PERFORM RECALL 98\$16 REPLACED DEACTIVATION SWITCH FOR BPEED CONTROL

83271 RECALL 98815B 0.5HRS REPLACE SWITCH AND CONICTOR TK372

COMPLETED RECALL 99815, REPLACED CRUISE DEACTIVATION SWITCH, 99816B .5

89815 COMPLETED

119095 DEACTIVATION SWITCH AS PER RECALL

99815

98815

COMPLETE RECALL

PER RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONNECTOR.

RECALL 99815-DEACTIVATION SWITCH99815

PER RECALL PERFORM RECALL

99\$15 - B - RECALL

\$7501 99815 SPEED CONTROL DEACTIVATION SWITCH WARRANTY REPLACE SPEED CONTROL DEACTIVATION. SWITCH FOR RECALL 99815.

PERFORM RECALL

RECALL

DONE

83960 RECALL 99S15 WARANTY REPLACE SPEED CONTROL DO TO RECALL 3720

REPLACE SPEED CONTROL DEACTIVATION SWITCH.

118371 PERFORMED CRUISE SHUT OFF SWITCH RECALL

RECALL 99815 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99815
PERFORMED RECALL, 99815
1 REPLACE BROKEN SWITCH PER RECALL
REPLACE CRUISE SWITCH PER RECALL
AS PER PORD SPECIFICATIONS PERFORMED RECALL NUMBER 99815
RECALL COMPLETE
PERFORMED RECALL 99816 INSTALL CRUISE DECTIVATION SWITCH FOUND CRUISE CABLE HAD BIEST OUT SPECIAL ORDERED CRUISE CABLE
RECALL 99816 PERFORMED RECAL
45030 RECALL 99815 REPLACE CRUISE CONTROLK SWITCH AND PLUG
REPLACED CRUISE SWITCH PER RECALL
INSTALL SWITCH KIT
PERFORM RECALL 99815

1 PER RECALL REPLACE DEACTIVATION SWITCH AND REPAIR WIRING.

105368 99815B 0.5 HRS- SPEED CONTROL RECALL

58434 TECH 342 CC-RECALL-CA-9G652 PERFORM RECALL 99615 SPEED CONTROL DEACTIVATION SWITCH.

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

COMPLETE RECALL

CONNECTOR

99315

PERFORMED RECALL 99815

REPLACED DEACTIVATION SWITCH AS PER RECALL

1 PERFORMED RECALL REPLACED SWITCH

INSPECT AND PERF REGALL ACCORDING TO INSTRUCTIONS REPLACED SPEED CONTROL SWITCH OK NOW

PERFORMED RECALL 99815

RECALL 09915

REPAIRED PER RECALL 98581 99815B .5 .5 RECALL

RECALL 99315

PERFORM RECALL 99315

INSPECTED DEACTIVATION SWITCH

RESISTIVE SHORT. PERFORM RECALL-ONP PER FÓMOCO INSTRUCTIONS.

RECALL 99S15 COMPLETED

D

REPLACE SWITCH

1 PERFORMED RECALL

PERFORMED RECALL 89615, REPLACED SPEED CONTROL DEACTIVATION SWITCH.

PERFORMED RECALLL

00

1 PUT KIT IN 77 STEVE

99815 RECALL

TEST AND REPLACE SPEED CONTROL DEACTIVATION SWITCHPER RECALL

110154 RECALL 90815 PERFORMED RECALL 99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL

REPLACED DEACTIVATION SWITCH AND PLUG

REPLACED SWITCH, BLEED BRAKES

INSTALL SWITCH AND HARD SHELL

```
REPLACED CRUISE DEACT SWITCH, SLED SYSTEM PER RECALL
PERFORMED RECALL
PERFORM RECALL
                        REPLACE SWITCH
REPLACE SPEED CONTROL ASY
INSTALLED SWITCH KIT
RECALL PERFORM RECALL
99816
REPLACE SWITCH REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 99S15.
PERFORMED RECALL # 89S15
REPLACE SWITCH
                DONE
ADO
99815 RECALL
                     REPLACED SWITCH
PERFORMED RECALL SWITCH AND CONNECTOR
139499 RECALL 99815 WPC RECALL 99815
99815 B .5 ADMIN .1 PERFORMED RECALL ACCORDING TO FACTORY GUIDELINES
83084 PERFORM RECALL 99815
               99818 REPLACE SWITCH AS PER RECALL.
1 RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH 998158
PERFORM RECALL 90S15, INTERIM OR PERMANENT AFTER MID JUNE 90 PERFORMED RECALL 90S15
PERFORM RECALL 98315
REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER 99815
REPALCED SPPED CONTROL DEACTIVATION SWITCH ADN HEARDSHELL CONNECTOR
PERFORMED RECALL REPLACED THE SWITCH AND CONNECT OR
RECALL
                   998199 PERFORM RECALL 99816B
REPLACE SPEED CONTROL DEACTIVATION SWITCH
REPLACEC SWT PER RECALL
PERFORMED RECLAL
PERFORM RECALL 1981 S. REPLACE SWITCH.
RECALLED BY FORD
                        PERFORMED RECAL
1 RECALL COMPLETE
82542 RECALL INSPECT AND REPLACE DEACTIVATION SWITCH AND CONNECTOR PER RECALL
RECALL COMPLETED.
DO RECALL 98S15 PUT IN NEW BRAKE SW AND NEW WIRE COND
PERFORM RECALL
REMOVE AND REPLACED DEACTIVATION SWITCH.
$12 SPEED CONTROL RECALL 98$15B 0.5 0.5 REPLACED SPEED CONTROL DEACTIVATION SWITCH
99815
                 00815
RECALL 99815
                     BUS16
```

99815 INSTALL SPEED CONTROL DEACTIVATION SWITCH

1482-425 1188

RECALL 99815

99616 RECALL

99815 RECALL.

99815

97801 99815 W REPLACED SPEED CONTROL DEACTIVATE SW 2745

PERFORMED SPEED CONTROL RECALL

REPLACE SWITCH PER RECALL

PERFORMED SAFETY RECALL 99815

RECALL

29315

99815

RECALL PERFORM RECALL INSTALL CRUISE CONTROL DEACTIVATION SWITCH

PEFORM RECALL 99815 INSTALL CRUISE DEACTIVATION KIT

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL 98815

PERFORMED RECALL 89815

123071 RECALL REPLACE CRUSE SWITCH AND CONNECTOR.

PERFORM RECALL 99816, REPL BRAKE DEACTIVATION SW, BLEED BRAKES.

32249 INSTALL SPEED CONTROLL DEACTIVATION SWITC

REPLACED BRAKE SWITCH AND CONN. PER RECALL 99815

RECALL 90815 INSTALL DEACTIVATION SWITCH PER RECALL

PERFORM RECALL

RECALL 99815

REPLACED SWITCH AND PLUG AS PER RECALL

OPEN RECALL

PERFORM RECALL

RECALL 99815 PERFORM RECALL 99816

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR - 998158 .6 98815 RECALL NOTIFICATION LETTER 99815 RECALL NOTIFICATION INSTRUCTIONS SPEED CONTROL SWITCH

COMPLETE RECALL

1 PERFROMED RECALL 19815 REPLACE BRAKES SW. 895168

96848 99815 WARR REPLACED SWITCH AND CONN

REPLACE DEACTIVATION SWT PER RECALL

89871 REPLACE SWITCH PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

RECALL PERFORMED

41536 998168 0.6 HRS. SPEED CONTORL RECALL

PERF. RECALL.

PERFORMED 99815

INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS ==THANK YOU DARREN GREEN TEAM==

RECALL 99315

99315

121881 SAME PERFORM RECALL 98S15 7168

91366 RECALL 99315 PERFORMED RECALL 99315 99315. REPLACE CRUISE DEACTIVATION SWITCH.

23097 REPLACE SWITCH AND CONNECTOR

RECALLED BY FORD

PERFORMED RECA

1187-625 1197

```
110765 RECALL TECH 1029 REPAIR AS PER RECALL $99615
REPLACE CRUSE DEACTIVATION SWITCH PER RECALL
PERFORM RECALL 99615 REPLACE SPEED CONTROL DEACTIVATION SWITCH.
RECALL 99615 REPLACED DEACTIVATER SWITCH AS PER RECALL 99815
REPLACE SWITCH PER RECALL
```

99615 REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99816 PERFORMED RECALL AS PER RECALL 99815 RECALL TO INSTALL DEACTIVATION AND CONNECTOR RECALL - • PERFORMED RECALL #6178 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL RECALL REPLACE CRUISE DEACTIVATION SWITCH PERFORM RECALL REPLACE SPEED CONTROL SWITCH INSTALL SWITCH PER RECALL 96815 **89815** REPLACE CRUISE CONTROL SWITCH PER RECALL REPLACE SPEED CONTROL SWITCH AND CONNECTOR 82235 LABOR 98S158 .5***ADMIN .1****REPLACED DEACTIVATION SWITCH PER RECALL 97752 PERPORM RECALL 99315

PERFORMED RECALL 99816
REPLACE CRUISE DEACTIVATIO N NSWITCH
PERFORMED RECALL

132717 RECALL 99815 WARR REPLACED DEACTIVATION, SWITCH AS PER RECALL

SPEED CONT REPL SWITCH

REPLACE SWITCH PER RECALL
REPLACE CRUISE CONTROL DEACTIVATION SWITCH

34048 PERFORMED CRUISE BRAKE SWITCH RECALL #########

29425, RECALL 996159
REPLICAE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

RECALL 99915

108205 99\$15 99\$15 .5 .5 REPLACE SWITCH & CONNECTOR PER RECALL

PERFORM RECALL

PERFORMED RECALL 98515

1 99815B-A99 INSTALL SWITCH

- MODIFY PER RECALL 99815

115-SPD CONTROL SWITCH RECALL - 99816-REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL PERFORMED RECALL 99815

200 000 000 000

98815

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH HARD SHELL CONNECTOR

50799 REPLACED THE SPEED CONTROL DEACTIVATION. SWITCH AND CONNECTIOR, 99\$15.

PEFROM RECALL 99815 97878 RR RECALL 99815

58442 RECALL 5 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98\$158

PERFORMED RECALL 96815

REPLACE DEACTIVATION SWITCH AS PER RECALL
RECALL INJETTA SWITCH BRACKET REPLACED SWITCH PER RECALL

RECALL 99815

PER RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH PLUG

PERFONED RECALL # 99815

REPLACED SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH

TECH 101 PERFORM RECALL 98815 INSTALL SWITCH

RECALL 99S15

88520 SAME PERFORM RECALL 86515 7155 JH

REPLACE SWITCH REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 69915.

1 R AND R THE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

131391 RECALL W- RECALL 98615 REPLACED CRUISE DEACT SWITCH.

REMOVE TAPE AND SECURE DEACTIVATION SWITCH 99S15E.3

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99816

98815

99516

SWITCH REPL SWITCH

29139 PERFORMED RECALL NO. 89316

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH ASSEMBLY, CHECK NORMAL OPERATION.

REPALEC SPED CONNETOE AND WIRING EXTRA TIME NEEDEDFOR WIRING REPAIR WIRES WERE FUSED TOGETHER

PERFORM RECALL

CHECKED AND FOUND VEH NEEDED CRUSE DEACT SWITCH PER RECALL. REPLACED SWITCH PER RECALL 99815 CHECKED SWISTEM OK

REPLACE DEACTIVATION SWITCH AS PER RECALL

REPLACE SPEED CONTROL DEACTAMATION SWITCH AS PER RECALL 88815

PERFORMED RECALL 90816 SPEED CONTROL DEACTIVATIO

RECALL PERF RECALL-REPLACE SPEED CONTROL SWITCH

PERFORMED RECALL, 99616-INSPECTED VEHICLE AND REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH

AS PER RECALL

99815 RECALL TO INSTALL SPEED CONTROL SWITCH & HARDSHELL CONNECTO

RECALL 99816. REPLACE SPEED CONTROL DEACTIVATOR SWITCH AS PER RECALL ISS15.

PERFORM 99S 15 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACEMENT RECALL.

REPLACE CRUIS BRAKE SWITCH PER RECALL

COMPLETED RECALL

COMPLETED RECALL

1 1 PERFORMA ECALL 99815

PERFORM RECALL

PERFORM SPEED CONTROL RECALL

PERFORM SPEED CONTROL DEACT 8W RECALL

69815-0792 REPLACED SPPED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

REPLACE SPEED CONTROL SWITCH PER RECALL

72667 RECALL & REPLACE SPEED CONTROL DEACTIVATION SWITCH 998168

2007-00-12072

```
PERFORM RECALL.....
114223 PERFORM RECALL
PERFORMED RECALL
RECALL REPLACE SWITCHS HARDSHELL CONNECTOR & BLEED BRAKES
                  99815
PERFORMED RECALL 98815
COMPLETED 99S15
38710 CRUISE SWITCH RECAL RENEW CRUISE DEACTIVATION SWITCH FOR RECAL 23
1 PERFORM RECALL 99815 RNR DEACTIVATION SWITCH 99815B
57400 RECALL DID RECALL 99815
PERFORM RECALL 99815
86815
                  REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99915
RECALL 99S15
                     00016
RECALL 99315 COMPLITED
1 CHECK AND REPLACE SPEED CONTROL DEACTIVATION SWITICH AS PER RECALL
RECALL 99815 REMOVED AND REPLACED DEACTIVATION SWITCH AND CONNECTOR ASSEMBLY AS PER RECALL 99815
40285 REPLACE SWITCH AND CONNECTOR PER RECALL.
COMPLETED RECALL 99815
```

REPLACED SPEED CONTROL DEACTIVATION SWITCH PERFORM RECALL 99815 CHANGE DEACTIVATION SWITCH

REPLACED DEACTIVATION SWITCH AS REQU

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.

REPLACE DEACT SWITCH AND BLEED HYD PER RECALL RECALL 99816 COMPLETED RECAL **RECALL 98815** PERFORM RECALL 90S15 REPLACED SWITCH AS PER RECALL RECALL #99915 98315 INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL PERFORM RECALL 98\$16 99\$15 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT REPLACE DEACTIVATION SWITCH PER RECALL 99815E INSTALL SWITCH PER RECALL PERFORMED RECALL 10815 RECALL 99815 INSTALL SWITCH AND CONNECTOR PER RECALL

92060 RECALL WARR INSTALLED DEATIVATING SW AS PER RECALL 99S(6)

INSTALLED SWITCH

99815 RECALL

RECALL 99S15 REPLACED SWITCH AND CONNECTOR PER RECALL

PERFORM RECALL 88616 PERFORM 99815

102619 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CON, 8-2 8274

```
REPLACED SWITCH AND CONNECTOR
PROVIDED PECAL COSTS __CUECY &
```

PEROFRNIED RECAL 99815 - CHECK AND REPLACED CRUSIECONTROL CABLE

199316 REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL.

1 PERFORMED RECALL

PERFORMED RECALL ALL OKAY, NEW BRAKE SWITCH OPERATING PROPERLY.

SPEED CONT REPL SWITCH REPLACE CRUISE SWITCH PER RECALL

PEFORM RECALL

68623 REPL DEACTIVATION SW

REPL CRUISE CONTROL SWITCH ASSY

PERF. RECALL

98515 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 89515

14(220) LABOR 999169 .6""ADMIN .1""INSTALLED DEACTIVATION SWITCH FOR CRUISE CONTROL PER RECALL 99615""PLEASE NOTE: VEH IS MISSING TWO HUBCA

INSTALLED KIT FOR SPEED CONTROL PER RECALL 99815

REPLACED SPPED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

RECALL INSTALLED SWITCH

1 REPLACE DEACTIVATION SWITCH AS PER REGALL 899

PERFORMED RECALL 99815
PERFORMED RECALL 99815
RECALL 99815

INSTALL CRUISE CONTROL DEACTIVATION SWITCH

RECALL 99815 RECALL

69815 REPLACE DEACTIVATION SWITCH

DIAG AND PERFORMED RECALL 00815 INSTALLED NEW DEACTIVATION SWITCH OK NOW

RECALL 99815

185543 RECALL 99815B 0.5HRS REPLACE SWITCH AND CONICTOR TK272

61108 RECALL WARR REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99816

1210 - 1 1 21 12

RECALL 99S15

REPLACED SPEED CONTROL DEACTIVATION SWITCH

99815 99815

COMPLETED RECALL 99815 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 998158 .5 + .1

COMPLETE RECALL 99815

RECALL 96815

1 PER RECALL REPLACE DEACTIVATION SWITCH AND WIRING.

RECALL 199315

RECALL 98815 RECALL COMPLETED

INSTALL CRUISE SWITCH AND HARNESS CONECTOR AS PER 99815 RECALL

DEACTIVATION SWITCH & CONNECTOR COMPLETED AS PER RECALL

SPEED CONTROL SWITCH 89615 RECALL

PER NOTIFICATION RECALL \$6915 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER \$6515 RECALL INSTRUCTIONS

PERFORMED RECALL 98815
PERFORMED RECALL 99815

REPAIR AS PER RECALL 98915.

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL 69515, TBME 0.5 HOURS LABOR

50665 SAME PERFORM RECALL 99916 7156 JH

99815 REPLACED SWITCH AND CONNECTOR

99815 99815 RECALL

REPLACED SWITCH AND CONNECTOR BLEED BRAKES

REPLACE SWITCH PER RECALL

RECALL 99816 RECALL

REPLAÇED PER RECALL 998-159 1
RECALL
RECALL

99615 RECALL 99615

PERFORMED RECALL PER FORD INSTRUCTIONS. 1 154216 99915 REPLACED SWITCH & CONN PER RECALL

90915 RECALL 90815 RECALL

BAFETY RECALL 99815-REPLACE SPEED CONTROL DEACTIVATION SWITCH

SPEED CONTROL DEACTIVATION SWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL \$9815.

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS DIRECTED BY 99815 SAFETY RECALL.

RECALL 98815 COMPLETED

CK AND PERFORM RECALL PER INST FOR SPEED SWITCH RECALL

RPL SWITCH AND CONN 99\$15 RECALL

PERFORMED RECALL

99515 99515 REPLACED SWITCH AND CONNECTOR

RECALL 99815 - B - RECALL

PERFORMED RECALL

96615 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT

98815 RECALL 98815 RECALL COMPLETE.

REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 09815

RECALL 69915 RECALL COMPLETED

REPLACE SWITCH AS PER 10916

86484 79 PERPORM 99816 R R SPEED CONTROL DECTIVATION SWITCH AND CONNECTOR ROAD TEST

PERFORM RECALL

99815 99815 REPLACE CRUISE SWITCH

SPEED CONTROL DEAVITYATION SWITCHES MAY DEVELOP RESISTIVE SHORT IN PLECTRICAL CIRCUIT THAT MAY CAUSE UNDERHOOD FIRE.

RECALL CRUISE CONTROL RECALL CRUISE CONTROL

99816 RECALL 99816 RECALL COMPLETE

1 1 PEFORMED RECALL 99815

RECALL 99816 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT COMPLETED

RECALL REPLACE SWITCH

NO2-025 1187

9-3250

```
99816 REPLACED CONNECTOR AND SWITCH
REPLACED DEACTIVATION SWITCH
PERF. RECALL
00815
                 99815
REPLACED SPEED CONTROL SWITCH AS PER 99315
RECALL
                  REPL$W
REPLACE SWITCH
R&R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR SHELL PER RECALL 99-5-15
1 PERFORM DEACTAINATION SWITCH RECALL
REPLACED SWITCH FOR COURSE DEACTIVATION
43647 PERFORM RECALL AS REQUESTED REPLACE SWITCH AND CONNECTOR TEST CK OK
```

1 COMPLETED REQUESTED RECALL AS PER FORD INSTRUCTIONS

85004 908168 0.5 ADMIN 0.1

47121 INSTACLL SWITCH AND BLEED BRAKES PER RECA

45195 PER FORD INSTAL CRUISE CONROL HYDRAULIC SWITCH AND WIRRING CONNECTOR

REPLACED SWITCH AS PER RECALL 99815

70600 99616

98815 99515

1 COMPLETED RECALL RECALL

89615

RECALL COMPLETE

100084 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99916 5314

RECALL COMPLETED

RECALL 99815 PERFORM RECALL 99815, REPL SPEED CONTROL DEACTIVATION SWITCH.

REPLACED CRUISE CONTROL SWITCH

RECALL DONE

RECALL 98\$15

PERFORM RECALL—NOTE THIS CAR NEEDS A NEW KINITION KEY AND TUMBLE

RECALL COMPLETE

80177 RECALL 99S15B .5 REPLACED SPEED CONTROL DEACTIVATION SWITCH 62587 42 WP40 98815 RECALL REPLACE SWITCH

REPLACE DEACTIVATION SWITCH.

1 COMPLETED THE RECALL 99 \$ 15 RECALL 99815 **RECALL 89S16**

PERFORMED RECALL

RECALL COMPLETED

PERFROM SPEED CONTROL SWITCH 99816

REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL

99396 AS RECALL

REPLACED DEACTIVATION SWITCH AND CONNECTOR.

99815 REPLACED SWITCH AND CONNECTOR

REPLACE SPEED CONTROL DEACTAVATION SWITCH AS PER RECALL 09816

PERFORMED RECALL 98\$15E.

OPEN RECALL PERFORMED RECAL

PERFORMED RECALL

RNR DEACTIVATION SWITCH PERFORM RECALL 99815

PERFORMED SPEED CONTROL RECALL 98816

RECALL 98815

COMPLETE RECALL REPAIRS

RECALL 99S15 SPEED CONTROL SWITCHPREFORM RECALL 99S16 SPEED CONTROL SWITCH.

S7887 RECALL PERFORM 99815 AND REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR AND BLED BRAKES \$98158-0.5

99815 RECALL COMPLETED

INSPECT SWITCH AND CONNECTOR FOUND BAD REPLACED SPEED CONTROL SWITCH AND CONNECTOR PER RECALL

PERFOREMD RECALL

1 PERFORMED RECALL 99S(5 FOR SPEED CONTROL DEACTIVATION SWITCH REPLACED SWITCH

RECALL COMPLETED

AS PER FORD SPECIFICATIONS PERFORMED REGALL NUMBER 99815

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR.

1 INSTALL BRAKE PRESURE SWITCH AND CONNECTOR AS PER RECALL.

96300 RECALL/RIGISTS SPEED CONTROL DEACTIVATION. SWITCH, REPLACED SPEED CONTROL CABLE DEACTIVATION SWITCH AND CONNECTOR PER RECALL/199615

99815

71474 PREFORMED RECALL 99815

62986 RECALL DONE

COMPLETED RECALL

79820 CC 42 998158 0.5- ADMIN 0.1 REPLACED SWITCH AND CONNECTOR.

79306 RECALL WPB40 INPSETC FOR RECALL 99S15 NO FURTHER ACTION NEEDED

COMPLETED

REPLACED CRUISE CONTROL DEACTIVATION SWITCH

RECALL

90916 RECALL COMPLETED

RECALL COMPLETED

PERFORMED FACTORY RECALL 00S16

82365 RECALL 99815 (1.6 REPLACED CRUISE CONNECTOR

99815 99815 PERFORM RECALL

PERFORMED RECALL

REPLACE CRUIZE CONTROL SWITCH AND CONNECTOR PER RECALL

PERFORMED RECALL 90915

99816 - PERFORM DEACTIVATOR SWITCH RECALL, REPLACED SWITCH & CONN.

INSTALL CRUISE CONTROL DEACTIVATION SWITCH

107880 RECALL 96815 WARR, PERFORMED SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT RECALL 96815.

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER REGALL 99815

REMOVE TAPE AND SECURE LABOR OP 98615E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OP 99815B .5 REMOVED TAPED AND SECURED SH

REPL CRUISE CONTROL DEACTIVATION SWITCH:

RECALL REPL SW

SPEED CONTROL SDACTIVATION SWITCHPERFORM RECALL AS DIRECTED.

PERFORMED AS PER RECALL

RECALL

PERFORM RECALL

```
INSTALLED SPEED CONTROL DEACTIVATION KIT PER RECALL
SOP 11-04-1999 AT 118687 MILES
```

99815 99815 CRUISE CONTROL RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

PERFORM RECALL 99815

74194 SAME PERFORM RECALL 99815 7156 JH

78621 WARR DID SPEED CONTROL RECALL REPLACE SWITCH AND HARD SHELL.

RECALL 99815

RECALL SW REPL CRUISE

REPLACE CRUISE CONTROL SWITCH AS PER RECALL

REPLERK PRES SWITCH

85889 RECALL INSPORT AND RECALL

CHECKED CASIS. INSTALLED SPEED CONTROL DEACTIVATION SWITCH 89815 99615 REPLACE CRUISE SWITCH PER RECAUL

PERFORM RECALL 99815 RECHECK FOR LEAKS NO LEAKS FOUND SYSTEM OK 1

MRSC PERFORMED RECAL

RECALL REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL

PER RECALL PERF RECALL

INSTALL SWITCH AND WIRING

RECALL PERFORM RECALL 99815

OPEN RECALL 98815 RECALL

99815 99815 PERFORM RECALL RECALL PERFORMED RECALL

102067 RECALL R-R CRUISE SWITCH AS PER RECALL

102057 RECALL R-R CRUISE SWITCH AS PER RECALL

REPLACE SPEED CONTRIOL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR.

RECALL PERFORMED RECALL 98615 2058

RPL SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR, RECK OK

PERFORMED RECALL

PER RECALL PERF RECALL

18625 COMPLETED RECALL

PERFORM RECALL

REMOVE AND REPLACE CRUISE DEACTIVATION SWITCH PER RECALL 99815

RÉPLACED SWITCH PER RÉCALL

90267 RECALL WPR40 INSTALL CRUISE CONTROL DISCONNECT SWITCH

RECALL 99815 MO 174037 R&I NEW CRUISE DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL.

HOTIWA (ACA) ARTS

108094 RECALL 99915 WARR INSTALLED A NEW DEACTIVATION SWITCH AND WIRE CONNECTOR PER RECALL 99915

99\$16 RPL SPEED CONTROL DEACTIVATION SWITCH

29900 INSTALL SPEED CONTROL SWITCH PER RECALL

99815 99815 REPLACE CRUISE SWITCH

INSTALL SWITCH AND HARDSHELL CONNECTOR BLEED BRAKES PERFORM RECALL

REPLACED SC DEACTIVATION SWITCH 99815

1 PERFORM RECALL PER INSTRUCTIONS

boxfflee OLD1

A SHORT IN THE SPEED CONTROL SWITH COULD DEVELOPE WHICH MAY OPEN A PUSE DISABLEING THE CRUISE ALSO A FIRE COULD DEVOPE. REMOVE, TAPE AND RECALL 199516 REPLACE SWITCH PER RECALL

PERFORMED RECALL

INSTALL SPEED CONTROL SWITCH 98815 RECALL REPLACED CRUSE CONTROL DEACTIVE SWITCH

SPEED CHTRL DEACTIVIN SWITCH RPLONTPERF SAFETY RECALL 98516

66109 RECALL WARR REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99816

98S15 RECALL 00915 RECALL COMPLETED

40500 INSTALL RECALL KIT

REPAIRED AS PER RECALL, SPEED CONTROL DEACTIVATIONSWITCH

RECALL

RECALL 98819

1 PERFORM RECALL

PERFORM RECALL 98815

PERCERMED RECALL 99815 - CHECK AND REPLACED DEACTICATION SWITCH

PERFORMED RECALL 98815 RECALL 98816

99\$15E REPLACE BRAKE PRESS AW AND

8WITCH 99315

COMPLETE RECALL

INSTALL DEACTIVATION SWITCH PER 99816 RECALL

PERFORM RECALL 99 815 REPLACED SWITCH AND HARD SHELL CONNECTOR.

1 REPLACED CRUISE DEACTORVATOR SWITCH PER RECAL

REPLOBACTIVATION SWITCH PER RECALL

RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL

84070 RECALL (#17)-REPLACE SWITCH AND HARDSHELL, BLEED BRAKE 8 AS PER RECALL.

REPLACED DEACTIVATION SWITCH AND CONNECTOR.

A RECALL DONE

DRI RECALL 99615 ON CRUISE CONTROL

PERFORMED RECALL 98815

SPEED CNTRL DEACTVTN SWTCH RPLCMTPERF SAFETY RECALL 00816

BISS 99816 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

ADMIN 1 COMPLETED RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH

1 PERFORMED RECALL

REPLACED DEACTIVATION SWITCH PER RECALL.

66815 COMPLETE

95577 REPLACE SWITCH AS PER RECALL

43243 PERFORMED RECALL INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH-

REPLACE CRUISE CONTROL DEACTIVATION SWITCH

PERFORMED RECALL 988158 PERFORMED 988158 RECALL-SPEED CONTROL DEVIATION SWITCH

REPLACE SPEED CONTROL SWITCH PER RECALL 99S15

OPEN RECALL COMPLETED OPEN RECALL

RECALL 09916 COMPLETED

```
24989 PERFORM RECALL
PERFORM RECALL 99816
55865 RECALL WARR REPLACE DEACTIVATOR SWITCH AND CONNECTOR
PERFORMED RECALL 99815
PERFROMED RECALL
1 PERFORM RECALL 98915 SPEED CONTROL SESER AND BLEED SYSTEM AS AS PER RECALL CHECK OK AT THIS TI
PERFORMED RECALL
RÉCALL COMPLÉTED
PERFORMED RECALL
PERFORMED RECALL
REPLACE DEACTIVATION SWITCH AS PER RECALL
48390 PERFORM RECALL SPEED CONTROL DEACTIVATION SWITCH.
EDS15
                  PERFORM RECALL 90815
PERFORMED RECALL 99816
RECALL
                   REPL SPEED CONTROL DEACTIVATION SWICTK
REPLACE SPEED CONTROL SWITTCH
79664 INSTALLED DEACTIVATION SW AS PER RECALL 99815
REPLACED CRUISE DEACTIVATION SWITCH PER RECALL NOTICE.
PREFORMED RECALL
REPLACED SWITCH AND CONNECTOR AS PER RECALL
130499 INSTALL RECALL ISIS 15 OPER # 99$15B LABOR .6
99815B-0.5- RECALL 99-3-15 (CC42) INSTALL SPEED CONTROL DEACTIVATION 5WITCH & CONNECTOR.
ORTRO RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER. RECALL 99815
69520 W REPLACED SWITCH
PERFORM RECALL
                        99815 COMPLETE
R2202 REPALCED SPEED CONTROL DEACTIVATION SWITCH RECALL 99815
                 99515 REPLACED SWITCH AND CONNECTOR
98195 (L6 RECALL 99816 SPEED CONTROL DEACTIVATION REPLACE D
66121 RECALL INSTALLED NEW SWITCH
                     99816 RECALL PERFORMED
MOR16 RECALL
111614 99816 99816B 0.5 0.5 REPLACE DEACTIVATION SWITCH AND CONNECTOR
DO RECALL 99815
RECALL 99815. REPAIRED IN AW RECALL 99816.
74876 RECALL 98$15-B LABOR OPDERATION... PERFORMED A BRAKE INSPECTION AND REPAIR REPLACEMENT, BLEED ASSY...COMPLETED... N O T E : PRIEVIOUSLY
RECALL 98S15 REPLACED DEACTIVATER SWITCH AS PER RECALL 99S15
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER SAFETY RECALL 98816.
PERFORMED RECALL 99815
OTHER
                           REPLACE SPEED CONTROL DEACTIVATION SWITCH AND
                                                                                     HARDSHELL CONNECTOR PER FORD RECALL
RECALL COMPLETE
REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR AS PER 99815 RECALL
```

200 17800

REPLACED SWITCH AND CONNECTOR

DIAG AND PERFORMED RECALL 88815 INSTALLED DEACTIVATION SWITCH OK NOW

99315 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER 99815

99315 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

REPLACED CRUISE CONTROL DE-ACTIVATIOR SWITCH PERFORMED RECALL 99S15
PERFORMED RECALL 99S15
RECALL RECALL
RECALL RECALL
RECALL RENEW DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
96194 99S16 99S16 5 5 6 REPLACE SPEED CONTROL SWITCH & CONNECTOR
117218 PERFORMED RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL 99S15
PERFORMED RECALL 99S15 CRUISE DE-ACTIVATION SWITCH 5932
REPLACE SWITCH PER FORD RECALL
1 PERFORM RECALL PER INSTRUCTIONS
24623 RECALL REPLACE DEACTIVATION SWITCH REPLACEMENT PER RECALL
INSPECT AND REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL

SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SOCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR CK AND REPAIR PER RECALL, INFO
PERFORMED RECALL 98815. REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH.

126125 DUE RECALL 98815
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

95873 REPLACE SWITCH AS PER RECALL

RECALL 98815
CHECKED CASIS, INSTALLESS SPEED CONTROL DEACTIVATION SWITCH

1 PERFORM RECALL REPLACE DEACTIVATE
REPLACED DEACTIVATION SWITCH.

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

REPLACE SWITCH AND CONNECTOR

96816 REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARDSHELL CONNECTOR.

1 RECALL COMPLETE

RECALL 99815 REPLACE DEACTIVATION SWITCH PER RECALL INSTRUCTIONS REPALCED SWITCH AS PER RECALL 99815 RECALL COMPLETE 78550 RECALL 99815B 0.5 REPLACE SPEED CONTROL DEACTIVATION SWITCH. PERFORM RECALL

PERFORMED RECALL 99815 B 1
REPLACE SPEED CONTROL SWITCH AND CONNECTOR
50494 RECALL 99815 INSTALL NEW SWITCH AND CONNECTOR
76289 REPLACE SPEED CONTROL SWITCH AND CONNECTOR PER RECALL 99815
REPLACE SWITCH AND HARD SHELL
WE INSTALLED NEW SWITCH AND CONNECTOR.
PERFORM RECALL PER TECHNICAL INSTRUCTIONS IN RECALL BUILLETIN REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARDSHELL.

COMPLETED CAMPAIGN 98815 REPLACED SPEED CONTROL DEACTIVATION SWITCH PERFORMED RECALL 98615

PERFORMED RECALL 99815
INST DEACTIVATION SW AS PER 99815 NORMAL CRUISE OP AT THIS TIME. TECH 408-0545
6947 WARR REPLACED CRUISE DEACTIVATION SWITCH
PERFORMED 99815 RECALL AS PER INSTRUCTIONS
REPAIR AS PER RECALL 99815.
122054 RECALL INSTALLED NEW CRUISE DEACTIVATION SWITCH PER RECALL.
PERFORMED RECALL
INSTALL DEACT SWITCH

REMOVE AND REPLACE AS PER RECALL (MOS168) REPLACE AS PER RECALL

1 PERFORM RECALL PER INSTRUCTIONS

9WITCH REPL DEACTIVATION SWITCH

RECALL REPAIR

99816 REPLACE SPEED CONTROL SWITCH & CONNECTOR

1 REMOVE AND REPLACE SPEED CONTROL SWITCH PER RECALL.

103605 REPLACED CRUISE SWITCH

RECALL PERFORM RECALL

PERFORMED RECALL

PERFORMED RECALL AS NEEDED ALL OK

NA REPLACED SWITCH AND CONNECTOR.

99815 RECALL PERPORM RECALL

1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 998158.8

REPLACED BRAKE SWITCH KIT

REPLACED CRUISE CONTROL SWITCH PER RECALL

99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL OUT NILES 61018.

REMOVED AND REPLACED SPEED CONTROL SWITCH

X 998 15 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

1 PERFORM RECALL 99315

REPLACED SPEED CONTROL CABLE AS PER RECALL 99816

REPLACE AS PER RECALL 99815

99815 PE

PERFORMED PER RECALL INSTRUCTIONS

PREFORMED RECALL PER INSTRUCTIONS

94020 RECALL 99815 WT DONE

REPLACE SWITCH AND CONNECTOR

RECALL 99815

REPLACE CRUISE SWITCH

COMPLETE RECALL

RECALL PERFORMED

000400

PERFORMED RECALL - REPLACED SPEED CONTROL DEACTIVATION SWITCH

CHECK AND TEST CRUISE CONTROL AFTER RECALL WAS PERFORMED. FOUND DEACTIVATION SWITCH NOT WORKING, REPLACE SWITCH,

1 INSPECTED SYSTEM AND REPLACED SWITCH W- NEW CONNECTER HOUSING 3416.

99815

99615 RECALL

262716 99315B .5 INSTALL CRUISE SWITCH AS PER RECALL

E082-075 11882

```
110884 REPLACED DEACTIVATION SWITCH AS PER RECALL RETESTED-OK.
REPLACE BRAKE SWITCH, PERFORM RECALL PER INSTRUCTIONS.
185966 INSTALLED SWITCH
REPLACE CRUISE DEACTIVATION SWITCH AND COMM BLEED BRAKES
PREFROMED RECALL
                   98615 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO
RECALL
180884 INSTALL HARDSHELL AND SWITCH FOR CRUISE CONTROL
RECALL 96815
REPAIR PER 99915 RECALL
136410 RECALL REPLACE DEACTIVATION SWITCH
100606 REPLACE DEACTIVATE SWITCH PER RECALL.
REPLACE SPEED CONTROL SWITCH PER RECALL 96S15
RECALL COMPLETED
PER NOTIFICATION RECALL 99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99915 RECALL INSTRUCTIONS
RECALL CRUISE
                      SW REPL
PERFORMED RECALL 99615
REPLACE SWITCH
PERFORM RECALL AS PER NOTICE
RECALL -- PERFORMED RECALL # 8176
31224 WARR, RECALL 99815, REPLACE CRUISE SWITCH, AND CONNECTOR.
RECALL
                   REPLACED DEACTIVATION SWITCH AS PER RECALL
PERFORMED RECALL
PERFORMED RECALL
TECH 141 PERFORM RECALL 98316 REPLACE SWITCH
REPLACED DEACTIVATION SWITCH PERR SAFETY RECALL 99815.
PERFORM RECALL 98515-6PEED CONTROL DEACTIVATION SWITCH REPLACEMENT
PERFORM RECALL 90915
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED
RECALL COMPLETED
99815
PERFORMED RECALL 99815
                   INSTALLED CABLE
50400 RECALL 90815 8310 REPLACE DEACTIVATION SWITCH & PLUG GA
THERE HAS BEEN A KEY PUNCH ERROR ON WRO $72991-1, THIS MILEAGE $2273, IS THE CORRECT MILEAGE.
PERF RECALL 99815
RECALL SPEED CONTROL SWITCH REPLACE DEACTIVATION SWITCH
DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REPLACE CRUISE SWITCH PER RECALL
18217 REPLACE DEACTIVATION SWITCH PER 99S15 RECALL.
REPLACE SPEED CONTROL DEACTAVIATON SWITCH AS PER RECALL 99815
```

RECALL 99815

REPLACE SWITCH PER RECALL
REPLACED SWITCH AND CONNECTOR

```
73828 98815 REPLACE DEACTIVATION SWITCH AND CONNECTOR
PERFORM RECALL
998158 0.5
SPPED CONTROL SWITCH RECALL PERFORM RECALL 98S 15.
RPL CRUISE DEACTIVATION SWITCH
68900 REPLACE CRUISE DEACTIVATE SWITCH AND CONNECTOR PER RECALL
REPLACE DEACTIVATION SWITCH AS PER RECALL 89815
R&R SPEED CONTROL DEACTIVATION SWITCH PER RECALL
PERFORMED RECALL #99815
99815
                 99815
99815
                 98815 REPLACE SWITCH AS PER RECALL
INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL
PERFORMED RECALL
998168 0.5
REPLACE SPEED CONTROL DEACTIVATION SWITCH
PERFORM SPEED CONTROL SAFETY RECALL AS INSTRUCTE
REPLACED SWITCH AND CONNECTOR
1 PERFORMED RECALL 90315
SPEED CONT
                     REPL DEACTIVATION SWITCH
RECALL 99816
                     RECALL 99815
37298 RECALL W REPLACE SWITCH AND PLUG GA
REPLACED DEACTIVATION SWITCH
PERFORM RECALL
PERFORMED RECALL
PERFORMED RECLL REPLACED THE SWITCH AND CONNECT. OR BLEED THE BRAKE SYSTEM NOTE THE BRAKES PULSATE AND LEFT FRONT POWER SE AT IS INOP
89615
                 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL 99815
1 REPLACED DEACTIVATION SWITCH PER RECALL :
PER RECALL INSTRUCTIONS. REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99815 RECALL INSTRUCTIONS.
PERFORMED RECALL
PERFROM RECALL
130477 DONE WITH RECALL 99815
RECALL 98815 REPLACED SWITCH AND CONNECTOR AND ROAD TESTED
RECALL SPEED CONTROL
                          REPLACE SWITCH AND CONECTOR
RECALL
                  99315
99815
                 99815
39779 SAME PERFORM REGALL 99815 7156 JH
                REPLACE SPEED CONTROL SWITCH.
RECALL COMPLETED
```

99815

9G852-42-41991 DO RECALL 98S15 PUT IN NEW 5W AND WIRES COND.

SPEED CNTRL DEACTYTN SWTCH RPLCMTPERF SAFETY RECALL 99815

98316 REPLACED SPEED CONTROL DEACTIVATION SWITCH

```
COMPLETED - RENEW SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
COMPLETED RECALL #99815.
PERFORM RECALL AS PER LETTER.
PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 96S15 RECALL INSTRUCTIONS
71134 PERFORMED RECALL CRUISE
REPLACED THE SWITCH PER RECALL 09515
                        89315 REPLACE SPEED CONTROL DÉACTIVATION SW & HARD SHELL CONNECTO
PERFORM RECALL
                     99815 COMPLETED RECALL
99815 RECAUL
PERFORMED RECALL
                         98315
52686 RECALL W REPLACE SWITCH AND PLUG GA
RAR SPEED CONTROL DEACTIVATION SWITCH PER RECALL
RECALL 99815
                     PERFORM RECALL 00915, ADD SWITCH
REPLACED DEACTIVATOR SWITCH PER RECALL
REPLACED SWITCH CAUS 9G852-LAB 998158-TIME .5-AD .1
104207 R-R SW
PERFORMED RECALL REPLACED THE SWITCH AND COONED TOR
REPLACED SPEED CONTROL DECELERATION SWITCH PER RECALL.
81181 INSTALLED NEW SWITCH AND CONNECTOR AS PER RECALL.
RECALL COMPLETE
COMPLETED 99815
                        INSTALLED KIT
RECALL
                   REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REPLACE SWITCH
                       RECALL 90915
PERFORMED 99815 RECALL
                           PERFORMED RECAL
REPLACE SWITCH AND CONNECTOR PER RECALL
REPLACE SWITCH AND CONNECTOR
REPLACED THE SWITCH PER RECALL 99815
99815 RECALL
                     99815 RECALL - REPLACED SPEED CONTROL DEACTIVATION SWITCH
89522 RECALL 99S15
               98515 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
RECALL
                   99816 RECALL REPLACE SWITCH
RECALL
                   99316
89452 RECALL 99815 SPEED CONTROL DEACTIVATION SWITCH
65965 W REPLACE SW2ITCH GA
1 PERFORM RECALL AS PER INSTRUCTIONS
                     REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARDSHELL CONNECTOR
RECALL 88$15
PERFORM RECALL PER FORD
```

part of the second way and part

FORD RECALL. REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL.
REMOVE TAPE AND SECURE LABOR OP 99815E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OP 99815B .5 REMOVED TAPED AND SECURED ST
INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1
INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1
REPLACE SWITCH PER RECALL 99815
REPLACE SWITCH PER RECALL 99815
REPLACED THE SPEED CONTROL DEACTIVATION SWITCH CONNECTOR
RECALL COMPLETED

PARZ-825 11865

```
RECALL
                   PERFORMED RECAL
121003 RECALL REPLACE DEACTIVATION SWITCH PER RECALL 99815
PERFORMED RECALL 99815 SPEED CONTROL
WF INSTALLED NEW SWITCH AND CONNECTOR
PERFORMED RECALL 99815 REPLACED SWITCH
23943 SAME PERFORM RECALL 98815 7158 LA
                 99815 REPLACE CRUSE SWITCH PER RECALL
30564 REPLACED SWITCH PER RECALL .5
REPLACED DEACTIVATION SWITCH
REGALL REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR.
RECALL 99815
REPLACE CRUISE CONTROL DEACTIVATION SWITCH
RECALL
                   INSTALL SWITCH
99815
                 REPLACE DEACTIVATION SWITCH
RÉCALL COMPLETE
PERFORMED RECALL
RECALL 99815 INSTALLED CRUISE CONTROL SWITCH
88310 REPLACED SWITCH AND WIRING PER RECALL
               99816 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL.
58712 99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99816
                  INSTALLED SWITCH
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 988158 .8
                99815 DOME REPLACE SPEED CONTROL SWITCH AND CONNECTOR.
PERFORM RECALL
RECALL 99815 REPLACED DEACTIVATER SWITCH AS PER RECALL 99815
REFLACED DEACTIVATION SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH
NEC TO REPLACE DEACTIVATION SWITCH BLEED BRAKES AS PER 98815
99815
                 99615
               96815 INSTALL DEACTIVATION SWITCH AS PER RECALL
60010 RECALL 99815, SPEED CONTROL SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH
```

RECALL SPEED CONTROL SWITCH REPLACE SWITCH PER 98315

x

COMPLETED

PERFORM REGALL REPL DEACTLIATOR SWITCH

RECALL COMPLETE

PERFORMED CRUISE SWITCH RECALL T

CHECKED AND INSTALLED KIT AS PER RECALL

150695 RECALL 69315 .5 INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL FIN

A SAN SAN OF SAN OF

PERFORM RECALL

REPLACED THE SWITCH PER RECALL 09315

PERFORMED RECALL

1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 1981 \$4 X5

REPLACE BPEED CONTROL CABLE

DOOT C70-7985

REMOVE TAPE AND SECURE LABOR OF 98915E (L3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 98915B .5 REMOVED TAPED AND SECURED \$1 114957 INSTALL NEW SWITCH AND CONNECTOR END

78485 RECALL 99315 .5 INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL FIN

72020 RECALL W REPLACE SWITCH GA

2777-168 PERFORM RECALL 99315

57126 99815 42 .5 REPLACED SWITCH

PERFORMED RECALL PER INSTRUCTIONS

REPLACED THE SWITCH PER RECALL 90815

RECALL

99915-B-RECALL

REMOVE TAPE AND SECURE LABOR OF MS15E 0.8 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 99\$15B .5 REMOVED TAPED AND SECURED SI 125747 TECH 161 98515B-0.5 REPLACE SPEED CONTROL DEACTIVATION SWITCH

A RECALL DONE

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTION.

SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED BY FORD I RECALL COMPLETED

PERFORMED RECALL 99815

RECALL COMPLETED

RECALL 99816 COMPLETED

RECALL COMPLETED

45878 PERFORM RECALL 99815 REPLACE SPEED CONTROL SWITH AND CONECTOR

OPEN RECALL

PERFORMED RECAL

PERFORMED RECALL NEEDS: TUNE AND FILTERS \$184.95 NEEDS: INJECTOR SERVICE AND INDUCTION SERVICE \$ 110 NEEDS BELT \$100

104306 PERFORMED RECALL 68815

90082, PERFORMED 008158

57804 RECALL 98915 WR REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS PER RECALL.

RECALL REPLACED SPEED CONTROL SWITCH PER RECALL

110002 RECALL REPLACED SWITCH BLEED

REPLACE DEACTIVATION SWITCH PER RECALL

15055 PERFORMED RECALL 96815, REPLACED DEACTIVATION SWITCH, OK.

48285 RECALL INSPECT AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL X89 RECALL

RECALL PERFORM SERVICE

PER NOTICE PERFORM RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR PER SAFETY RECALL 89815.

99007 DONE RECALL OPER# 99615B 0.5 HR

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

49/57 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

208855 DO RECALL 99815

DIAGNOSIS AND INSPECT FOR CAMPAIGN. PERFORM CAMPAIGN AS PER NOTICE REPLACED SPEED CONTROL DEACTIVATION SWITCH.

REPLACED PARTS PER RECALL

DID RECALL 998:5B

REMOVE TAPE AND SECURE LABOR OF 985155 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 995158 .5 REMOVED TAPED AND SECURED SI REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL.

boxflet OLD1

```
157305 RECALL WARR PREFORMED RECALL 09815
RECALL REPLACED CRUISE CONTROL DEACTIVATION SWITCH AND HARNESS CONNECTOR AS PER RECALL
RECALL
                   99St6 INSTALLED SWITCH
1 TECH INSTALLED CRUISE DEACTIVATION SWITCH AS PER RECALL 99816
COMPLETED RECALL
INSTALL NEW DEACTIVATE SWITCH.
RECALL/R09315 SPEED CONTROL 99815-PERFORM MODIFICATIONS
PERFORMED RECALL 90$15 - CHECK AND REPLACED CRUISE CONTROL CABLE.
84085 RECALL 99815 998158 & REPLACED SWITCH AND CONNCECTOR PER RECALL
                RC 99815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
G
                 PERFORMED 99$15 RECALL
99815
INSTALL SWITCH PER RECALL
                            99515
REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
99815
                 99815
REPLACE SPEED CONTROL CABLE AS PER RECALL 99815
REPLACE ACC SWITCH AND ISLEED HYD RETEST DRIVE OK
RECALL
                   96815 RECALL
OPEN RECALL
                     PERFORM RECALL
RECALL REPAIR
REPLACE DEACTIVATE SWITCH PER RECALL
               COMPLETE RECALL
98124 RHR SPEED CONTROL DEACTIVEATION SWITCH
PERFORM RECALL 99315
90984 PERFORM RECALL 99315
78287 INSTALL RECALL
99815
                 99815
84440 RECALL 0.5 PERFORM RECALL 99815
RECALL
                   98815 REPLACED SWITCH
PÉRF. RÉCALL
CHECK AND INSTALL CRUISE SWITCH PER RECALL
RECALL
                   99815 DEACTIVATION SWITCH
                   PERFORM RECALL
RECALL
82697 RECALL 99815
PERFORMED RECALL 98815
REPLACE DEACT SWITCH PER 99816
PERFORM RECALL
RECALL 99615
                     99815 RECALL PERFORMED
PERFORM RECALL 99815
                          RAR BRAKE SWITCH PER RECALL 90915
                89615 DOME REPLACE SPRED CONTROL SWITCH AND CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
100606 DID RECALL 98515 TECH 3213
PERF RECALL 99815
```

EH825-850 T100

87968 RECALL 99615 TECH 9177 PERFORM RECALL 99815 INSTALL CONNECTOR
PERFORMED RECALL
RECALL 99615 DONE
- MODIFY PER RECALL 99815
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

PERFORMED RECALL
REPLACED DEACTIVATION SWITCH
112347 RECALL REPLACED SPEED DEACTIVATION SWITCH AND BLEED
DO RECALL 96815 MILEAGE 72713 R.R. ONE 96852 CRUISE DEACTIVATION SWITCH PER RECALL

REPLACE CRUISE CONTROL SWITCH PER RECALL 99815 PERFORM RECALL 99S15 97103 W REPLACE DEACTIVATE SWITCH GA PERFORMED RECALL 90S15 REPLACED SWITCH CONNECTOR REPLACED SWITCH AND CONNECTOR INSTALL SPEED CONTROL SWITCH. RECALL 89815 80665 RECALL 99815 INSTALL SWITCH 99816B JOHRS REPLACE CRUISE CONTROL DEATIVATION SWITCH INSTALLED SPEED DEACTIVATION SWITCH PER RECALL. 99315 99315 PERFORMED RECALL PERFORM R ECALL 99816 TECH INSTALLED NEW CRUISE DE ACTIVATION SWITCH PER FORD RECALL 1 RECALL 99\$16B C-C A99 CORR 42 INSTALL CRUISE DEACTIVATION SWITCH PER RECALL 99815, 6590 CHECK FOR RECALL, NEEDED, PERFORM RECALL 78729 99315 W REPLACED SOPEED CONTROL DEACTIVATION SWITCH 0937

REPLACED CRUISE CONTROL SWITCH PER RECALL

99815

CONNECTOR

SWITCH

99315

98269 RECALL 99815 PREFORMED CRUISE CONTROL RECALL

RECALL

99815 INSTALLED SWITCH

PERFORM RECALL AS PER NOTICE
PERFORM RECALL RECALL

RECALL 99815 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99815

RECALL COMPLETE

PERFORM SPEED CONTROL SAFETY RECALL AS INSTRUCTE.

12015

CRUISE DEACTIVATION SWITCH REPLACE CRUISE DEACTIVATION SWITCH

RECALL COMPLETED ALL OK.

RECALL

99915 REPLACED SWITCH

RECALL

9815 INSTALLED SWITCH

boxilites OLD1

99815

99815

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99815 RECALL INSTRUCTIONS

REPLACE SPEED CONTROL CASLE AS PER RECALL 90615

RECALL

RECALL

99515 SPEED CONTROL RECALL 99815

REPLACE CRUISE DEACTIVATION SWITCH PER RECALL

SWITCH

68815

PERFORMED RECALL

99315

REPLACED SWITCH PER RECALL

INSTALL CONNECTOR AND SWITCH PER RECALL 99815

28254 99815B 0.5 HRS REPLACE SPEED CONTROL DEACTIVATION SWITCH.

INSPECT AND REPLACED SPEED CONTROL SWITCH TO COMPLETE RECALL

87247 INSTALL DEACTIVATION SWITCH + CONNECTOR

INSTALL CRUISE DEACTIVATION SWITCH PER RECALL 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99815

PREFORMED RECALL AS PER 98315

85126 RECALL 99815 PERFORMED RECALL 99815

INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN

REPALCE SWITCH

SWITCH.

REPLACE SWITCH AND CONNECTOR

COMPLETED RECALL ON DEACTIVATION SW...

INSTALL RECALL KIT

88915

PERFORM RECALL 98315

PERFORMED RECALL PER BULLETIN

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR, CHECK NORMAL OPERATION.

REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL 99315

PERFORM RECALL 98815

RECALL COMPLETED

REPLACE HARNESS ASSEMBLY AS PER RECALL

COMPLETED RECALL

PER NOTICE : PERFORM RECALL

PERFORMED RECALL 99815

PERFORM REGALL 98816 SPEED CONTROL

RECALL REPIAR

88850 RECALL 988188 0.5 PERFORM RECALL, REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR.

112560 INSTALL SWITCH

99815 RECALL

PERFORM RECALL

SPEED CONTROL SWITCH 90816 RECALL

REPLACED SWITCH & CONNECTOR.

99815

RECALL REPAIR

#811 PERFORM RECALL 89315. REPLACE DEACTIVATION SWITCH AND PLUG HARNESS

SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR REMOVE & REPLACE SPEED CONTROL DEACTIVATION SWIT 20915 REPLACED CONNECTOR AND SWITCH REPLACE SWITCH PER RECALL . -DONE 99815. . REPLACE SPEED CONTROL DECACTIVATION SWITCH AND HARDSHELL CONNECTOR

REPLACED SC DEACTIVATION SWITCH 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

COMPLETED RECALL 99815 SPEED CONTROL DEACTIVATIO

INSPECT CRUISE CONTROL SWITCH - OK AT THIS TIME - PER RECALL

REPL SPD CNTRL DEACTIVATION SW

REPLACE SPEED CONTROL DEACTIVATION SWITCH

1 PERFORMED RECALL PERFORM RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

89815 RECALL SPEED CONTROL SWITCH RECALL 99316 RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL 98815

99815 RECALL COMPLETE 99615 RECALL

REPLACED SWITCH ASSEMBLY PER RECALL

COMPLETED RECALL 99818

PERFORMED RECALL 99615

99515 INSTALLED SWITCH RECALL

PERFORMED 98815 RECALL REPLACED SWITCH PER RECALL

REPLACED CRUISE SWITCH AS PER RECALL 19315

RECALL 99815 NSTALLED SWITCH

FACTORY RECALL COMPLETED

RECALL REPAIR

67735 RECALL PERFORMED RECALL 99315 CC42

RECALL RECALL

PERFORM RECALL 90816 99815 INSTALLED SWITCH

74109 RECALL 99315 0.5 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99815.

PERFORM RECALL 99811

104084 INSTALLED CRUISE SWITCH AND HARDSHELL

IMPROPER OPERATION

REPLACE SWITCH, OP NOT LISTED IN SLTS

PERFROM 96815 RECALL 96815 99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 998156 0.5, ADMIN 0.1 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 998156 0.5, ADMIN 0.1

PERFORMRECALL DEACTIVE SWITCH PER INST.

REPLOED SWITCH CONNECTION

99816 REPALCED CONNECTOR AND SWITCH

RECALL 99815

PERFORM RECALL 99516

99815

99615

REPLACE 8PEED CONTROL SWITCH PER RECALL.

INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN

OPEN RECALL COMPLETED OPEN RECALL

129829 RECALL 99815 REPLACED DÉACTIVATION SWITCH PER RÉCALL.
99816 REPLACE CRUISE CONTROL SWITCH PER RÉCALL.

REPLACED CRUISE CONTROL BRAKE SWITCH

REPLACE SWITCH PER RECALL

RECALL 99815

RECALL 98S15

RECALL PERFORM RECALL 99515 SPEED DEACTIVATION SWITCH

SPEED CNTRL DEACTVTN SWTCH RPLCMTPERF SAFETY RECALL 99515

INSTALL SPEED CONTROL DEACTIVATION SWITCH

INSTALL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL

PERFORM RECALL 00816

93953 RECALL SPEWED CTRL SWITCH

٨

RECALL DONE

48567, RECALL 89615B SPEED CONTROL DEACTIVATION SWITCH

RECALL

98815

REPLACED SPEED CONTROL DEACTIVATION SWITCH

90815 RECALL DOS'S REPAIR AS PER RECALL

REPLACED DEACTIVATION SWITCH AND CONNECTOR.

PERFORM RECALL 98315. B9315 RECALL COMPLETE

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98815

1 PERFORM RECALL

REPLACE SPPED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR. 89615 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT

RECALL 99316 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99315

40245 W PERFORME RECALL 99815

1 PERFORMED RECALL AS OUTLINE

69815

REPLACE CRUISE CONTROL SWITCH PER RECALL

00615

PERFORMED PER RECALL INSTRUCTIONS

```
151743 RECALL 99816 DEACTIVATION SWITCH COMPLETE
1 REPLACE CRUISE DEÁCTIVATION SWITCH AND HARDSHELL PER RECALL
AS PER RECALL
                      99815 RECALL TO INSTALL SWITCH AND HARDSHELL CONNECTOR.
PERFORM RECALL
INSTALLED CRUISE CONTROL SWITCH PER RECALL.
PERFORM RECALL
                       99815 COMPLETE
PERFORM RECALL 99815.
                99815 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
BPEED CONTROLE
                        REPL CABLE
70835 REPLACE SWITCH AND CONNECTOR
REPLACED SPEED CONTROL CABLE
98815
                 98615
RECALL 99815
                     99815 REPLACE SPEED CONTROL SWITCH
REPL DEACTIVATION SWITCH PER RECALL
PERF 99315
PREFORM RECALL
85988 REPLACE SPEED CONTROL SWITCH AND CONECTOR RECAL 99815B LA
RECALLED BY FORD
                        PEFORMED RECALL
63433 RECALL 99615 WR PERFORM RECALL 99615 INSTALL SPEED CONTROL SWITCH
PERFORM RECALL
REPLACED DEACTIVATION SWITCH AND HARDSHELL PER RECALL
PERFORM RECALL 99815
PERFORMED RECALL
99615
                 99815
8PD CTRL DEACTIVATION 6W REPLCMNTPERFORMED RECALL 99815
OPEN RECALL
                     PERFORMED RECAL
PERFORM RECALL 99816
RECALL
                   00915 - B - RECALL
42927 RECALL WR RECALL 99816
AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS
1 REPLACE CRUISE DEACTIVATION SWITCH.
REPLACE SPEED CONTROL SWITCH
76674 RECALL WARR PREFORMED RECALL 66815
8PD CTRL DEACTIVATION SW REPLOMNITY ERFORMED RECALL 99915
PERFORMED RECALL
```

REPLACE SWITCH

RECALL PERFORMED RECALL 99815
RECALL PERFORMED RECALL 99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER, REGALL SENT BY WPI.

47744 PREFORM RECALL PERFORM RECALL 98515

RECALL PERFORM RECALL

DASS-025 11040

81556 REPLACED SWITCH AND CONNECTOR HARDSHELL PER REC ALL-TECH 542 PERFORM SAFETY RECALL 50522 RECALL 69615 INSTALLED UPDATED SPEED CONTROL CUTOFF SWITCH CHECKS OK RECALL 99815.

PERFORMED SPEED CONTROL RECALL 99615 RPL SPEED CONTROL DEACTIVATION SWITCH, RECK OK PERFORMED RECALL 99815B PERFORM RECALL PER INSTUCTIONS. REPLACE SPEED CONTROL SWITCH PER RECALL 89516 RECALL 99815 REPLACED DEACTIVATION SWITCH 123683 W PERFORM RECALL 99815

1 PERFORMED RECALL

86915

99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL

127808 99\$15 RECALL ADD ON OKD BY R.A.B. PREFORMED RECALL 99\$15, INSTALLED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR, BLED BRAKES.

REPLACED SWITCH

SERVICE PUBLICATION 99815 REPLACED SWITCH

PERFORMED RECAL

SWITCH 98815

171264 90S16 PREFORMED 99S15 PER INSTRUCTIONS

98916 99846

REPLACED DEACTIVATION SWITCH

1866 RECALL #99815 PERFORM RECALL #99815 REPLACING BRAKE PRESSURE SPEED CONTROL DEACTIVATION SWITCH "5WP

INSTALL SPEED CONTORL DEACTIVATION SWITCH

REPLACED THE SWITCH PER RECALL 19815

RECALL INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

INSTALLED KIT 99815 RECALL PREFORMED 99815 RECALL

99816 RECALL COMPLETE

99316

99\$15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL C

REPLACE SPEED CONTROL SWITCH PER RECALL 89916

PERFORM RECALL 98815.

48701 RECALL 99815 RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH FLAG TO TECH 5419

COMPLETED RECALL

PERFORMED RECALL 99815

ADD PERFORM RECALL

99815

REPLACE SWITCH

REPLACED THE SWITCH PER RECALL 09815

PERORM RECALL 98815

91677 TRIED TO RER DEACTIVATION SWITCH, FROZEN IT PULLED THREADS OUT OF PROVALVE . HAVE TO ORDER \$12- REMOVED LEFT SIDE INNER FENDER WELL F 108848 RECALL 99S15 REPLACE CRUISE CONTROL SWIRCHA AND PLUG

1 1 INSTALL SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

```
1 REPLACE DEACTIVATION SWITCH AS PER RECALL 998
REPL BRAKE SWITCH AND CONNECTOR PER RECALL.
```

84477 RECALL 99815 PERFORMED RECALL 99615

1. REPLACE DEACTIVATION SWITCH AS PER RECALL 998.
REPLACE SPEED CONTROL SWITCH

99815
INSTALLED KIT PER RECALL
REPLACE VALVE AND BLEED

REPLACE VALVE AND BLEED BRAKE ADDITIONAL TIME REQUESTED

110572 PERFORMED RECALL

90481 998158 0.5 HRS REPLACE SPEED CONTROL DEAUTIVATION SWITCH.

COMPLETE RECALLL 90915

INSTALLED KIT 99815 RECALL PREFORMED

COMPLETE AS PER RECALL 99\$15

PERFORM SAFETY RECALL 99815 COME

COMPLETED 99-8-16-

RECALL 98815 SPEED CONTROL DEACTIREPLACE DEACTIVATION SWITCH AND HARD SHELL CONECTOR, RECALL

AS PER 99815 INSTALLED SPEED CONTROL DEACTIVATION SWITCH.

REPLACED SW AND CONNECTOR

X 99615 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH

INSTALLED SWITCH PER RECALLS

PERFORM RECALL

PREFORMED RECALL 99815

RECALL 99815 INSTALL SWITCH PER RECALL

REPLACE CRUISE CONTROL SWITCH AS PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH.

REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL

REPLACE SWITCH PER RECALL

PERFORMED RECALL

99315

83045 PERFORM RECALL -CRUSE SWITCH RECALL 99815 PERFORMED RECAL REPAIR PER 99816 REPLACED SWITCH

REPAIR PER 99\$16 RECALL

99816 REMOVE, TAPE & SECURE THE SPEED CONTROL DEACTIVATION SWITCH

PERFORM RECALL

RECALL

REPLACE SWITCH ASSY

1 REPLACED SPEED CONTROL DE-ACTIVATION SWITCH PER RECALL

RECALL 09816 - B - RECALL

121382 RECALL 99815 CRUSTE CONTROL SWITCH RECALL 99815 CRUSTE CONTROL SWITCH

66815

REPLACE DEACTIVATION SWITCH

CARTT 078-709C

99815

PERFORM RECALL 96615

99815

INSPECT CRUISE CONTROL SWITCH PER RECALL

99815 REPLISPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT

RECALL

99815 - B - RECALL

RECALL

PERFORMED RECALL 60St5

1 RECALL #99515.

PERFORM RECALL 99815

INSTALL CRUISE BRAKE KIT

REPLACE SWITCH AND HARNESS FOR CRUISE PER RECALL

42562 REPLACE CRUISE DEACTIVATION SWITCH PER RECALL INSTRUCTIONS

1 REPLACE SWITCH & PLUG BLEED BRAKES

1 COMPLETED RECALL 88315

RECALL 00915

38165 RECALL W REPLACE SWITCH AND CONNECTOR PER RECALL 99815 GA

99815

REPAIRED AS PER RECALL NECESSARY TO REPLACED WIRE TERMINALS.

REPLACE DEACTIVATION SWITCH AS PER RECALL

RECALL

P9815

PEROFRMED RECALL 99815 - CHECK AND REPLACED DEACTIVATION SWITCH AND RECHEKC OK

PERFORMED RECALL AS INSTRUCTED.

OPEN RECALL COMPLETED OPEN RECALL

99615

98B16

1 PERFORM RECALL 98915

98815 RECALL

RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED.

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR, ROAD TEST.

PERFORM RECALL 99615

RECALL

REPLACE DEACT SWITCH PER RECALL

REPLACE CRUISE CONTROL DEACTVATION SWITCH

11.55

PREFORMED 99816 RECALL

REPLACED SWITCH PER RECALL

PERFORM RECALL 99315

PERFORM RECALL

PRIFORMED RECALL 98815

RPL SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR, RECK OK

5.05 27.700 37.50

RECALL 00315 COMPLETED

REPLACE SPEED CONTROL SWITCH ##X##

99815 REPLACED SWITCH

SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SORED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

PERFORMED RECALL 99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR.

RECALL 99515 - B - RECALL

RECALL 99515 REPL SPID CHTRL DEACTIVATION SW REPLACE SPEED CONTROL SWITCH

1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 99515B .6

REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPLACED CRUISE CONTROL DEACTIVATION SWITCH

86534 TECH 101=RECALL=99516=0.5 REPLACE BRAKE PREBURE SWITCH & CONECTOR.

95199 PREFORMED RECALL **INSTALL NEW SWITCH** COMPLETED RECALL PERFORM RECALL

98916 99815

08 REPLACED SWITCH

13285 RECALL 99815B .5, ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL

PERFORMED RECALL

83647 RECALL & REPLACE SPEED CONTROL DEACTIVATION SWITCH PIER RECALL 99\$158

RECALL. PERFORMED

RECALL PERFORMED

78407 REPLACE SWITCH PER RECALL

177159 PERFROM RECALL 90S15

PERFORMED RECALL 99515

RECALL 90815 20S16 RECALL COMPLETED REPLACED SWITCH

RECALL 00315 REPLACED DEACTIVATION SWITCH

RECALL 99815

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND ELECTRICAL CONNECTOR TEST DRIVE

99843 PERFORMED RECALL 99816 REPLACED SWITCH

RECALL 99815 DONE

99815 99815

PERFORM RECALL

99815 99815

RECALL 99515 REPLACED CRUISE CONTROL SWITCH PER RECALL

98816 REPLACED CRUISE CONTROL SWITCH

RECALL 99816 SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT

PRFORMED RECALL REPLACED SWT AND CONECTOR END LABOR OP 988168 TECH 1787

59995 99815 RECALL 99815 REPLACE DEACTIVATOR SWITCH

RECALL 69815

PERFRON RECALL

REPLACED DEACT, SWITCH RECALL

INSTALL NEW SWITCH CONNECTOR 99815

RECALL 00915 REPLACED CRUISE CONTROL SWITCH PER RECALL

```
PERFORMED RECALL 09$15.
PERFORM RECALL
REPL SPD CONTROL DEACTIVATION SW
REPLACE SPEED CONTRO CONNECTOR
                 99815
REPLACED BRAKE DEACTIVATION SWITCH AND CONNECTOR.
PERFORM 89615 RECALL CRUISE CONTROL DEACTAVATION SWITCH R05158 .5 ADMINISTRATIVE ALLOWANCE ADMIN .1.
TECH 241 PERFORMED 99815 RECALL
RECALL COMPLETED
67341 RECALL #89316 PERFORM RECALL #89316 REPLACING BRAKE PRESSURE SPEED CONTROL DEACTIVATION SWITCH "5 WP
REPLACED PER RECALL
108638 99816B-.5 ,5 REPLACE SPEED CONTROL SWITCH AS PER RECALL 99616
36135 RECALL INSPECT AND REPLACE DEACTIVATION. SWITCH AND CONNECTOR PER RECALL X99 RECALL.
PERFORM RECALL
SWITCH RECALL
                       REPLACE SWITCH
1 PERFORMED RECALL 98815
60075 99815 W REPLACED SPEED CONTROL DEACTIVATTION SWITCH 2745
REPLACE CRUISE SWITCH FER RECALL 99515
RECALL 09815
                     COMPLETED RECAL
                    RECALL 99815
SWITCH
RECALL 99815
                     INSPECT AND REPLACE SWITCH PER RECALL.
                      RECALL
RECALL
INSTAL SWITCH
FACTORY REGALL COMPLETED REGALL
PERFORMED RECALL
IMSPECTED AND REPLACED SPEED CONTROL SWITCH PER RECALL
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99816.
98607 INSTALL SWITCH AS REQ.
73774 REPLACED SWITCH
REPLACED BRAKE DEACTIVATION SWITCH AND CONNECTOR
79168 RECALL WARR REPLACED DEATIVATING 8W AS PER REACLL 99915
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99815.
PERFORMED RECALL
REPALCE SWITCH ASY
REPLACED THE SWITCH PER RECALL 99815
48132 99815 RECALL, INSTALL UPDATED SPEED CONTROL DEACTIVATION SWITCH AS PER 99816.
PERFORME DRECALL 98815
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER, REACLL, LABOR 998159 0.5, ADMIN 0.1
1 ACCESS INSPECT & REPLIDEACTIVATION SWITCH & CONNECTOR AS PER RECALL 99815
```

RECALL 99915

INSTALLED DEACTIVATION SWITCH PER RECALL

RECALL 99S16

REPLACE SWITCH PER RECALL 99815

```
PERFORM RECALL 90815
PERFORM RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.
RECALL COMPLETE
INSTALLED SWITCH PER RECALL
OPEN RECALL
                     PERFORM RECALL
SPEED CONT
                     INST SWITCH ASS
125088 RECALL 99915 INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH PER INST
102433 RECALL 66815 WARR INSTALL SWITCH PER RECALL
PERFORMED RECAL
RECALL 99815
                     99315 RECALL PERFORMED
1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
1 PERFROM RECALL E
INSTALL CRUISE DEACTIVATION SWITCH
82238 RECALL 96615 & REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR FOR RECALL 99615
PERIOFRAGED RECALL 99S15 - CHECK AND REPLACED SPEEDCONTROL CARLE.
57844 WARR RECALL REPLACE SPEED CONTROL SWITCH AND CONNECTOR
FINE SPEED CONTROL DEACT SWITCH 199816 REPAIRED PER RECALL
х
               COMPLETED
PERFORMED RECALL 99815-INSTALL SWITCH
REPLACED C CONTROL DEACTIVATION SWITCH PER RECALL 99816
PERFORMED RECALL
INSTALL DEACTIVATION SWITCH
99815 RECALL
88815
                 REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
00315
                 90915
99S15 RECALL
1 COMPLETED REQUESTED RECALL AS PER FORD INSTRUCTIONS
1 PERFORM RECALL FOR DEACTIVATION SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER INSTRUCTIONS
99815
                 INSTALL DEACTIVATION SWITCH
REPLACE SWITCH
80469 RECALL WP40 PERFORMED RECALL, RPELACED BRAKE PRESSURE SWITCH.
PERFORM RECALL 89815
REPLACE BRAKE VALVE RECALL 90S15
PERFORMED RECALL 99815
REPLACED SWITCH & CONNECTORS
50480 42 WP40 COMPLETE RECALL 99915 REPLACE CRUISE CONTROLL SWITCH AND CONNECTOR
80448 PERFORMED RECALL 99315
                  REPLACE SPIPED CONTROL DEACTIVATION SWITCH & CONNECTOR
RECALL
```

202-623 110to

RECALL

REPLACE SWITCH AND CONNETOR

99815 - B - RECALL

. -. -

RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

99315

OPEN RECALL COMPLETED OPEN RECALL PERFORMED RECALL INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN PERFORMED RECALL PER INSTRUCTIONS PERFORMED RECALL 09815 COMPLETE RECALL 99815 1 PERFORMED RECALL 1 REPLACE SWITCH PER FORD RECALL INSTALL SWITCH **RECALL 88815** PERFORMED RECALL 99815 RECALL PERFORMED 7 COMPLETED RECALL 99815 INSTALLED SPEED CONTROL DEACTIVIATION SWITCH 99815 REPLACE CRUISE DEACTIVATION SWITCH PER RECALL 1 REMOVE AND REPLACE CRUISE CONTROL SWITCH PER RECALL REPLACED SWITCH AND CONNECTOR REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL

145194 RECALL 99815 REPLACE SPEED CONTROL DEACT SWITCH PER RECALL 99S15

88709 INSTALL DEACTIVATION SWITCH

PERFORM RECALL 45965 RECALL 0.6 99816B INSTALLED SPEED SWITCH PER RECALL PERFORMED RECALL 99815 INSTALLED BRAKE PRESSURE, SWITCH, ROAD TEST AFTER RECALL.

99615 67880 RECALL 96515 W PERFORMED RECALL 96815 SPEED CONTROL DECATIVATI ON SWITCH. INSPECT AND REPLACE SWITCH AS PER RECALL. REPLACED SWITCH AS PER RECALL AND BLEED BRAKES AS PER RECALL REPLACED CRUISE CONTROL DEACTIVATION SWITCH RAR SPEED DEACTIVATION SWITCH 160506 RECALL 12 WR PERFORM RECALL 99815

RECALL 99815 RECALL-R&R CRUISE CONTROL DEACTIVATION SWITCH & CONNECTOR PERFORMED RECALL 99816 REPLACED DEACTIVATION SWITCH AND CONNECTOR HARD SHELL ROAD TEST BEFORE AND AFTER REPAIR NOTED OFF SWITCH INTERMITTENT OPERATION

REPLACED CRUISE DEACTIVATION SWITCH PER RECALL? PERFORMED RECALL 99815

INSTALL SPEED CONTROL DEACTIVATION SWITCH

and the state of t

1 PERFORMED RECALL 00S15 SPEED CONTROL DEACTIVATION SWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 88815. 146053 RECALL INSTALLED NEW SPEED CONTROL DEACTIVATION SWITCH AND BLEED BRAKES AS STATED BY RECAL

1 PERFORMED RECALL 99515 REPLACED CRUISE CONTROL DEACTIVATION SWITCH PERFORM RECALL

130036 REPLACED SWITCH PER RECALL 99815

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 88815.

SECAL 99315

1 PERFORMED RECALL 99815 FOR THE 8PEED CONTROL.

PEROFRM RECALL 98815 - CHECK AND REPLACED CRUIS

REPLACED CRUISE DEACTIVATION SWITCH

43480 INSTALL SPEED CONTROL SWITCH PER RECALL.

REPLACED CRUISE DEACTIVATION SWITCH AS PER RECAL

REMOVE TAPE AND SECURE LABOR OF 99915E 0.3 HR REPLACE SPEED CONTRIOL DEACTIVATION SWITCH LABOR OF 98915B .5 REMOVED TAPED AND SECURED SI

PERFORM RECALL 98815 REPLACED SWITCH AND CONNECT

RECALL 99815 PERFORMED RECALL 99815

RECALL 99816

COMPLETED RECALL 99816 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ... 998168 .5+.1

INSPECT AND OR PERFORM RECALL INSPECTED AND OR PERFORMED RECALL AS PER RECALL INSTRUCTIONS.

PERFORM RECALL 99815

PERFORMED RECALL 99815, REPLACED SWITCH AND CONNECTOR.

99\$15 99\$15

VERIFY RECALL REPLACE CRUISE SWITCH AS PER FMC CHECK OK

SAPETY RECALL 99\$15 -REPLACE SPEED CONTROL DEACTIVATION SWITCH

100817 RECALL ON SPEED DEACT. SWITCH 89S15 W. PERFORMED RECALL REPLACED SWITCH

REPLACE AS PER RECALL BUSIS

RECALL - SPEED CONTROL SWITCH PERFORM RECALL 99815, REPLACE SPEED CONTROL SWITCH & CONECTOR

OPEN RECALL PERFORMED RECAL

RECALL 99815

PERFORMED RECALL 99815

98714 CC 42 NOT OPERATING PROPERLY TIME TO CK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815,

114400 RECALL W REPLACE SWITCH AND PLUG MA.

98815 98816

INSPECTION PERFORMED RECALL AND INSTALLED SWITCH

REPLACE SWITCH PER RECALL

99815 99815 RECALL

192534 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL INSTRUCTIONS

REPLACE DEACTIVATION SWITCH AS PER RECALL

PERFORMED RECALL PERFORMED RECALL REPLACED SWITCH & CONNECTOR

RECALL 99816 PERFORMED RECALL 99615

98915 RECALL # 98815 RECALL COMPLETE

1 (PERMANENT REPAIR) REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR 98516B X5

REPLACE SPEED CONTROL SWITCH PER RECALL 99816

42570 RECALL WARR REPAIR PERFORM RECALL PROCEDURES FOR SWITCH REPLACEMENT

E002-620 1140

```
86448 PERFORM RECALL 99815 SPEED CONTROL DEACTIVATION SWITCH
COMPLETED RECALL 99815 1 1
09816 RECALL
                     99815 REPLACE SPEED CONTROL SWITCH-PER RECALL
RECALL
                   RECALL
INSTALLED SWITCH AND CONNECTOR PER RECALL.
COMPLETE RECALL 99815
RECALL PERFORMED
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.
REPLACED DEACTIVATION SWITCH AND PLUG
                 CK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL
99815
24061 INSTALLED NEW RECALLED SWITCH AND PLUG, TEST DROVE AND WORKS PROPERLY
RECALL

    REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL.

98815 - PERSORIAED RECALL REPLACED SWITCH & CONNECTOR & RD. TEST.
                     2015 REMOVE AND REPLACE SPEED DEACTIVATION SENSOR
98815-RECALL
PERFORMED RECALL
REPLACE AS PER RECALL 98815
88520 SPEED CONTROL 8-W RECALL WT PERFORMED SPEED CONTROL 8-W REPLACEMENT RECALL
                       99815
PERFORM RECALL
99815B
                  993158
                 REPALE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99S15
88815
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 69815.
64928 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL AND BLED BRAKES AS PER RECALL
97325 TECH 113 995158 0.5 REPLACE DEACTIVATION SWITCH AND CONNECTOR.
RECALL 00816
                 RECALL COMPLETE
99815
1 PERFORMED RECALL 00815 REPLACE SPEED CONTROL CABLE
REPLACE CONNECTOR AND SWITCH PER RECALL
COMPLETED RECALL
                  99815 PERFORMED SPEED CONTROL DEACTIVATION SWITCH
RECALL
1 COMPLETED REQUESTED RECALL AS PER FORD INSTRUCTIONS
                 99815 REPLACE DEACTIVATION SWITCH
                          REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND PLUG AS PER RECALL
PERFORM RECALL 99815
PERFD RECALL 99315
REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL
PERFORM RECALL 99815
REPLACE SWITCH AND CONNECTOR PER RECALL
REPLACE SPEED CONTROL SWITCH AS PER RECALL
```

98815 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL.

RASAR RECALL 9RS15B .50 TECK 162 INSTALL NEW SWITCH AND CONNECTOR.

99815 FET, SPEED CONTROL DEACTIVATION SWITCH

2 PROGRAM 99815 PERFROM RECALL AS OUTLINED

REPLACE CRUSSE DEACTIVATION SWITCH

E982-828 1196

1 COMPLETED RECALL

132008 WARR, 8045 PERFORMED RECALL 98815, SPEED CONTROL DEACTIVAT REPLACED DEACTIVATION SWITCH PER RECALL

PERFORMED RECALL 00816

AS PER RECALL 99315 REPLACED DAECTIVATOR SW. AND HARD SHELL CONN.

PERFORMED SPEED CONTROL DEACTIVATION RECALL

REPLACE DEACTIVATION SWITCH PER RECALL 99815

99615 REPL SPEED CONTROL DEACCTIVATION SWITCH

PER RECALL REPLACE SWITCH PER RECALL

REPAIR PER RECALL 1

OPEN RECALL PERFORM RECALL

PERFORM RECALL

PERFORM RECALL

X 98515 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

99815 99915

81018 REPLACE DEACTIVATION SWITCH AND HARNESS CONNECTOR.

RECALL 98815 INSTALLED DEACTIVATION SWITCH.

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99315

SPEED CONT REPL SWITCH

REPLACED CARLES

88507 42 WP40 COMPLETE RECALL 69 \$15 REPLACE CRUISE CONTROLL SWITCH AND CONNECTOR

105571 REMOVED CONNECTOR AND SWITCH REMOVED BRASS ADPT REPLACED BRASS ADAPTER PERFORMED RECALL

PERFORM RECALL AS PER POROS INSTRUCTIONS

.1 PERFORM DEAACTIVATION SWITCH RECALL

REPLACE SWITCH 1

PERFORMED 99816 RECALL

REPLACE SPEED CONTROL SWITCH AS PER RECALL

REPLACE SPEED CONTROL SWITCH PER RECALL 90816

44513 79 PERFORM 99S15 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST NOTE SPEED CONTROL INOP CUSTOMER ADVISED JH

87279 INSTALL NEW PRESSURE SWITCH AND CONNECTOR PER 99815

1 PERFORM RECALL

REMOVED AND REPLACED SPEED CONTROL SWITCH AS PER RECALL

RECALL COMPLETE

99815

RNR DEACTIVATION SWITCH

PERFORM RECALL 99815

POST CONTRACTOR

```
REPLACE DEACTIVATION SWITCH AS PER RECALL

X REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 96915

REPLACE SPEED CONTROL SWITCH PER RECALL

PER RECALL PERF RECALL

PERFORMED RECALL 96915 B 1

COMPLETED RECALL 96915

REPLACE DEACTIVATION SWITCH. REPLACED DEACTIVATION SWITCH.

REPLACE SPEED CONTROL SWITCH AS PER RECALL.
```

REPLACED DEACTIVATION SWITCH PER RECALL

99816 RECALL

RECALL 99815 RECALL 99816

UNKNOWN INSTALL CRUISE SWITCH AND CONNECTOR PER 99915

REPLACED SC DEACTIVATION SWITCH 199315

RECALL COMPLETE

COMPLETED RECALL 99816.

RECALL 09816

RECALL 99815

99815 99815 PERFORM RECALL

PERFORM RECALL

PER RECALL 99615 INSTALL SWITCH

FACTORY RECALL COMPLETED RPL CRUISE 6W PER RECALL 69815

1 REPLACED CRUISE CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

FORD SAFETY RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

99915

89915 SPECO CONTROLL DEACTIVATION SWITCH RECALL & RIDTEST

PERFORMED RECALL 898158...REPLACED SPEED CONTROL DEACTIVATION SWITCH ...MD REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99816 COMPLETE RECALL

1 REPLACED SPEED CONTROL DEAVITYATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

PERFORMED 99815 RECALL

REPLACED SC DEACTIVATION SWITCH 99815

REPLACED SC DEACTIVATION SWITCH 98815

. INSTALL BRAKE SWITCH

INSTALL SPEED CONTROL PER RECALL 99S15

88831 42 WP40 COMPLETE RECALL 99815 REPLACE CRUISE CONTROLL SWITCH AND CONNECTOR

98315 99315 REPLACE SPEED CONTROL DEACTIVATION

91692 REPLACE SWITCH PER RECALL 99S15

1 PERFORMED RECALL

CONT. DZG-ZGG

```
99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONN.
SAFETY RECALL
REPLACED SWITCH & CONNECTOR
PERFORM RECALL 98815
```

PERFORMED RECALL 99816-INSTALL SWITCH

REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL

PERFORMED RECAL REPAIR AS PER RECALL 98815

REPLACE CRUISE SWITCH

RÉPLACED CRUISE DEACTIVATION SWITCH PER RECALL

99815 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT

INSTALLED SWITCH

RECALL SPEED CONTROL DEACTIVATION REPLACE DEACT SWITCH REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

PERFORMED RECALL 99315-INSTALL SWITCH NOTE CAR HAS ABS BRAKE LIGHT ON CAME IN THAT WAY

RECALL 99315 PERFORMED AS PER RÉCALL AND REPAIRED WIREING

FORD SAFETY RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

1 PERFORMED RECALL

PERFORMED RECALL 96815

REPLACE DEACTIVATION SWITCH AS PER RECALL

PERFORM RECALL 98S15- REPLACE CRUISE CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

99815 RECALL

99815 RECAUL COMPLETE

REPLACE DEACTIVATION SWITCH

801149 RECALL INSTALL NEW DEACTIVATION SWITCH XXXXXXXX

48748 REPLACED CRUISE DEACTIVATION SWITCH PER RECALL.

REFL CRUISE CONTROL SWITCHES

88548 RECALL REPLACED C.C. DEACTIVATOR SWITCH AND CONECTOR X99 RECALL.

COMPLETED RECALL 99816. 133399 RECALL 89S15

COMPLETED RECALL.

CAMPAIGN REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL INSTRUCTIONS.

SPPED CONTROL DEACTIVATION SWITCH

INSPECTED FOUND WRONG WIRE REPLACED BOTH WIRE ENDS, CONNECTOR AND SWITCH

RECALL

RECALL COMPLETED

RECALL 89915 FECALL

99816B RECALL

PERFORMED RECAL

SWITCH 99315

50371 99815 568

REPLACED CRUISE DEACTIVATION SWITCH AS PER RECALL 99815

99315

RECALL

REPLACE SWITCH AND CONNECTOR AS PER RECALL

PERFORM RECALL

98515 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO

47895 ADD ON REPAIR RAB 99S 15 REPLACE DEACTIVATION SWITCH AND HARD SHEEL COMN ECTOR PER RECALL INSTRUCTIONS UNKNOWN INSTALL CRUISE SWITCH AND CONNECTOR PER 99816 REPL SPEED CONTROL DEACTIVATION SWITCH RECALL #89815 45762 RECALL REMOVED THE BRAKE CRUISE CUT OFF. SWITCH REPLACED WITH THE NEW RECALL PART ## WHEN UNDER HOOD NOTICED THAT THE BRAKE FLUII 99815 99815 PERFORMED RECALL PER DEALER LETTER REPAIR AS PER RECALL RECALL 99615 99815 INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS (SPD CTRL DEACTIVATION SW REPLEMNTPERFORMED RECALL 99815 SPEED CYTRL DEACTIVIN SWITCH RPLCMTPERF SAFETY RECALL 99\$16 99815 - R &R SPEED CONTROL SWITCH RECALL 99815 PERFORMED RECALL RECALL CRUISE CONTROLL RECALL CRUISE CONTROL 99315 99815 REPLACE SPEED CONTROL SWITCH AND CONNECTOR INSTALL CRUISE SWITCH PER RECALL. PERFORM RECALL 99815 129587 RECALL REPLACED CRUISE CONTROL BRAKE PRESS SWITCH AND CONNECTOR AS PER RECALL **98915 RECALL** RECALL 00315 98515 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR 109888 RECALL REPLACED CRUISE CONTROL ACTIVATION SWITCH RECALL COMPLETE PERFORME DOEACTIVATION SWITCH RECALL RECALL 99\$15 RECALL COMPLETED . INSTALLED CRUISE CONTROL DEACTIVATION SWITCH. 99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH & HARDSHELL CON-103279 REPLACED CRUISE DEACTIVATION SW- PER RECALL 90S15. COMPLETED 99815 **INSTALLED KIT** CHECK AND REPAIR AS REQUIRED 112988 98915 REPLACE SPEED CONTROL DEACTIVATION SWITCH PERFORMED RECALL INSTALL SPEED SWITCH PER RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED PERFORMED THE RECALL 99815 50440 RECALL PERFORMED 99815 SPEED DEATTVATION SWITCH RECALL CODE 42 TK574 RECALL 99315 INSTALLED CRUISE CONTROL DE-ACTIVATION SWITCH PER RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH REPLACE SWITCH AND CONNECTER.

DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

2123

REPLACED DEACTIVATION SWITCH, PER RECALL INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL

REPLACE SPEED CONTROL SWITCH PER RECALL 99815

2.50

1 REPLACED SWITCH AND RECHECKED OK, AS PER RECALL 99815

REPLACE BRAKE SWITCH AS PER RECALL

RPL DEACTIVATION SWITCH AND CONNECTOR
REPLACED THE SWITCH PER RECALL 99815
RPL SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONNECTOR, RECK CK
54807 PERFORMED RECALL 99815 INSTALLED A NEW CRUISE DEACTIVATION SWITCH AND CONNECTOR, BLED REAR BRAKES AND ROAD TESTED VEHICLE, OK CR
118800 RECALL REPLACE DEACTIVATION SWITCH

61197 W REPLACE SWITCH GA
RECALL 99315
99815 REPL SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECT
X PERFORMED RECAL
115802 RECALL 98815

REMOVED AND REPLACED SPEED CONTROL SWITCH AS PER RECALL.

98915 RECALL PERFORME 132945 RECALL 98615 0.5 HRS DID 999158

99315 REPLACED CRUISE CONTROL DEACTIVATION SWITCH 115877 REPLACE DEACTIVATION SWITCH PER RECALL 893158 0.5 ADMIN 0.1

99815 PERFORM RECALL 99816

REPLACE SPEED CONTROL SWITCH AND CONNECTOR

REPLACE SWITCH

62511 RECALL 89S15. REPLACED CRUISE DEACTIVATION SWITCH AND BLED REAR BRAKES AS PER RECALL

54239 RECALL WAR REPLACE SWITCH AND CONNECTOR GA

PERFORMED RECALL

99815 COMPLETED INSTALLED KIT

RECALL INSTALLED SPEED CONTROL DEATIVATION SWITCH AS PER RECALL.

1 __INSTALLED SWITCH AND CONNECTOR AS PER RECALL

99815 99816 REPLACE CRUISE SWITCH PER RECALL

99816 REPLACED CRUISE DISCONNECT SWITCH PER RECALL

PERFORM RECALL 99815 REPLACE DEACTIVATION SW

REPLACE SWITCH AND HARD SHELL

1 INSTALL SWITCH AS PER RECALL

INSTALL SPEED CONTROL SWITCH PER RECALL 00081

REPLACE SWITCH

99815 DONE 96855 REPAIR AS PER RECALL 99815

COMPLETED REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH

COMPLETE RECALL

INSPECTION INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL

PERFORMED RECALL 99315

COMPLETED REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH

PERFORM RECALL ON SWITCH

DEFECTIVE SWITCH REPLACE SPEED SWITCH

PERFORMED RECALL

REPLACED CRUISE DEACTIVATION SWITCH PER RECALL LETTER.

104998 RECALL 99815, WR PERFORM RECALL 99815, REMOVE AND REPLACE BRAKE PRESSURE SWITCH.

RECALL

PERFORM RECALL PER PROGRAM 98815, REPL DEAC SWITCH

THE SHORT MAY DISABLE THE SPEED CONTROL SYSTEM OR CAUSE A PUSE TO OPEN, AFTER INSPECTION, IF THE VEHICLE IS INVOLVED THE DEALER WILL REPLACE

COMPLETE RECALL

RECALL 99816

RNR DEACTIVATION SWITCH PERF

PERFORM RECALL 99815

REPLACE SWITCH AND CONNECTOR

PERFORMED RECALL PER INSTRUCTIONS

RECALL

REPLACE DEACT SWITCH PER RECALL

PERFORM RECALL

RECALL PERFORMED RECALL 99815

PERFORMED RECALL 09915 - CHECK AND REPLACED CRU

REPLACED SWITCH AND CONNECTOR ROAD TESTED

99816

99815 RECALL DO

REPLACED DEACTIVATION SWITCH & CONNECTION FOR PERMANENT REPAIR AS

RECALL COMPLETED

024 REPLACED CRUISE CONTROL DEACTIVATION SWITCH

66188 WPG40 INSTALL SPEED CONTROL SWITCH PER RECALL POSTS

REPLACE SPEED CONTROL SWITCH PER RECALL

RECALL

90816

SPEED CNTRL DEACTYTN SWITCH RPLCMTPERF SAFETY RECALL 99815

89615

99615

99615

99615

GPEED CNTRL DEACTIVTN 8WTCH RPLCMTPERF SAFETY RECALL 98816

COMPLETED CAMPAIGN 89815 REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 00S15.

C INSTALL RECALL KIT

COMPLETED RECALL 99815

REPL SPEED CONTROL DEACTIVATION SWITCH

RECALL

REPLACE DEACTIVATION SWITCH PER RECALL

DO RECALL 99816

REPLCE DEACTIVATION SWITCH AS PER RECALL.

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99815. SPEED CONTROL DEACTIVATION SWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99815.

PEROFRMED THE RECALL 98815

1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

RECALL 99S15

RECALL 99815

PERFORM RECALL 90815

```
38598 W PERFORM RECALL
REPLACE SWITCH PER RECALL
                   99815 RECALL COMPLETED REPLACE SWITCH
PERFORM RECALL 99815 CRUISE DEACTIVATION SWITCH
84660 RECALL #86815 MSPEED CONTROL SWITCH REPLACED SPEED CONTROL SWITCH AS PER RECLL #86815
SPEED CONTROL DEACTIVATION SWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 98515.
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99816.
                   REPLACE DEACT SWITCH PER RECALL
RECALL
RAR DEACTIVATION SWITCH PER RECALL 09815
RECALL 99S15 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99S15
PERF RECALL 99615
REPLACE DEACTIVATION SWITCH
PERFORM RECALL
                       99815 COMPLETE
RECALL 00915 REPLACED SWITCH AND CONNECTOR AS PER RECALL 09S15
CONNECTOR
                      86515
99815
                 99315
131190 99815 W REPLACED SPEED CONTROL SW 2743
RESISTIVE SHORT. PERFORM RECALL-ONP PER FOMOCO INSTRUCTIONS.
REPLACE DEACTIVATION SWITCH
REPLACE SWITCH AND HARDSHELL
88219 REPLACED CRUISE DEACTIVATION SW- PER RECALL 99815.
RECALL
                      RECALL
RECALL
                   RECALL
99815
                  88815 RECALL
PERFORMED RECALL 99615
                98815 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
REPLACE SWITCH
                       99915
INSTALL SWITCH AND CONNECTOR PER RECALL.
48289 99$15 PERFORMED RECALL $9$15.TEST DROVE AND VERIFIED ALL OPERATING PROPERLY.
PERFORMED RECALL
PERFORMED RECALL
                         PERFORMED RECAL
REPLACED CRUISE CONTROL CABLE PER RECALL 99$15
PER RECALL
                     PER RECALL
PERF RECALL 00515
PERFORM RECALL 10815 TEST DRIVE
PERFORM RECALL
                       99815 COMPLETE
REPLACED SPEED CONTROL DEACTIVATION SWITCH
COMPLETE RECALL
                           PERFORM SAFETY RECALL
PEFORM SAFETY RECALL
RECALL
                   REPAIR AS PER RECALL
AS PER FORD SPECIFICATIONS PERFORMED RECALL NUMBER 99815
                   CHANGE SPEED CONTROL SWITCH
REPLACED DEACTIVATION SWITCH
```

362-626 THE

PERFORMED RECALL

RECALL RECALL

PERFORMED RECALL

PERFORM RECALL

RECALL 99815

REPLACE PLUG AND SWITCH

8PD CTRL DEACTIVATION SW REPLCMINTPERFORMED RECALL 89815

SPEED CNTRL DEACTVTN SWITCH RPLCNTPERF SAFETY RECALL 90815

PERIFORMED RECALL 99315 DISABLED CRUISE CONTROL SYSTEM, REMOVED CONNECOTR AND SWITCHED WIRES TO NEW CONNECTOR REMOVED GUT OUT SWI

89816 REPLACED SWITCH AND CONNECTOR

PERFORMED RECALL -99815- SPEED CONTROL DEACTIVATION SWITCHES

INSPECT AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL.

RECALL #99815

REPL SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL 99 S 15 FOR CRUISE SWITCH.

87178 REPLACED CRUISE BRAKE SWITCH AS PER RECAL

PERFORM 99815

119013 RECALL PERFORM 99S15 AND REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR AND BLED BRAKES, 99S15B-0.5

REPLACED CONNECTOR PER RECALL

PERFORMED THE RECALL 99915

RECALL 99815 INSTALLED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL

RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL

REPLACED CRUSE CONTROL CABLE PER RECALL 96815

53019 99515 RECALL 99515 REPLACE DEACTIVATOR SWITCH

RECALL 99S15 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL

99915 RPL SPEED CONTROL DEACTIVATION SWITCH

REPLACED SWITCH PER RECALL

INSTALL SWITCH

RECALL INSTALLED SPEED CONTROL DEATIVATION SWITCH AS PER RECALL

99816 DEACTIVATION SWITCH 99315 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND BLED SYSTEM

INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1 -THANK YOU DARREN GREEN TEAM-T

158629 RECALL 99815 WARR REPLACE CRUISE SWITCH

RECALL 99315

PERFORM RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

65988 79 PERPORM 99315 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST

DEFECTIVE SWITCH 99815 RECALL REPLACE SWITCH

RECALL PERFORMED RECALL 99\$15

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL, COMPLETED SPEED CONTROL RECALL W-C 988158 .5 ADMIN .1

PRODUCT MODIFICATION 98815 - PERFORMED RECALL, REPLACED SPEED CONTROL DEACTIVATION SWI

PERFORMED RECALL 99815

PEFORM RECALL 99615

RECALL PERFORMED

```
SPEED CATRL DEACTYTA SWITCH RPLCMTPERF SAFETY RECALL 99815
REPLACED SWITCH PER RECALL 98816
INSTALL SWITCH PER RECALL
RECALL 98815
                      PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH
99815 RECALL
                      98815 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-
99514 RECALL
                      COMPLETE RECALL
108071 W RECALL 99S15/REPLACE SWITCH AND CONNECTOR 99S15B .5.1 ADMIN
01032 REPLACED SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
                                                                                                 MILEAGE IS 152,436 SPEEDOMETER ONLY SH
RECALL 98815 MI OUT 62960 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL 9981
142475 WARRANTY, PERFORMED RECALL 00915 AS PER RECALL INSTR.
RECALL 99515
                     PERFROM RECALL 99315
PERFORMED FACTORY RECALL INSTALLED KIT THANK YO

    REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 988158 .6

COMPLETED - RENEW SPEED CONTROL DEACTIVATION. SWITCH AND CONNECTOR
                   99815 PERFORMED CRUISE CONTROL DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH, MANUAL REVIEW
                                                                 REQUESTED......PREVIOUS ROWSSST WAS CHARGED BACK PER MY REQUEST 11/8/9
71880 REPLACE DEACTIVATOR SWITCH PER RECALL
74022 RECALL WP40 REPLACE SPEED CONTROL PRESSURE SWITCH
REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL
78121 REPLACE SWITCH & CONNECTOR
PERFORM RECALL PER MANUFACTURER ?
COMPLETED RECALL
1 PERFORM RECALL 99315
99815-
REPLACED DEACTIVATION SWITCH
1 PERFORM RECALL
90027 98516 SPEED CONTROL DEACTIVATION SWITCH RECALL WE4 REMOVED OLD SPEED CONTROL DEACTIVATION SWITCH HARNESS CONNECTOR, AND WIRES,
80000 REPLACED DIS-ACTIVATION SWITCH AND CONNECTO
81748 COMPLETED RECALL 99815, 245
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 99815B .6
PERFORMED RECALL 99815
64964 96$15 W REPLACED SPEED CONTROL SW 2745.
OWNER NOTIFICATION
                         CRUISE CONTROL RECALL 99816
                  99815 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND HARD SHELL C
99615
RECALL 99315
                     SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
73013 90815B 0.5 0.5 PERFORM 90815
                   REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTO
REPLACE SPEED CONTROL DEACTIVATION SWITCH
MEPL CRUISE CONTROL SWITCH ASSY
RECALL
                   REPLACED SWITCH PER RECALL
181424 REPLACED DEACTIVATION SWITCH AND CONNECTO
```

1962-825 11911

SPD CTRL DEACTIVATION SW REPLOIMITPERFORMED RECALL 89S15

REPLACED SWITCH PER RECALL 99815

RC 99815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

99815

99815 DISTALL SPEED CONTROL DEACTIVATION SWITCH

RECALL 89915

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

REPLACE SWITCH PER RECALL

40198 98815 99815 .5 .5 REPLACE SENSOR & CONNECTOR.

PERFORMED RECALL 89815

RECALL 99S15

SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT

PERFORMED RECALL

RECALL 90815. CARRY OUT FACTORY RECALL AS DESCREED BY BULLETIN

AS PER RECALL 99815 RECALL TO INSTALL DEACTIVATION SWITCH

98815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL REPL SPEED CONTROL SWITCH AND CONSISTS

99816 RECALL COMPLETE RECALL

REPLACE AS PER RECALL 90S15

8PD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 98815

99815 99815

PERFORMED ECALL REPLACED SWITCH

89815 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL

85100 RECALLED REPLACED SWITCH AND CONNECTOR PER RECALL

REPLACE VALVE :

RECALL 99S15 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH T

73342 R R SPEED SWITCH AND CONNECTER BLED REAR BRAKES AND TEST DROVE

RECALL 99S15

REPLACE DEACTIVATION SWITCH

99815 RECALL

COMPLETE RECALL

RECALL REPLACED SWITCH PER RECALL

1 REPLACED DEACTIVATION SWITCH PER RECALL 98815

89615

REPLACED CRUISE CABLE PER RECALLS9816

REPLACED SWITCH

PERFORMED AS PER RECALL

PERFORMED RECALL 99815-INSPECTED-REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

COMPLETE RECALL

67609 RECALL 99816 DONE DEACT SWITCH REPLACE.

AS PER RECALL 99315 REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR AS PER THE TECHNICAL INSTRUCTIONS

PERFORMED RECALL

66281 PERFORM 89S (5

REPLACE SWITCH.

COMPLETED PER INSTRUCTIONS.

REPLACE SWITCH PER RECALL

1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

11912

```
99$16 RECALL TO INSTALL DEACTIVATION SWITCH
AS PER RECALL
REPLACE BRAKE KIT PER RECALL
REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PERSES15
$4807 RECALL 998158 .60 TECK 182 INSTALL NEW SWITCH AND CONECTOR
REPLACED CRUISE CONTROL SWITCH, BLED BRAKES AT ALL 4 CORNERS VERIFIED CRUISE CONTROL OPERATION
104211 RECALL 998158 0.5 TK 9982 INSTALL DEACT. SWITCH PER RECALL
                   PERFORM REALL
RECALL
PERFORM RECALL
                        INBTALL SWITCH
49648 RECALL WARRANTY REMOVED AND REPLACED DEACTIVATION SWITCH AND PLUG PER RECALL
65364 PERFORMED RECALL 99816-REPLACED SPEED CONTROL DEACTIVATION SWITCH.
19783 DID RECALL 90915
COMPLETED RECALL
RECALL PERFORMED
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
                     REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL 99916
INSTALL DEACTIVATION SWITCH PER 99815 RECALL
               90$168 RPLOD GC DEACTIVATION SWITCH PER RECALL
PERFORMED RECALL 89S15-INSTALL 6WITCH
PERFORMED RECALL, REMOVE TAPE AND SECURE THE SPEED CONTROL DIAG REPLACED SPEED CONTROL SWITCH, AND HARD SHELL CONNECTOR
71532 78 PERFORM 99815 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST
1 REPLACE TH CRUISE CABLE AS PER RECALL
                     PERFORMED RECALL-REPLACED C-C DEACTIVATION SWITCH
REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99815
99815
                 99315
                     RECALL 09815
RECALL 99815
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 69S15.
REPAIR AS PER RECALL
REPAIR AS PER RECALL 98615.
PERFORMED RECALL
1 REPLACE SWITCH
                  99S15 RECALL COMPLETED
99815B
1 RECALL COMPLETE
PERFORMED RECALL AS PER INSTRUCTIONS
                     PERFORMED RECAL
99816 RECALL
                   PERFORM RECALL
RECALL
REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99815
100161 RECALL SPEED CONTROL DEACTIVATION, SWITCH RECHEC K OK 7178
150579 PERFORMED RECALL 98516 REPLACE SPEED CONTROL DEACTIVATION SWITCH
COMPLETED RECALL
```

98815 SPEED

RECALL

815 SPEED CONTROL RECALL

SPEED CHTRL DEACTVTN SWITCH RIPLCMTPERF SAFETY RECALL 99815

RECALL REPLACE SWITCH AND CONNECTOR

PERFORMED

```
INSTALL DEACTIVATION SWITCH PER RECALL
REPLACED RECALL CRUSE CONTROL SWITCH
96815
                 RECALL PERFORME
REPLACED PARTS PER RECALL
PERFORMED RECALL 98815-INSTALL SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 100515
115921 RECALL REPLACED SPEED CONTROL DEACTIVATION SW & CONNECTOR PER RECALL 98815
77918 99815B .5 HRS REPLACE SPEED CONTROL DEACTIVATIO N.
                      99815 INSPECT AND REPLACED SPEED CONTROL SHUT OFF SWITCH
AS PER RECALL
40029 REPLACED RECALL CRUISE BRAKE SWITCH AND CONN.
COMPLETED RECALL
1 PERFORMED RECALL
INSTALL DEACTIVATION SWITCH
RECALLED
                    99815 PERFORMED
REPLACED CRUISE DEACT SWITCH
68943 RECALL W REPLACE SWITCH AND PLUG GA
1 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98$15
REPLACE SPEED CONTROL SWITCH
99S15 RECALL
                     99816 REPAIR AS PER RECALL
RPL SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONNECTOR, RECK OK
REPLACE SPEED CONTROL SWITCH PER RECALL 99615
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR, ROAD TEST.
STATE VERIFIED CONNECTOR SQUARE REMOVED AND REPLACED CONNECTOR AND SWITCH, BLED ALL BRAKES ROADTESTED OK
                   88915 RECALL
RECALL
                     SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
RECALL 99815 ·
95119 W RECALL 99815
                   REPLACE SPEED CONTROL SWITCH PER RECALL 99816
RECALL
PERPORAGED RECALL 99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
PERFORMED RECALL
108182 PERF 98515,INST KIT.
                     SPEED CONTROL DEACTIVATION SWITCH REPLACEMENT
RECALL 98815
                     INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECAU.
RECALL 99615
PERFORMED RECALL TO REPLACE SPPED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN.
FORD SAFETY RECALL
                         REPLACED SPEED DEACTIVATION SWITCH
95883 PERFORM RECALL-REPLACE SWITCH
                     98815 RECALL COMPLETE
99815 RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99$15.
REPLACE SPEED CONTROL SWITCH PER RECALL
RAR CRUISE CONTROL DEACTIVATION SWITCH PER REGALL 99815
                     RECALL
RECALL
```

REPLACED DÉACTIVATOR SWITCH AND CONNECTOR.
REPLACED SPEED CONTROL DEACTIVATION SWITCH
REPLACE DEACTIVATION SWITCH
OWNER NOTIF PREFORM RECALL

PREFORM RECALL 99816

PERSONAL GROUPS

RECALL 98315 PERFORMED RECALL- REPLACED C-C DEACTIVATION SWITCH PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99815 RECALL INSTRUCTIONS PERFORMED RECALL 89315 115392 TECH 113 99916B 0.5 REPLACE SWITCH PER FORD PERFORMED RECALL 98516. JHRS LABOR PER RECALL 1998/15-REPLACED SPEED CONTROL SWITCH, -99816 MO 78108 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL RECALL 96815 LETTER FROM FORD PERFORM RECALL ##X## SHORTED (RECALL 98515 DONE AT STARKEY FORD, 7-7-98, AT 81,285 MILES, TEST CRUSE CONTROL AND REPLACED SWITCH 102175 LABOR 99815B J5***ADMIN 1**MM J5**REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL*** PLEASE NOTEL SWITCH WAS SIEZED IN ASSY 75525 99815 REPLACED SWITCH 52255 TECH 165 REPLACE DOOR PIECE .0 99816 99615 RECALL 99815 COMPLETED REMOVED AND REPLACED BRAKE PRESSURE SWITCH PER RECALL 98815 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR. RECALL 98815 99815 PERFORMED RECALL RECALL 98315 SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACEMENT 1 PERFORMED RECALL 99S15 DEACTIVATION SWITCH 1 PERFORM RECALL 1 REPLACED SPEED CONTROL SWITCH & CONNECTOR 99315 RECALL PERFORME REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 100579 RECALL 99S15B JB0 TECK 16Z CRUSESWITCH RECALL REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 00S16. AS PER RECALL 99316 RECALL TO INSTALL DEACTIVATION SWITCH RNR DEACTIVATION SWITCH PERFORM RECALL 99\$16 PERFORM RECALL 90815 5832 REPLACED BRAKE SWITCH AND CONN. PER RECALL RECALL 99815 COMPLETE RECALL 99815 REPLACE SWITCH PER RECALL PEROMRED THE RECALL 89S15 SWITCH B9815 REPLACE SWITCH AND INSTALL NEW HARDSHELL AND BLE PERFORM RECALL 99S15 FINE DEACTIVATION SWITCH

THE SHORT MAY DISABLE THE SPEED CONTROL SYSTEM OR CAUSE A FUSE TO OPEN. AFTER INSPECTION, IF THE VEHICLE IS INVOLVED THE DEALER WILL REPLACE.

REPLACE SPEED CONTROL SWITCH PER RECALL 89315
REPLACED SPEED CONTROL SWITCH.
11346 CHANGED 89815 CRUISE CONTROL SWITCH

88866 PERFORM RECALL 99615 PER FORD.

```
RECALL REPLACED DEACTIVATION SWITCH PER RECALL
97827 TECH 113 998158 0.5 REPLACÉ BRAKE SWITCH PER FORD
INSTALL SWITCH
RECALL
                   99915 RECALL COMPLETED
```

48168 REPLACE SWITCH AS PER RECALL 99S15 99S158- .5 FOR TECH 158 INSTALLED DEATICATION SWITCH. 88815 RECALL PERFORME REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL REPLACED SWITCH PER RECALL WPI 12406 SPEED CONTROL RECALL 98515B .5 TK 118 OP CODE 30 .5 PERFORMED RECALL 98515

PERFORM RECALL 1 CHECK AND REPLACE SPEED CONTROL DEACTIVATION SWITICH AS PER RECALL

99815 99816 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.

1 REPLACE SWITCH AND CONNECTOR

PERFORMED RECALL FOR SPEED SWITCH DEACTIVATION AND HARD SHELL CONN

RECALL 99S15 REPLACED DEACTIVATER SWITCH AS PER RECALL 99S15 ORIGINAL COOLING SYSTEM HOSES, RECOMMEND REPLACING HOSES, COOLANT LEVEL IS LOW, RECOMMEND COOLING SYSTEM FLUSH, RECOMMEND BATTERY COMPLETED RECALL REPLACED CRUISE DEACTIVATION SWITCH RECALL PERFORMED PERFORM RECALL INSTALL DEACTIVATION SWITCH 99815 - PERFORM RECALL, INSTALL DEACTIVATION SWITCH, RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

59011 RECALL 96814 INSTALLED RECALL 98814

REPLACE SWITCH PER RECALL 89315.8AME REPAIR VISIT AS R.O.#031259

REPLACE SPEED CONTROL CABLE ASY

PERFORM RECALL 99315 99315 98515

1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL

152585 RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH 5 WP

PERFORM RECALL

PERFORMED RECALL 09815-INSPECTED-REPLACED SPEED. CONTROL DEACTIVATION SWITCH

82571 PERFROM RECALL 98515

INSTALL SWITCH AND FLUG RECALL 00816

COMPLETED RECALL 99815

1 REPLACED CRUISE SWITCH AND CONNECTOR, BLEAD BRAKES.

99815 REPLACED DEACTIVATION SWITCH

DIAG, INSTALL CRUISE DEACTIVATION SWITCH PER RECA PERFORM RECALL 99815

RNR DEACTIVATION SWITCH 76321 W REPLACE SWITCH GA

REPLACE 99615B 0.5 ADMIN REMOVE, TAPE AND SECURE THE SPEED CONTROL DEACTIVATION SWITCH

REPLACE SWITCH AND HARD SHELL

1 PERFORM RECALL

78184 RECALL WT DONE

INSTALLED BRAKE REPAIR KIT

RECALL

PERFORM RECALL PER PROGRAM 99815, SPEED DEAC SWITCH

1 PERFORM RECALL

1 REPLACED SWITCH

REPLACED CRUISE CONTROL SWITCH AND CONNNECTOR AS PER RECALL

99915

99815

99815 99815

SPIED CONTROL DEACTIVATION SWITCH. REPLACE SPIED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99815.

1 INSTALL SPEED CONTROL MODIFICATION AS PER RECALL

99915

99815

REPLACE SWITCH AND HARD SHELL PER RECALL

INSTALLED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL

99S15 REPLACED DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

RECALL 00S15 COMPLETED

OPEN RECALL COMPLETED OPEN RECALL

PER RECALL

68192 PREFORM RECALL 90915 RECALL 96815 99915

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 89815

AS PER RECALL

1 REPLACED SWITCH AS PER RECALL 00915

OPEN RECALL COMPLETED OPEN RECALL

SPEED CHTRL DEACTVTN SWITCH RPLCMTPERF SAFETY RECALL 98815

49152 99315 INSTALLED NEW CRUSIE DEACTIVATION SWITCH AS PER RECALL INST.

INSPECTED SYSTEM, REPAIRED IF NECESSARY PER RECA

X PERFORMED RECAL

PERFORMED RECALL 99315

PERFORMED RECALLA AND REPLACED SPEED CONTROL DEACTIVATION SWITCH.

SWITCH

REPL DEACTIVATION SWITCH

RECALL

99815 RECALL

111113 RECALL REPLACED DEACTIVATION SWITCH PER RECALL T21

REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL

RECALL 00S15

RECALL 99815

X 98815 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

REPLACE SWITCH PER RECALL 98615

REPLACED THE BRAKE PRESSURE SWITCH PER RECALL 08/\$15

20315

99816 RECALL

RECALL

99515 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO

```
INSTALLED SWITCH PER RECALL
PERFORM RECALL
```

RECALL PERFORMED RECALL

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 88815.

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECT

PERFORM RECALL....

RECALL 99315 99315 - MODIFY PER RECALL 99615

REPLACED SC DEACTIVATION SWITCH 90815

98815 99815 RECALL
RECALL RECALL
INSTALL SWITCH AND HARD SHELL

REPLACE CRUISE CONTROL DEACTIVATOR PER RECALL

96901 RECALLED REPLACED SWITCH AND CONNECTOR PER RECALL

INSTALL SWITCH

RECALL 90S15 REPLACE C-C SW

1 PERFORMED RECALL 99815

RECALL PERFORMD RECALL 99815

100227 AS PER RECALL

INSTALL DEACTIVATION SWITCH PER RECALL 99615.

85444 RECALL 985158 .5 .5 REPLACED CRUISE CONTROL DE-ACTIVATION SWITCH AS PER RECALL

RECALL

30685 REMOVE SPEED CONTROL PRESSURE DEACTIVATION SWITCH AND INSTALL NEW PRESSURE SWITCH, 8626

RECALL COMPLETE

99815 P9815

REPLACED DEACTIVATION SWITCH

SOME SPIFFO CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED BY FORD I

PERFORMED RECALL 99815

RECALL REPLACE DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL

99815 RECALL

AS PER RECALL 99S15 RECALL TO INSTALL SPEED CONTROL SWITCH

PERFORMED RECALL

40144 RECALL 99816 REPLACE DEACTIVATOR SWITCH AS PER RECALL

SWITCH 99815

RECALL 99815 RECALL COMPLETED REPLACE DEACTIVATION SWITCH

1 PERFORM RECALL PER INSTRUCTIONS

COMPLEYED RECALL

PERFORM RECALL 99515 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO

4368 DED RECALL 99816 LABOR OF.— 998166.— 0.5 HRS. 11-19-69

COMPLETED SPEED DEACTIVATE SWITCH RECALL 89816.

PERFORMED RECALL AS PER INSTRUCTIONS

INSTALLED CRUISE DEACTIVATION SWITCH PER RECALL

```
E982-426 11919
```

90S15 99S15 PERFORM RECALL

99815 RECALL

```
PERFORM RECALL....
90225 PERFORM RECALL AS PER 90816
REPLACE SWITCH
PREFORMED RECALL REPLACE PRESSURE SWITCH AND CONNECTOR RETEST OK
REPLACED SPEED CONTROL SWITCH.
PREFORMED RÉCALL
PERFORMED RECALL
PERFORN DEACTIVATION SWITCH RECALL
99815 RPL SPEED CONTROL DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER 99816.
REPLACE CRUSE DEACTIVATION SWITCH PER RECALL.
RECALL 69815
                     99816 REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL 00815
               RECALL DONE
PERFORMED RECALL 99815
RECALL REPLACE SWITCH AND CONNECTOR
                 99815
PERFORMED RECALL REPLACED THE SWITCH AND CONNEC TOR
RECALL 99815 COMPLETED
                 89S15 REPLACED SWITCH AND CONNECTOR
REPAIRED AS PER RECALL SPEED CONTROL CABLE
RECALL
                   B9815
1 PERFORMED RECALL
RECALL 89815 COMPLETED
99615
                 RECALL PERFORME
                  REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
RECALL
(20815) REPLACED SWITCH ADS PER RECALL
RECALL 99816
                     PERFORMED RECALL, REPLACE C-C DEACTIVATION SWITCH
RECALL 99816
                     REPL SPEED CONTROL SWITCH
                 99816
99815
INSOECT FOR RECALL 99815
                 89815 REPLACE SWITCH AND INSTALL CONNECTOR
99316
                  REPLACE SWITCH AND CONNECTER
RECALL
PERFORM RECALL
PERFROM RECALL 99615
REPLACE SPEED DEACTIVATION SWITCH PER RECALL
PERFORMED RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
COMPLETED RECALL 99$15
REPLACE DEACTIVACTION SWITCH
REPLACED DEACTIVATION SWITCH PER RECALL
```

99815 REPAIRED AS PER RECALL

```
80187 R-R SPEED CONTROL SWITCH .
99815
                 REPLACED SPEED CONTROL DEACTIVATION SWITCH
COMPLETED RECALL 99315
111 RECALL SWITCH RECALL COMPLETED
99915
                 99315
RECALL 99815
REPLACED SWITCH & CONNECTOR 1
INSTALLED SWITCH PER RECALL
RECALL R&R SECONDARY SWITCH & HARD SHELL CONNECTOR AS PER 99516.
86520 RECALL W REPLACE CRUISE DEACTIVATION SWITCH AND CONNECTOR PER RECALL
                 99815 REPLACED SWITCH
121677 RECALL 99815 INSPECTED AND INSTALLE SPEED CONTROL DEACT, SW. AS PER INSTRUCTION IN RECALL 99815
PERFORM RECALL
RECALL
                  PERFORMED RECAL
REPLACE SWITCH AND CONNECTOR
RECALL RECALL
REPLACED SWITCH AND CONNECTOR AND BLEED BRAKES PER 99815.
RECALL 99815
                    REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO
RECALL ----
                RECALL
00315
                 99815
RECALL
                  DID RECALL
COMPLETED RECALL ON SPEED CONTROL SWITCH
PERFORM RECALL 99815
REPLACE SPEED CONTROL DEACTIVATION SWITCH
INSTALLED SWITCH PER RECALL
PERFORM RECALL
SHIFTER LOOSE, VARIIOUS PERFORMANCE PROBLEMS.
REPLACE HARD SHELL CONNECTOR AND DEACTIVATION SWITCH PER RECALL 99S15
AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS
94199 W PERFORM RECALL SWITCH
99125 RECALL 89$15 .6 INSTALL SWITCH KIT.
RECALL PERFORMED
                 RECALL PERFORME
```

INSTALL BRAKE KIT PER RECALL 99815

REPLACED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL. 1
S0350 RECALL WARR REPAIR REPLACE DEACTIVATION SWITCH PER RECALL.

70714 PERFORMED 99315 RECALL.
PERFORMED RECALL

161998 REPLACE SWITCH PERFORM RECALL 98515

REPLACE SWITCH AS PER RECALL

1 INSTALLED DECACTIVATION SWITCH

```
PERFORM RECALL
                        REPLACE SWITCH
RECALL
                   REPLACE SWITCH AND CONNECTOR.
REPLACED CRUZ CONTROL DEACTIVATION SWITCH PER RECALL 99815
REPLACED BRAKE PRESURE SWITCH AND CONNECTOR AS PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND MARDSHELL CONNECTOR.
121006 PERFORMED RECALL
RECALL INSTALL CRUISE DEACTIVATION SWITCH & CONNECTOR PER RECALL
PERFORM RECALL
                        NSTALL SWITCH
REPLACE SPEED CONTROL SWITCH
REPLACE DEACTIVATION SWITCH AND CONNECTOR.
PERFORMED RECALL 99815-INSTALL SWITCH
RECALL
                   99515 - B - RECALL
99815
                  99815 REPLACED DEACTIVATION SWITCH
RECALL
                   REPLACED SPEED DEACTIVATION SWITCH AS PER RECALL
COMPLETE RECALL AS DIRECTED DEACTIVATION SWITCH
N8TALLED SWITCH PER RECALL
SWITCH
RECALL 99S1S
RECALL COMPLETE
99815 99815 PERFORM RECALL
RECALL -- PERFORMED RECALL # 8176
1998 168 (1.6. TOTAL HRS (1.5. PERFORMED RECALL 99815, REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR AS PER RECALL.
RECALL REAR SECONDARY BRAXE SWITCH & HARD SHELL CONN.AS PER 99515.
9548 RECALL RECALL 99815
REPLACE DEACTIVATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH
JS RECALL 99815 REPLACE SWITCH AND CONNECTOR PER RECALL
SPEED CONTROL DEACTIVATION SWITCH
89515
                 RECALL PERFORME
REMPLACE SPEED CONTROL DEACTIVATOR AS CAMPAING 98615
REPLACED DEACTIVATION PER SAFETY RECALL DOS15.
1 PERFORMED RECALL 99815
REPLACE BRAKE SWITCH AS PER RECALL
60743 90915
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99816
                          REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL
                                                                                          CONNECTOR PER FORD RECALL
PERFORMED RECALL AS PER INSTURCTIONS
82220 MILES OR WRONG IS 82220 AS RECALL
```

REPLACE CRUISE CONTROL SWITCH PER RECALL

99815

024 REPLACED CRUISE DEACTIVATION SWITCH

REPLACE SWITCH

COMPLETE RECALL 19816 RECALL COMPLETRED

REPLACE DEACTIVATION SWITCH PER RECALL

REPLACED SPEED CONTROL SWITCH AS PER REGALL

117347 RECALL WAR REPLACED CRUISE DE-ACTIVATION SWITCH & CONNECTOR.

INSPECT SPEED CONTROL SYSTEM AND COMPLETE LABOR OPERATION ACCORDINGLY COMPLETED SPEED CONTROL DEACTIVATION CAMPAIGN SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 69615.

INSTALLED BRAKE SWITCH AND BLED BRAKES PER RECAL

99816EI RECALL

998150 RECALL

COMPLETED RECALL

PERFORMED RECALL REPLACED THE SWITCH AND CONNEC TOR

68526 PERFORMED RECALL 96S15

49780 99615 RECALL W PERFORM 99615 RECALL REPLACE DEACTIVATION 6WITCH AND CONNECTOR.

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTPVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99515.

COMPLETED RECALL

COMPLETED RECALL 98815B

REPLACE SWITCH

REPLACE SPEED CONTROL SWITCH PER RECALL 00915

RECALL COMPLETED

SERVICE CAMPAIGNS SERVICE CAMPAIGNS REPLACED DEACTIVATION SWITCHES PER RECALL 09516

PERFORM RECALL 99816 SPEED CONTROL SWITCH

RECALL 99515

PERFORM RECALL

99815

RECALL

64584 WAR RECALL REPLA SWITCH AND CONNECTOR RAT

RECALL

REPLACE CRUISE CABLE

99816 REPLACE C-C 5W

1 PERFORMED RECALL 99815

PERFORM RECALL

INSTALL CRUISE CONTROL DEACTIVATION SWITCH PER RECALL.

RECALL 99915 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99915

44848 REPLACED SWITCH PER RECALL 99815

108739 79 PERFORM 99816 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST

REPLACE SPEED CONTROL SWITCH

1 COMPLETED RECALL

INSTALLED CRUISE CONTROL

DEACTIVATION SWITCH PER RECALL

95833 RECALL PREFORMED RECALL 99516

AS PER PORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

SHORT MAY DIASABLE SPEED CONTROL OR CAUSE BRAKE LIGHT FUSE TO OPEN DISCONNECT CONNECTOR FROM CRUISE DEACTIVATION SWITCH & PROTE CT EX

1 REPL SWITCH

PERFORMED 99S15: INSTALLED UPDATED CRUISE DEACT SWITCH & CONNECTOR

PERFORM RECALL AS DESCRIBED

RECALL 99815 REPLACED SWITCH NO CONNECTOR AS PER RECALL 99815

112678 RECALL 99815 REPLACE SPEED CONTROL SWITCHPER RECALL 99815

RECALL

998150 .1

69816

RECALL REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL

REPLACE DEACTIVATION SWITCH AND CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

DO 90\$15 PUT IN NEW 8W AND WIRE COND

REPAIR AS PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH.

203589 998159 .5 .5 RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH

RECALL 99815

RECALL 99S15

1 REPLACE DEACTIVATION SWITCH AS PER RECALL 988

99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH

DEACTIVATION SWITCH

99315

RECALL 89815 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99815 REPLACED DEACTIVATION SWITCH PER RECALL LABOR 99815 0.5, ADMIN 0.1

RECALL 99815

104584 WARR RECALL 199315 REPLACE SPEED CONTROL SWITCH AND CONNECTOR JH

REPLACED SWITCH AND CONNECTOR

RECALL

RECALL

80237 RECALL 99315 DONE DEACT SWITCH

REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL.

98615 SPEED CONTROL DEACTIVATION REPLACED DEACTIVATION SWITCH PER RECALL 98515

INSTALLED SWITCH AS PER RECALL 99815.

79 PERFORM RECALL RECALL

REPAIR AS PER RECALL 99615.

REPLACED SPEED CONTROL SWITCH

SPEED CONT

REEPL SWITCH

PERFORMED RECALL 99815-INSPECTED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH

COMPLETED RECALL ON CRUISE CONTROL 99815

SPD CTRL DEACTIVATION SWITCH REPLPERFORMED RECALL 99815

99816 RECALL

REPLACED SWITCH

55074 RECALL W PERFORM RECALL 99815 REPLACE SWITCH AND CONNECTOR RETEST RAT

REPLACED 6C DEACTIVATION SWITCH 99815

RECALLR EPAIR

SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

PÉRFORM REGALL 89915 - CHECK AND REPLACED DEACTIONATION SWITCH AND RECHECK OK

REPLACED BRAKE SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

PREFORM RECALL 86816

REPL SPEED CONTROL SWITCH

96799 RECALL (#17)-REPLACE SWITCH & HARD SHELL, BLEED BRAKES AS PER RECALL.

89815

REPLACED BRAKE SWITCH PER RECALL

1 COMPLETED RECALL

109988 99815 42 .5 REPLACED SWITCH ROAD TEST

AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

72391 REPLACE SWITCH AS PER RECALL INSTALL SWITCH

RECALL 99815

INSTALL NEW SWITCH PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

RPL BPEED CONTROL SWITCH 99815 RECALL 127416 998158 0.5 HRS. SPEED CONTORL RECALL

166092 DID 96615 REPLACED SWITCH

REPLACED BRAKE SWITCH AND CONN. PER RECALL 90815

REPLACE SWITCH AND CONNECTOR

RECALL 99815

REPLACE SPEED CONTROL DEACTIVATORON SWITCH AND HARD SHELL CONNECTOR.

RPL CRUISE DECATIVATION SWITCH

RECALL REPLACE CRUISE SWITCH PER RECALL.

88411 RECALL SPEED CONTROLL DEACTIVATION SWITCH 998158 .5 .5 TK 118 PERFORMED RECALL OP CODE 42

RECALL SPEED CONTROL DEACTIVATION SWITCH

1 REPLACE SPEED CONTROL SWITCH PER 99815

RECALL 98515 PERFORMED RECALL 98515

REPLACED SC DEACTIVATION SWITCH 99816

REPLACE DEACTIVATE SW AND CONNECTOR AS PER RECAL

99615 RECALL

99815 RECALL PERFORMED

PERFORMED RECALL AS INSTRUCTIONS

99815 RECALL 99615 RECALL PERFORMED

83634 RECALL 998 5 REPLACE SPEED CONTROL DEACTIVATION SWITCH 5 WP

REPLACE SPEED CONTROL DEACTIVATION SWITCH F

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACED CRUZ CONTROL DEACTIVATION SWITCH PER RECALL 90S15

PERFORM RECALL 98315

SPEED CONTROL DEACTIVATION SW PERFORM 99815

AS PER FORD MOTOR COMPANY SPECIFICATIONS COMPLETED RECALL PER FORD INSTRUCTIONS

99615

99615

REPLACED SPEED CONTROL DEACTIVATION SWITCH

99815 99816

95174 RECALL 098168 .5HR.), PERFORM RECALL

99816

99315

REPLACED SPEED CONTROL SWITCH

PERFORM RECALL

#811 G29-738

REPLACE DEACTIVATOR SWITC AND CONNECTOR

REPL SPEED CONTROL SWITCH 98815

RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL.

44794 PERFORM RECALL 99318 SPEED DEACTIVATION SWITCH

REPLACED DEACTIVATION SWITCH

RECALL REPLACE CRUISE SWITCH

PERFORMED RECALL 99815

99816 RECALL.

PERFORMED RECALL

COMPLETED RECALL 09616

292. REPLACED SPEED CONTROL DEACTIVATION SWITCH RECALL 99815

PERFORM 99815 RECALL

RECALL IR AND IR DEACTIVATION SWITCH AS PER RECAL

99815 REPLACE CRUISE SWITCH PER RECALL CAMP

REPLACED DEACT.SWITCH PER RECALL

1. REMOVE AND REPLACE CRUISE CONTROL SWITCH.

167671 RECALL WARR REPLACE DEACTIVATOR SWITCH PER RECALL

RECALL REPL DEACTIVATION SWITCH

RECALL PERFORMED RECAL

78427 PERFORMED RECALL 99815

PERFORMED RECALL 99\$15

PERFORM RECALL

88716 RECALL #99815 PERFORM RECALL #98615 REPLACING BRAKE PRESSURE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR "SWP

124835 REPLACE DEACTIVATION SWITCH

66990 R R DEACTIVATOR SWITCH PER RECALL 99815 RECALL INSTALL DEACTIVATION SWITCH

80800 96815B 0.5 HRS REPLACE SPEED CONTROLE DEACTIVATION SWITCH.

99615 SPEED CONTROL RECALL 99816

82542 RECALL 99815 SPEED CONTROL SWITCH RECALL 99815

57424 PERFORM SPEED SHUT OFF RECALL

REPLACED SWITCH PER RECALL INSTRUCTIONS.

99815 99815 REPLACE SPEED CONTROL SWITCH

INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1

RECALL REPLACED CRUSE DEACTIVATION SWITCH PER RECALL

PERFORMED RECALL BOS15-INSTALL SWITCH

REPLACE SPEED CONTROL PER RECALL

RECALL#99316; PERFORM RECALL#993(5; REPL BRK-PRESS, SWITCH;

99615

RECALL 99815 REPLACED SWITCH

PERFORM RECALL 99615

REPLACE PRESSUR SENSOR

EN62-825 11975

RÉCALL REPAIR AS PER RECALL 99\$15 REPLACE DEACTIVATION SWITCH

70898 PERFORM RECALL 99815 REPLACE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL COMPLETED SWITCH REPLACEMENT PER RECALL

REPLACE SWITCH AND CONNECTOR.

161265 99815 99815 .5 .5 REPLACE SWITCH & CONNECTOR

RECALL.

99X15

COMPLETED RECALL

recall replay

78881 REPLACE SPEED CONTROL DEACTIVATION

8AFETY RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL 99\$15

48150 TECH 156 PERFORMED RECALL 99\$15 983159(0.5 99\$15 RECALL INSTALL SWITCH PER RECALL

PERFORM RECALL 99816

99815 REPLACE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL 99815

REPLACE SPEED CONTROL DEACTIVATION SWITCH

87004 COMPLETED 99815 CRUISE SWITCH

REPLACE SPEED CONTROL SWITCH

COMPL: SPEED CONRTOL DEATIVATION

CAUSE: 99815

CORRE: PERFORME RECALL

REPLACED CRUISE SWITCH

96445 99816 RECALL PERFORM 99815 RECALL ASPER INSTRUCTIONS

PERFORMED RECALL 99615 SERVICED WITH PRIDE BY SHAWN TUCKER

65168 W REPLACED SPEED CONTROL DEACTIVATION. SWITCH

RECALL 99815- REPLACE SPIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

RECALL BISS 15

RECALL PERFORME

99616 RECALL

99816 RECALL COMPLETE

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

PERFORM RECALL 99815

PERFORM RECALL

LETTER FROM FORD

PERFORM RECALL ##X##

99\$15 RECALL

99615 REPLACE SPEED CONTROL DEACTIVATION SWITCH

UNKNOWN

INSTALL CRUISE SWITCH AND CONNECTOR PER 09S18

COMPL: PERFORME RECALL 99816.

CAUSE: REPLACE SPEED CONTROL DIACTIVATION SWITCH

CORRE: 99815 RECALL PERFORM

PERFORM RECALL

PER FORD RECALL NOTICE. FORD RECALL COMPLETE PER INSTRUCTIONS.

And the second of the second o

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH.

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL MISSIS.

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED

982-825 11826

1 PERFORMED RECALL 99815.
133774 DID RECALL 99815 LABOR OF. -- 998159. --- 0.5 HRS. 11-24-99
98815 REPLACED CONNECTOR AND SWITCH
REPALCE DEACTIVATION SWITCH AND CONNN.
120811 RECALL 99815 REPLACED CRUISE DEACTIVATION SWITCH
99815 B PERFORMED RECALL 1 E
99815 RECALL.
CONNECTOR 99815
1 RECALL 99815
1 RECALL 99815
REPLACED CRUISE CONTROL DEACTIVATION SWITCH RECL
RECALL 99815 COMPLETED
MAINTENANCE 99815 RECALL COMPLETE

RECALL 99816 PERFORMED RECALL 99815
REPLACED SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR PER-RECALL
PERFORMED RECALL PER FORD SPECS
COMPLETED 99815
REPLACE AS PER RECALL 99815
44007 RECAL REPLACE SWITCH AND HARNESS HARDSHELL,5883,2848

99815 B .5 ADMIN .1 PERFORMED RECALL ACCORDING TO FACTORY GUIDELINES
67485 PERFORMED THE SPEED CONTROL RECALL FOR THE VEH
RECALL 99815
INSTALLED BRAKE SWITCH PER RECALL
RECALL 99816 COMPLETED RECALL 96815
35944 99816 REPLACED SW CONNECTOR FOR 9W.
114886 .5 HOURS, INSTALL NEW SWITCH PER RECALL OP 98815B, ANTILOCK LIGHT CAME ON BEFORE REPAIRS.
77752 WARRANTY RECALL 99815 INSTALL RECALL SWITCH AND WIRE PLUG
REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL
98815 RECALL 99815 RECALL COMPLETE
99815 99815

1 PER RECALL REPLACE SWITCH REPLACE DESTIVATION SWITCH AS PER RECALL

RC 86615 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

RECALL 99815 INSTALL SPEED CONTROL DEACTIVATION SWITCH

REPLACE SWITCH PER RECALL ADMIN.1

RECALL COMPLETE

INSTALLED SWITCH PER RECALL

RECALL COMPLETE

7571 070 570

```
71382 RECALL 09S15B 0.5+ ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
RECALL
                   REPAIR PER RECA
RECALL COMPLETE
RECALL 99816 PERFORM RECALL 99816
OPEN RECALL
                      PERFORM RECALL
9981EB
                  99816B-REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL
RECALL 99815
                     99815
COMPLETE RECALL 99915
REPLACED CRUISE CONTROL
                             DEACTIVATION SWITCH PER RECALL
PERFORM RECALL
                        INSTALL SWITCH
88835 PERFORMED RECALL 99815
RECALL COMPLETE
RECALL
                   PERFORM RECALL 99315
PERFORMED RECALL
PERFORM 99S16.REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.
                                                                          B.5
? PERF RECALL 99816.SPEED CONTROL SWITCH REPL.
RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL.
RECALL.
                   99615 COMPLETED
PERFROM 88615 RECALL
998158 (J.S. PERFORMED RECALL PER PROGRAM.
RECALL 99815 PERFORMED AS PER RECALL
PERFORM RECALL
81567 RECALL 80S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL INSTRUCTIONS
RECALL COMPLETE REPLACED THE CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
98$15
                  99816 RECALL COMPLETED
REPLACED DEACTIVATION SWITCH PER RECALL.
56786 RECALL 988168 ,5, ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL.
PERFORM RECALL
                        INSTALL SWITCH
RECALL ON CRUSE SWITCH
PERFORMED RECALL
INSTALLED CONTROL TO COMPLETE RECALL
99815 RECALL
99815
                 DDS15
RECALL WAS PERFORMED AS PER SPECS, 1714
PERFORM RECALL
101073 PERFORM 99815 RECALL
99815
                  REPLACE CRUISE CONTROL SWITCH PER RECALL
INSPECT SPEED CONTROL SYSTEM AND COMPLETE LABOR OPERATION ACCORDINGLY COMPLETED SPEED CONTROL DEACTIVATION CAMPAIGN
COMPL: RECALL 99815
                                          IGAUSE: SPEED CONTROL DEATIVATION SWITCH
                                                                                               CORE: PERFORME RECALL
RECALL REPLACED BRAKE SWITCH
COMPLETED REGALL PER INSTRUCTIONS
99915
                 00315
```

-62-625 11

RECALL

DRB16

99815 COMPLETED RECALL PERFORME

. 270

```
129624 RECALL W PERFORM RECALL 99816 REPLACE SWITCH AND CONNECT RAT.
REPLACED SPEED CONTROL SENSOR PER RECALL
1 REPLACE DÉACTIVATION SWITCH PER RECALL
REPL SPD CNTRL DEACTIVATION SW
RECOMMEND TRANSMISSION FLUID AND FILTER SERVICE - HAS BEEN NEARLY 40,000 MILES SINCE LAST CHANGE (PER THIS SHOP SERVICE RECORD); FLUID SEEM
184775 RECALL 998159 .5. ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL
FORD CAMPAIGN REPLACE PRESURE SWITCH PER RECALL 98S15.
RECALL REPLACED DECATIVATION SWITCH.
1 REFLACED SWITCH AND CONN AS PER RECALL.
RECALL 98815 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL
RECALL SPEED CONTROL SWITCH PERFORM RECALL 99515, REPLISPEED CONTROL SWITCH & CONNECTOR
PERFORMED RECALL
DEACTIVAION SWITCH
                         99815
RECALL
                      RECALL.
                     COMPLETED RECALL 99815
RECALL 99815
REPLACE SPEED CONTROL CABLE PER RECALL
SPEED CONTROL DEACTIVATION SWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 99815.
106685 RECALL 98515B 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 89S15
111030 SPEED CONTROL RECALL 90S158 0.5 0.5 REPLACED SPEED CONTROL DEACTIVATION SWITCH
                            DEACTIVATION SWITCH PER RECALL.
INSTALLED CRUISE CONTROL
REPLACED SWITCH
PERFORMED 99816 RECALL AS PER FORD SPECIFICATION
REPLACE PRESSURE SWITCH AND CONNECTOR PER RECALL
INTERM REPAIR REMOVED TAPE SECURE THE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 98815E 0.3 HRS PERMANENT REPAIR REPLACED SP
REPLACED CRUISE SWITCH
RECALL COMPLETE

    REPLACE SPEED CONTROL DEACTIVATION SWITCH ASSEMBLY, CHECK NORMAL OPERATION.

REPLACE SWITCH PER RECALL 08815 A99
99S15 CC DE ACTIVATION SW RECALL99S15 CC DE ACTIVATION SW RECALL
                  REPLACE CRUISE CONTROL SWITCH PER RECALL
99615
REPLACED SPEED CONTROL CABLE PER 99$15
70123 PERFORM 99815 RECALL/REPLACE SWITCH. ......CPN TIME...
1 PERFORMED RECALL 99816-REPLACE DEACTIVATION SWITCH
```

RECALL 99915
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 88915
96734 99915 COMPLETED
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99915
SERVICED AS PER RECALL
78041 RECALL 99915 INSTALLED NEW PRESSURE SWITCH AND CONNECTOR
RECALL 99916

RECALL 98815 REPLACE SPEED CONTROL DEACTIVATION SWITCH

COMPLETED REGALL 99815.

PERFORM RECALL

REPL SPEED DEACTIVATION SWITCH 90S15
103879 REPLACED RECALL 98816
PERFORM RECALL REPL DEACTIVATION SWITCH
PERFROM RECALL 98815
REPLACE SPEED CONTROL SWITCH
RECALL DEACTIVATION SWITCH
RECALL DEACTIVATION SWITCH

1 INSTALLED CRUISE CONTROL DEACTIVATION SWITCH AS PER RECALL
REPLACE SWITCH AS PER RECALL
INSTALLED KIT 99815 RECALL PREPORMED
REPLACED BRAKE DEACTIVATION SWITCH
RECALL 96815 RECALL
REPLACED SWITCH & CONNECTOR PER RECALL

1 COMPLETED RECALL 99815
COMPLETED RECALL 99815
REPLACED SPEED CONTROL AND CONNECTOR PER RECALL
33390 RECALL REPLACE CRUISE DEACTIVATION SWITCH RECALL 99816 BLEED BRAKE SYSTEM REPLACED SWITCH AND CONNECTOR PER RECALL 99816
INSTALL SWITCH PER RECALL
INSTALL DEACTIVATION SWITCH

INSTALL SWITCH INSTALL DEACTIVATION SWITCH

X 98816 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR
REPL PRESSURE SWITCH & CONECTOR, DECLINED HOOD EMBLEM REPLACEMENT.

RECALL

99815 RECALL

PERFORMED RECALL

1 INSTALLED SWITCH AND CONNECTOR
96S15 96S18
PERFORMED RECALL
REPLACED SPEED DEACTIVATION SWITCH

. . .

RECALL, 99815
99815 99815
DO RECALL 99816
REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99816.
98500 REPLACED SPEED CONTROL SWITCH PER RECALL,
PERFORMED RECALL
REPLACED SWITCH & CONNECTOR
PERFORMED RECALL 99815

MEET COS. NO.

11931

PERFORM SAFETY RECALL REPLACE SWITCH PER RECALL RECALL PERFROMED RECAL 101800 RECALL & REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 999168 99815 98815 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH 90651 0.5 REPLASED SWITCH AND CONNECTOR 99815 99615 132727 98515 REPLACE SWITCH AND HARD SHELL CONNECTOR. 127744 PERFORM RECALL INSTALL BRAKE FLUID PRESSURE SENSOR AS PER RECA PERFORMED RECALL 99816-INSTALL SWITCH 49740 RECALL SWITCH RECALL COMPLETED RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL PERFORMED RECSLL REPLACE SWITCH AND CONNECTOR PER RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTO RECALL 99816 COMPLETED INSTALLED DEACTIVATION SWITCH, PER RECALL. 1 COMPLETED PER FORD INSTRUCTIONS

RECALL 99815 RECALL 99816
168855 RECALL 998159 PERFORMED RECALL 998169 .5HRS. ADM,.1
OPEN RECALL PERFORM RECALL
RECALL 99815 COMPLETED
REPLACIED SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL AS PER INSTRUCTIONS
PERFORMED RECALL 99 8 15
169414 RECALL 99815
RECALL 99815 INSTALLED SWITCH
- MODIFY PER RECALL 99815

INSTALL SENDER AND CONNECTOR PER RECALL 69516
CHECKED AND FOUND VEH NEEDED CRUSE DEACT SWITCH PER RECALL REPLACED SWITCH AND CONECTOR PER RECAL
SPEED CONT INST SWITCH
99815 DEATIVATION SWITCH-CONN 99815
PERFORMED RECALL
INSTALLED SWITCH.
REPLACED DEACTIVATION SWITCH AND CONNECTOR.
REPLACED DEACTIVATION SWITCH AND CONNECTOR.
REPAIR AS PER RECALL 99815.
74899 REPL DEACTIVATION SW. SPEED CONTROL FUNCTION OK.

RECALL 98815 DEACTIVATION SWITCH

99815 PER RECALL REPAIR PER 99815 RECALL 1 PERFORMED RECALL

the form of the control of the control of the property of

REPLISPO CNTRL DEACTIVATION SWI

RÉPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR

REPL SPEED DEACTIVATION SWITCH 98S15
1 TECH INSTALL CRUISE DEACTIVATION SWITCH AS PER RECALL 98S15
INSTALLED NEW SWITCH
RECALL 99S15 - COMPLET
PERFORMED RECALL 99S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

INSTALL NEW SWITCH
PENFORMED RECALL 99815, REPLACED DEACTIVATION SWITCH.
PERFORM RECALL
PERFORMED RECALL 98815

PERFOMR RECALL 99815 T124 89781 99815 998158 .5.5 REPLACED BRAKE SWITCH AND CONNECTOR

RECALL 98815
PERFORMED RECALL 88815
RECALL 98815 PERFORMED AS PER RECALL
L RECALL
REPLACED SPIED CONTROL DEACTIVATION SWITCH AND HARD SHEEL CONNECTOR
RECALL INSTALLED BRAKE DEACTIVATION SWITCH AS PER RECALL
PERFORMED 99815 RECALL
MAY CAUSE A SHORT INSTALL THE SPIED CONTROL DEATIVATION SWITCH
RECALL REPLACE SPIED CONTROL DEACTIVATION SWITCH
REPLACED SPIED CONTROL DEACTIVATION SWITCH
REPLACED SPIED CONTROL DEACTIVATION SWITCH PER RECALL 99815
RECALL PERFORM RECALL 99615
REPLACE SPIED CONTROL CABLE PER RECALL

REPL SPEED DEACTIVATION SWITCH 99515

RECALL

INSTALL DEACTIVATION SWITCH KIT PER RECALL

122428 PERFORMED RECALL 99815 DEACTIVATION SWIT

CAMPAIGN COMPLETED

99820 PERFORMED RECALL 99815

1 COMPLETE RECALL 99815

REPLACE CRUSSE DEACTIVATION SWITCH PER RECALL 99816

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

RECALL 99815 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO REPLACE CRUISE DEACTIVATION SWITCH

THE COLUMN

76757 REPLACE SPEED CONTROL DEACTIVATION SWITCH. RECHE CK OK 7178
89815-DEACTIVATION SWITCH 98815-DEACTIVATION SWITCH
SPEED DEACTIVATION SWITCH MOD. 69816 RECALL REPLACED HARD SHELL CONNECTOR AND REPLACED SPEED CONTROL DEACTIVATION SWITCH
60636 INSTALLED KIT PER RECALL
PERFORMED RECALL 98816. REPLACED SPEED CONTROL DEACTIVATION SWITCH.
PERFORM RECALL 98816
AE PERFORMED RECALL 98815 REPLACED SPEED CONTROL DEACTIVATION SWITCH
127512 RECALL 98816 REPLACE SPEED CONTROL DEACTIVATION SWITCH
127512 RECALL 98816 REPLACE SPEED CONTROL SEACTIVATION SWITCH FIER RECALL 998158
REPLACE THE DEACTIVATION SWITCH PER RECALL 99815 968158 .50
99816 PERFORMED RECALL, REPLACED SPEED CONTROL SWITCH
REPAIR AS PER RECALL

RECALL MISTS REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR SPD CTRL DEACTIVATION SW REPLANNIPERFORMED RECALL 99815

MISC

PERFORMED RECAL

SPEED CONTROL DEACTIVE SWITCH

98815 RECALL 98816 REPAIRED AS PER RECALL

FOUND BRAKE FLUID LEAK FROM CRUISE DEACTIVATION SWITCH.THREADS STRIPPED.

PERFORMED RECALL

1 REMOVE AND REPLACE SPEED CONTROL DEACTIVATION SWITCH UNDER RECALL 99615

PERFORM RECALL 99815

RECALL 9851

OPEN RECALL PERFORM RECALL

99815 RECALL

DONE AS PER INSTRUCTIONS

RECALL PERFORM RECALL

RECALL POSTS COMPLETE RECALL 99815

REPLACED SPEED DEACTIVATOR SWITCH

REPLACED THE SWITCH PER RECALL 99815

78774 RECALL DID RECALL REPLACED SWITCH WIRES TECH 10

RECALL COMPLETE INSTALLED DEACTIVATION SWITCH.

REPLACE SPEED CONTROL DEACTIVATION SWITCHISCONNECTOR.

REPLACE SPEED CONTROL DEACTIVATION SWITCH & CONNECTOR.

RECALL INSTALLED BRAKE SWITCH

68616 RECALL WARR, REPLACE SWITCH PER RECALL 99815.

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 90615

PERFORM RECALL

PERFORMED RECALL 98815-INSPECTED AND INSTALLED SPEED CONTROL DEACTIVATION SWITCH

RECALL 98815 CRUISE CONTROL DEACTPERFORM RECALL, REPLACE DEACTIVATION SWITCH.

Agreement of the

95373 REPLACED CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL

126451 89815 RECALL PERFORM 99615 RECALL ASPER INSTRUCTIONS

REPLACE SWITCH PER RECALL, ADMIN.1

RECALL B9S15

110088 RECALL WR RECALL 99815

booffles OLD1

```
RECALL
                   89315
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
RECALL 99$15
                     RECALL PERFORME
99815 CC DE ACTIVATION SW RECALL99815 CC DE ACTIVATION SW RECALL
                     RECALL PERFORME
RECALL 99815
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99S15
                RC 99815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
RECALL 99815. REPLACE SPEED CONTROL DEACTIVATOR SWITCH AS PER RECALL 99815.
PERFORMED RECALL 99$15
RECALL
                   99815 INSTALLED CRUISE SWITCH
PERFORMED RECALL 99815
76730 RECALL 99816 REPLACE CRUISE CONTROL SWITCH AND PLUG
COMPLETED RECALL 99815
REPLACE DÉACTIVATION SWITCH
RECALL PERFORM RECALL 89615
INSTALL SWITCH AND CONNECTOR
59905 RECALL 99$158 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
90572 RECALL REPLACE DEACTIVATION SWITCH PER RECALL(WP) 23
48071 RECALL 998158 0.5. ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL
REEPLACE BRAKE DEACTIVATION SW PER RECALL 98315
RECALL SPEED CONTROL DEACT SW REPLACE DEACTIVATION SWITCH
PERFORM RECALL 00815
1 PERFORMED LATEST REPAIR PROCESS PERTAINING TO 98815 PER RECALL INSTRUCTIONS
REPLACED DEACTIVATION SWITH FOR SPEED CONTROL PER RECALL INSTRUCTIONS
RECALL 99815
99815 RPL SPEED CONTROL DEACTIVATION SWITCH
83389 RECALL 99S15 REPLACED SWITCH
81964 REPLACED CRUISE CONTROL DE-ACTIVATION SWITCH PER RECALL 99515
99815 RPI, SPEED CONTROL DEACTIVATION SWITCH
COMPLETED RECALL ON SPEED CONTROL SWITCH
PREFROEMD RECALL
```

118364 R AND R SWITCH AND CONNECTOR FOR RECALL
28277 89815 RECALL 99815 REPLACE DEACTIVATOR SWITCH
RECALL REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99815
REPL BRK PRESSURE 6WITCH
99815 06915 RECALL
99815 RECALL PERFORMED 99815 RECALL PERFOMRED
RECALLED 99815 PERFORMED
PERFORMED RECALL 99815
INSTALL SWITCH
101866 TECH 342-CA-RECALL-CA9G652 PERFORM RECALL 99615 SPEED CONTROL DEACTIVATION 8WITCH.
19815 99815
44582 99815 WARR REPLACED SWITCH AND CONN

```
PHIZ-628 11835
```

```
99815
                  98615
60398 RECALL 99815 INSTALL NEW SWITCH AND CONNINECTOR.
74783 RECALL 99815 INSTALL NEW SWITCH AND CONNECTOR
REPLACED DEACTIVATION SWITCH
RECALL DOSES
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
99815 COMPLETED
CUSTOMER REQUESTS PERFORM RECALL PERFORMED RECA
114836 RECALL WA REPLACE DEACTIVATOR SWITCH AND CONNECTOR
REPLACE CRUISE DEACTIVATION SWITCH ASSY, PER RECALL 89815.
TEST AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH.
PERFORMED RECALL 99816
                99815E
1 REMOVE AND REPLACE SPEED CONTROL DEACTIVATION SWITCH UNDER RECALL 99815
RECALL
                   99615 - B - RECALL
99815 REPLACED SWITCH AND CONNECTOR
33391 W REPLACE SWITTCH RAT
                                                     DODME = DEALER SELF APPROVAL
PERFORMED RECALL
PER RECALL
                    PERF RECALL
SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED BY FORD (
44830 RECALL DOS 15 INSTALL NEW SWITCH AND CONNECTOR
```

8777 PERFORMED 99816 RECALL
SAFETY RECALL 98815 INSPECT AND REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL.
COMPLETED RECALL PER INSTRUCTIONS
REPLACE SPEED CABLE PER RECALL 2 OF 2 ROS.
REPLACED DEACTIVATION SWITCH PER RECALL INST. INCLUDING CONN.
REPLACED BRAKE SWITCH
22009 CHANGED OUT THE SPEED CONTROL DEACTIVATION SWITCH-PER 89816
RECALL 99816 REPLACED CRUISE CONTROL DISCONNECTION SWITCH PER RECALL
COMPL. RECALL 98816, CAUSE: SPEED CONTROL DEACTIVATION SWITCH
22301 INSTALLED PARTS PER RECALL

89815 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

APROX TIME: 0.6 HRS

INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
REPLACE DEACTIVATION SWITCH AS PER RECALL.
PREFORM RECALL
REPLACE DEACTIVATION SWITCH PERFORM RECALL 99S16
67501 998136 0.5 REPLACED CONNECTOR AND SWITCH PER RECALL

REPLACED THE SWITCH PER RECALL INSTRUCTIONS
INSTALLED KIT PER RECALL

The second state of the first of the first of the second state of

PER RECALL REPLACE DEAC SWITCH

PERFORMED RECALL 99816 PERFORMED RECALL OPEN RECALL PERFORM SERVICE REPAIR PER RECALL MESSAGE

RECALL REPLACED DEACTIVATION SWITCH AS PER RECALL REPLACE SPEED CONTROL SWITCH 998158 0.5

RECALL REPL SPEED CONTROL DEACT, SWITCH 162648 RECALL 90815 REPLACED RECALL 90815 192227 RECALL .4 B REPLACED SWITCH REPLACED BACK PRESSURE SWITCH PER RECALL 09615 SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED BY FORD I REPLACE SPEED CONTROL DISABLE SWITCH PER RECALL INSPECTED AND INSTALLED BRAKE REPAIRS KIT AS NEEDED FOR RECALL REPAIRS

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR. PERFORMED RECAL PERFORMED RECALL 99815. REPLACED THE DEACTIVATION SWITCH. 8PD CTRL DEACTIVATION SW REPLEMNTPERFORMED RECALL 98\$15 WAR REPLACED CRUISE CONTROL DEACTIVATOR SWITCH PER RECALL PERFORM RECALL RECALL COMPLETE

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR. SPEED CONTROL DEACTIVATION

PERFORMED RECALL 96615

INSPECT AND INSTALLED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL

COMPLETED RECALL 98815, DEACTIVATION SWITCH

1 PERFORM CAMPAIGN PER FORDS SPECIFICATIONS AND INSTRUCTIONS 895159.5

PERFORM RECALL 99815 RECALL PERFORMED PERFORM RECALL REPLACE SWT. 1 REPLACED SWITCH AND CONNECTOR RECALL REPLACED SWITCH **RECALL 98815**

REPLACED DEACTIVATION SWITCH REPLACED PRESSURE SWITCH AND CONNECTOR AS PER RECALL 20197 98815B .5 REPLACE SPEED CONTROL SW. AS PER RECALL

REPLACED DEACTIVATION PER SAFETY RECALL 99815.

REPL SPD CNTRL DEACTIVATION SW

191738 RECOLL WARR REPLACE DEACTIVATOR SWITCH AND CONNECTOR

30504 REGALL WARR INSTALL RECALL SWITCH

99816 RECALL

DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

boxfffes_OLD1

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER R. ECALL 98815.

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 98815.

1. COMPLETED RECALL

REPAIR PER RECA.

98815 99815 PERFORM RECALL DID RECALL DEACTIVATION SW COMPLETED...

99615

from a line

REPLACE SPEED CONTROL SWITCH

CHECKED CASIS. INSTALLED SWITCH PER RECALL
RECALL 98815 REPLACED DEACTIVATER SWITCH AS PER RECALL, 99815
REPLACE SWITCH AND CONNECTOR PER RECALL.
1 PERFORMED RECALL.
REPLACED DISENSAGE SWITCH PER RECALL 99615.
REPLACED DISENSAGE SWITCH PER RECALL 99615.
SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED BY FORD I PERFORM RECALL 98915
PERFORM RECALL 98915

PERFORM RECALL 98815

1 PERFORM RECALL

68712 REPAIR PER 963158 0.5

RECALL PERFORMED

PERFORMED RECALL 98815

COMPLETED RECALL

RECALL COMPLETED.

CRIUSE SWITCH RECALL

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 96815.

89815

99815 99815 REPLACED GRUISE DEACTIVATION SWITCH AND CONNECTOR PERFORMED RECALL

REPAIR AS PER RECALL 96815.

REPLACED PRESSURE SWITCH AND CONNECTOR AS PER RECALL.

REPLACED DEACTIVATION SWITCH PER RECALL, 99815,
RECAL REPLACED CRUISE CONTROL DEACTIVATION SWITCH
PENFORMED 99815 RECALL REPLACED SWITCH AND CONN. ECTOR AS PER RECALL
PENFORMED RECALL 99815
COMPLETED RECALL 99815 INSTALLED KIT FOR SPEED CONTROL
REPLACE CRUISE CONTROL DEACTIVATOR SWITCH AND WIRING CONNECTOR
RECALL REPLACE CRUISE CONTROL SWITCH AND CONNECTOR PER RECALL 99815
REPALCE CRUISE CONTROL DEACTIVATION SWITCH.
99816
PENFORM 99815

2902-820 11837

99815

AS PER RECALL 84423 RECALL 99815 REPLACED RECALL 99815 W-NEW PART

PERFORMED THE RECALL 99816

SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED BY FORD I

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL LABOR 998158 0.5, ADMIN 0.1
RECALL 99815
REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL 99815
REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL 99815
RECALL PERFORM RECALL 98818 REPLACED BRAKE SWITCH , CONNECTOR
RECALL 99816 PERFORMED RECALL 99816
REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL RECALL
141468 998158 0.5 HRS. REPLACED SPEED CONTROL SWITCH
46067 AS RECALL

RECALL 80316.

REPLACE SPEED CONTROL DEACTIVATION SWITCH

For DEACTIVATIVATION SWITCH: PERFROM RECALL 99816

98815 98815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR REPLACED SPEED CONTROLE DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL 96815 PERFORM RECALL

RECALL 99315 PERFORM RECALL, 99315
RECALL REPLACED CRUISE BUTTONS AS PER RECALL
REPLACE CRUISE CONTROL SWITCH
101824 REPLACE SPIED CONTROL DEACTIVATION SWITCH AND CONNECTOR
REPLACE DEACTIVATION SWITCH
SPD CTRL, DEACTIVATION SWITCH AS PER RECALL
REPLACE DEACTIVATION SWITCH AS PER RECALL
PERFORMED RECALL 99315, TECH 181.
RECALL 99315 REPLACE DEACTIVATION SWITCH
101120 99315 RER BRAKE SWITCH
REPLACED DEACTIVATION SWITCH

REPLACED DEACTIVATION SWITCH
PERFORMED THE RECALL 99616
PERF 99615
RECALL COMPLETE
REPLACE CRUISE SWITCH
RECALL PERFORMED
REPLACE SPEED CONTROL CABLE AS PER RECALL 99815
REPLACED DEACTIVATION SWITCH.

REPLACE DEACTIVATION SWITCH AS PER RECALL

OCETT C79-7980

```
REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99815
                   REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
1 REPLACE SPEED CONTROL DEACTIVATION AND CONNECTOR 96S15B .6
PERFORM RECALL
                        REPALCE SWITCH
REPLACE SPEED CONTROL SWITCH
PEROFEMD THE RECALL 88815
RECALL 99915
                     99915 REPLACE SPEED CONTROL SWITCH
COMPLETED RECALL 99315 - REPLACE BPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR....993159, 5+.1
REMOVED OLD CRUISE DEATIVATION SWITCH AND COONNIECTOR AND REPLACED WITH A NEW CRUISE DEACTIVATION SWITCH AND CONNECTOR
REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL REPLACE DEACTIVATION SWITCH
COMPLETED RECALL
REPLACED DEACTIVATION SWITCH
REPLACE SPEED CONTROL DEACTIVATOR SWITCH & HARDSHELL CONNECTOR PER RECALL.
1 REPLACED CRUISE DEACTIVATION SW AS PER RECALL 99-5-15
                99915 REPLACED SPEED CONTROL DEACTIVATION SWITCH
110706 PERFORMED RECALL 98$15
80906 RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARDSHELL AS PER RECALL 99815.
PERFORMED RECALL 99815. REPLACED SWITCH AND CONNECTOR.
RECALL 99515
135427 98$15 98$158 .5 .5 REPLACED SPEED CONTROL DEACTEVATION SWITCH
92907 PERFORM RECALL REPLACE CRUISE CONTROL SWITCH AND CONNECTOR
97905 98S15 RECALL
COMPLETED REACLL #99615
REPLACED DEACTIVATION SWITCH AND CONNECTOR.
```

PERFORMED RECALL

98763 REPLACED STOP SWITCH AND CONNECTOR 998168 RECALL

PERFROMED RECALL CRUISE DEACTIVATION SWITCH.

RECALL 98815 RECALL RECALL PERFORM MOS15 PERFORMED RECALL-CUSTOMER HAD LETTER

99816 RAR CRUISE DEACTIVATION SWITCH PERFORM SPEED CNTROL DEACTIVATION SWITCH

REPLACED DEACTIVATION SWITCH

98039 RECALL DONE THREADS STRIPPED OUT OF VALVE.

99S15 RECALL COMPLETE RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

122962 79 PERFORM 99815 R R SPEED CONTROL DEACTIVATIOM SWITCH AND CONNECTOR JH.

REPLACE CRUISE CONTROL DEACTIVATION SWITCH

PERFORM SAFETY RECALL

77290 79 PERFORM 98915 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST JH

REPLACED DIACTIVATION SWITCH(SPEED CONTROL)

\$2007 RECALL DID RECALL REPLACED SWITCH AND WIRES TECH 10

SAFETY RECALL 98515 REPLACE SPEED CONTROL SWITCH & CONNECTOR
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED
RECALL SPEED CONTROL DEACTIVATION
REPLACE SPEED CONTROL, SWITCH PER RECALL 89815
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815
SWITCH & CONNECTOR 98616
PERFORMED RECALL 99815

PERFORMED RECALL

RECALL

82300 SAME W REPLACED DEACTIVATION SWITCH 40888 RE-CALL INSTALL SWITCH & HARDSHELL CONNECTER. RECALL REPLACED SWITCH & CONNECTOR PERFORM RECALL 98815.8PEED CONTROL DEACTIVATION. SWITCH REPLACEMENT. REPLACED CRUISE CONTROL DEACTIVATION SWITCH. 1 REPLACED SPEED CONTROL DEACTIVATION SWITCH PER 88815 RECALL PERFORM 90316 REPALCED SPEED CONTROL ACTIVATION SWITCH PERFORMED RECALL 228458 RECALL 99815 REPLACED SWITCH AND CONNECTOR SHELL, 99815+ 40670 CRUISE DEACTIVATION SWITCH REPLACE SWITCH AND CONNECTOR 128305 REPLACED RECALL 98815 SPEED CONTROL 90683 & REPLACE SPEED CONTROL DISABLE SWITCH AND HARD SHELL REPLACED CRUISE CONTROL DEACTIVATION SWITCH PERFORM RECALL 99816 1 REPLACED SPEED CONTROL SWITCH 1 REPLACED BRAKE PRESSURE SWITCH AND CONNECTOR PER RECALL 69815

INSTALLED DEACTIVATION SWITCH AND CONNECTOR, REPOUTE, PER RECALL 69816.
SWITCH INSPECT AND INSTALL SWITCH
REPLACED CRUIBE CONTROL SWITCH
PERFORM 98816 RECALL
REPLACE CONNECTOR AND SWITCH
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR, CHECK NORMAL OPERATION,
85848 986168 0.5 REPLACED SPEED CONTROL DEACT SWITCH AND HARD- SHELL CONNECTOR.

98176 REPLACE SWITCH AND CONNECTOR PER RECALL
REPLACE DEACTIVATION SWITCH ASSY
RECALL #99816 REPLACED DEACTIVATION SWITCH
PREFORMED 99816
100768 PERFORMED RECALL 99815-REPLACED DEACTIVATION SWITCH
AS PER FORD SPECIFICATIONS PERFORMED RECALL NUMBER 99815

99815 REPLACED SWITCH

1 REMOVED AND REPLACED CRUISE SWITCH RECALL INSTALLED DEACTIVATION SWITCH AND CONNECTOR.

REPLACED SEACTIVATOR SWITCH PER RECALL 99815

1 PERFORM RECALL PER INSTRUCTIONS

362-626 11940

boxfites CLD1

```
PERFORM RECALL 98S18
                          90915 BLEED BRAKE ROAD TEST
COMPLETED RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL 98615 SPEED CONTROL REPLACE DEACTIVATION SWITCH AND CONECTOR RECALL PERFORMED.
1 PERFORM RECALL
80048 RECALL WINSPIAND REPLACED BRAKE SWIASY PER 998158 0.5 ADMN 0.1
99915 RECALL
                     99$15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL
                   99815
81421 PERFORM RECALLIREPLACE SWITCH AND HARDSHELL#1
                   COMPLETE
RECALL
99815 RECALL
                     99615 REPLACE SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL 99:$15-REPLACED SPIEED CONTROL DE-ACTIVATION SWITCH
                     RECALL 99515 PERFORMED RECALL
RECALL 06815
PERFORM 99815 RECALL
COMPLETE RECALL
86443 REPLACED RECALL 89815.
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR - 998158.6
1 PERFORMED RECALL
RECALL
                   PERFORMED
98S15 COMPLETED
                       99S16 COMPLETED
SWITCH
                   99315
RECALL 19815 - SPEED CONTROL DEACTIVATION SWITCH REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL
VEHICLE HAS AN OPEN RECALL PERFORM RECALL
RECALL
                   99815 REPLACED SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815
               INSTALLED KIT PER RECALL
PERFORM RECALL 69S15- REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR.
RECALL COMPLETED
SAFETY RECALL
                      99915 -REPLACE SPEED CONTROL DEACTIVATION SWITCH
PERF, RECALL
99816 COMPLETED
                       20815 COMPLETED
REPLACE SWITCH AND CONNECTOR PER RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
44989 PERFROM RECALL 99615
REPLACE DEACTIVATION
PERFORMED 99815 RECALL AS PER FORD SPECIFICATION
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR, ROAD TEST.
```

SPD CTRL DEACTIVATION SW REPLEMINTPERFORMED RECALL 99815
PERFORMED RECALL 99815-REPLACED SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

81526 RECALL REPLACE CRUSE CONTROL CUT OFF ISWIT

1 RECALL 99815 B DONE

COMPLETED RECALL 99815
--- RECALL COMPLETED

RECALL 00915

362-625 119

PERFORMED RECALL PERFORM RECALL: 181083 RECALL INSTALLED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL, FIN

121882 9G652-AA CC62 #369 PERFORM RECALL 98815 AND RETURN PARTS

REPLACED SPEED CONTROL DEACTIVATION SWITCH 21418 RECALL REPLACED SWITCH AND CONNECTOR

42507 RECALL #00815 PERFORM RECALL #00815 REPLACING BRAKE PRESSURE SPEED CONTROL DEACTIVATION SWITCH *6 WP

RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

PERFORMED RECALL 90815

SUPPLEMENT IN 5-99 INSPECTION OPERATION ADDED REPLACE SCIED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

99616 BRAKE DEACTIVATION SWITCH RECALL COMPLETED. MILEAGE WAS PUT INCORRECTY SORRY OF INCOVIENCE.

988158 INSTALLED SWITCH KIT.

99815 RECALL REPLACED SPEDD CONTGROL CABLE

RECALL 99815

PERFORM RECALL

99615 RECALL

89615 99915 INSPECTED&REPLACED SPEED CONTROL DRACTIVATION

99St5 COMPLETED

1 PERFORMED RECALL 99815 REPLACED SPEED CONTROL SWITCH AND CONNECTOR.

PERFORM RECALL

22

REMOVE TAPE AND SECURE LABOR OF 989:15E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 989:15B .5 REMOVED TAPED AND SECURED ST

99815 RECALL COMPLETE

00815 99S15 COMPLETED

PERFORMED THE RECALL 09816

99816 RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

RECALL INSTALL CRUISE CONTROL DEACTIVATION SWITCH PER RECALL

PERFORM RECALL

RECALL FIER RECALL TIRED TO REMOVE CRUISE DEACTIVATION SWITCH COULD NOT REMOVE DUE TO CORROSION AND RUST REMOVED BRAKE LINE BLOC

RECALL 88815 RECALL COMPLETED

RECALL PERFORMED

REPLACE SWITCH AND WIRING CONNECTOR

RECALL 99815 PERFORMED RECALL 99815

RECALL REPLACE SPEED CONTROL

68058 RECALL WARR PERF RECALL

PERFORM RECALL

28382 99816 RECALL 99816 REPLACE DEACTIVATOR, SWITCH REPLACED CRUISE DEACTIVATION SWITCH PER RECALL 98515

RECALL#89815 REPLACE SPEED CONTROL DEACTIVATION SWITCH

29815 99815 REPLACE CRUISE CONTROL PER RECALL

40226 RECALL W REPLACE SWITCH AND CONNECTOR GA

00815

REPLACE DEACTIVATION SWITCH

99915

99515 99815

REPLACED SPEED CONTROL PER RECALL

10802 R R SPEED SWITCH AND CONNECTOR BLED BRAKES AND TEST DROVE

RPL SWITCH-CONNECTOR 99815 RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH. PERFORM RECALL

REPLACE SWITCH
INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN
E. PERFORMED RECALL 99615B .5 ADMIN .1 PER INSTRUCTIONS
REPALCE SPEED CONTROL DEACTIVATION SWITCH

PERFORM RECALL 09815 T181

PERFORM RECALL

REPALCE CRUISE SWITCH

99815 RECALL

OWNER NOTIFICATION CRUISE CONTROL RECALL 99815

RECALL REPLACE CRUISE DEACTIVATION SWITCH PER RECALL

REPAIR AS PER RECALL 99\$15.

04 99815 RECALL COMPLETE

VERIFIED CRUISE CONTROL INOP, DO MANUAL PINPOINT TESTS A1-A6, REPLACE DEACTIVATOR SWITCH, RETEST - ALL OK.

REPLACE SPEED CONTROL DEACTIVEATION SWITCH

THE SWITHC MAY DEVELOPE A RESISTIVE SHORT AND CAUSE A UNIER HOOD FIRE. REPLACE THE SPEED CONTROL DEACTIVATION SWITCH AND THE HARD SHELL 188626 RECALL 985158 (L6 REPLACE DEACTIVATION SWITCH & HARD SHELL CONNECTOR

INSTALL CRUISE SWITCH

68241 RECALL R-R CRUISE SWITCH AS PER RECALL 98915 RECALL 99915 RECALL PERFORMED

RECALL COMPLETED

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

REPLACED DEACTIVATION SWITCH PER RECALL

DEACTIVATION SWITCH AND CONNECTOR

87692 RECALL PERFORM RECALL 99815, REPLACE DEACTIVATION SWITCH

PERFORM RECALL

60315

REPLACED SPEED CONTROL DEACTIVATION SWITCH

RECALL

REPL SW.

PERFORM 99815

1 REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 89Sts.

RNR DEACTIVATION SWITCH PERFORM RECALL 09915

RECALL 99815 RECALL

INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1 ***THANK YOU-DARREN GREEN TEAM***

RECALL 98838 INSTALLED CRUISE CONTROL DEACTIVATION SWITCH

. 4.5 .

99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL

REPLACE SPEED CONTROL DEACTIVATION SWITCH

COMPLETED RECALL 99615

```
PERFORMED RECALL
CHECKED CASIS. INSTALLED SPEED CONTROL SWITCH ANDHARDSHELL CONNECTOR
REPLACE DEACTIVATION SWITCH FOR SPEED CONTROL
56772 PERFORMED RECALL 99615 REPLACE SPEED. CONTROL DEACTIVATION SWITCH
PERFORMD THERECALL 69815
RECALL
                   66$15 INSTALLED SWITCH
REPLACE 999159 0.5 ADMIN REMOVE, TAPE AND SECURE THE SPEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL 99815-INSPECTED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH
REPLACED SC DEACTIVATION SWITCH 99815
44827 79 PERFORM 99815 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST JH
1 REPLACE CRUISE CONTROL PRESSURE SWITCH AS PER RECALL INSTRUCTIONS
REPLACED DEACTIVATION SWITCH
1 INSTALL KIT
99315
                  99816 REPLACED BRAKE SWITCH
8981B
                  99815
REPLACE SWITCH AND HARDSHELL CONNECTOR PER RECAL
118442 REPLACED DEACTIVATION SWITCH
REPLACE SWITCH KIT
RECALL 98815 COMPLETED - INSTALLED DEACTIVATION SWITCH
PERFORMED RECALL 90815
1 PERFORMED RECALL INSTALLED CRUISE DEACTIVATION SWITCH
                99815 REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99815
X
INSTALLED SPEED CONTROL RECALL KIT. THREADS PULLED OUT OF PROPORTIONING VALAVE BLOCK DURING REMOVAL OF SWITCH, REPLACE
                 PERFORM RECALL 99816
72772 RECALL W REPLACE DEACTIVATOR SWITCH AND CONNECTOR PER 99815 89 8616
PERFORMED RECALL.
1 REPLACED SPEED CONTROL DEACTIVIATION SWITCH
REPLACE SPEED CONTROL SWITCH PER RECALL 99815
REPLACED SWITCH
REPLACED SWITCH PER 99816
PERFORM RECALL 99815
.....REPLACED CONNECTOR AND SWITCH
RECALL 98815 INSTALLED CRUISE CONTROL DISCONNECTION SWITCH PER RECALL
RECALL 98915
                     98815 REPLACE SPEED CONTROL SW. & CONNECTOR PER RECALL
RECALL 99816
                     PP$15
RECALL 99815
                     PERFORMED RECALL 99815
REPL DEACTIVATION SWITCH
RECALL COM-PLETED
99818 RECALL
                     99$15 REPARTED AS PER RECALL
```

85946 RECALL W REPLACE SWITCH 99815 GA 125764 PERFORMED RECALL 89S15 TECH 571 APPLIED RECALL 99\$15

63534 PERFORMED RECALL 99S15 SWITCH REPLACEMENT RECALL REPLACE SWITCH AND CONNECTOR

99815

99815

ON 060299 DISTANCE SHOULD HAVE BEEN 52827 MI

1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

CONCERN - PERFORM RECALL 99615, REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL. CONNECTOR AS PER RECALL 99615, 998169 0.5 ADI PEROFMED THE RECALL 99815

APPLIED RECALL 98815

998158, REPLACED SWITCH AND CONNECTOR AS PER RECALL

RECALL 98815 PERF RECALL

RECALL 99815

RECALL 99S15 COMPLETED

99816

REPLACE BRAKE SWITCH

96615 RECALL

89915 RECALL COMPLETE

PERFORM RECAL

RECALL COMPLETED PERFORM CAMPAIGN FER FORDS SPECIFICATIONS AND INSTRUCTIONS REPLACED SWITCH AND CONNECTOR

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815

PERFORM RECALL 99615

96815 RECALL

PERFORM RECALL

COMPLETED RECALL

COMPLETE RECALL 99515

REPLACED DEACTIVATION SWITCH

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

REPLACE SWITCH PER RECALL 00815

RECALL ASDFASDFSADFSADFDSA

1 RECALL 99815 PER RECALL , REPLACE SWITCH & BLEED BRAKES # 1279 LARRY

REPLACED DEACTIVATION SWITCH, PER RECALL

1 TECH PERFORMED RECALL 99815

98815 REPLACE CRUISE CONTROL SWITCH PER RECALL

INSPECTED SYSTEM, REPAIRED IF NECESSARY PER RECA

111170 RECALL 99816 WARR INTALLED CRUZ DEACTIVATION SWIAND CONFECTOR PER RECALL 99816 NOTE CK ENG. LAMP COME ON

REPL SWITCH PER RECALL

REPLACED SCIDEACTIVATION SWITCH 96S15

REPLACED SPEED CONTROL SWITCH AND CONNECTOR PER 89815

PERFORMED RECALL

COMPLETED RECALL

1 PERFORM RECALL PER INSTRUCTIONS

42442 PEROFRM 99815 SPEED CONTROL DEACTIVATION RECALL REMOVED CONNECTOR FROM SWITCH AND REMOVED WIRES FROM CONNECTOR TO REPLACE (
99815 RECALL BRS15 RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815

5-75-11

99316 RECALL PERFORMED

58454 REPLACED SPEED CONTROL DEACTIVATION PRESSURE SWITCH AND CONNECTOR

37380 RECALL 99815 WR REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR AS IPER RECALL

PERFORMED RECALL 99815

```
PERFORMED RECALL AS PER INSTRUCTIONS
PER NOTICE
                     PERFORM RECALL
REPLACE SWITCH AS PER RECALL 99815
PERFORMED RECALL
11286 BPEED COTROL DEAC S-W RECALL WT REPLACED S-W PER RECALL
COMPLETED RECALL FOR SPEED CONTROL
                 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONN.
RECALL REPLACESWITCH AND CONNECTOR
REPLACED CRUISE DEACTIVATION SWITCH AND HARDSHELL PER RECALL
RECALL 99815B COMPLETED
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.
REPLACED SWITCH
57474 R & I BRAKE DEACTIVATION SWITCH
1 PERFORM THE RECSALL 1993 BOBACT, SWITCH AND PERFORM THE BLEED SYSTEM CHECK OK AT THIS OKM
REPLACED SPEED CONTROL DEACTIVATION SWITCH
RECALL 199815
REPLACED SWITCH
PERFORM RECALL 99816
RECALL PERFORMED RECALL 98S15
REPLACED CRUZ CONTROL DEACTIVATION SWITCH PER RECALL 90815
REPLACED SPEED CONTRIOL DEACTIVATTION SWITCH, PER RECALL
SEE CLAM 056524
                                        00
REPLACE DEACTIVATION SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 98516.
1 DB REPLACED SWITCH
REPL SWITCH & CONNECTOR PER RECALL 99815
87840 RECALL 988158 ADMIN 0.6 REPLACED DEACTIVATION SWITCH
RECALL 99615 CRUISE SWITCH
PERFORMSAFETY RECALL
RECALL COMPLETED
PREFORM RECALL
RECALL
                   REPLACE SPEED CONTIDEACT SWITCH PER RECALL
REPLACE CRUISE CUTOFF SWITCH AND CONNECTOR PER RECALL 99S15
42006 RECALL REPLACED THE BRAKE SWITCH FOR THE CRUISE
PERFORM RECALL
                       99815 COMPLETED
```

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL IS

108271 INSTALL SWITCH KIT PER RECALL

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 98815.

REPLACE SPEED CONTROL DEACTAMATION SWITCH AS PER RECALL 98815

78408 REPLACE SPEED CONTROL DEACTAMATION SWITCH PER RECALL 98815

SPEED CONTROL DEAVTIVATION SWITCHES MAY DEVELOP RESISTIVE SHORT IN ELECTRICAL CIRCUIT THAT MAY CAUSE UNDERHOOD FIRE, COMPLETED RECALL 9

REPLACE SPEED CONTROL SWITCH AND CONNECTOR

RECALL PERFORMED RECALL
COMPLETED SPEED CONTROL RECALL

the second second second second

HATT 578-7045

121684 96815 COMPLETE REPLACED SPEED CONTROL DEATAVATION SWITCH AND CONN YECH417

99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPAIRED AS PER RECALL, SPEED CONTROL DEACTIVATI

RECALL

99815 REPLACE C-C SW

RECALL INSTALLED CRUISE CONTROL DEACTIVATION SWITCH

REPLACED SPEED CONTROL DEACTIVATION SW AND CONNECTOR ROAD ATEST PASS... 43443 98815 RECALL WF INSTALL SPEED CONTROL DEIGAVATION SWITCH PER RECALL

REPL SWITCH PER RECALL

98315

99815

REPLACE SWITCH SERVICE REPLACE

60413 RECALL REPLACE DEACTIVATION SWITCH

PERFORMED RECALL 99St6 INSTALLED DEACTIVEATION SWITCH

REPLACED SWITCH

112862 99816 W REPLACED SPEED CONTROL DEACTIVATION BWITCH

104303 REPAIR AS PER RECALL 99815

106666 RECALL 99815 0.6 REPLACED CONNECTOR.

99S15 COMPLETED

99\$15 COMPLETED

RECALL

99815 PERFORMED RECALL

REPLACED CRUISE SWITCH AND CONNECTOR FOR SWITCH.

AS PER RECALL REPLACED SWITCH

PERFORMED RECALL 99815

COMPLETED RECALL

NSOECT FOR RECALL 99815

RECALL 99815

99815 REPLACE SPEED CONTROL SWITCH

99815 COMPLETED

99815 COMPLETED

RECALL.

RECALL.

125829 W RECALL 99815 INSTALL CRUSE DEACTIVATION SWITCH AND CONNECTOR

PERFORM RECALL

81650 PERFORM RECALL 99816 INSTALL SPEED CONTROL DEAC TIVATION SWITCH AND CONNECTOR

SPEED CONTROL DEACTIVATION SWITCH

REPLACED SWITCH - AND CONNECTOR

90348 TECH 314 PERFORMED RECALL 99615 REPLACED. SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.

. REPLACED DEACTIVATION CRUISE SWITCH AS PIER RECALL 99615

PERFORM RECALL

99815 COMPLETED

99\$15 COMPLETED

RECALL 99315 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL

COMPLETE RECALL 99816

104614 REPLACE CONNECTOR AND SWITCH PER RECALL

Contract to the contract of

RECALL

66S15 COMPLETED

99315

RECALL

RECALL

SPD CTRL DEACTIVATION SWITCH REPLPERFORMED RECALL \$9815 PERFORM SAFETY RECALL 99815 PERFORM SAFETY RECALL 99815

143206 RECALL 98616 WR PERF RECALL 98616, PERF INSPECT AND REPLASE DEACTIVATION SWITCH AND CONECTOR, PERF BLEED BRAKE SYSTEM OK.

RECALL 99815 99815 COMPLETED PERFORMED THE RECALL 99815

INSTALLED BRAKE SWITCH PER RECALL

PERFORMED RECALL 99\$15

RECALL 99815

PERFORMED RECALL 99815

99815 RECALL

99815 RECALL

99616

99815

MANUFACTURE REQUIREMENT: REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH & HARD-SHELL CONNECTOR AS PER THE TECHNICAL INSTRUCTION

77126 RECALL 99315 INSTALLED NEW SWITCH AND CONNECTOR ALSO NOTE HAD TO BLEED SYSTEM AS PER RECAL

PERFORMED RECALL

D8815

99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

REPLACE SWITCH PER RECALL

RECALL DID RECALL

PERFORM RECALL

86892 COMPLETED 99815 SWITCH

99815 RECALL

99815 REPAIR AS PER RECALL

PERFORM RECALL

RECLAL

RECALL

55051 R&R SPEED CONTROL SWITCH AS PER RECALL \$8615

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

COMPLETED RECALL

COMPLETE RECALL 99815

PERFORM RECALL

COMPLETED RECALL -DID 99815B.

RECALL 98S1B COMPLETE

85351 REPLACED THE 8FEED CONTROL DEACTIVATION SWITCH AS PER.

75088 RECALL WARR PERFORM SPEED CONTROL RECALL.

RECALL **89815 COMPLEYED**

RECALL 99815 COMPLETE

1 REPLACE CRUISE SWITCH PER RECALL

122150 0.8 REPLACED CC DEACTIVATION SWITCH PER RECALL

115 - DEACTIVATION SWITCH RECALL-98815 - REPLACE DEACTIVATION SWITCH PER RECALL

99815

99315

AS PER RECALL 99815

RECALL

B9315

98834 (LB PERF RECALL-REPLACED DEACT SWITCH FOR C CONTROL

84210 RECALL 99816 PERFORMED RECALL 99815 SPEED CONTROL...

ï

```
REPLACED DEACTIVATION SWITCH AS PER RECALL 99818
PERFORM RECALL PER 8PEC8
1 PERFORMED RECALL 90815
90812 42 REPLACED SPEED CONTROL DEACTIVATION. SWITCH AND CONNECTOR AS PER REGALL.
PERFORM RECALL 98815 SPEED CONTROL RECALL
WAR REPLACED SPEED CONTROL SWITCH AND HARD SHELL CONNECTOR PER RECALL
REPLACED CRUIBE CONTROL SWITCH AND WIRING HARNES
PERFORM 99815 RECALL
99816 RECALL
INSTALL SWITCH:
INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN
                REPLACE BRAKE PRESSURE SWITCH AND CONECTOR PER RECALL
REPLACE SWITCH AND CONNECTOR 988158 RECALL
PERFORMED RECALL
                         PERFORMED RECAL
98815 RECALL
                     98815 RECALL
1 COMPLY WITH FORD SPECS FOR CRUISE CONTROL CAB
RECALL 09916 COMPLETE
RECALL
                   REPLACE SPEED CONTROL DEAC SWITCH PER RECALL
61164 99816; REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR, ROAD TEST, OK.
PERFORMED RECALL REPLACED SWITCH AND CONECTOR.
53332 R R SPEED SWITCH AND CONNECTOR BLED REAR BRAKE AND TEST DROVE.
1 REPLACED SPEED CONTROL SWITCH & CONNECTOR
INSTALL SPEED CONTROL DEACTIVATION SWITCH AND ARD HELL CONNECTOR.
1 PERFORMED LATEST REPAIR PROCESS PERTAINING TO 99S15 PER RECALL INSTRUCTIONS
REPLACED SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONNECTOR.
```

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

99816

RECALL COMPLETE

REPLACED DEACTIVATION SWITCH

RECALL PERFORM RECALL PER PROGRAM 98815, DEAC SWITCH

PERFORM RECALL

PERFORMED SPEED CONTROLL DEACTIVATION RECALL 98515, REPLACED DEACTIVATE SWITCH, REPLACED HARDSHELL CONNECTOR, SLEED SYSTEM

109039 PERFORMED SAFETY RECALL 99S15 TO REPLACE CRUISE CONTROL SWITCH AND CONNECTOR.

99815 RECALL 99815 RECALL COMPLETED

REPLACED SPEED CONTROL DEACTIVATION SWITCH & HARD SHELL CONNECTOR. INSTALLED CRUISE DEACTIVATION SWITCH AS PER RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH.

COMPLETED RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

REPAIR AS PER RECALL 99816.

RR BRAKE SWITCH AND CONNECTOR

99815 99815 99815

PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99815 RECALL INSTRUCTIONS

1 PERFORM RECALL 09815

RECALL 89815 SPEED CONT.DEACTVATION SWITCH INSTALLED.

PERFORMED RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR
PERFORM RECALL PER TECHNICAL INSTRUCTIONS IN RECALL BULLETIN REPLACE SWITCH AND HARD SHELL CONNECT
PERFORM TRIM RECALL AS PER RECALL RECALL COMPLETED REPLACED SWITCH AND CONNECTOR
RECALL PERFORM RECALL 96S15 REPLACE SWITCH AND CONNECTOR
PERFORMED RECALL.
86146 RECALL REMOVE AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

PERFORMO THE RECALL 99815

99816

REPLACE CRUSSE DEACTIVATION SWITCH PER RECALL

PERFORMED 00815 RECALL AS PER FORD SPECIFICATION

PERFORMED RECALL
REPLACE CRUISE DEACTIVATION SWITCH
99615. REPLACE DEACTIVATION SWITCH.
1 PERFORMED RECALL 99315
99815 RECALL PERFORME
99816 RECALL-SPEED CONTROL DEACTIVATION SWITCH
24796 RECALL-SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR
INSTALL SWITCH AND CONNECTOR PER RECALL
REPL SWITCH PER RECALL 99815
99522 99815 RECALL 99815 REPLACE DEACTIVATION SWITCH
REPLACE SW AND CONNECTOR
COMPLETED 99815

99815 99816 COMPLETED

INSTALL NEW SWITCH

63504 RECALL TECH 1029 REPAIR AS PER RECALL #89815

COMPLETED CAMPAIGN COMPLETED OF 998158 REPLACED THE SWITCH PER RECALL 99315

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED

REPLACE DEACTIVATION SWITCH AND CONNECTOR.

RECALL 99S1D

99319

SPEED CYTRL DEACTYTN SWTCH RPLCMTPERF SAFETY RECALL 99816

98801 98815 PERFORM RECALLINSTALL NEW SWITCH AND CONNECTOR.

RECALL 199815 COMPLETED

63758 RÉCALL RÉPLACE DEACTIVATION SWITCH & CONN. 94

63758 RECALL REPLACE DEACTIVATION SWITCH & CONN. 94

78541 RECALL DO RECALL 99815

PERFORMED RECALL

RECALL

99615 REPLACE C-C SW

RECALL

RECALL

99915

REPLACED THE SWITCH AS PER THE RECALL

REPLACE DEACTIVATOR SWITCH PER 99815 RECALL

DOST 470-72813

1 PERFORM RECALL 99815 RNR DEACTIVATION SWITCH
PERFORM RECALL 99815 REPLACE SWITCH AND CONNECTO
RECALL 99816 PREFORM RECALL
INSPECT AND PERF RECALL ACCORDING TO INSTRUCTIONS 1
NOTE ENGINE LIGHT ON
REPLACED SWITCH AND WIRE CONN. PER RECALL
PERFORM 99816 RECALL, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
RECALL COMPLETED
RECALL
RC 99816 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE

PERFORMED RECALL #99515 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELLCONNECTOR REPLACE CRUISE DISABLE SWITCH AND CONNECTOR PER RECALL

1 PERFORM RECALL

1 REPAIR OR REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER PER RECALL INSTRUCTIONS, 99515 RECALL

1 99515 REPLACE SWITCH AND PLUG

1 INSTALLED NEW DEACTIVATION SWITCH CONNECTOR

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH PERFORMED RECALL 199415

1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 199515

REPLACE SWITCH PER RECALL

1 DID 88315 RECALL REPLACED CONNECTOR & VALVE AND BLEED BRAKES 1
88567 RECALL REPLACE SWITCH PER RECALL
REPLACED CRUISE CONTROL DEACTIVATION SWITCH
RECALL 98316
INSTALL SPEED CONTROL DEACTAVIATION SWITCH AS PER RECALL 98315
RECALL SPEED CONTROL DEACT REPLACE SPEED CONTROL SWITCH
REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 89315
PREFORMED RECALL 98315
37072 HAD TO SO PART REPLACED CRUISE DEACTIVATION SWITCH
RECALL 98315 COMPLETED
PERFORMED RECALL AS PER INSTRIUCTIONS
X 99315 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR

108218 99815B .5 REPLACED DEACTIVATOR SWITCH AND CONNECTOR SHELL PER RECAL.

RECALL 99815 REPLACED DEACTIVATER SWITCH AS PER RECALL 98915

RECALL REPLACE DEACTIVE SWITCH AS PER RECALL 98915

RECALL REPLACE DEACTIVE SWITCH PER RECALL

97102 99815 PERFORM RECALL 98915

DIAG PERFOREMD RECALL 99815

REPLACED SC DEACTIVATION SWITCH 99816

95804 RECALL 99815 PERFORMED LABOR OPERATION 99815B-0.5 HRS.

E982-825 11961

```
79014 INSTALED DEACTIVATION SWITCH
COMPLETED REPLACED DEACTIVATION SWITCH AS PER RECALL
COMPLETE RECALL ADMIN.1
PRÉFORMED RECALL 89315-SPEEED CONTROL SWITCH
RECALL COMPLETED.
PERFORM RECALL
135460 PERFORMED RECALL 99815
78766 REPLACE DEACTIVATION SWITCH PER RECALL.
PERFORM RECALL
REMOVED AND REPLACED SPEED CONTROL SWITCH AS PER RECALL.
INSTALLED CRUISE CONTROL
                            DEACTIVATION SWITCH.
```

PEFORM RECALL

1 PERFORM RECALL PER INSTRUCTIONS

PERFORMED RECALL #69615

RECALL 99815 REPLACED SWITCH

PER RECALL PER RECALL

1 PERFORMED RECALL 90815

RECALL 99815

RECALL REPLACED SWITCH

PROGRAM 99515 REPLACE SWITCH BRACKET

INSTALLED DEACTIVIVATION SWITCH

89315

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

RECALL SPEED CONTROL DECT SWITCH REPLACE DEACTIVATION SWITCH

REPLACED SPEED CONTROLL DEACTIVATION SWITCH PER RECALL

99S15B.5 REPLACE SWITCH PER RECALL ADMIN.1

INSTALL NEW DEACTIVATION SWITCH AND CONNECTOR PER RECALL

REPAIR AS PER RECALL

COMPLETE 99815

75257 REPLACED DEACTIVATOR SWITCH AND CONNECTOR, PER RECALL

RECALL 99816 REPLACE SPEED CTRL DEACTIVATION SWITCH & HARDSHELL CONNECTO

99515 REPLACE SPEED CONTRIOL DEACTIVATION SWITCH RECALL 99818 REPLACE C-C SW

RECALL RECALL

72005 REPLACED CRUISE DEACTIVATION SWITCH AND CONNECTOR PER RECALL.

PERFORMED AS PER RECALL

RECALL # 89815

PERFORMED RECALL 89815

PERFORM RECALL 99815 SPEED CONTROL SWITCH

PERFORM RECALL

RECALL INSTALL DEACTIVATION SWITCH

RECALL

199315 REPLACED SWITCH

RECALL RECALL 98515, INSTALL CRUISE SWITCH
REPLACE DEACTIVATION SWITCH PER RÉCALL 1
33578 RÉCALL 985158 30 PREFORM RECALL99615
1 PERFORMED RECALL REPLACED SWITCH AND HARDSHELL CONNECTOR
80581 WARR PERFORM RECALL 99515 JH
RECALL, REPAIR AS PER RECALL 99515 JH
REPLACED SWITCH AND CONNECTOR.
1 REPLACE CRUISE DEACTIVATION SWITCH & CONNECTOR PER RECALL 99515
112154 99615C JHRS REPLACED SWITCH AND CONNECTOR AS PER RECALL
REPLACE SWITCH AND CONNECTOR PER RECALL

PEROFRIM RECALL FOR CIRUIS DEEACTIVATION CITTL SWIT

REPLACE SW AND CONNECTOR

AS PER RECALL REPLACE SPEED CONTROL SW AND CONNECTOR PER RECALL

RECALL 99916 COMPLETED RECALL 99915 COMPLETED

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL

REPLACE DEACTIVATION SWITCH REPLACE DEACTIVATION SWITCH RECALL 89315 98315 REPLACED SWITCH CONNECTOR.,

108547 RECALL 99815 INSTALLED SPEED CONTROL DEACTIVATION SWITCH, TEST FOR PROPER OPERATION JH

REPLACE SPEED SONTROL DEACTIVATION SWITCH FER RECALL

RECALL 99S15 RECALL 99S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNEC

1 CAMPAIGN COMPLETED

61951 RECALL 995158 .50 TECK 162 INSTALL SWITCH AND CONNECTOR PERRECALL

99247 99815B 0.5 ADMIN 0.1

85331 99515B - J. PERFORMED RECALL - REMOVED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH.

104019 WARR PERFORM RECALL 00815

REPLACED THE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL.

REPLACE SWITCH AND PLUG AS PER RECALL

RECALL POS15

RECALL CK AND REPLICE FLUID SWIPER RECALL, WF TEC300

130434 RECALL 99315 WARR INSTALL SWITCH PER RECALL

FORD MOTOR COMPANY RECALL COMPLETED RECALL 90S15; REPALCED SPEED CONTROL DEACTIVATION SWITCH

151914 INSTALLED SWITCH AND PLUG BLED BRAKES

INSPECTED VEHICLE AND PERFORMED RECALL AS INSTRUCTED BY SERVICE RECALL BUILLETIN REPLACING SPEED CONTROL DEACTIVATION SWITCH AND CONNE

REPLACED PRESSURE SWITCH.

99815 RECALL SPEED CONTROL DEACTIVATION SWITCH

47764 REPAIR PER RECALL

REPLACED SWITCH AND CONNECTOR AS PER RECALL

RECASLL 99515 99515

RECALL 99815 REC

RECALL PERFORME

1 PERFORMED RECALL

.5 PERFORMED RECALL 99918

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

93131 PERFORMED RECALL 99815

1 REPLACE SPEED CONTROMEDEACTIVATION SWITCH AND HARD-SHELL CONNECTOR AS PER RECALL 99818

RECALL 99815

90127 RECALL 965156 U.S PERFORM RECALL, REPLACE CRUISE DEACTIVATION SWITCH.

COMPLETED RECALL

COMPLETED RECALL 98816

RECALL 99S15 COMPLETED

REPLACED SWITCH.

RECALL PERFORMED RECALL 99816

99815 RECALL REPLACED CABLE

REPLACESWITCH AND CONNECTOR

PERFORM SAFETY RECALL. PERFORM SAFETY RECALL

RECALL #99816 REPL CONN AND SWITCH

PERFORMED RECAL

INSPECT AND PERFORM RECALL AS STATED AND OUTLINED IN RECALL BULLETIN

RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AND BLED BRAKE SYSTEM

99815 B REPLACED SWITCH AND CONNECTOR PER RECALL INSTRUCTIONS 1

RNR DEACTIVATION SWITCH

PERFORM RECALL DOS15

REMOVED AND REPLACED SPPED CONTROL DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL 99815.

119418 RECALL 99S15 WPCC RECALL 99S15

RECALL PERFORMED RECALL 98815

RECALL 89S15 CRUISE CONTROL SWITCH

1 REPLACE DEACTIVATION SWITCH AS PER RECALL 69S

REPLACE SWITCH PER RECALL

1 COMPLETED RECALL AS OUTLINED

RECALL PERFORM RECALL

REPLACED SPEED CONTROL

SPD CTRL DEACTIVATION SWITCH REPLPERFORMED RECALL 99S16

99815 RECALL CK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL

88140 PERFORM RECALL 99816 SPEED CONTROL DEACTIVATION SWITCH

RECALL INSTALL SPEED CONTROL DEACTIVATION SWITCH PER RECALL

81791 RECALL WARR PERF RECALL

RECALL 99816 DEACTIVATION SWITCH

1 RECALL REPLACE CRUISE CONTROL DEACTIVATION SWITCH

COMPLETED 99815

PERFORM RECALL 99816

COMPLETED RECALL 99815 REPLACED DEACTIVATION SWITCH

39567 PERFORM RECALL

PERFORM RECALL INSTALL SWITCH

OPEN RECALL

PERFORMED RECAL

REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL

RECALL 98316

REPLACED SWITCH PER 99815B.5 9904

RECALL 09S15

99815

RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

PERFORMED RECALL

PERFORMED RECAL

INSTALL SWITCH

1 PERPORMED RECALL 99815.CRUISE DEACTIVATION SWITCH REPLACMENT

REPLACE SWITCH PER RECALL

REPLACED SPEED CONTROL REACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL

COMP.RECALL 99315 CORRE.REPLACE CONNECTOR AND DEACTIVATION SW.

APRX TME.0.5

1 COMPLETED RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER CAMPAIGN

RECALL COMPLETED

OPEN RECALL PERFORM RECALL

44109 DID RECALL 99816 LABOR OP.- 993159- 0.5 HRS. 12-20-99

PERFORM RECALL 99815

90615

PERFORM RECALL

RECALL INSTALLED NEW SWITCH AND HARNESS CONNECTOR AS PER RECALL.

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99815

PERFORMED RECALL PERFORMED RECAL

1 PERFORMED RECALL 99S15.

72864 REPLACED CRUISE CANCEL SWITCH AND CONNECTO

REPLACED DEACTIVATION SWITCH PER SAFETY RECALL 99816.

PERFORMED RECALL 09816B

1 REPLACED THE SPEED CONTROL DEACTIVATION SWITCH AS PER FORD RECALL

RECALL 98816 SPEED CONTROL. REPLACE SPEED CONTROL SWITCH AND CONTOR PER RECALL NOTE FOUND SWITCH AND WIRE CONT.AND WIRE BURN UP

RECALL 99815 COMPLETED RECALL 99815

RECALL 99815 SPIED CONTROL DEACTIVATION SWITCH REPLACEMENT

RECALL 993158 COMPLETED RECALL 993158 COMPLETED

DISTALLED KIT FOR CRUISE DEACTIVATION.

RECALL COMPLETE

99816 RECALL PERFORMED

PERFORM RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH.

99815 PERFORM RECALL 99815

PERFORMED RECALL 99S16

REPLACED SWITCH AND CONNECTOR.

CHECKED CASIS. INSTALLED HARDSHELLL CONNECTOR ANDSWITCH COMPLETE RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL RECALL 99816

2 998158 .5 ADMIN .1 REPLACED CRUISE DEACTIVATION SWITCH

RECALL 99815

RECALL 99815

SAFETY RECALL 99S15 INSPECT AND REPLACED CRUSE CONTROL DEACTIVATION SWITCH PER RECALL.

REPLACED DEACTIVATION SWITCH, PER RECALL.

1 CAMPAIGN COMPLETED.

TEST REPLACE SPEED CONTROL SWITCH

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR AS PER RECALL 98515.

RECALL 99315 SPEED CONTROL DEACTIVATION SWITCH INSTALLED

M815 99315 KH

99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR

PER RECALL REPLACE SWITCH

100943 09S15 WARR REPLACED SWITCH CONN

1 PERFORMED RECALL 99816

REPAIR PER 99615 RECALL

INSPETC AND REPLACE CRUISE CONTROLL DEACTIVATION SWITCH AS OUTLINED IN RECALL 96615 ALL OK TO RELEASE

99515 R&R BRAKE SWITCH & CONNECTOR

REPAIR AS PER RECALL DOS16.

1 COMPLETE ADMIN

117965 REPLACED CRUISE SITCH AND CONECTOR

988168.5.1 REPLACED DEACTIVATION SWITCH AND HARDSHELL CONNECTOR, PER RECALL INSTRUCTIONS

1 AS PER RECALL

RECALL INSTALL SWITCH AND HARD SHELL
PER NOTICE PERFORM RECALL

78978 REPL SPEED CONTROL SW RECALL

108061 REPLICAUISE DEACTIVATION SWITCH, DO TO 198615

89S16 REPLACE SPEEK CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

PEROFRMED RECALL 99818B.

REPLACE SWITCH PER RECALL

COMPLETED RECALL 99815 - REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR998150.5+.1

60815 COMPLETED

75403 PERFORM RECALL 99515 AND REPLACE DEACTIVATOR SWITCH FOR SPIEED CONTROL -

RECALL

RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER REGALL 98S15

99815 REPLACED SWITCH AND CONNECTOR

M-O 108588. R&R DEACTIVATION SWITCHLREWIRE HARD SHELL AS PER 99915.

COMPLETED CAMPAIGN COMPLETED OF 99815B

99815 RECALL

99815 RECALL COMPLETED

9982-825 11956

```
84303 DID RECAL 99815E 0.5 HRS
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99815
                  REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL
99815
PERFORM CAMPAIGN 99815 COMPLETE
                      99815 INSTALL DEACTIVATION BRACKET
CRUISE SWITCH
REPLICAE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99815
RECALL COMPLETED
100303 99815 W REPLACED SWITCH AND CONNECTOR, 1422.
COMPLETED RECALL
SPEED CONTROL DEACT SWITCH PERFORM 99816
RECALL COMPLETE
AE RECALL 90815 INSTALL SWITCH PER RECALL
1 PERFORMED RECALL 199815
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815
                    RECALL
RECALL
99615 COMPLETED
99$15 SWITCH REPLACED
                        99615 REPLACE SPEED CONTROL DEACTIVATION SW & HARD SHELL CONNECTO
PERFORM RECALL
CRUISE CABLE RECALL
                         99815 REPLACE CRUISE DEACTIVATION BRACKET
RECALL
COMPLETED RECALL AS NEEDED
RECALL 99515
RECALL 99815 REPLACED SWITCH AND CONNECTOR AS PER RECALL 99815
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL INSTRUCTIONS
REPAIR AS PER RECALL 99815
REPLACED DEACTIVATOR SWITCH PER RECALL 99315
REPLACE CRUISE DE-ACTIVATION SWITCH PER RECALL ISSSS
                     COMPLETE RECALL 99816
RECALL 99315
                  98$15 PREFORM RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION SWI
199816
100980 REPLACED CRUISE DEACTIVATION SWITCH AND CONN.
COMPLETE RECALL 99815
SWITCH MAY DEVELOP A RESISTIVE SHORT IN THE ELECTRICAL CRIT THAT MAY RESULT IN AN UNDERHOOD FIRE, REPLACE SPEED CONTROL DEACTIVATION SWIT
1 INSTALLED CRUISE CONTROL DEACTAVATION SWITCH
REPLACE DEACTIVATION SWITCH PER RECALL
```

157478 PERFORMED RECALL 99815 REMOVED AND REPLACED SPEED CONTROL CUTOFF SWITCH AND REPAIRED WIRE CONNECTOR.

2002-023 11007

RECALL

RECALL 99615

PERFORMED RECALL

99815 REPLACED SWITCH AND CONNECTOR.

REPLACE CRUSSE CONTROL DEACTIVATION SWITCH PER RECALL 99815

99815 RECALL

INSTALL SWITCH AND CONNECTOR AS PER RECALL

. -

CORRE: PERFORME RECALL

```
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH
52036 REPLACE SPEED CONTROL SWITCH
COMPL: PERFORM RECALL 98815, SPEED CONRTROL SWITCH.
                                                            CAUSE: SPEED CONTROL SWITCH
RECALL
                   RECALL
1 REPLACE CRUISE DEACT.SWITCH AS PER RECALL.
PERFORMED RECALL
RECALL 99815
RECALL
                   REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL
109649 REPLACE SWITCH AND CONNECTOR PER RECALL.
70000 INSPECT, REMOVE AND REPLACE BRAKE DEACTIVATION SWITCH.
TESTED FOUND SERVO BAD PART ONLY NO LABOR
COMPLETED 99815
RECALL.
                   REPLACED BRAKE SW AND CONNECTOR HAS PER RECALL 99815.
OPEN RECALL
                      PERFORM RECALL
28257 RECALL 98815B .5HR.L PERFORM RECALL
RECALL
                   REPLACE SWITCH PER RECALL 99S15
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
RECALL INSTALLED CRUISE CONTROL DEACTIVATION SWITCH AND HARD SHELL.
INSTALLED SWITCH BRAKE
REPLACE CRUSSE DEACTIVATION SWITCH AS PER RECALL INSTRUCTIONS RECALL COMPLETED
67623 REPLACED DEACTVATION SWITCH PER RECALL #99615
REPL SWITCH PER RECALL
89315
                  RECALL COMPLETE
137955 SAME PERFORM RECALL 99815 7166 REPLACE DEACTIVATION SWITCH
REPLACE SWITCH AND CONNECTOR
1 PERFORM RECALL 99S15, INSTALL NEW CRUSSE DEACTIVATION SWITCH, RETEST CK.
REPLACED DEACTIVATION SWITCH PER RECALL 90S16
139636 RECALL REPLACE SWITCH & CONNECTOR.
RECALL 99815
```

FRECALL REPLACE CRUSE CONTRIOL CUTOFF SWITCH PER RECALL
RECALL NOTICE RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED
. 98815 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL
REPLACE CRUSE DEACT. SWITCH PERCALL
98815 REPLACED SWITCH AND CONNECTOR
REPLACED CRUISE DEACTIVATION SWITCH PER RECALL 99815
RECALL 99615, REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL PERFORM RECALL PER PROGRAM 99815, DEAC SWITCH
REPAIR AS PER RECALL
REPLACE CRUSE BRAKE SWITCH
98815
PER RECALL REPLACE SWITCH

COSTI C79-200E

RECALL PONE REPLACED SWITCH & CONN
RECALL DONE REPLACED SWITCH ASSY.

1 INSTALL SPEED CONTROL MODIFICATIONS AS PER RECALL

50578 99\$15B 0.5

PER NOTIFICATION RECALL 98815 REPLACED DEACTIVATION SWITCH AND CONNECTOR PER RECALL 99815 INSTRUCTIONS PERFORMED RECALL 99815 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR

RECALL 99S15

REPLACED DEACTIVATION SWITCH & HARDSHELL PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

135777 REPLACE SPEED CONTROL DEACT.SWITCH AS PER RECAL L 98515;895158-5; .5 FOR TECH 158

118566 99S15 RECALL 99S16 REPLACE DEACTIVATOR, SWITCH

99616

89815

99815 - SPEED CONTROL 99815 - REPLACE SPEED CONTROL SWITCH AND CONNECTOR

SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99815.

REPLACE SPEED CONTROL DEACTIVATION SWITCH.

RECALL 99815- REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

99815 RECALL

REPLACE CRUISE CONTROL DEACTIVATION SWITCH

INSTALLED KIT

99815 RECALL PREFORMED

99815 RECALL

99815 REPLACE SPEED CONTROL SWITCH PER RECALL

INSTALLED SWITCH PER RECALL

95388 RECALL 993158 0.5 REPLACE CRUISE CONTROL SWITCH.

SPD CTRL DEACTIVATION SW REPLCMINTPERFORMED RECALL 99815

COMPLETED RECALL 99316

PERFORMED RECALL AS PER 99815

99815 RECALL

99815 REPAIRED AS PER RECALL

REPLACED DEACTIVATION SWITCH

INSPECT AND REP DEACTIVATION SWITCH AND CONNIPER RECALL

99815 99815 RECALL

80513 W PERFORM RECALL 98515 INSTALL DEACTIVATION SWITCH ON SPEED CONTROL

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 89S15

RECALL

PERFORMED RECALL REPLACED SWITCH AND CONNECTOR

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 88S15

PERFORMED RECALL 99816, SPEED CONTROL

PERFORM RECALL REPL DEACTUATOR SWITCH

99815 99815 REPLACED SPEED CONTROL DEACTIVATIO

99815 RAR SWITCH

PER NOTIFICATION RECALL 99816 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 89816 RECALL INSTRUCTIONS REPLACE DEACTIVATOR SWITCH PER RECALL. WAITING

1 REPLACED SPEED CONTROL DEACTIVATION SWITCH ASSEMBLY, REPLACE CONNECTOR, CHECK NORMAL OPERATION, 68758 (L5 REPLACED SPEED CONTROL SWITCH RECALL 88615

RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL PERFORMED RECALL PERFORM RECALL

RECALL REPLICACISE CONMITTAL DEACTIVATION SWITCH
84337 79 PERFORM 90815 R R SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR ROAD TEST
38151 PREFORMED RECALL 99815
110873 RECALL DONE RECALL 99815 TECH 538
REPLACE CRUSE CONTROL CONECTOR AND SWITCH

1 PERFORM RECALL PER INSTRUCTIONS

99815 . 99815

PERFORMED RECALL

99918

99**\$**16

RECALL 99315

PREFORMED RECALL 89815

RECALL 99815

99815

99615

REPLACE SPEED CONTROL PER RECALL 41812 SAME PERFORM RECALL 99818 7186 REPLACED SWITCH

PERFORM RECALL
PERFORMED RECALL
REPAIR AS PER RECALL

98\$15 PBS15 REPLACE DEACTIVATION SWITCH

OPEN RECALL PERFORMED RECALL 99815 COMPLETED

99815B INSTALLED SPEED CONTROL SENSOR AS PER RECALL 99815

RECALL RECALL

89515 REPL SPEED CONTROL DEACTIVATION SWITCH

1 PERFORM RECALL

PERFORMED RECALL#998158. 99816 99815

REPAIR AS PER RECALL #89815

REPLACE SWITCH

REPL SWITCH REPAIR AS PER RECALL #60815

REPLACE BRAKÉ SWITCH AS PER RECALL - DÓNÉ

COMPLETED RECALL

REPLACE SWITCH PER RECALL
RECALL RECALL

80544 DID RECALL 99-8-15 REPLACED SPEED CONTROL SWITCH

REPLACED CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER RECALL

REPLACED CRUISE CONTROL SWITCH

1 COMPLETED

The state of the s

```
188921 438 .5 PERFORMED RECALL 90S15
99815 RECALL
                     99615 RECALL
REPL SWITCH REPAIR AS PER RECALL #90815
COMPLETED CAMPAIGN COMPLETED OF 89$15B
REPLACE CRUSE SWITCH 1
99515
                  99816 PERFORMED INSTALLING CRUISE CONTROL PER RECALL
REPLACE SPEED CONTROL SWITCH
RECALL INSTALL NEW DEACTIVATION SWITCH PER RECALL ROAD TEST
99G15
                  REPL SWITCH
REPLACED SPEED CONTROL SWITCH - REPLACE CONNECT
COMPLETED RECALL 89845
RECALL98915
                     99315 REAPIR AS PER RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR SERVICE REQUESTED COMPLETED
85148 W DID RECALL 89815
RECALL 99815
REPL SWITCH CONN PER RECALL
REMOVE AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 1995 15 ROAD TEST
128394 COMPLETED CRUISE CONTROL RECALL
REPLACE CRUISE CONTROL CONNECTOR AND SWITCH
PERFORMD RECALL
CHECKED CASIS. INSTALLED BRAKE SWITCH
REPLACE CRUISE DEACTIVATION SWITCH PREVIOUSLY REMOVED WIRING
1 PERFORMED RECALL
99815
                  99815
OWNER NOTIFICATION
                         CRUSE CONTROL RECALL 69815
REPLACED BRAKE PRESURE SWITCH AND CONNECTOR AS PER RECALL
RÉPLACE BRAKE SWITCH AS PER RECALL.
INSTALL DEACTIVATION SWITCH
PERFORM SAFETY RECALL 98815 PERFORM SAFETY RECALL 98815
1 PERFRAGED RECALL DEACTIVATION SWITCH REPLACMEN
REPLACED SPEED CONTROL SENSOR PER RECALL
RECALL 99815 PEFORMED RECALL 99315 COMPLETED
76671 0.5 REPLACED SPEED CONTROL DEACTIVATION, SWITCH RECALL 99815
DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
SPEED CONTROL DEACTIVATION SWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 98815.
SOME SPEED CONTROL DEACTIVATION SWITCHES ON THE AFFECTED VEHICLES MAY DEVELOP A RESISTIVE SHORT COMPLETED RECALL AS OUTLINED BY FORD I
REPLACED DEACTIVATION SWITCH AS PER RECALL
1 Peraroravieo Recall
RECALL
                   99S16 RECALL COMPLETED REPLACE CRUISE DEACTIVATION SWITCH
```

COMPLETE RECALL

PERFORM RECALL 99815

RECALL COMPLETED INSTALLED SWITCH 998158 FOR .5 AND .1 FOR ADMIN, TIME

```
INSTALLED SPEED CONTROL SWITCH PER RECALL
RECALL
                   99815 REPLACE SWITCH
COMPLETED RECALL 1995 (5)
REPLACE SWITCH AND CONNECTOR PER RECALL
69820 REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 99815
PERFORMED RECALL
                 COMPLETED
ABG
PERFORM RECALL 99815
                  REPLACE DEACTIVATION SWITCH
REPLACE SPEED CONTROL SWITCH AS PER 99815
30357 PERFORM 98915
81600 PERFORMED RECALL 98515
PERFORMED 98 S 15 SWITCH RECALL.
SUPPLEMENT #1 5-99 INSPECTION OPERATION ADDED REPLACE SCHED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
RECALL REPLACED SWITCH
RECALL
                   98815
RIAND RISPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99315
REPLACED SPEED DEACTIVATION SWITCH AS PER RECALL
80439 REPL SWITCH PER RECALL 99815
                  99815 RECALL
99615
99815 RECALL
                     REPLACED DEACTIVATION SWITCH
INSTALL NEW CUT OFF SWITCH AND HARDSHELL CONNECTOR.
60067 RECALL WES PERFORMED RECALL 99815
PERFORM RECALL
90816
                  DD616 RECALL
1 REPLACED DEACTIVATION SWITCH NO CONN.
PERFORMED RECALL
REPLACE SWITCH
REPLACED DEACTIVATION SWITCH AND HARDSHELL CONNECTOR PER RECALL INSTRUCTIONS.
65041 RECALL 99316B .5, ADMIN .1 REPLACED DEACTIVATION SWITCH PER RECALL.
87441 RECALL RECALL 99815
SPEED CONTROL DEACTIVATION SWITCH, REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 88815.
RECALL 99815
                     COMPLETED RECALL 96615
PERFORM RECALL PER MANUFACTURER, PERFORMED RECAL
55277 PERFORM RECALL, REPLACE SWITCH KIT 99S15B .5
REPLACE SWITCH.
SAFETY RECALL 99815 INSPECT AND REPLACED CRUISE CONTRIOL DEACTIVATION SWITCH PER RECALL.
99815 REPLACED SWITCH AND CONNECTOR
REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL
92158 R+R BRAKE SWITCH
RECALLA COMPLETED
99815
                 99816 RECALL
PERFIRM RECALL
```

382-825 11962

42222 RECALL 0.5 INSTALLED NEW BRAKE PRESSURE SWITCH AND CONNECTOR 998158

PERFORM 99815 RECALL, REPLACE SPEED CONTROL DEACTIVATION. SWITCH AND HARD SHELL CONNECTOR
0 98815 PROGRAM
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR — 668158 .5
98815 98815
RECALL COMPLETE
PERFORM RECALL. REPLACE SWITCH
RAN CRUSSE CONTROL SWITCH AND CONNECTOR PER RECALL 99815.
FACTORY RECALL COMPLETED
90815 RECALL PERFORME

REPLACE DEACTIVATION SWITCH AS PER RECALL
RECALL PREFORMED RECALL 98815
RECALL 99815 RECALL
INSTALLED RECALL KIT AS PER RECALL
INSTALL SPEED CONTROL SWITCH
INSTALL SPEED CONTROL SWITCH
INSTALL WARR REPLACE CRUISE CONTROL DEACTIVATION SWITCH

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 99815

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
RECALL PERFORMED PER FORD RECOMMENDATIONS
PERFORM RECALL 00316
INSTALLED SPEED CONTROL CABLE PER RECALL 999188
RECALL 00816
PERFORM RECALL PER MANUFACTURER R-R SWITCH

REPLACE SPEED CONTROL SWITCH AND CONNECTOR

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR RECALL PERFORM 99816

MECATT LENLORING 899.

AS PER RECALL.

99816 RECALL FOR SPEED CONTROL DEACTIVATION SWITCH
NOTE:

CUSTOMER DECLINED ALL MAINTENANCE WORK
REPLACE ACTUATOR ASSY AS INSTRUCTED MILEAGE WAS WRONG AT LAST REPAIR TYPE ERROR
99815

REPLACE CRUISE CONTROL SWITCH PER RECALL
REPLACED CRUISE CONTROL SWITCH AND CONNECTOR AS PER RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH

COMPLETED OF 898 (SE CAMPAIGN COMPLETED SPEED CONTROL DEACTIVATION SWITCH

RECALL PERFORMED

SHORT MAY DIASABLE SPEED CONTROL OR CAUSE BRAKE LIGHT FUSE TO OPEN DISCONNECT CONNECTOR FROM CRUISE DEACTIVATION SWITCH & PROTE CT EL REPLACED DEACTIVATION SWITCH AND CONNECTOR AS PER RECALL

RECALL 99316 CRUISE CONTROL REPLACE CRUISE CONTROL SWITCH PER RECALL RECK OK

CAMPAIGN COMPLETED

SPEED CONTROL SWITCH 99815 RECALL

PERFORMED RECALL 99815

REPLACED DEACTIVATION SWITCH.

E002-625 11963

```
PER RECALL INSTRUCTIONS REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR PER 99816 RECALL INSTRUCTIONS
PERFORMED RECALL
99815 RECALL
                     88S15 REPLACE SPEED CONTROL DEACTIVATION SWITCH
               88$15 COMPLETED
REPLACE SWITCH
RECALL
107771 AS PER RECALL
1 REPLACED SWITCH AND CONNECTOR FOR BRAKE SWITC
RECALL 89816
RECALL COMPLETED
92437 RECALL 99915 WARR INSTALL SWITCH
PERFORMED RECALL
90477 79 PERFORM 99816 R.R. SPEED CONTROL. DEACTIVATION SWITCH AND CONNRECTOR ROAD TEST
RECALL99S15
VEHICLE HAS AN OPEN RECALL PERFORM RECALL
REPLACED CONNECTOR AND DEACTIVATION SWITCH RECALL 99815
88865 99S16B 0.6- ADMIN O.1 RECALL
159140 42 5 REPLACE SPEED CONTROL DEACTIVATION SWITCH AND CONNECTOR.
RECALL 99815 SPEED CONTROL DEACTIVATION SWITCH
REPAIR PER RECALL 1 T
DEACTIVATION SWITCH AND CONNECTOR REPLACE CRUISE DEACTIVATION SWITCH AND HARD SHELL CONNECTOR
49224 PERFORM 99815
RECALL 99815 REPLACED DEACTIVATION SWITCH AS PER RECALL 99815
129180 PERFORMED RECALL 90915
REPLACED SPEED CONTROL SWITCH
1 PERFORMED RECALL 90315 SPEED CONTROL DEACTIVATION SWITCH.
REPLACE SWITCH PER RECALL
RÉPLACED SPEED CONTROL SWITCH AS PER RECALL
1 PERFORMED RECALL 99315
99516
                 99815
71551 REPLACE SW. CONNECTOR
                     99316 RECALL PREFORMED
INSTALLED KIT
PERFORMED RECALL 99816
COMPLETED 96815 RECALL
99815
                 99815
PERFORM RECALL 90515, INTERIM OR PERMANENT AFTER MID JUNE 89 ....
RECALL
              RC 99815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE
1 RECALL COMPLETE
REPLACE SPEED CONTROL DEACTIVATION SWITCH
RECALL
                   PERFORMED RECAL
RECALLR EPAIR
REPLACE CRUISE DEACTIVATION SWITCH AND BLEED BRAKES
MANUFACTURE REQUIREMENT REPLACED CRUISE SWITCH PER RECALL
REPLACED SPEED DEACTIVATION SWITCH
RECALL NOTICE REGALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED.
```

HEATT 079-7045

```
REPLACED CRUISE CONTROL DEACTIVATION PER OWNER NOTIFICATION.
99515B RECALL
                      PERFORM RECALL 99815
RECALL SPEED CONTROL
                           PERFORMED RECALL-REPLACED SWITCH AND CONNECTOR
OPEN RECALL
                     PERFORMED RECAL
99815 RECALL
                     99815 RECALL COMPLETE
REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER 99615.
112105 OPEN RECALL 90815 REPLACE SWITCH DONE
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR
PERFORM RECALL 99S15 CRUISE DEACTIVATION SWITCH
81295 RECALL WR RECALL 90816
REPLACE DEACTIVATION SWITCH
72886 RECALL #69615 PERFROM RECALL #89615 REPLACING SPEED CONTROL BRAKE PRESSURE DEATIVATION SWITCH "9 WP
REPLACED SWITCH AND CONNECTOR BLEED BRAKES
RECALL 89915
                     96X15
RECALL
                   90816 COMPLETED
RECALL REPLACE SWITCH AND CONNECTOR.
99815 COMPLETED
                       99815 COMPLETED
RECALL 09815
                     REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO
157399 REPLACED CRUISE CONTROL DEACTIVATION SWITCH PER RECALL 98815 TECH 8314
50063 RECALL WP40 PERFORMED 99815 RECALL. REPLACED SPEED CONTROL DEACTIVATION SWITCH.
RECALL SPEED CONTROL SWITCH REPLACED SWITCH AND CONNECTOR PER RECALL
REPAIR AS PER RECALL 99815.
99816
                 99815 COMPLETED
89463 WT RECALL 69815
57649 RECALL 998158 0.3L PERFROMED RECALL
PERFORM RECALL
PERFORM 99815
RECALL
                   INSTALLED SPEED CONTROL DEATIVATION SWITCH AS PER RECALL
PERFORMED RECALL 99815
REMOVED AND REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER FACTORY REP.
68853 99815 RECALL 9998158 .5 .5 TK 118 PERFORMED 99818 SPEED CONTROLL RECALL OP CODE 42
99815
                 99815
96815
                 REPLACED SPEED CONTROL DEACTIVATION SWITCH
SPEED CONTROL SWITCH
                           99S15 RECALL
122004 RECALL 99315 WR PERFORM RECALL 99315 SPEED CONTROL
998159
                  99815 RECALL COMPLETED
                         RENEW DEACTIVATION SWITCH, RECALL PERFORMED.
PERFRONIED RECALL
99815 RECALL
REPLACED SWITCH
PERFORMED RECALL 99815 ON THE CRUISE CONTROL
INSTALLED DEACTIVATEDED SWITCH PER RECALL
REPLACED DEACTIVATION SWITCH
COMPLETED RECALL PER INSTRUCTIONS
```

104584 DONE RECALL OPER#96815B 0.5 HR****

89315 RECALL

99\$15 RECALL

RECALL 99815 REPLACED SWITCH

88883 W REPLACE CRUSE DEACTIVATION SWITCH

89815 RECALL 99815 REPAIRED AS PER RECALL

PERFORMED RECALL 90915

REPLACE CRUISE SWITCH

REPLACE BRAKE LIGHT SWITCH AS PER RECALL

TECHNICIAN COMPLETED RECALL 99815 SPEED CONTROL DEACTIVATION SWITCH

1 REPL DEACTIVATION SWITCH

RECALL COMPLETED

RECALL 99815 INSTALLED SWITCH

DDDME - MILEAGE IS CORRECT - PREVIOUS RO WRONG

COMPLETED RECALL

PERFORMED RECALL 96815

99915 REPLACED DEACTIVATION SWITCH RECALL 99815 COMPLETED

RECALL PERFORMED RECALL 98515
REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPL SWITCH PER RECALL 99815

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CON NECTOR.

1 CK REPLACED SWITCH ALSO BLEED BRAKES

REPLACED CRUISE SWITCH
PERFORM RECALL 88815
RAR CRUISE DEACTIVATION SWITCH
COMPLETED RECALL ON CRUISE SWITCH
INSTALLER RECALL KIT

REPL SWITCH PER RECALL 98315

REPLACE SPEED CONTROL DEACTIVATION SWITCH

98815 REPLIDEACTIVATION SWITCH 99S15 REPLACED SPEED CONTROL DEACTIVATION SWITCH AND BLED SYSTEM

RPLACED CRUISE CONTROL DEACTIVATION SWITCH

POS15 RECALL RECALL POS15 CK AND REPLACE SPEED CONTRICUED CONTRICUED SWITCH AND HARD SHELL REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTO

RECALL

99816 RECALL COMPLETED REPLACE CRUISE SWITCH

METT 000-1100

```
RECALL COMPLETE
REPLACED SPEED CONTROL DE-ACTIVATION SWITCH PER 1993 15 RECALL
1 REPLACED THE SWITCH PER RECALL 86915
90S15
                  PERFORM RECALL 99815
RECALL 19915 RÉPLACED CRUISE CONTROL SWITCH PER RECALL
PERFORM CRUISE RECALL, REPLACE DEACTIVATION SWITCH AND CONNECTOR ROADTEST
                  99815 REPLACE 8PEED CONTROL SWITCH AND HARD SHELL CONNECTOR
99816
99815 RECALL
                     99815 COMPLETED RECALL
INSPECT AND REPLACE CRUISE CONTROL DEACTIVATION SWITCH AND CONNECTOR PER RECALL
SPEED CONTROL SWITCH
                           99815 RECALL
99815 RECALL
SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 89815
SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR, PER RECALL 98816.
RECALL 99S15 REQUIRED. REPLERAKE DEACTIVATOR SWITCH PER RECALL 99S15.
                   REPLACE DEACT SWITCH AND HARD SHELL CONNECTOR
RECALL
REPLACED PRESSURE SWITCH AND CONNECTOR AS PER RECALL.
                  CK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL.
RECALL COMPLETE
RECALL 00815
                     COMPLETED RECAL
RECALL
                   REPLACED DEACTIVATION SWITCH PER RECALL
REPLACED SPEED CONTROL EEACTIVATION SWITCH AND HARD SHELL- CONNECTOR, PER 89$15
SPEED ONTRUDEACTIVEN SWITCH RIPLOMITPERF SAFETY RECALL 99815
99S15 RECALL
                     CK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL
98815 RECALL
                     CK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL
REPLACE AS PER RECALL 99815
116965 REPLACE DE ACTIVATION SWITCH PER RECALL
1 REPLACED CRUISE CONTROL SWITCH PER RECALL 99815.
                     RECALL 89615 REPLACED SPEED CONTROL DEACTIVATION SWITCH
RECALL 99815
43194 PERF RECALL
RECALL COMPLETE
RECALL R-R DEAC SW, INSTALLED NEW, R-R CONNECTOR INSTALLED NEW, RECKD CK.
98915
```

PERFORMED RECALL
PERFORMED RECALL CAMPAIGN
REGALL PERFORMED
REPLACE SPEED CONTROL DEACTIVATION SWITCH
1 PERFORMED RECALL

61470 REPLACED SPEED CONTROL SWITCH PER RECALL 99616
1 REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99615 RECALL SPEED CONTROL DEACTIVATION SWITCH 83199 PERFORMED RECALL 99515
PERFORMED RECALL

A SHORT IN THE SPEED CONTROL SWITH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUISE ALSO A FIRE COULD DEVOPE, REPLACE SPEED OF

```
PERCHMINED THE RECALL 199815
RÉPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.
                   REPLACE SWITCH AND CONNECTOR PER RECALL
REPLACE SPEED CONTROL SWITCH
RECALL SPEED CONTROL SWITCH REPLACED SWITCH AND CONECTOR PER RECALL
PERFORMED RECALL 99815
RECALL
                  REPLACE SWITCH AND CONNECTOR
PERFORM RECALL 1998 15 REPLACE SW AND CONNECTOR
64644 RECALL DID RECALL REPLACED SWITCH AND WIRES TECH 10
REPLACED SPEED CONTROL SWITCH PER RECALL 90S15
PERFORMED RECALL 99315
1 RECALL COMPLETED, NO PURTHER CUSTOMER ACTION REQUIRED
REPLACE SPEED CONTROL SWITCH
REPLEKSW & CONN
. DONE 99815
REPLACE CRUISE CONTROL DEACTIVATION SWITCH PERFORM RECALL
PERFORMED RECALL 88S15 SPEED CONTROL DEACTIVATION SWITCH
REPLACE SWITCH PER RECALL
RECALL 20S15
                     PERFORM RECALL
30805 RECALL WARR REPLACE CRUISE DEACTIVATION. SWITCH AND HARD SHELL CONNECTOR.
16289 99615 42 .5 REPLACED SWITCH AND CONNECTOR.
PERFORM RECALL
RECALL
                   RECALL
INSTALLED RECALL 99315, 4883
RECALL
                  98515
RECALL 99815
RECALL#80815B
                      PERFORMED RECALL #99815
RECALL COMPLETE
PERFORMED RECALL
                  99515
RECALL.
PER PORD
                INSTALL SWITCH
MODIFY PER RECALL 99816
PERFORMED THE RECALL 98815
REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR OPERATION 98515B TIME .5 PERFORM RECALL 98515 AS PER INSTRUCTIONS
REPLACED SWITCH
5R229 W R AND R SPEED CONTROL DEACTIVATION SWIT
RECALL ON SWITCH REPLACED RECALL 99815 CRUISE SWITCH
```

B162-625 11844

99915

PERFORM RECALL 89815 PERFORMED RECALL

COMPLETED RECALL

RECALL 99815

89915 RECALL

RECALL 99S15

REPLACE SPEED CONTROL DEACTIVATION SWITCH

REPLACE DEACTIVATION SWITCH AS PER RECALL REPLACED BRAKE DEACTIVATION SWITCH AS PER RECALL

```
RECALL COMPLETED
REPL SWITCH PER RECALL
85667 RECALL 996158 (LSHRS REPLACE SWITCH AND CONICTOR TK372
158588 REPLEW AND CONNECTOR
RECALL COMPLETED
PERFORMED RECALL
RECALL
                   INSTALL BRAKE SWITCH
97352 RECALL DONE RECALL 99616 TECH 538
SPEED CONTROL SWITCH
                           99815 RECALL
PERFORM RECALL 199815
PEROFRMED RECALL 98615 -- CHECK AND REPLACED CRUISE CONTROL CABLE AND RECHECK OK
SAFETY RECALL
                      99815 -REPLACE 8PEED CONTROL DEACTIVATION SWITCH
PERFORMED RECALL 99315
113632 RECALL 99816 PERFORMED RECALL 98815.
PERF RECALL 98615
PERFORM RECALL
REPLACE SPEED CONTROL DEACTIVATION SWITCH
1 PERFORM RECALL
55131 00915 .5 REPLACE SWITCH AND CONNECTOR PER RECALL
INSTALL SPEED CONTROL SWITCH
1 PERFORM RECALL PER INSTRUCTIONS
PERFORMED REGALL SPEED CONTROL DEACTIVATION SWIT
PERFORMED RECALL BOS15
PERFORM SAFETY RECALL
                           PERFORM SAFETY RECALL
REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL.
                   PERFORM RECALL
72496 INSTALLED BRAKE SWITCH AS PER RECALL.
RECALL 89915

    MODIFY PER RECALL 00015 REPLACED DEACTIVATION SWITCH.

112254 42 WP49 COMPLETE RECALL 99815 REPLACE CRUISE CONTROL SWITCH AND CONNECTOR.
REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 99815
37917 79 PERFORM 99815 R R SPEED CONTROL DEACTIVATION SWITCH AND CONECTOR ROAD TEST JH
PERFORM RECALL 99815
RECALL COMPLETED
89113 INSTALLED CRUISE RECALL
                   REPLACED CRUISE CONTROL DEAC SWITCH
RECALL
RECALL
                   PERFORM RECALL
REPLACED DEACTWATION SWITCH
REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99915
                   RECALL COMPLETE
RECALL
DONE AS PER INSTRUCTIONS
REPLACE BRAKE KIT PËR RECALL
```

PERFORMED RECALL 99S15-INSPECTED AND REPLACED SPEED CONTROL DISACTIVATION SWITCH

booffles OLD1

51324 DID 99815 TECH 3213

REPLACE DEACTIVATION SWITCH AS PER 99816 SPEED CONTROL DEACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 99815. RECALL RECALL PERFORMED OPEN RECALL 38798 RECALL WISTE REPLACE SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL 98815 83216 AS PER RECALL 1 COMPLETED RECALL

REPLACED SWITCH PER RECALL RECALL COMPLETED INSTALL SWITCH PER RECALL 99815 A99 REPLACE SPEED CONTROL DEACTIVATION SWITCH RPL SW PER RECALL 00816 RECALL COMPLETE

RECALL SPEED CONTROL SWITCH INSTALL DEACTIVATION SWITCH SPEED CONTROL DÉACTIVATION SWITCH. REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR. PER RECALL 00816. 80524 RECALL 908158 0.5 HRS REPLACE SWITCH AND CONNECTOR TK 372. REPLACE SPEED CONTROL SWITCH OPEN RECALL PERFORM RECALL RECALL 99615 INSTALLED SWITCH PERFORM RECALL 99815 RECALL COMPLETE PERFORMED RECALL 1998 15-INSTALL SWITCH

1 REPLICAE SWITCH AND HARDSHELL PER RECALL 98\$15

RECALL 98816 INSTALL SWITCH

RECALL 99815

REPLACED SWITCH & CONNECTOR AS PER RECALL

PERFORMED RECALL 98615-INSTALL SWITCH

PERFORM SAFETYR EGALL

105/24 RECALL BIS158 0.5, ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL

COMPLETE RECALL

RPLC CRUISE DEACTIVATION SWITCH & CONNECTOR PER 99815

99815 RECALL CK AND REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL.

54749 99815 WARR REPLACED SWITCH CONN.

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR.

55905 REPAIR AS PER RECALL 99816

PERFORM RECALL

RECALL PERFORMED RECALL 99815

OPEN RECALL COMPLETED OPEN RECALL

INSTALLED KIT 99815 RECALL PREFORMED

99815 RECALL

99815 REPLACE SPEED CONTROL DEACTIVATION SWITCH

RECALL

PERFORM RECALL 99816 DEACTIVATION SWITCH

RECALL

COMPLETED

OPEN RECALL

PERFORM RECALL

1 PERFORMED RECALL

REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD-SHELL CONNECTOR AS PER RECALL

PERFORMED RECALL

17991 RECALL 99815 WARR, RECALL 88615 PERFORMED.

101776 INSTALLED RECALL

RECALL COMPLETE

PERFORM RECALL

PERFORM RECALL.....

INSTALL CRUSIE CONTROL DEACTIVATION SWITCH 988158 0.6

RECALL

REPLACED DEACTIVATION SWITCH AS PER RECALL

FACTORY RECALL COMPLETED RECALL

1 RECALL COMPLETED, NO FURTHER CUSTOMER ACTION REQUIRED

96977 DONE RECALL OPER# 999168 D5 HR

D0815

99816 RECALL

COMPLETE RECALL #99816 REPLACE SPEED CONTROL DEACTIVATION SWITCH.

FACTORY RECALL COMPLETED RECALL

REPLACE SPEED CONTROL SWITCH AS PER RECALL

INSTALLED SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL PER 99 S 16 RECALL.

RECALL 90815 REPLACED DEACTIVATION SWITCH FOR SPEED CONTROL.

PERFORM RECALL PER INST

PERFORMED CAMPAIGN PERFORMED CAMPAIGN INSTALLED SWITCH AND CONNECTOR

99815

99S15 REPLACED SWITCH & CONNECTOR

RECALL COMPLETED RECALL

PERFORMED RECALL

83307 REPAIR AS PER RECALL 99St5

70765 PERFORMED RECALL 98515.

RECALL RECALL 99815 SPEEDCONTROL DEACTIVATION

REPLACED SPEED CONTROL DEACTIVATION SWITCH PER RECALL

RECALL 99S15 REPALCED THE SPEED CONCTROL DEACTIVATION SWITCH CONNECTOR

22801 W REPLACE SWITCH PER RECALL GA

PERFORMED RECALL PERFORMED RECAL

RECALL 99315 MIL 14089 DID RECALL 99816 REPLACE SWITCH & CONNECTOR

PERFORMED THE RECALL 99615

PERFORMED RECALL AS SPECIFIED BY FORD MOTOR COMPANY

CHECKED CASIS. REPLACED SWITCH AND CONNECTOR 101161 RECALL WARR INSTALL RECALL SWITCH

REPLACED CRUISE DEACTIVATION SWITCH

E982-625 1197

PERFORM RECALL 69816 CRUIS DEACTIVATION SWITCH 199315 COMPLETED

REMOVE TAPE AND SECURE LABOR OF 99815E 0.3 HR REPLACE SPEED CONTROL DEACTIVATION SWITCH LABOR OF 99915B .5 REMOVED TAPED AND SECURED SI

PERFORMED 98816 RECALL PERFORMED RECALL 90\$15

PERFOEMD THE RECALL 90816

REPLCE DEACTIVATION SWITCH AND HARNESS PER RECAL

1 REPLACED CRUISE CONTROL SWITCH.

RECALL COMPLETE

99615

REPLACED SWITCH PER RECALL

REPAIRED AS PER RECALL, REPLACED SWITCH & HARD SHELL CONNECTOR

89815 COMPLETED REPLACED SWITCH RECALL 99816 PERFORMED RECALL 99815 98411 RECALL REPLACE DEACTIVATION SWITCH

96615 99\$15 REPLACED DEACTIVATION SWITCH

998168 (J.S. TOTAL HRS (J.S. PERFORMED RECALL 99816, REPLACED DEACTIVATION SWITCH AND CONNECTOR.

99815 99315

PERFORM RECALL

REPALCE SWITCH

RECALL 99815

RECALL 69816 REPLACED SPEED CONTROL DEACTIVATION SWITCH

89815 99815

\$9565 99315 RECALL W PERFORM 99315 RECALL REPLACE SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

REPLACED CRUISE CONTROL DEACTIVATION SWITCH

SPEED CNTRL DEACTIVEN SWITCH RPLCMTPERF SAFETY RECALL \$9816.

REPLACED SWITCH AND CONNECTOR PER RECALL 99616 PERFORM SPEED CONTROL SAFETY RECALL AS INSTRUCTE

FMC RECALL 00815 INSTALL DEACTIVATION SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH

104860 RECALL 99815 PERFORMED RECALL 99915

99915 RECALL 99815 RECALL COMPLETED

PERFORMED RECALL 98819 INSTALLED DEACTIVATION SWITCH PER CAMPAIGN

RECALL PERFORMED

130600 REPLACED SWITCH AND HARNESS CONNECTOR 89815-TECH 542

PERFORM RECALL

REPLACE BRAKE KIT PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH.

PERFORM RECALL PER MANUFACTURER PERFORMED RECAL

REPLACED SWITCH PER RECALL

PERFORMED RECAL

DISTALLED SWITCH PER THE RECALL

COMPLETED RECALL 99815

RECALL

PERFORMED RECALL 99815

1 PERFORM RECALL PER INSTRUCTIONS

99\$15 RECALL: REPLACED SPEED CONTROL DEACTIVATION SWITCH.

PER NOTIFICATION 99815 RENEWED CRUISE CONTROL SWITCH PER RECALL INSTRUCTIONS

RECALL 99815B

RECALL 99516B

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR

89315

REPLACE SPEED CONTROL PER PROGRAM 90S18

92980 PERFORMED RECALL 99515 REMOVED AND REPLACED SPEED CONTROL DEACTIVATOR SWITCH, BLED BRAKES, TEST DRIVE OK.

99S15 RECAL REQUIRED 99815 RECALL PERFORMED

41611 TECH 166 PERFORMED RECALL 996158(0.5)

REPL VALVE

99615

60017 REPLACE DEACTIVATIN SWITCH

REPLACED CRUISE CONTROL DEACTIVATION SWITCH REPLACE CRUSS CONTROL DEACTIVATION SWITCH AND HARNESS PER RECALL 99S15 PERFORM RECALL 99815

99898 PERFORMED RECALL 99815 REPLACED SWITCH AND CONNECTOR. 89143 REPLACED SPEED CONTROL DEACTIVATION SWITC SPEED CNTRL DEACTYTN SWTCH RPLCMTPERF SAFETY RECALL 99815 PERFORMED RECALL 98815

99615 DONE REPLACE SPEED CONTROL SWITCH AND CONNECTOR.

99815 RECALL REQUIRED 99\$16 RECALL PERFORMED

DONE AS PER INSTRUCTIONS

RECALL CK AND REPLICE BK FLUID SW AND CONECTOR PER RECALL WE TECHNOL

99\$15 RECALL REQUIRED 99S15 RECALL PERFORMED

PERFORMED RECALL REPLACED SWITCH AND CONNECTOR

134324 DID 99815 TECH 3213 NOTE CAR IS LOW ON Q

RECALL BES15 COMPLETED 99815

REPLACED SWITCH

SPD CTRL DEACTIVATION SW REPLCMNTPERFORMED RECALL 90515

REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 90816

PERFORMED RECALL

PERFORMED 99915 CAMPAIGN

REMOVE AND REPLICE CRUISE CONTROL SWITCH PER RECALL 99815.

REPLACE SPEED CONTROL SWITCH PER RECALL 99815

COMPLETED RECALL PER INSTRUCTIONS

PERFORMED 99815 INSTALLED SWITCH AND NEW CONNECTOR -9982- B.5 PERFORMED RECALL 99815

1 PERFORMED RECALL

RNR DEACTIVATION SWITCH PERFORM RECALL 99315 PERFORM RECALL..... RC 99815 INSTALL CRUISE CONTROL DEACTIVATION SWITCH KIT & REWIRE CAMPAIGN COMPLETED RECALL RECALL RECALL RECALL RECALL 99315 61257 90815 REPLACE BRAKE SWITCH AND HARSHELL RECALL RECALL LEAKING REGULATOR REGULATOR ASSEMBLY - FUEL PRESSURE - REPLACE 13/17/1 RECALL 99815, REPLACED SWITCH, TECH 59/1 PERFORMED RECALL 99915 REPLACE DEACTIVATION SWITCHOOS15 RECALL 121601 99915B 0.5 ADMIN 0.1 21710 SAME PERFORM RECALL 99815 7165 RETEST OK 7156 RECALL 99815 INSTALL DEACTIVATION SWITCH FOR SPEED CONTROL DONE AS PER INSTRUCTIONS INSTALLED SWICH PER RECALL

A SHORT IN THE SPEED CONTROL SWITH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUISE, ALSO A FIRE COULD DEVOPE. REPLACE SPEED OF REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR AS PER RECALL.

REPLACED &PEED CONTROL DEACTIVATION SWITCH PER RECALL 09815

PERFORM 99815

PERFORMED 99S15 RECALL-REPLACED SPEED CONTROL DEACTIVATION SWITCH AND HARD SHELL CONNECTOR, RETEST

RECALL 993(5 DONE REPLACED SPEED CONTROL SWITCH AND CONNECTOR

1 PERFORMED RECALL 99-S-15

49883 SAME PERFORM RECALL 99815 7156

REPLACE SWITCH AND HARD SHELL

99815 RECALL 99815 RECALL PERFORMED

INSPECTION CHECKED FOR RECALL INSTALL SWITCH PER RECALL

REPLACED SPÉED CONTROL DÉACTIVATION SWITCH AND HARD SHELL PER RECALL 99315

REPLACED SPEED CONTROL DEACTIVATION SWITCH AS PER RECALL

88909 PERFORM RECALL 99S15 SPEED CONTROL DEACTIVATION SWITCH

PERFORMED RECALL

00815

70844 DID RECALL 99815B 0.8 HRS

REPLACED CRUZ CONTROL CABLE PER RECALL 88815

PER NOTIFICATION 90815 INSTALLED SPEED CONTROL DEACTIVATION SWITCH PER INSTRUCTIONS

COMPLETE RECALL

REPLACED DEACTIVATION SWITCH PER RECALL

99815 PERFORMED RECALL 99815, RAR SWITCH

PERFORM RECALL 99815 REPLACE SPEED CONTROL DEACTIVATION 6W ITCH PER RECALL 99815

PERFORMED RECALL PER INSTRUCTIONS, INSTALLSWITCH

RECALL 99815 99815 REPLACE SPPED CONTROL SWITCH

REPLACED BRAKE DE ACTIVATOR SWITCH AND CONNECTOR, PER 99815 AND BLEED BRAKES

4/811 C/0-70HD

REPLACED PRESSURE SWITCH AND CONNECTOR AS PER RECALL. 99816 99815 PERFORM RECALL 99815 RECALL

99815 COMPLETED RECALL

60801 PERFORM CRUISE CONTROL DEACTIVATION SWITCH RECAUL, REPLACE SWITCH.

REPLACED SPEED CONTROL D-SWITCH 99815

99815 RECALL

RECALL SPEED CONTROL SWITCH REPLACE DEACTIVATION SWITCH 78883 RÉPLACE SPÉED CONTROL DEACTIVATION SWITCH AND CONNECTOR.

99815 99815 PERFORM RECALL

CONCERN: RECALL 99\$15, CAUSE: SPEED CONTROL DEATMATION SWITCH, CORRE: PERFORME RECALL APROX TIME: 0.6 HRS COMPLETED RECALL .

105963 99615 RECALL W PERFORMED 99815 SPEED CONTROL DEACTIVATION SWITCH RECALL

PERFOEMD RECASIL 99815

RECALL - PERFORMED RECAL

INSTALLED SWITCH PER RECALL

RECALL 99815 RECALL REPLACED SPEED CONTROL DEACTIVATION SWITCH

MS158.5 ADMIN.1 REPLACE SPEED CONTROL SWITCH REPLACED DEACTIVATION SWITCH PER RECALL MS158.

RECALL PERFORMED RECAL

9815 RECALL

RECALL RECALL

81561 RECALL 985158 0.5 YK 9962 INSTALL REVISED SWITCH PER RECALL

PERFORM RECALL 99S15

98815 REPLACED SPEED CONTROL DEACTIVATION SWITCH OK PER SRV MGR.

90815 FREFORM RECALL 99815 SPEED CONTROL

99815 REPLACED SWITCH AND CONNECTOR

COMPLETED RECALL

RECALL, REPLACE CRUISE INTERFLUPT SWITCH AS INSTRUCTED.

A SHORT IN THE SPEED CONTROL SWITH COULD DEVELOPE WHICH MAY OPEN A FUSE DISABLEING THE CRUISE ALSO A FIRE COULD DEVOPE, REPLACE SPEED CI

RECALL 66615 RECALL REPT, C-C DEACTIVATION BWITCH.

RECALL 99915 SPEED CONTROL PEFORM RECALL 99915 INSTALL BAKES SWITCH RECK OK

REPAIR AS PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH.

COMPLETED SPEED CONTROL 99815 DONE

99815 RECALL COMPLETE

163260 REPLACE DECATIVATION SWITCH AND BLEED SYSTEM PER 68815

104209 TECH 101=RECALL=98916B=0.5 REPLACE BRAKE PRESURE SWITCH.

PERFORMED RECALL 90315.

79 REMOVÉ AND REPLACE BRAKE PRESSURE SWITCH PER RECALL

REPLACED DEACTIVATION SWITCH AND HARD SHELL CONNECTOR.

61757 REPLACE SWITHC AND CONNECTOR PER RECALL \$9815

REPLACED SPEED CONTROL SWITCH 89815

CCHECKED AND FOUND VEH NEEDED CRUSE DEACT SWITCH PER RECALL, REPLACED DEACT SWITCH PER RECALL CHECKED SYSTEM OK AT THIS TIME

REPAIR PER RECALL

PERFORMED SPEED CONTROL RECALL

99815B .5 ADMIN .1 PERFORMED RECALL

67895 99815 WARR INSTALLED SWITCH

REPLACED SPEED CONTROL DEACTIVATION SWITCH.

M62-625 1197

REPLACE SPEED CONTROL DEACTIVATION SWITCH AND HARDSHELL CONNECTOR 12160 REPLACE SWITCH AND CONNECTOR AS PER RECAL PERFORMED CAMPAIGN REPLACED SWITCH AND HARD SHELL CONNECTOR. 98815 REPLACED SPEED CONTROL DEACTIVATION SWITCH REPLACE SPEED CONTROL DEACTIVATION SWITCH PER RECALL 99815 1 PERFORMED RECALL 99815 REPLACED SPEED CONTROL SWITCH AND CONNECTOR. RECALL 99815. REPAIRED IN AW RECALL 99815. RECALL 99815 INSTALLED SPEED CONTROL SWITCH PER RECALL

RECALL

99815

RECALL. REPAIR PER RECA RECALL BOS15 RECALL 86915

INSTALLED SWITCH AND CONNECTOR, PER RECALL 98815

RECALL 99816

RECALL POSTS

1 REPLACED SPEED CONTROL SWITCH AND COINNECTOR PER RECALL 99816.

79151 RECALL 0.5 INSTALLED NEW BRAKE PRESSURE: SWITCH AND CONNECTOR 998168

COMPLETED AS PER RECALL INSTRUCTIONS

PERFORM RECALL..... RÉPLACE CRUISE SWITCH

1 PERFORM RECALL

110826 RECALL 99815B 0.5+ ADMIN 0.1 REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL REMOVE, TAPE, AND SECURE SPEED CONTROL DEACTIVATION SWITCH PER RE

142026 PERFORM RECALL AS REQ.

999158

1 98815 PERFORMED

79814 42 W REPLACE PRESSURE SWITCH AND WIRING END PER RECALL 3472 REPLACE SPEED CONTROL DEACTIVATION PERFORMED RECALL#99316. PERFORMED RECALL 00816 REPLACED SWITCH AND CONNECTOR. 28405 RECAUL WARR COMPLETED INSPECT, IS NOT EQUIPPED 67948 REPLACE SWITCH PER RECALL 87611 RECALL REPLACE DEACTIVATION SWITCH & CONNECTOR PER RECALL(WP) 23

REPLACED DEACTIVATION SWITCH AS PER RECALL RECALL INSTALLED SWITC

PERPORMED RECALL

RECALL OPEN RECALL REPLACE SWITCH ASSY PERFORM RECALL

1 PERFORM RECALL

PERFORMED RECAL

83242 REPLACED SPEED CONTROL DEACTIVATION SWITC

REPLACE CRUISE CONTROL DEACTIVATION SWITCH PER RECALL

116140 RECALL INSTALL CRUIS CONTIDEACTIVATION SWITCH KIT PER RECALL

REPLACE SPEED CONTROL DEACTIVATION SWITCH,
118320 REPLACED SWITCH PER RECALL
PERFORM RECALL 99815
RECALL PERFORMED
RECALL 99815 RECALL REPLACE SWITCH
1 PERFORM DEACTIVATION SWITCH RECALL
PERFORM RECALL, REPLACE SWITCH
99815 99815 RECALL
PERFORMED RECALL REPLACED THE SWITCH
99815 99815 RECALL
PERFORMED RECALL
REPLACE SWITCH ASSY
99815 99815 PERFORM RECALL

E962-825 11976