

5 G - 1 0

HC	215*	CO	1.24
O2	3.15	NOx	277
CO2	11.08	RPM	755
LDA	1.101	A/F	14.31

Figure 7

Printing Records

To print individual records, access the record as described in the previous section (Viewing Records). When the appropriate record is accessed, press **Print**.

To print all of the records retained in memory, select **Memory Menu** from the **Main Menu**. From the **Memory Menu**, select **Print Records**. The records will be printed in numerical sequence.

It is essential that the printer be connected before selecting any print functions.

Deleting Records

To delete records from memory, select **Memory Menu** from the **Main Menu**. From the **Memory Menu**, select **Delete Records**. This selection deletes all of the individual records from memory.

Recording Live Readings

Select **Memory Menu** from the **Main Menu**. From the **Memory Menu**, select **Record Live Data**. Live readings will be recorded until a key is pressed. a live reading of up to approximately 1/2 hour can be recorded. Only one live reading can be stored at a time. Each new live recording will erase the previous live recording.