

Viewing Recorded Live Data

Select **Memory Menu** from the **Main Menu**. From the **Memory Menu**, select **View Live Data**. When viewing recorded data, an asterisk will appear at the top middle of the screen. The recorded data will play back as it was recorded. When completed, the word "Finished" will display and the analyzer will then revert to normal operation. Please see figure 7.

Zero Bench

The analyzer will zero itself when initially turned on. It will also zero itself periodically. The bench can also be zeroed manually. Select **Zero Bench** from the **Main Menu**. The bench will perform a zero routine then return to normal operation.

Toggle Automatic Zero

There may be times that you may wish to disable the automatic zero function. To do this, select **Toggle Auto Zero** from the **Main Menu**. The bench will not zero unless another function is selected that causes it to zero. To re-enable automatic zeroing, select **Toggle Auto Zero** again. Each time **Toggle Auto Zero** is selected, automatic zeroing reverts to its previous state.

Display Backlighting

To turn the display backlight on, select **Backlight** from the **Main Menu**. To turn the backlight off, select **Backlight** again. Each time **Backlight** is selected, the backlight reverts to its previous state.

Oil Temperature

To measure engine oil temperature, remove the engine oil dipstick. Measure the length of the dipstick that is inserted into the dipstick tube. Set the stop on the 5G-10 temperature probe to the length measured. Insert the temperature probe into the dipstick tube the proper distance. Select **Temperature** from the