

New Password

The default password is the numeral "1". It can be changed to any combination of letters and numbers up to 20 characters in length. If you change the password, be sure to remember it (or write it down). If you forget your password, you will not be able to access the **Utilities** menu. The analyzer will have to be returned to the factory to be reconfigured.

Select **New Password** from the **Utilities Menu**. Enter the new password in the same manner as entering the Operator ID as described in the previous section. You will be asked to verify the new password.

Network to PC

This selection allows the 5G-10 to communicate with a PC. Connect an RS232 serial communication cable from the DB9 connector on the rear panel of the 5G-10 to a PC. Select **Network to PC** from the **Main Menu**. Start the Planet 5G-10 PC software program on the PC.