


OCCUPANT DETECTION SYSTEM (DIAGNOSTICS) > Diagnostic Procedure with Diagnostic Trouble Code (DTC)

DTC B1650 OCCUPANT CLASSIFICATION SYSTEM MALFUNCTION

 
DTC DETECTING CONDITION:


- Occupant detection sensor is faulty.
- Occupant detection control module is faulty.
- Occupant detection harness is faulty.
- Fuse No. 25 is blown out.
- Rear airbag harness is faulty.

Caution:

Before performing diagnosis, refer to "CAUTION" in "General Description".  **Ref. to AIRBAG SYSTEM (DIAGNOSTICS) > General Description > CAUTION.**

WIRING DIAGRAM:

Occupant detection system  **Ref. to WIRING SYSTEM > Occupant Detection System > WIRING DIAGRAM.**

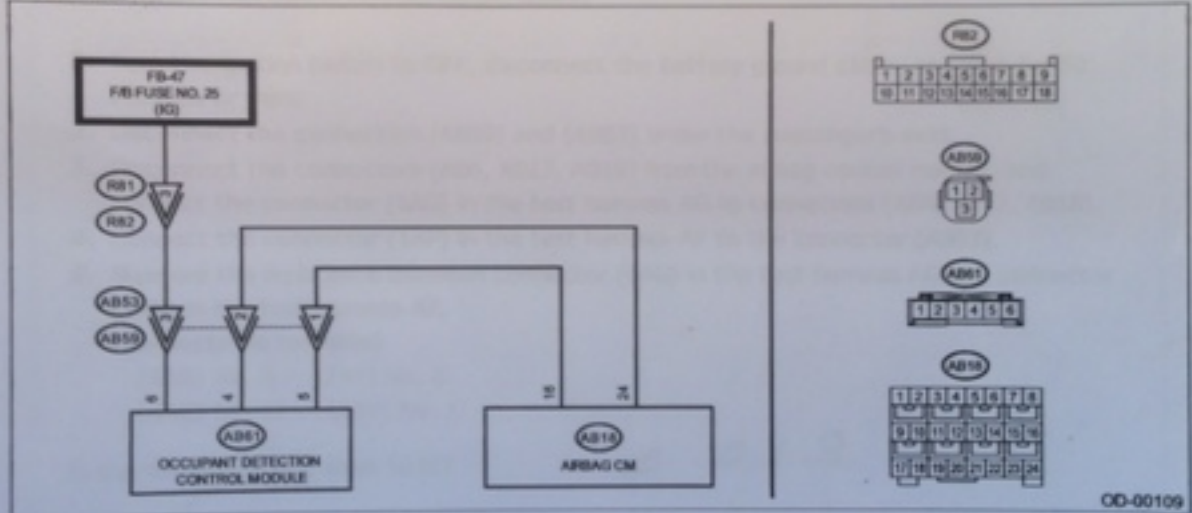


OD-00109

1. CHECK DTC.

Read the DTC of the occupant detection system.

Is any of DTC B1760, B1771 and B1795 detected?

- Yes Perform the diagnosis according to DTC.
-  Go to 2. 