

Step	Check	Yes	No
6. CHECK AIRBAG SYSTEM DTC. 1) Turn the ignition switch to OFF. 2) Reconnect the disconnected connector. 3) Turn the ignition switch to ON. 4) Read Airbag System current DTC.	Is DTC B1650 detected?	If the condition is not improved, replace the occupant detection system (passenger side cushion & frame assembly). If the condition is still not improved, then replace the airbag control module.	The system is currently normal. Check if any other DTC is detected. If there is no current DTC, perform Clear memory.

REFER TO THE LABOR TIME GUIDE ON SUBARUNET FOR APPLICABLE CLAIM CODING INFORMATION.

IMPORTANT REMINDERS:

- SOA strongly discourages the printing and/or local storage of service information as previously released information and electronic publications may be updated at any time.
- Always check for any open recalls or campaigns anytime a vehicle is in for servicing.
- Always refer to STIS for the latest service information before performing any repairs.