


### 5. CHECK OCCUPANT DETECTION HARNNESS.

1. Turn the ignition switch to ON.
2. Measure the voltage between connector (2AP) in the test harness AP and chassis ground.  
**Connector & terminal**  
 (2AP) No. 3 (+) — Chassis ground (-): 12.34 V

Is the voltage 10 V or more?

Yes

Replace the occupant detection harness (seat harness). If defective is not improved, replace the occupant detection system (passenger's side cushion & frame assembly), and then the airbag control module in this order.  Ref. to SEATS>Front Seat>DISASSEMBLY > PASSENGER'S SEAT.

No

Check the battery voltage and fuse. If there is no fault, replace the airbag rear harness together with body harness.

for & terminal

(No. 3 (+) — Chassis ground (-):

ge 10 V or more?

Replace the occupant detection harness (passenger's side cushion & frame assembly), and then the airbag control module in this order. Ref. to SEATS>Front Seat>DISASSEMBLY > PASSENGER'S SEAT.

Check the battery voltage and fuse. If there is no fault, replace the airbag harness together with body harness (2AP) in the test harness AP and chassis

for & terminal

(No. 3 (+) — Chassis ground (-):

ge 10 V or more?