

OCCUPANT DETECTION (DTC B1650) > Diagnostic Procedures
DTC B1650 OCCUPANT DETECTION SYSTEM MALFUNCTION
 instructed procedures.

Wiring diagram:
 Occupant detection system
 Diagnostic Procedure with Occupant detection system
 Detection System > WIRING

1. CHECK DTC.

no

Go to 2.

2. CHECK POOR CONTACT OF CONNECTORS.

yes

Perform the instructed procedures.

no

Go to 3.

3. CHECK AIRBAG REAR HARNESS.

no

Perform the instructed procedures.

yes

4. CHECK AIRBAG REAR HARNESS.

no

Perform the instructed procedures.

yes


5. CHECK OCCUPANT DETECTION HARNESS.

yes

Perform the instructed procedures.

no

Perform the instructed procedures.

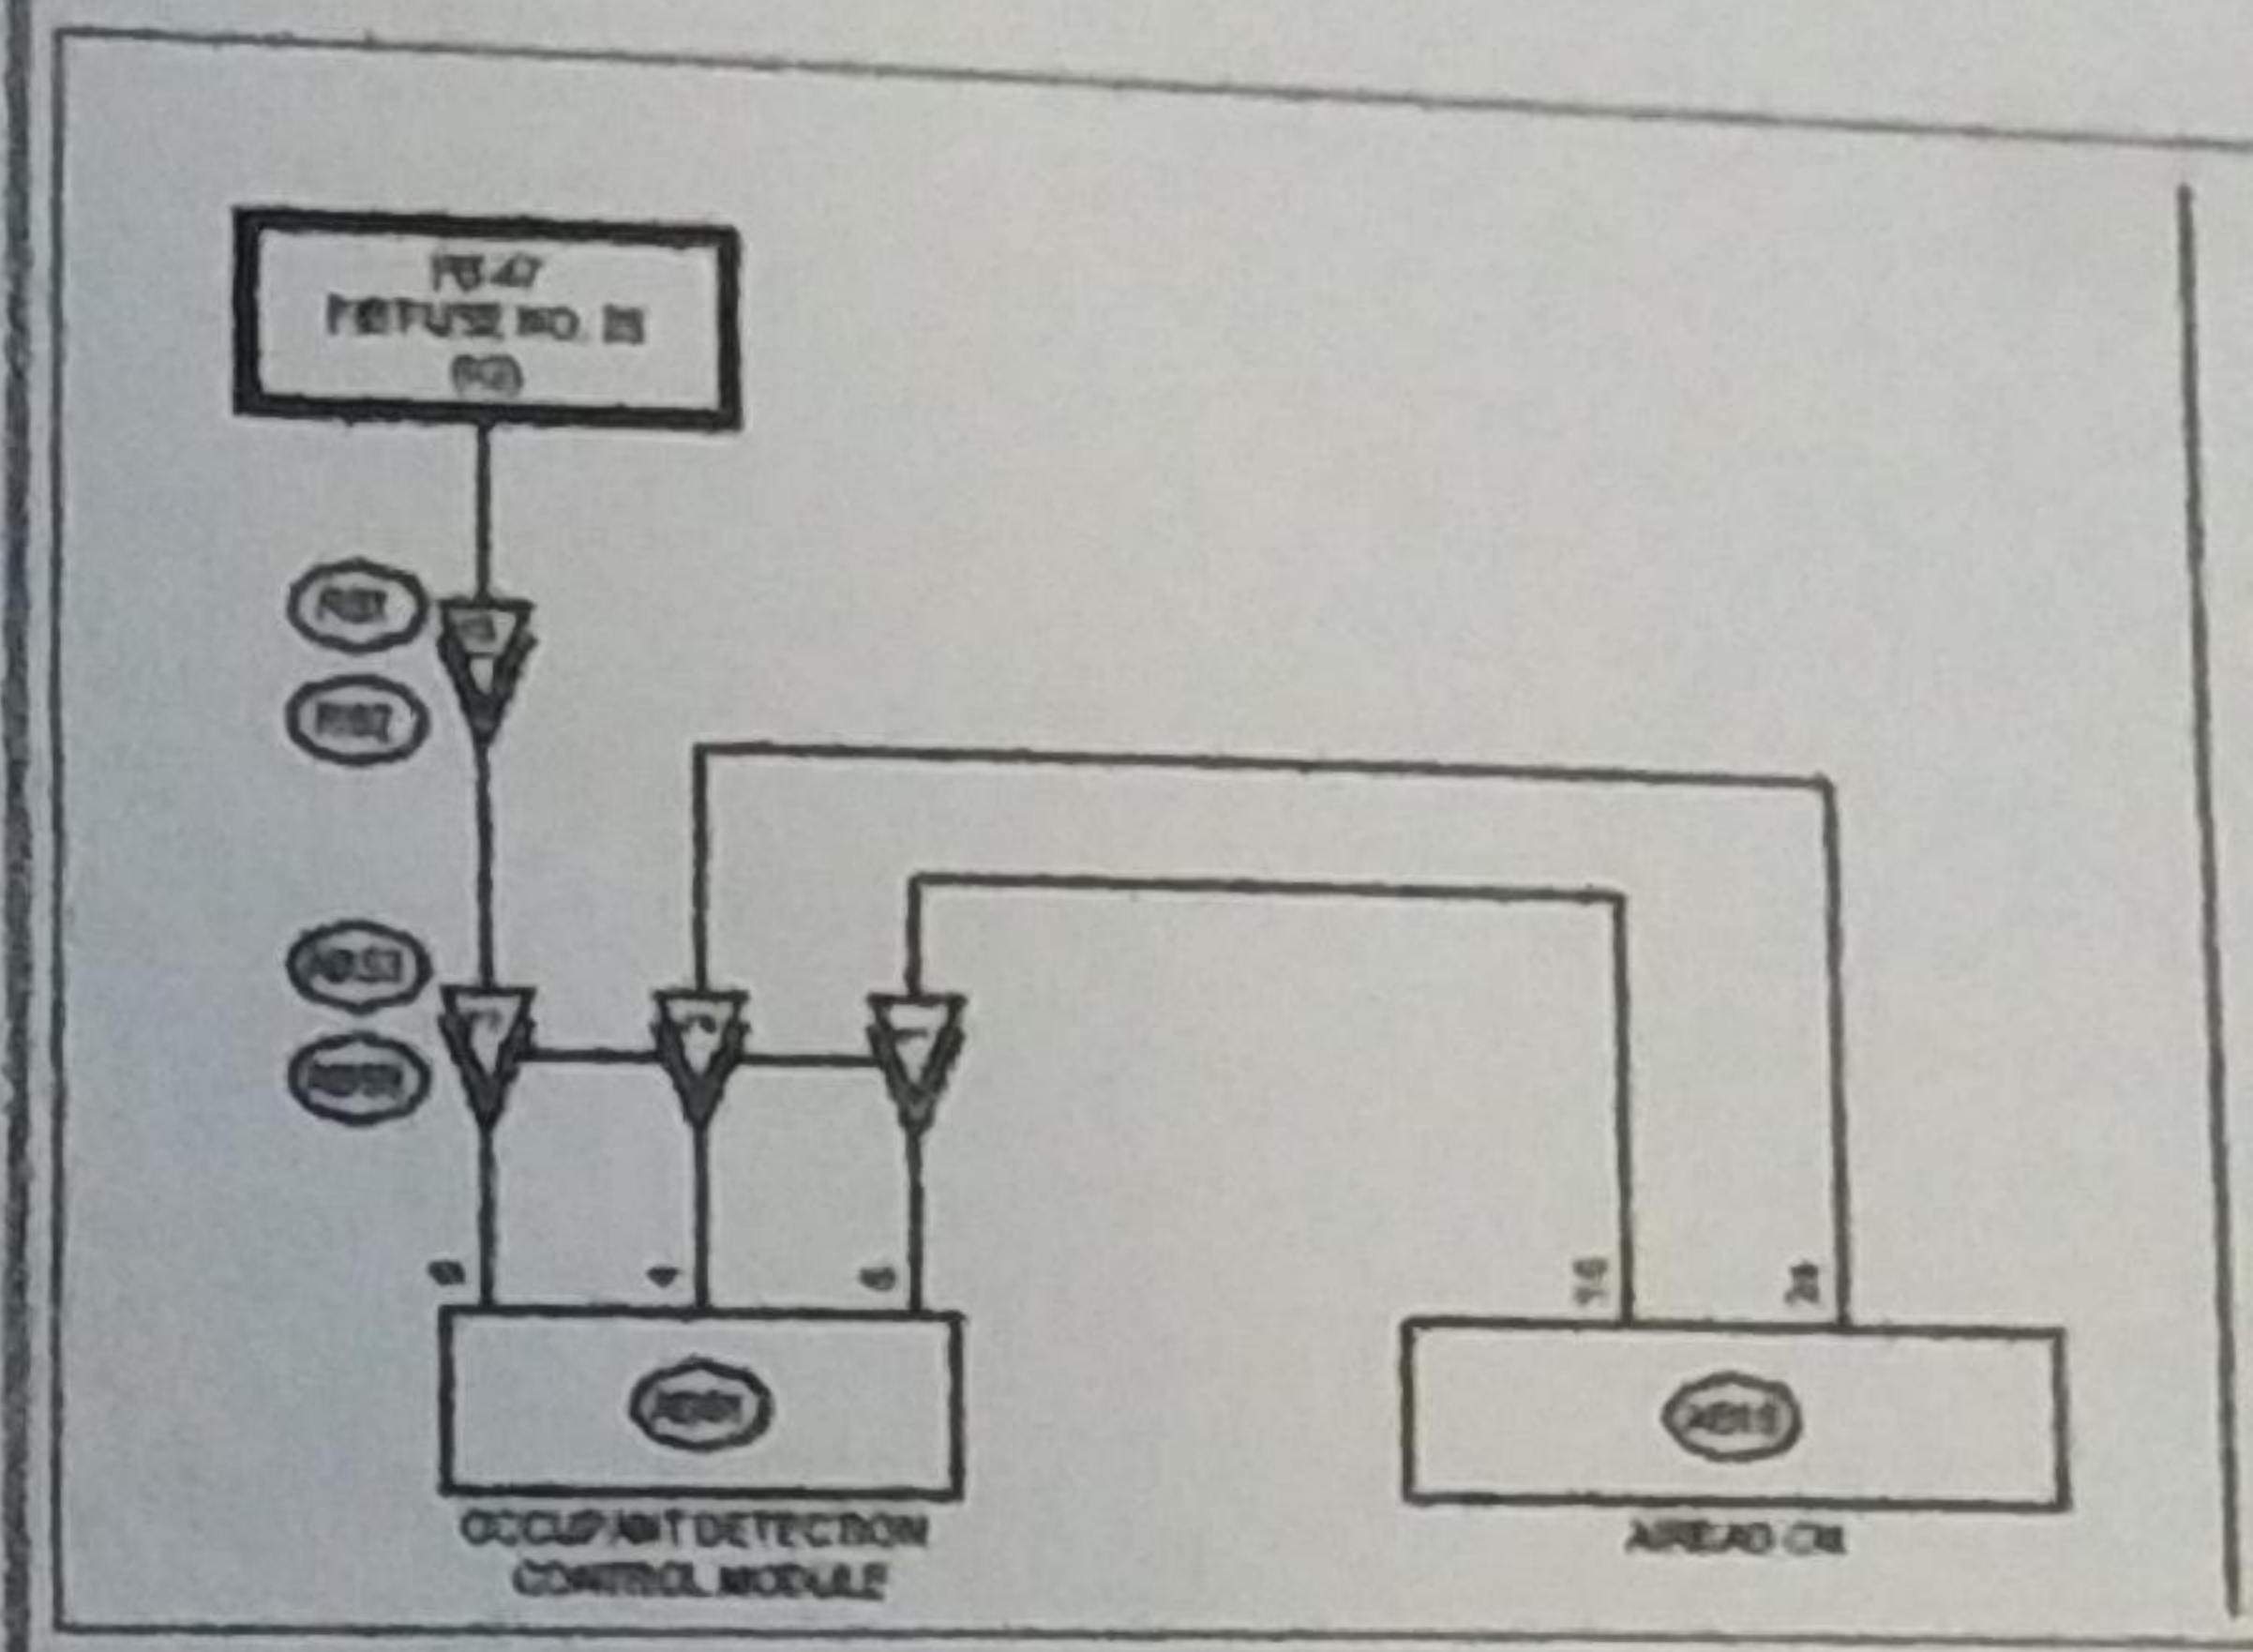

Caution:
 Before performing
 Click the image to see the
Description.
 Description > CAUTION