

## 2. CHECK POOR CONTACT OF CONNECTORS.

Check for poor contact of the connectors between the occupant detection control module and airbag control module.

 
Is there poor contact?

Yes

Reconnect the connector. If defective is not improved, replace the airbag rear harness along with the body harness or the occupant detection harness (seat harness).

No

Go to 3.



## 3. CHECK AIRBAG REAR HARNESS.

1. Turn the ignition switch to OFF, disconnect the battery ground cable, and wait for 60 seconds or more.
2. Disconnect the connectors (AB59) and (AB53) under the passenger's seat.
3. Disconnect the connectors (AB6, AB17, AB18) from the airbag control module, and connect the connector (1AG) in the test harness AG to connectors (AB6, AB17, AB18).
4. Connect the connector (1AP) in the test harness AP to the connector (AB53).
5. Measure the resistance between connector (6AG) in the test harness AG and connector (2AP) in the test harness AP.

Connector & terminal

(6AG) No. 9 — (2AP) No. 2: 0.1  $\Omega$

(6AG) No. 11 — (2AP) No. 1: 0.1  $\Omega$

Is the resistance less than 10  $\Omega$ ?

Yes

Go to 4.



No

Replace the airbag rear harness along with body harness.