

## LEVEL CHECK

**NOTE:** Do not remove pressure cap for routine coolant level inspections.

The coolant bottle provides a quick visual method for determining the coolant level without removing the pressure cap. **With the engine cold and not running**, simply observe the level of the coolant in the coolant recovery container. The level should be between the MIN and MAX marks.