

ENGINE OIL LEVEL CHECK

Checking the oil while the vehicle is on level ground will improve the accuracy of the oil level reading. Remove dipstick (1), and observe oil level. Add oil only when the level is at or below the SAFE mark. If the oil level is in the safe (2) range, do not add oil.

CAUTION: Do not operate engine if the oil level is above the MAX mark on the dipstick. Excessive oil volume can cause oil aeration which can lead to engine failure due to loss of oil pressure or increase in oil temperature.

