

**DTC Code** **DTC description**

---

P0087-00 FUEL RAIL/SYSTEM PRESSURE - TOO LOW BANK 1  
P008A-00 LOW PRESSURE FUEL SYSTEM PRESSURE - TOO LOW  
P008B-00 LOW PRESSURE FUEL SYSTEM PRESSURE - TOO HIGH  
P00BA-00 LOW FUEL PRESSURE - FORCED LIMITED POWER  
P0461-00 FUEL LEVEL SENSOR "A" CIRCUIT RANGE/PERFORMANCE  
P0462-00 FUEL LEVEL SENSOR "A" CIRCUIT LOW  
P0463-00 FUEL LEVEL SENSOR "A" CIRCUIT HIGH  
P0627-00 FUEL PUMP "A" CONTROL CIRCUIT OPEN  
P0628-00 FUEL PUMP "A" CONTROL CIRCUIT LOW  
P0629-00 FUEL PUMP "A" CONTROL CIRCUIT HIGH  
P062A-00 FUEL PUMP "A" CONTROL CIRCUIT RANGE/PERFORMANCE