



WITH MAIN MENU DISPLAYED ON CLUSTER AFTER STARTING, SCROLL DOWN THE MENU WITH DOWN ARROW TO "STATUS/INFORMATION" AND PRESS "OK"



SCROLL DOWN TO "ENGINE INFORMATION" AND PRESS "OK"



ENGINE INFORMATION, INCLUDING ENGINE HOURS AND IDLE HOURS, WILL BE DISPLAYED