

Gunite – Service Advisory

February 18, 2011



[Catalogs & Brochures](#)

[Product & Education](#)

[Sales Promotion](#)

[Pricing](#)

[Technical & Trouble Shooting](#)

[Other](#)

NO: GUN2.0014

Gunite® Automatic Slack Adjuster Inspection Instructions

Use the following instructions to inspect your inventory of Gunite® Automatic Slack Adjusters.

1. Remove the automatic slack adjuster from the box and plastic shipping bag.
2. Inspect the automatic slack adjuster in two locations to determine the lot number.
 - a. On the side of the slack adjuster housing you will see the name Gunite and either an "H" or "1H". See Figure A. This is the mold line nomenclature.
 - b. On the bottom of the slack adjuster you will see the lot number information. See Figure B.
 - c. If the combination of slack adjuster mold line and lot number exactly match any of the combinations in the table below, see Figure C, the slack adjuster must be returned to Gunite. Please contact Customer Service at 1-800-677-3786 to obtain a Return Goods Authorization (RGA) document.

Side of Slack Adjuster Housing



Figure A: Mold Line Nomenclature



Gunite – Service Advisory

February 18, 2011

Bottom of Slack Adjuster Housing



Figure B: Lot Number

Lot Numbers and Corresponding Mold Line Nomenclature

<u>Lot Nos.</u>	<u>Mold Line</u>	<u>Lot Nos.</u>	<u>Mold Line</u>	<u>Lot Nos.</u>	<u>Mold Line</u>	<u>Lot Nos.</u>	<u>Mold Line</u>
0I06	1H	0K02	1H	1A15	1H	0K26	H
0I07	1H	0K04	1H	1A21	1H		
0I14	1H	0K10	1H	1A22	1H		
0I15	1H	0K12	1H				
0I17	1H	0K18	1H				
0I18	1H	0K22	1H				
0I19	1H	0K24	1H				
0I20	1H	0L12	1H				
0I26	1H	0L18	1H				
0J06	1H	0L22	1H				
0J07	1H	0L24	1H				
		0L28	1H				
		0L30	1H				

Figure C: Lot Numbers and Mold Line Nomenclature

All slack adjusters having the combined lot number and mold line number identified in the table in Figure C must be returned to Gunite. Please contact Customer Service at 1-800-677-3786 to obtain a Return Goods Authorization (RGA) document.

