

License Plate Light Removal and Replacement Instructions
QAAR # 7719


Unity & GT Instruction



1. Disconnect chassis battery, see chassis owner's manual
2. Remove two screws fastening light to rear mask
3. Remove light from rear mask, carefully exposing approximately 100mm (4") of light wiring harness
4. Cut wire near light to allow ample wire length for connection of new light
5. Attach new light by using solder and electrical tape to protect connection or by using weather resistant electrical connectors, wire color/polarity is irrelevant in this connection
6. Tuck wires back into rear mask
7. Position light in exact location as previously mount light to insure unpainted surface in not exposed
8. Screw light back into mask insuring not to over tighten screws
9. Reconnect chassis battery
10. Activate clearance lights and verify function of license plate light

Serenity & Libero Instruction

Exterior Photo (#1)

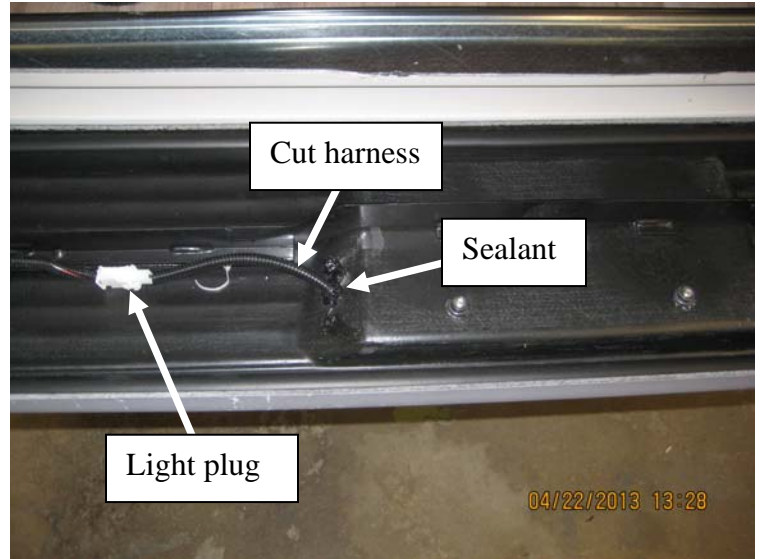

Interior Photo (#2)

1. Open rear compartment door on rear mask
2. Unplug light from light harness (see photo #2)
3. Cut wire near light to allow ample wire length for connection of new light
4. Remove sealant from wire entry (see photo #2)
5. Remove two screws fastening light to compartment door
6. Remove light
7. Position light in exact location as previously mount light to insure unpainted surface in not exposed
8. Screw light back into compartment door insuring not to over tighten screws
9. Attach new light to previously cut harness by using solder and electrical tape to protect connection or by using weather resistant electrical connectors, wire color/polarity is irrelevant in this connection
10. Loam exposed harness and connections
11. Attach harness to rear of door structure
12. Plug light back into light harness (see photo #2)
13. Reseal previously removed sealant from back of light and verify screw sealant is still intact
14. Activate clearance lights and verify function of license plate light