

2013 MODEL YEAR ESCAPE - ENGINE COOLANT CHECK

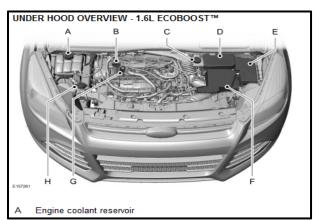

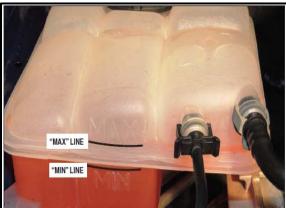

CHECKING THE ENGINE COOLANT

Check the level of the engine coolant when the engine is cold. Make sure that the level is between the MIN and MAX marks on the coolant reservoir. If the level is at the MIN mark, below the MIN mark, or empty, add coolant immediately.

Note: Coolant expands when it is hot, the level may extend beyond the MAX mark.

ADDING ENGINE COOLANT

WARNING

To reduce the risk of personal injury, make sure the engine is cool before unscrewing the coolant pressure relief cap. The cooling system is under pressure; steam and hot liquid can come out forcefully when the cap is loosened slightly.

Unscrew the cap slowly. Any pressure will escape as you unscrew the cap. Add prediluted engine coolant meeting the Ford specification. Whenever coolant has been added, the coolant level in the coolant reservoir should be checked the next few times you drive the vehicle. If necessary, add enough prediluted engine coolant to bring the coolant level to the proper level.

Item	Capacity	Ford part name or equivalent	Ford part number / Ford specification
Engine Coolant 1.6L EcoBoost	8.5 qt (8 L)		VC-3DIL-B (U.S.) CVC-3DIL-B (Canada) / WSS-M97B44-D2

Note: Automotive fluids are not interchangeable. Do not use engine coolant or antifreeze or windshield washer fluid outside of its specified function and vehicle location.