





Dealer Service Instructions for:

Safety Recall P60 / NHTSA 14V-634 Alternator

Models

2011 – 2014 (LC) **Dodge Challenger**

(LD) Dodge Charger

(LX) Chrysler 300

(WD) Dodge Durango

2012 - 2014 (WK) Jeep® Grand Cherokee

NOTE: This recall applies only to the above vehicles equipped with a 3.6L V-6 engine (sales code ERB) and a 160 amp alternator (sales code BAB) built through December 23, 2013 (MDH 122314).

IMPORTANT: Some of the involved vehicles may be in dealer new vehicle inventory. Federal law requires you to complete this recall service on these vehicles before retail delivery. Dealers should also consider this requirement to apply to used vehicle inventory and should perform this recall on vehicles in for service. Involved vehicles can be determined by using the VIP inquiry process.

Subject

The alternator diodes on about 433,000 of the above vehicles may experience a rapid failure. Variability in the failure mode ranges from no output, reduced output, and/or a fully shorted to ground condition. Depending on the alternator failure mode and timing, vehicle electrical system voltage may drop to critical levels, disabling systems such as Antilock Brake System (ABS), Electronic Stability Control (ESC), Electronic Control Module (ECM), and/or the Central Body Controller (CBC). The driver will have limited or no detection of the alternator failing, which can result in vehicle shutdown while driving and/or an underhood electrical fire.

Repair

The alternator assembly must be replaced.

Parts Information

Part Number Description

CBWHP601AA Alternator Assembly (WD/WK vehicles)

CBWHP602AA Alternator Assembly (LC/LD/LX vehicles)

<u>Each dealer</u> to whom vehicles in the recall were assigned will receive enough alternators assemblies to service about <u>20%</u> of those vehicles.

Special Tools

No special tools are required to perform this service procedure.

Parts Return

No parts return required for this campaign.

Service Procedure

A. Replace Alternator Assembly (LC / LD / LX Models)

- 1. Disconnect and isolate the negative battery cable.
- 2. Rotate the serpentine drive belt tensioner counterclockwise until it contacts its stop and remove the accessory drive belt, then slowly rotate the tensioner into the free-arm position (Figure 1).
- 3. Remove and save the alternator upper retaining bolts (Figure 2).

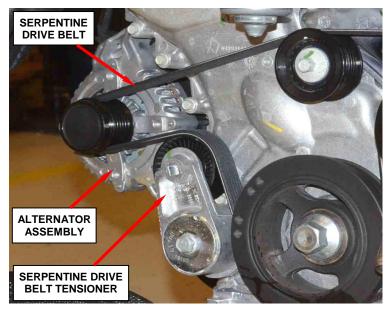


Figure 1 - Accessory Drive Belt Tensioner

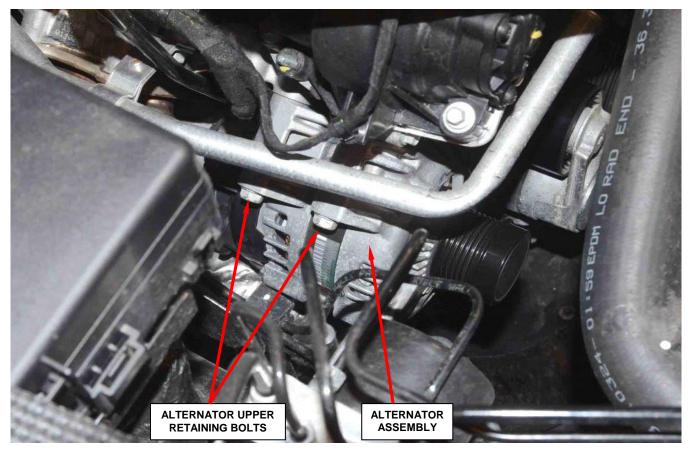


Figure 2 – Alternator Upper Retaining Bolt

- 4. Remove the insulator cover from the B+ output terminal at the rear of the alternator (Figure 3).
- 5. Remove and save the B+ terminal retaining nut at the rear of the alternator and remove the B+ terminal.
- 6. Depress the field wire electrical connector tab at the rear of the alternator and disconnect the field wire electrical connector (Figure 3).
- 7. Raise the vehicle on an appropriate hoist.

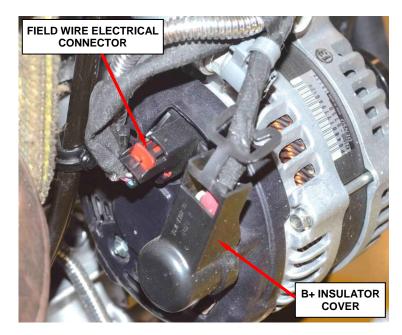


Figure 3 - Alternator Electrical Connections

8. Remove the underbody splash shield retainers and remove the underbody splash shield. (Figure 4)



Figure 4 - Underbody Splash Shield

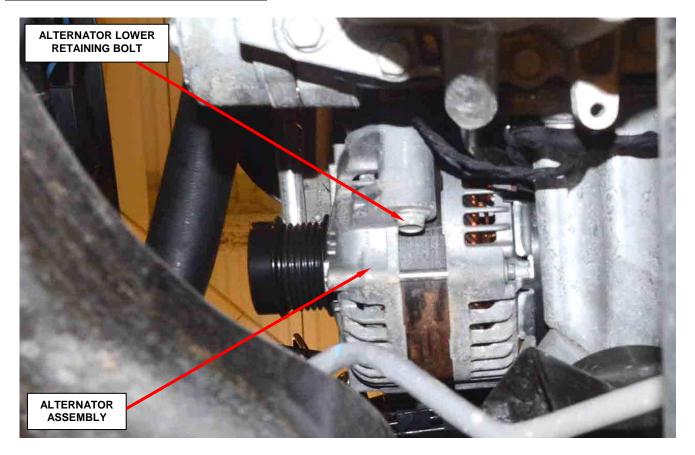


Figure 5 – Lower Alternator Retaining Bolt (viewed from under vehicle)

- 9. Remove and save the alternator lower retaining bolt (Figure 5).
- 10. **For Rear Wheel Drive (RWD) vehicles**, separate the alternator from the engine mounting bracket and remove the alternator from the engine compartment.
- 11. **For All Wheel Drive (AWD) vehicles**, perform the following steps to remove the alternator assembly from the vehicle:
 - a. Lower the vehicle on the hoist.
 - b. Loosen the radiator cap on the coolant bottle.
 - c. Push the upper radiator hose aside and remove the alternator from the engine compartment.
 - d. Place the new alternator into position.
 - e. Tighten the radiator cap on the coolant bottle.
 - f. Raise the vehicle on the hoist.

- 12. Position the new alternator to the engine and install the alternator lower retaining bolt finger tight.
- 13. Lower the vehicle on the hoist.
- 14. Install the alternator upper retaining bolts and tighten the bolts to 19 ft. lbs. $(25 \text{ N} \cdot \text{m})$.
- 15. Snap the field wire electrical connector into the rear of the alternator assembly.
- 16. Position the generator B+ terminal eyelet to the alternator output stud, install the retaining nut and tighten to 115 in. lbs. (13 N⋅m).
- 17. Install the insulator cover onto the B+ output terminal.
- 18. Raise the vehicle on the hoist.
- 19. Tighten the lower alternator retaining bolt to 19 ft. lbs. (25 N·m).
- 20. Position the underbody splash shield and install the underbody splash shield retainers.
- 21. Lower the vehicle from the hoist.
- 22. Rotate the accessory drive belt tensioner counterclockwise until it contacts the stop and install the accessory drive belt onto the pulleys and slowly release the tensioner.
- 23. Connect the negative battery cable and tighten the retaining nut to 115 in. lbs. (13 N·m).
- 24. Return the vehicle to the customer.

B. Replace Alternator Assembly (WD / WK Models)

- 1. Move the passenger seat fully forward.
- 2. Disconnect and isolate the negative battery cable.
- 3. Unplug the field wire electrical connector from alternator (Figure 6).
- 4. Remove and save the insulator cover from the B+ output terminal at the rear of the alternator (Figure 6).

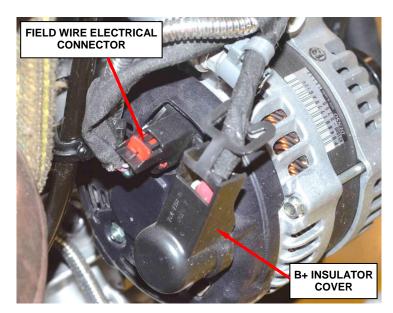


Figure 6 - Alternator Electrical Connections

- 5. Remove and save the B+ terminal retaining nut and wire.
- 6. Rotate the accessory drive belt tensioner counterclockwise until it contacts its stop and remove the accessory drive belt, then slowly rotate the tensioner into the free-arm position (Figure 1).
- 7. Remove and save the alternator ground strap retaining nut (Figure 7).
- 8. Remove the ground strap from the stud-bolt.

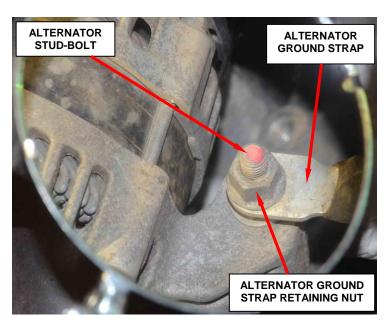


Figure 7 – Alternator Ground Strap

- 9. Remove and save the lower alternator mounting stud-bolt (Figure 8).
- 10. Remove and save the two alternator upper mounting bolts.
- 11. Remove the alternator assembly from the vehicle.
- 12. Install the new alternator assembly into the vehicle.
- 13. Install the two alternator upper mounting bolts and the lower alternator mounting stud-bolt finger tight.

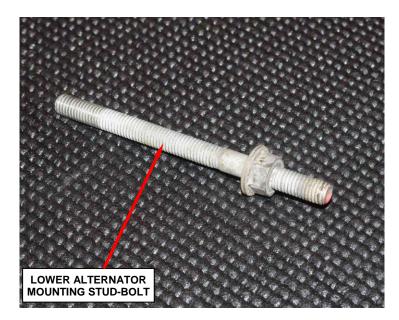


Figure 8 – Lower Alternator Mounting Stud-Bolt

- 14. After all alternator mounting bolts are finger tight, tighten all fasteners to 19 ft. lbs. (25 N·m).
- 15. Install the ground wire on the mounting stud-bolt (Figure 7).
- 16. Install the lower front alternator ground strap retaining nut. Tighten the nut to 17 ft. lbs. (23 N·m).
- 17. Rotate the accessory drive belt tensioner counterclockwise until it contacts the stop and install the accessory drive belt onto the pulleys and slowly release the tensioner.
- 18. Install the B+ terminal to the alternator stud. Tighten the retaining nut to 115 in. lbs. (13 N⋅m) (Figure 6).
- 19. Install the insulator cover over the alternator B+ terminal (Figure 6).
- 20. Plug in the field wire electrical connector to the alternator (Figure 6).
- 21. Connect the negative battery cable.
- 22. Return the passenger seat to the original position.
- 23. Return the vehicle to the customer.

Completion Reporting and Reimbursement

Claims for vehicles that have been serviced must be submitted on the DealerCONNECT Claim Entry Screen located on the Service tab. Claims submitted will be used by FCA to record recall service completions and provide dealer payments.

Use the following labor operation number and time allowance:

	Labor Operation Number	Time Allowance
Replace alternator assembly (LC / LD / LX models)	08-P6-01-82	0.6 hours
Replace alternator assembly (WD / WK models)	08-P6-01-83	0.5 hours
Optional Equipment		
All Wheel Drive (LD/LX models only)	08-P6-01-60	0.2 hours

Add the cost of the recall parts package plus applicable dealer allowance to your claim.

NOTE: See the Warranty Administration Manual, Recall Claim Processing Section, for complete recall claim processing instructions.

Dealer Notification

To view this notification on DealerCONNECT, select "Global Recall System" on the Service tab, then click on the description of this notification.

Owner Notification and Service Scheduling

All involved vehicle owners known to FCA are being notified of the service requirement by first class mail. They are requested to schedule appointments for this service with their dealers. A generic copy of the owner letter is attached.

Enclosed with each owner letter is an Owner Notification postcard to allow owners to update our records if applicable.

Dealers are encouraged to consider alternative scheduling and servicing approaches for this recall. This repair does not require hoists or other full service facility special equipment and is a Chrysler Mobile Service approved repair.

Vehicle Lists, Global Recall System, VIP and Dealer Follow Up

All involved vehicles have been entered into the DealerCONNECT Global Recall System (GRS) and Vehicle Information Plus (VIP) for dealer inquiry as needed.

GRS provides involved dealers with an <u>updated</u> VIN list of <u>their incomplete</u> vehicles. The owner's name, address and phone number are listed if known. Completed vehicles are removed from GRS within several days of repair claim submission.

To use this system, click on the "Service" tab and then click on "Global Recall System." Your dealer's VIN list for each recall displayed can be sorted by: those vehicles that were unsold at recall launch, those with a phone number, city, zip code, or VIN sequence.

Dealers <u>must</u> perform this repair on all unsold vehicles <u>before</u> retail delivery. Dealers should also use the VIN list to follow up with all owners to schedule appointments for this repair.

Recall VIN lists may contain confidential, restricted owner name and address information that was obtained from the Department of Motor Vehicles of various states. Use of this information is permitted for this recall only and is strictly prohibited from all other use.

Additional Information

If you have any questions or need assistance in completing this action, please contact your Service and Parts District Manager.