



Installation:
Make sure the gasket (2) is correctly seated.

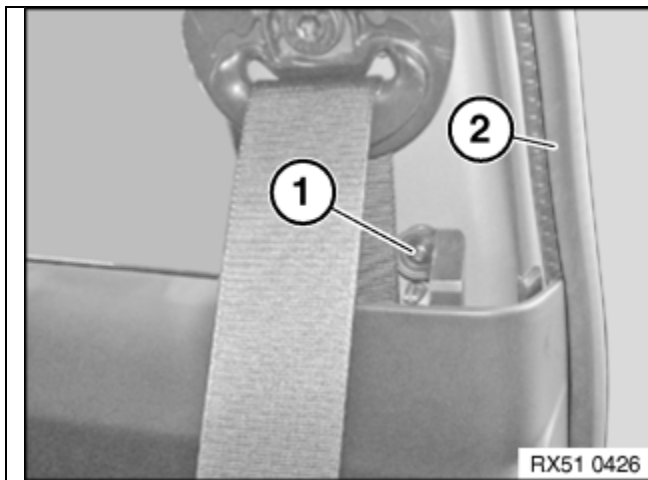

Installation:
Make sure the gasket (2) is correctly seated.

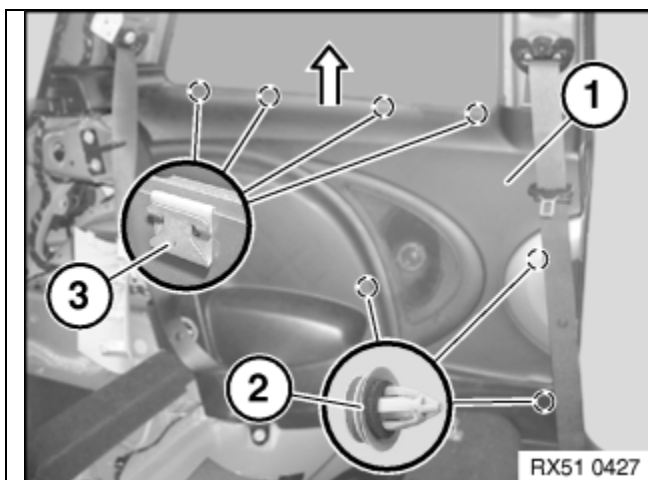

Installation:
If necessary, replace the faulty clips (2) and the retainers (3).
First engage the side trim panel (1) in the retainers (3), then secure to clips (2).