

REPAIR PROCEDURE

- Remove the roller shade from the brackets and also the brackets from the valance as shown in figure 1 below.



REPAIR CONTINUED

- Remove side legs as shown in figure 2 below.



VALANCE REMOVAL

- Remove valance as shown in figure 3 below.



WINDOW REMOVAL

- Remove window trim ring from inside as shown in figure 4 below.



REMOVE WINDOW

- Carefully remove window from opening as shown in figure 5 below.



CLEAN SEALANT FROM WALL

- Carefully clean sealant from exterior window opening on exterior if any present as shown in figure 6 below.



PREPAIR NEW WINDOW

- Add supplied rubber “ D “ seal to flange of new window as shown in figure 7 below.



INSTALL NEW WINDOW

- Place new window in opening and install interior trim ring. You may need an assistant to hold the window while you set a few interior screws shown in figure 8 below.



VALANCE INSTALLATION

- In some cases, the valance over the window is too large for the escape window as shown in figure 9 below.



VALANCE CONTINUED

- In this situation, Forest River, Inc. has supplied a new valance that covers less of the escape window as shown in figure 10 below.



VALANCE LEGS

- Re-install the valance side legs as shown below in figure 11.



TOP SEAL WINDOW EXTERIOR

- Top seal the exterior of the window with a good clear exterior caulk as shown in figure 12 below.

