

# SAFETY RECALL NOTICE

**VOLVO**

## IMPORTANT SAFETY RECALL RVXX1601 NHTSA RECALL # 16V-095 – 2ND

### **DEAR VOLVO TRUCK OWNER:**

This notice is sent to you in accordance with the requirements of the National Traffic and Motor Vehicle Safety Act.

Volvo Trucks North America has decided that a defect which relates to motor vehicle safety exists in certain 2009-2010 VT Model Trucks manufactured from April 9, 2008 through September 24, 2009 with a USK non-greasable drag link and certain 2016 model VNL and VNM trucks manufactured from January 2, 2015 through November 6, 2015 with a USK non-greasable drag link.

**SAFETY DEFECT:** The draglink ball joint seal may be compromised, which can allow water and other contaminants to enter the ball joint. If water and contaminants enter the ball joint, corrosion can occur and lead to accelerated wear, which over time can result in failure of the ball joint.

**SAFETY RISK:** If this is left untreated, the ball can separate from the socket and result in complete loss of steering which may result in a vehicle crash.

**PRECAUTIONS YOU CAN TAKE:** Volvo strongly recommends that you inspect the ball joint for any damage to the rubber sealing boot or looseness as prescribed in the enclosed Inspection and Replacement Criteria for Drag Links. If looseness is found, the truck must immediately be placed out of service until the drag link is replaced. Customer support line (877-800-4945 opt #1).

**TIME REQUIRED FOR THE REPAIR:** The time required to repair your vehicle is approximately 1 hour.

**WHAT YOU SHOULD DO:** You should contact the nearest Volvo Parts and Service Center and make an appointment. The drag link on your vehicle will be replaced at **no charge** to you.

You can locate the closest Volvo Parts and Service Center by going on line to <http://www.volvo.com/trucks/na/en-us/dealers/> and selecting “Dealer Locator” or by calling our toll-free number: (800) 528-6586.

**NOTICE REGARDING  
LEASED VEHICLES:**

If you are a Lessor of vehicles subject to this Notice, you have an obligation under Federal Law to provide a copy of this Notice to all Lessees within 10 days of your receipt of this Notice. Further, you must maintain a record, which identifies the Lessee(s) to whom you send a copy of this letter, the date you send this letter and the Vehicle Identification Number(s) of the vehicle that you have leased to that lessee. For purposes of this Notice, the term Lessor means: a person or entity that is the owner, as reflected on the vehicle's title, of any five or more leased vehicles (as defined in CFR Section 577.4), as of the date of notification by the manufacturer of the existence of a safety-related defect or non-compliance with a Federal Motor Vehicle Safety Standard in one or more of the leased motor vehicles.

**OWNER RECALL  
RESPONSE CARD:**

The enclosed "Notice of Vehicle Recall" identifies your vehicle. If you no longer own the vehicle, please help us update our records by completing the "Vehicle Disposition Record" portion of the enclosed postage-free Notice of Mandatory Safety Campaign card and mailing it back to us.

**ASSISTANCE/  
COMPLAINTS:**

Volvo Trucks North America  
Regulatory Affairs Department,  
P.O. Box 26115  
Greensboro, NC 27402-6115  
[vtna.regulatoryaffairs@volvo.com](mailto:vtna.regulatoryaffairs@volvo.com)

You may also submit complaints to the Administrator of the National Highway Traffic Safety Administration (1200 New Jersey Avenue, S.E., Washington DC 20590 or call the toll-free Auto Safety Hot Line at 1-888-327-4236 (TTY: 1-800-424-9153), or go to <http://www.safercar.gov> if you believe that Volvo has failed to remedy the defect without charge, or has failed to remedy the vehicle within 60 days of the owners first tender to obtain repair following the earliest time that parts are available.

If you have previously paid for repairs as a result of this issue, you may be entitled to recovery of those expenses.

**PRE NOTIFICATION  
REMEDIES:**

Submit copies of all documentation supporting your claim according to the rules specified in the "General Plan for Reimbursement of Pre-notification Remedies" provided in this mailing.

We regret any inconvenience this may cause to your operation, but hope you will appreciate our sincere efforts to demonstrate Volvo's commitment to provide our customers with the best possible product.

***VOLVO TRUCKS NORTH AMERICA***

# Inspection and Replacement Criteria for Drag Links

## Introduction:

The Federal Motor Carrier Safety Administration requires pre and post trip inspections of Commercial Motor Vehicles as well as periodic comprehensive whole-vehicle inspections.

One of the areas for inspection is the steering wheel system. The regulation for steering wheel systems, among other things, requires inspection of the drag link ball-and-socket joints for wear, loose and missing hardware, and damage. The complete requirements can be found at <http://www.fmcsa.dot.gov/>.

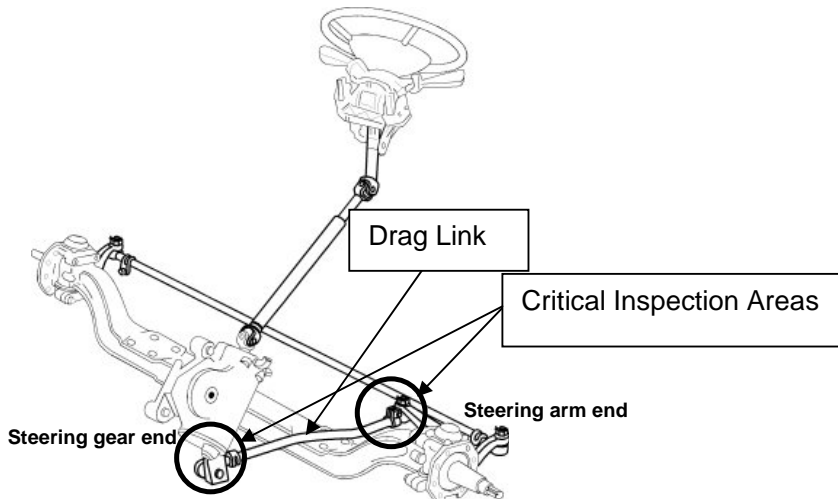


Figure 1

The image above shows the draglink and critical inspection areas. These areas **must be visually inspected daily** for damaged components; missing bolts, nuts, cotter pins; and for damaged sealing boots. Any problems found should be recorded on the daily inspection report.

The drag link ball sockets also require inspection for wear on a quarterly basis or at 25,000 miles (40,234 kilometers), whichever comes first. This is done by pushing and pulling on the drag link by hand to see if there is any movement in the ball socket.

**DANGER! Missing or damaged components must be repaired or replaced before placing the vehicle into service. Complete loss of steering may occur!**

**DANGER! Any movement, other than rotational, measured with hand pressure (i.e., 50 lbs of pressure), requires placing the vehicle out of service for immediate drag link or socket replacement. Complete loss of steering may occur!**

Rotational movement is normal and is explained on page 5 of this document.

The information that follows provides the correct inspection and replacement criteria for drag links and ball sockets.

## Daily Inspection:



The drag link is located just inside of the driver's side front tire.




**DANGER! The engine must be off, the park brake applied, and wheels properly chocked when conducting this inspection.**


### **Step 1: Inspect for damaged or torn sealing boots and loose or missing attachment nuts and cotter pins.**

Any form of tear in the rubber sealing boot requires drag link or ball socket replacement.

Missing cotter pins and loose or missing castellated nuts are to be repaired before driving the vehicle.

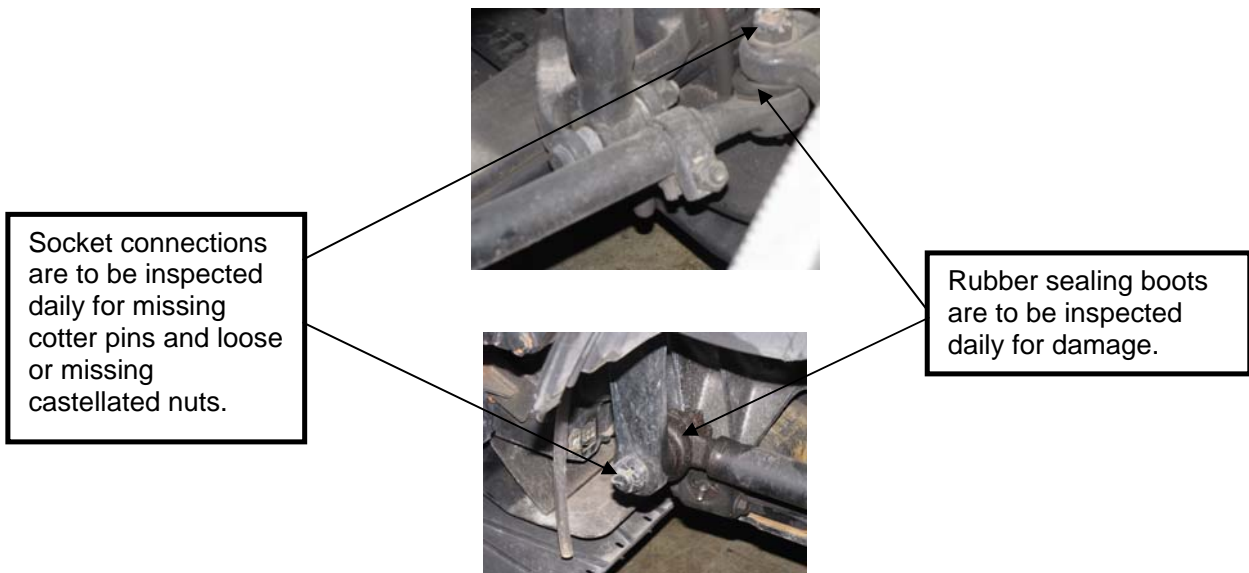

### **Step 2: Inspect the adjustable end of drag link for loose or missing pinch bolt and for socket thread engagement.**

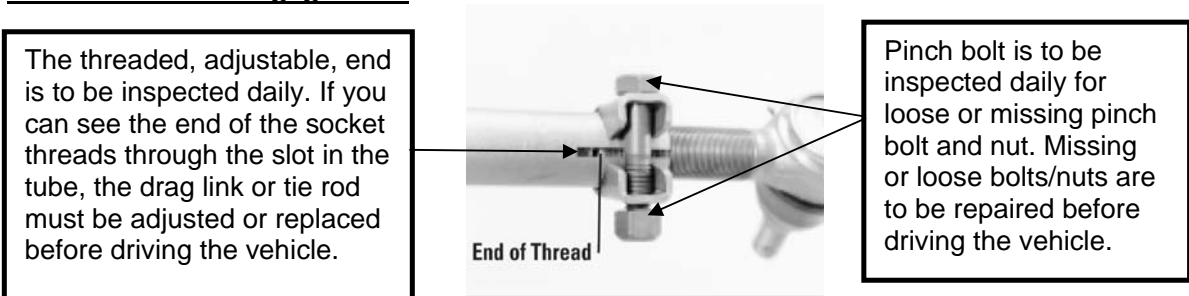


## Quarterly Ball Socket Inspection:

**DANGER! The engine must be off, the park brake applied, and wheels properly chocked when conducting this inspection.**

**Frequency:** Inspect for lash in sockets every three months or 25,000 miles (40,234 kilometers), whichever comes first.

The drag link has ball sockets at each end and is attached with a castellated nut and cotter pin.

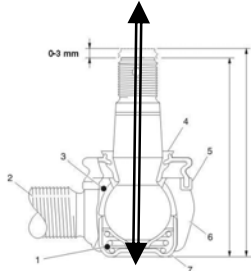

1. Pressure Spring
2. Joint Shaft
3. Ball Race
4. Boot Opening
5. Sealing Boot with Retaining Ring
6. Housing
7. End Cap

**DANGER! Any movement along the axis indicated by the line with arrows requires placing the vehicle out of service for immediate drag link or socket replacement.**

This inspection is done by pushing and pulling on the drag link to see if there is any movement in an axial direction. **Any movement, other than rotational, measured with hand pressure of 50 lbs, requires placing the vehicle out of service for immediate drag link or socket replacement.** Rotational movement is normal and is explained on page 5 of this document. If no movement is detected by hand, the socket is operable.

**IMPORTANT NOTE! The front wheels must be pointed straight ahead when performing this inspection.**

### **Step 1: Inspection at the adjustable end:**

At the steering arm end (i.e., the adjustable end), **push down and pull up** on the drag link in a direction toward the ground by reaching over the driver's side front tire. **Any movement requires placing the vehicle out of service for immediate replacement of the ball socket.**



The adjustable end is the rearmost end and is to be checked by pushing down and pulling up on the drag link.

**Step 2: Inspection at the fixed end:**

At steering gear end (i.e., the fixed end), **push in and pull out** on the drag link in a direction toward the engine. **Any movement, other than rotational, requires placing the vehicle out of service for immediate replacement of the drag link.** Rotational movement is normal and is explained on the bottom of this page.

If no movement is detected by hand, the socket is operable.



At steering gear end (i.e., the fixed end), push in toward the engine and then pull back out.

**Important Note:** Do not use a wrench or other objects to apply leverage when inspecting ball sockets. Applying leverage can damage components, which may ultimately result in loss of steering control.

**Important Note:** Rotational Movement, movement when twisting or rotating the drag link by hand, is normal.

