

Discontinue the chassis power supply under the dash beside the accelerator

Accelerator

1

Ensure the battery disconnect is **OFF** and the shore power is disconnected.

2

At the third compartment from the front on the DS open the door and pull out the battery tray.

3

**Remove front battery:**

1. Remove rear nut and wire lug first.
2. Remove front battery nut and lug.

4

Remove battery hold down strap and remove battery.

5

Flip down the cover of the red fuse holder mounted on the back of the box.

6

Check the rear two wires of the fuse holder, if there is a thick wire (1/0AWG) in the front proceed to **Step 8**. If there is a thin (4AWG) wire in front skip to **Step 10**.

7

Remove the rear two nuts and swap the thick wire (1/0AWG) with the thin wire (4AWG).

8

Torque the nuts to 100in/lbs.

9

Close fuse holder cover and reattach battery cables and strap.

Torque battery cable nuts to 110in/lbs.

10

Reconnect chassis power supply under the dash.

11

12