

WORK INSTRUCTIONS

Knee Airbag (KAB)

NOTICE

- These work instructions are **ONLY** applicable to suspect airbag units being recalled on IMMI Recall Dated 07/25/2019.
 - **Following these instructions will safely disable the suspect airbag until replacement parts are available.**
-

PLEASE READ ENTIRE GUIDE BEFORE BEGINNING WORK

1. **DISCONNECT POWER TO VEHICLE;** either by placing Battery Disconnect Switch in off position or by disconnecting the vehicle battery.

2. Locate the serial number on the product.

This may involve removing the unit from the truck to see the serial number label.

Before proceeding to step 3, verify airbag serial number is officially being recalled.

3. Unplug the airbag unit from the vehicle wiring harness.
4. Cut airbag side of wires 3" from the airbag unit.
5. Strip wire insulation 1/2" on each wire.
6. Twist the wires together by using supplied wire nut or by using a butt splice.
7. Apply AIRBAG INOPERABLE label to the unit visible to the occupant, making sure to cover up the existing SRS label.
8. Install provided terminating resistor into the vehicle wiring harness.
9. Power up the vehicle and verify the fault light self-extinguishes after 5 seconds.
10. For questions or more information, contact:
IMMI Technical Support at 317-867-8391 or 317-867-8323



WORK INSTRUCTIONS

Inflatable Head Curtain (IHC)

NOTICE

- These work instructions are **ONLY** applicable to suspect airbag units being recalled on IMMI Recall Dated 07/25/2019.
 - **Following these instructions will safely disable the suspect airbag until replacement parts are available.**
-

PLEASE READ ENTIRE GUIDE BEFORE BEGINNING WORK

1. **DISCONNECT POWER TO VEHICLE;** either by placing Battery Disconnect Switch in off position or by disconnecting the vehicle battery.

2. Locate the serial number on the product.

This may involve removing the unit from the truck to see the serial number label.

Before proceeding to step 3, verify airbag serial number is officially being recalled.

3. Unplug the airbag unit from the vehicle wiring harness.
4. Cut airbag side of wires 3" from the airbag unit.
5. Strip wire insulation 1/2" on each wire.
6. Twist the wires together by using supplied wire nut or by using a butt splice.
7. Apply AIRBAG INOPERABLE label to the unit visible to the occupant, making sure to cover up the existing SRS label.
8. Install provided terminating resistor into the vehicle wiring harness.
9. Power up the vehicle and verify the fault light self-extinguishes after 5 seconds.
10. For questions or more information, contact:
IMMI Technical Support at 317-867-8391 or 317-867-8323

