



## Coupler Service Limit Gauge

Step 1 - Lift Latch Handle. The coupler must remain in the open position to test. Step 2 — Insert the tool into the Ball socket, with front of the tool being pressed firmly into the lip of the coupler first.

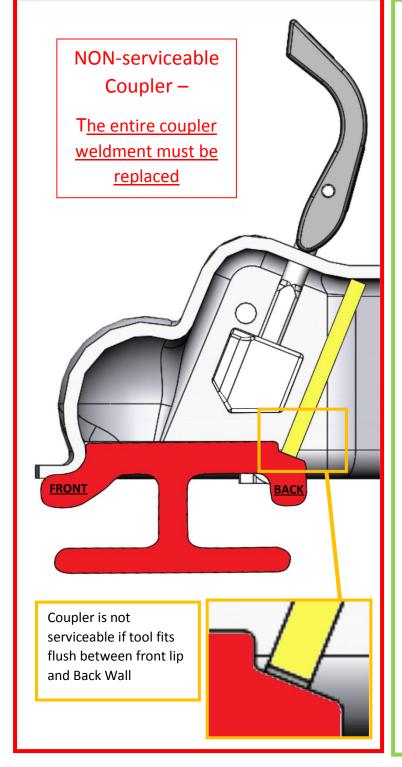

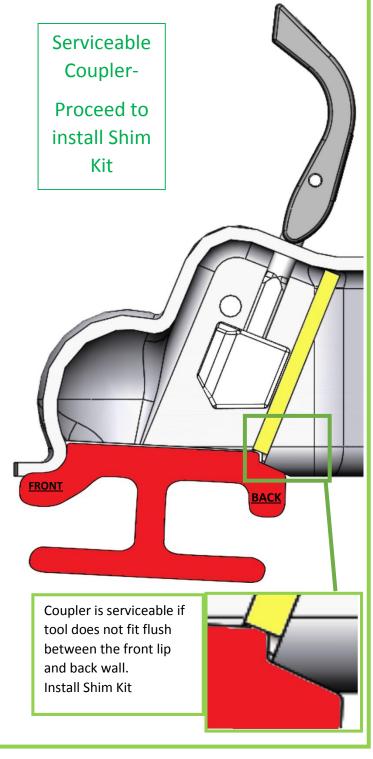

## Coupler quick check tool instructions

