

Installation Instructions

IMPORTANT: Verify the tire size information on the service label matches the actual tire sidewall information before proceeding with this procedure.


1. Open the left front door.



5608526

2. Locate the silver certification label on the lower area of the driver side center pillar. Ensure that the label surface and the area surrounding the label is clean and dry. Use a non-oil based cleaner, preferably isopropyl alcohol (rubbing alcohol) to clean the label surface and the area surrounding the label.

	TIRE SIZE	SPEED RTG	RIM	COLD TIRE PRESSURE
FRT	P225/60R17	H	17X7.5J	240 KPA(35 PSI)
RR	P225/60R17	H	17X7.5J	240 KPA(35 PSI)
SPA	T125/70R16	M	16X4.0BT	420 KPA(60 PSI)

SEE OWNER'S MANUAL  FOR MORE INFORMATION.

5608527

NOTE: The service label only contains the tire information portion of the label, not the complete label. Align the service label with the blank tire size section of the existing label.

3. Remove the backing from the new label.



5609079

4. Apply the label in the location shown and smooth the label from the center out.
5. Close the door.