PORSCHE'

Technical Information

Service 134/21 enu

6

AMB6

AMB6 - Checking Three-Point Belt and Replacing it if Necessary (Stop Delivery/Recall Campaign)

Model Line:	Taycan (Y1A)
Model Year:	As of 2021 up to 2022
Country/Mark- et:	USA (CO2) Canada (C36)
Concerns:	Child locking function on three-point belt
Information:	There is a possibility that the child-seat lock on the three-point belts in the affected vehicles will not always function properly due to a defective locking lever.
	As a result, the legal requirements for the child-seat lock function of the three-point belts may not be met.
Action required	Check the three-point belts affected and replace them if necessary. Information Every vehicle affected by this campaign has been assigned multiple scopes.
	1 scope for testing
	1 - 8 other scopes for replacing the three-point belts, depending on the test result
	Based on production data, it is clear at which position a potentially faulty three-point belt was installed in each vehicle. To determine which three-point belt(s) must be checked, use the PCSS Vehicle Information to determine the scope of the test required for the vehicle. Then check the three-point belt(s) affected. For instructions see: \Rightarrow Technical Information 'Checking three-point belt'
	Depending on the result of the test, the relevant scope must then be selected to carry out the remedial action and the related warranty processing.
Affected Vehicles:	Only vehicles assigned to the campaign (see also PCSS Vehicle Information).
Parts require	ed
	If necessary remove the parts from the corresponding invoicing scope after checking the three-point

belt(s).

For invoicing scopes, see

 \Rightarrow Technical Information 'Warranty processing'

Required tools



Information

The Taycan (Y1A) is equipped as standard with a lithium starter battery.

Lithium starter batteries must only be charged using a suitable battery charger that has a current and voltage-controlled charge map.

For further information about the battery chargers to be used, see \Rightarrow Workshop Manual '270689 Charging battery/vehicle electrical system'.



Information

No tools are required for checking the three-point belts.

Tools:

- Battery charger with a current rating of at least 90 A, and also with a current and voltage-controlled charge map for lithium starter batteries, e.g. VAS 5908 battery charger 90 A.
- 9900 PIWIS Tester 3 •
- Torque wrench, 2 10 Nm (1.5 7.5 ftlb.), e.g. VAG 1783 Torque wrench, 2-10 Nm (1.5-7.5 • ftlb.)
- Torque wrench, 6 50 Nm (4.5 37 ftlb.), e.g. VAG 1331A Torque wrench, 6-50 Nm (4.5-37 ftlb.)
- Plastic wedge (commercially available)

Checking three-point belt

Work Checking three-point belt

Procedure:

Depending on the test scope assigned to the vehicle, check the appropriate three-point belt/three-point belts.



Information

The test procedure is shown using the rear center seat as an example. The three-point belts for the rear right, rear left and front (passenger's side) seats must be checked in the same way.

1 Insert three-point belt with the seat-belt fastener into the seat-belt buckle and lock it \Rightarrow *Closing three-point belt.*

Information

To check the three-point belts for the rear right, rear left and front (passenger's side) seats, continue with Step 3.



Closing three-point belt

2 Pull belt strap about 200 mm - 250 mm / 7.87 in — 9.84 in out of the belt installing and hold in place with your hand \Rightarrow *Holding belt strap* -Left picture-.



Holding belt strap

3 While holding the belt strap in place with your hand ⇒ Holding belt strap -Right picture- (only for rear center three-point belt), pull the belt strap out fully ⇒ Pulling out belt strap in order to activate the child locking function (ALR automatic locking retractor).



Pulling out belt strap

Allow the belt strap to retract slowly, checking whether an audible click can be heard while it retracts ⇒ Retracting belt strap.

Keep holding the belt strap with your hand (only for rear center three-point belt).



Retracting belt strap

5 As soon as the belt strap has retracted, check whether it can be pulled out again or is blocked ⇒ Pulling out belt strap and checking belt locking system.

When checking the three-point belt(s), if you discover that the **belt strap does not lock**, the three-point belt(s) affected must be replaced. To do this, continue with:

- ⇒ Technical Information '270689 Replacing front (passenger's side) three-point belt' and/or
- ⇒ Technical Information '270689 Replacing rear left / right three-point belt' and/or
- ⇒ Technical Information '270689 Replacing rear centre three-point belt'



Pulling out belt strap and checking belt locking system

If the belt strap blocks and an audible click can be heard when the three-point belt retracts:

Repeat steps 1 to 5 four times

i "

Information The check must be performed five times on all affected three-point belts.

i Information

If the child-lock function does not comply with specifications once during the five checks, the three-point belt in question must be replaced.

If five tests confirm that the child locking function of the three-point belt(s) works according to specifications, the three-point belt(s) do **not** have to be replaced.

If all three-point belts to be checked work according to specifications, the campaign can be completed as follows:

- Enter the campaign in the Warranty and Maintenance booklet
- End of remedial action

Replacing front three-point belt (passenger's side)

Incorrect handling of seat-belt pretensioner unit

- Triggering of seat-belt pretensioner unit
- Observe safety regulations for handling seat-belt pretensioner units. \Rightarrow Workshop Manual '6X00IN Handling and replacing airbag and seat-belt pretensioner units'
- Observe disposal regulations for seat-belt pretensioner units. \Rightarrow Workshop Manual '6X00IN Disposal of ⇒ airbag and seat-belt pretensioner units'
- After disconnecting the battery, wait 1 minute before disconnecting the seat-belt pretensioner unit. ⇒
- Set aside the remote control and disconnect the battery. Route or insulate the ground strap so that all ⇒ contact with a ground carrier is avoided. \Rightarrow Workshop Manual '978519 Removing and installing ground strap for battery'
- If removed for an extended period, the seat-belt pretensioner unit must be stored in a safe place.
- Transport the seat-belt pretensioner unit in such a way that the belt strap can retract safely if it is ⇒ actuated.



Information

Dispose of replaced and non-ignited airbag and seat-belt pretensioner units in accordance with local legal requirements and transport regulations.

Preparatory work Work 1

Procedure:

Remove B-pillar trim panel (lower part). \Rightarrow Workshop Manual '706719 Removing and installing B-pillar trim panel (lower part)'

- 2 Remove the B-pillar trim panel (upper part). \Rightarrow Workshop Manual '70671901 Removing and installing the B-pillar trim panel (upper part)'
- 3 Remove rear seat. \Rightarrow Workshop Manual '724819 Removing and installing rear seat'
- Remove (lower part of) C-pillar trim panel. 4 \Rightarrow Workshop Manual '706819 Removing and installing C-pillar trim panel (lower part)'

AfterSales

6		Service u134/21	Technical Information
<u> </u>	5 F - 6 F - 7 F - 8 F	Remove (rear) inner door sill trim. \Rightarrow Workshop Manual '680519 Removing and installing (real Remove dashboard trim panel. \Rightarrow Workshop Manual '701619 Removing and installing das Remove front side-section trim panel. \Rightarrow Workshop Manual '702419 Removing and installing from Remove (front) inner door sill trim. \Rightarrow Workshop Manual '68051901 Removing and installing (shboard trim panel' nt side-section trim panel'
Work Procedu	ire: – F F	acing three-point belt Replace front three-point belt (passenger's side). For instructions see: \Rightarrow Workshop Manual '691119 Removing and installing from	nt three point balt'
Work Procedu	a - Conc	\Rightarrow workshop Manual 091119 Reflecting and installing for and \Rightarrow Workshop Manual '691155 Replacing front three-point i cluding work	

- Install (front) inner door sill trim.
 ⇒ Workshop Manual '68051901 Removing and installing (front) inner door sill trim'
 - 2 Install front side-section trim panel. ⇒ Workshop Manual '702419 Removing and installing front side-section trim panel'
 - 3 Install (rear) inner door sill trim. ⇒ Workshop Manual '680519 Removing and installing (rear) inner door sill trim'
 - 4 Install dashboard trim panel. ⇒ Workshop Manual '701619 Removing and installing dashboard trim panel'



Information

Unless another three-point belt has to be replaced, continue with Step 5. If one or more rear three-point belts also have to be replaced, continue directly with:

• ⇒ Technical Information '701619 Replacing rear left / right three-point belt'

or

- ⇒ Technical Information '701619 Replacing rear centre three-point belt'
- 5 Install (lower part of) C-pillar trim panel. ⇒ Workshop Manual '706819 Removing and installing C-pillar trim panel (lower part)'

- Install rear seat. 6 \Rightarrow Workshop Manual '724819 Removing and installing rear seat'
- 7 Install the B-pillar trim panel (upper part). \Rightarrow Workshop Manual '70671901 Removing and installing the B-pillar trim panel (upper part)'
- Install B-pillar trim panel (lower part). 8 \Rightarrow Workshop Manual '706719 Removing and installing B-pillar trim panel (lower part)'
- 9 Enter the campaign in the Warranty and Maintenance booklet.

Replacing rear left / right three-point belt

WARNING

Incorrect handling of seat-belt pretensioner unit

- Triggering of seat-belt pretensioner unit
- Observe safety regulations for handling seat-belt pretensioner units. \Rightarrow Workshop Manual '6X00IN ⇒ Handling and replacing airbag and seat-belt pretensioner units'
- \Rightarrow Observe disposal regulations for seat-belt pretensioner units. \Rightarrow Workshop Manual '6X00IN Disposal of airbag and seat-belt pretensioner units'
- ⇒ After disconnecting the battery, wait 1 minute before disconnecting the seat-belt pretensioner unit.
- ⇒ Set aside the remote control and disconnect the battery. Route or insulate the ground strap so that all contact with a ground carrier is avoided. \Rightarrow Workshop Manual '978519 Removing and installing ground strap for battery'
- \Rightarrow If removed for an extended period, the seat-belt pretensioner unit must be stored in a safe place.
- ⇒ Transport the seat-belt pretensioner unit in such a way that the belt strap can retract safely if it is actuated.



Information

Dispose of replaced and non-ignited airbag and seat-belt pretensioner units in accordance with local legal requirements and transport regulations.

Work Preparatory work: 1

- Procedure:
- Remove rear seat. \Rightarrow Workshop Manual '724819 Removing and installing rear seat'
- Remove (lower part of) C-pillar trim panel. 2 \Rightarrow Workshop Manual '706819 Removing and installing C-pillar trim panel (lower part)'

Work	Replacing rear left / right three-point belt
Procedure:	 Replace rear left / right three-point belt. For instructions see: ⇒ Workshop Manual '691219 Removing and installing rear three-point belt'
Work	Concluding work
Procedure:	Information Unless another three-point belt has to be replaced, continue with Step 1. If one or more rear three-point belts or the front three-point belt (passenger's side) also has to be replaced, continue directly with:
	• \Rightarrow Technical Information '691219 Replacing front three-point belt (passenger's side)'
	or
	• \Rightarrow Technical Information '691219 Replacing rear centre three-point belt'

- Install (lower part of) C-pillar trim panel.
 ⇒ Workshop Manual '706819 Removing and installing C-pillar trim panel (lower part)'
- 2 Install rear seat. ⇒ Workshop Manual '724819 Removing and installing rear seat'
- 3 Enter the campaign in the Warranty and Maintenance booklet.

Replacing rear center three-point belt

Incorrect handling of seat-belt pretensioner unit

- Triggering of seat-belt pretensioner unit
- ⇒ Observe safety regulations for handling seat-belt pretensioner units. ⇒ Workshop Manual '6X00IN Handling and replacing airbag and seat-belt pretensioner units'
- ⇒ Observe disposal regulations for seat-belt pretensioner units. ⇒ Workshop Manual '6X00IN Disposal of airbag and seat-belt pretensioner units'
- \Rightarrow After disconnecting the battery, wait 1 minute before disconnecting the seat-belt pretensioner unit.
- ⇒ Set aside the remote control and disconnect the battery. Route or insulate the ground strap so that all contact with a ground carrier is avoided. ⇒ Workshop Manual '978519 Removing and installing ground strap for battery'
- \Rightarrow If removed for an extended period, the seat-belt pretensioner unit must be stored in a safe place.
- ⇒ Transport the seat-belt pretensioner unit in such a way that the belt strap can retract safely if it is actuated.

Technical Information

Information

Dispose of replaced and non-ignited airbag and seat-belt pretensioner units in accordance with local legal requirements and transport regulations.

Work Preparatory work:

Procedure:

- Disconnect ground strap for 12-volt vehicle electrical system battery. 1 For instructions see: \Rightarrow Workshop Manual '978519 Removing and installing ground strap for battery'
- 2 Remove rear seat. \Rightarrow Workshop Manual '724819 Removing and installing rear seat'
- 3 Remove side cushion at the left and right. \Rightarrow Workshop Manual '724919 Removing and installing side cushion'
- Remove rear backrest on 2/3-split folding rear seat. 4 ⇒ Workshop Manual '724719 Removing and installing rear backrest'

Information

The rear backrest mount \Rightarrow Workshop Manual '726719 Removing and installing rear backrest mount' does not have to be removed.

- 5 Remove rear-backrest lock. \Rightarrow Workshop Manual '726819 Removing and installing rear-backrest lock'
- Loosen padding for rear backrest to the extent necessary to allow the three-point belt to be 6 removed. This does not require removal of the headrest. For instructions see: \Rightarrow Workshop Manual '745219 Removing and installing padding for rear backrest'

Work	Replacing rear center three-point belt	
Due e e elume		

Procedure:

Replace rear center three-point belt.

- For instructions see: ⇒ Workshop Manual '691219 Removing and installing rear three-point belt'

Work Concluding work

- Procedure:
- 1 Install padding for rear backrest. \Rightarrow Workshop Manual '745219 Removing and installing padding for rear backrest'
- 2 Install rear-backrest lock. ⇒ Workshop Manual '726819 Removing and installing rear-backrest lock'



- 3 Install rear backrest on 2/3-split folding rear seat. ⇒ Workshop Manual '724719 Removing and installing rear backrest'
- 4 Install side cushion at the left and right. ⇒ Workshop Manual '724919 Removing and installing side cushion'

Unless another three-point belt has to be replaced, continue with Step 5. If one or more rear three-point belts or the front three-point belt (passenger's side) also has to be replaced, continue directly with:

• ⇒ Technical Information '724919 Replacing front three-point belt (passenger's side)'

or

- ⇒ Technical Information '724919 Replacing rear left / right three-point belt'
- 5 Install rear seat. ⇒ Workshop Manual '724819 Removing and installing rear seat'
- 6 Connect ground strap for 12-volt vehicle electrical system battery.
 For instructions see:
 ⇒ Workshop Manual '978519 Removing and installing ground strap for battery'
- 7 Follow work instructions after disconnecting the 12-volt vehicle electrical system battery. ⇒ Workshop Manual '2X00IN Work instructions after disconnecting the 12-volt battery'
- 8 Enter the campaign in the Warranty and Maintenance booklet.

Warranty processing

Scope 1: Not relevant for this vehicle type.

Scope 2: Checking three-point belt in front (passenger side), rear left, rear right and rear center

Checking three-point belts Includes: Checking 4 three-point belts

Labor time: 35 TU

 \Rightarrow Damage Code AMB6 99 000 1

Scope 3:	Checking three-point belt, front (passenger side)	
	Checking three-point belt Includes: Checking 1 three-point belt	Labor time: 29 TU
	\Rightarrow Damage Code AMB6 99 000 1	
Scope 4:	Check rear left three-point belt	
	Checking three-point belt Includes: Checking 1 three-point belt	Labor time: 29 TU
	\Rightarrow Damage Code AMB6 99 000 1	
Scope 5:	Checking rear right three-point belt	
	Checking three-point belt Includes: Checking 1 three-point belt	Labor time: 29 TU
	⇒ Damage Code AMB6 99 000 1	
Scope 6:	Checking three-point belt on rear left and rear center	
	Checking three-point belts Includes: Checking 2 three-point belts	Labor time: 31 TU
	\Rightarrow Damage Code AMB6 99 000 1	
Scope 7:	Checking three-point belt on rear left and rear right	
	Checking three-point belts Includes: Checking 2 three-point belts	Labor time: 31 TU
	⇒ Damage Code AMB6 99 000 1	

Scope 8: Checking three-point belt in front (passenger's side) and rear left

Checking three-point belts Includes: Checking 2 three-point belts Labor time: 31 TU

 \Rightarrow Damage Code AMB6 99 000 1

Scope 9: Checking three-point belt in front (passenger's side) and rear right

Checking three-point belts Includes: Checking 2 three-point belts Labor time: 31 TU

 \Rightarrow Damage Code AMB6 99 000 1

Scope 10: Checking three-point belt at rear left, rear right and rear center

Checking three-point belts Includes: Checking 3 three-point belts Labor time: 33 TU

 \Rightarrow Damage Code AMB6 99 000 1

Scope 11: Checking three-point belt in front (passenger side), rear left and rear right

Checking three-point belts Includes: Checking 3 three-point belts Labor time: 33 TU

 \Rightarrow Damage Code AMB6 99 000 1

Scope 12: Checking three-point belt in front (passenger side), rear left and rear center

Checking three-point belts Includes: Checking 3 three-point belts Labor time: 33 TU

 \Rightarrow Damage Code AMB6 99 000 1

Г

6

Scope 13: Checking and replacing rear left three-point belt

Checking and replacing rear le Includes: Checking three- Replacing rear le		Labor time: 67 TU	
Select the relevant version (co	lor) of the three-point belt and specify it in the war	ranty claim.	
Required part numbers:	Designation – Use	Qty.	
9J1857805J A23	\Rightarrow Three-point seat belt, black – rear left	1 ea.	
or			
9J1857805J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear left	1 ea.	
or			
9J1857805J OH5	\Rightarrow Three-point seat belt, chalk beige – rear left	1 ea.	
or			
9J1857805J 019	\Rightarrow Three-point seat belt, atacama beige – rear left	1 ea.	
or			
9J1857805J OL8	\Rightarrow Three-point seat belt, chalk – rear left	1 ea.	
or			
9J1857805J OS1	\Rightarrow Three-point seat belt, truffle brown – rear left	1 ea.	
or			
9J1857805J OU6	\Rightarrow Three-point seat belt, slate grey – rear left	1 ea.	
or			
9J1857805J OW4	\Rightarrow Three-point seat belt, blackberry rear left	1 ea.	
Additional parts required for replacing the three-point belt			
N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling – belt reel	2 ea.	
⇒ Damage Code AMB6 99	000, Repair Code 2		

Г

Scope 14: Checking and replacing rear center three-point belt

Checking and replacing rear center three-point belt Includes: Checking three-point belt Replacing rear center three-point belt		point belt	Labor time: 118 TU
Required part	numbers:	Designation	Qty.
9J1857807E A	23	\Rightarrow Three-point seat belt, black – rear center	1 ea.
N 98926102		⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling – belt reel	2 ea.
⇒ Damage Code AMB6 99 000, Repair Code 2			

Scope 15: Checking and replacing rear right three-point belt

Checking and replacing rear ri Includes: Checking three- Replacing rear r	Labor time: 67 TU		
Select the relevant version (co	olor) of the three-point belt and specify it in the wa	rranty claim.	
Required part numbers:	Designation	Qty.	
9J1857806J A23	\Rightarrow Three-point seat belt, black – rear right	1 ea.	
or			
9J1857806J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear right	1 ea.	
or			
9J1857806J OH7	\Rightarrow Three-point seat belt, graphite blue – rear right	1 ea.	
or			
9J1857806J OL8	\Rightarrow Three-point seat belt, chalk – rear right	1 ea.	
or			
9J1857806J OU6	\Rightarrow Three-point seat belt, slate grey – rear right	1 ea.	

Technical Information			Service 134/21 ENU AMB6 6		
	Additional parts required	for replacing the three-point belt			
	N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling – belt reel	2 ea.		
	\Rightarrow Damage Code AMB6 99	9 000, Repair Code 2			
Scope 16:	Checking and replacing fro	ont three-point belt (passenger's side)		
	Includes: Checking three Replacing from	three-point belt (passenger's side) e-point belt t three-point belt (passenger's side) t-belt pretensioner	Labor time: 146 TU		
	Select the relevant version (color) of the three-point belt and specify it in the warranty claim.				
	Required part numbers:	Designation	Qty.		
	9J1857706J A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QQ 	1 ea.		
	or				
	9J1857706J OG6	 ⇒ Three-point seat belt, bordeaux rea – front (passenger's side) – M-no. 4QQ 	d 1 ea.		
	or				
	9J1857706J OH5	 ⇒ Three-point seat belt, chalk beige – front (passenger's side) – M-no. 4QQ 	1 ea.		
	or				
	9J1857706J OL8	⇒ Three-point seat belt, chalk – front (passenger's side) – M-no. 4QQ	1 ea.		
	or				
	9J1857706J OO3	 ⇒ Three-point seat belt, meranti brov – front (passenger's side) – M-no. 4QQ 	vn 1 ea.		
	or				

6 AMB6 ENU **134/21**

Service

9J1857706J OS1	 ⇒ Three-point seat belt, truffle brown – front (passenger's side) – M-no. 4QQ 	1 ea.	
or			
9J1857706J OU6	 ⇒ Three-point seat belt, slate gray – front (passenger's side) – M-no. 4QQ 	1 ea.	
or			
9J1857706J OW4	 ⇒ Three-point seat belt, blackberry – front (passenger's side) – M-no. 4QQ 	1 ea.	
or with M-no. 4QR			
9J1857706G A23	⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QR 	1 ea.	
or			
9J1857706G OG6	⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QR	1 ea.	
Additional parts required	d for replacing the three-point belt		
N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling (rear) – belt reel (front)	2 ea.	
N 90910102	⇒ Lens-type screw, M5 x 18 – T-hook	1 ea.	
N 91074201	\Rightarrow Internal hexagon round-head bolt, M5 x 16 – belt deflector	1 ea.	
PAF912806	\Rightarrow Internal serration screw – belt installling	1 ea.	
\Rightarrow Damage Code AMB6	99 000. Repair Code 2		
\Rightarrow Damage Code AMB6 99 000, Repair Code 2			

Scope 17: Checking and replacing rear left and rear center three-point belt

Checking rear left and rear cer Includes: Checking three-	Labor time: 148 TU				
Replacing rear le	Replacing rear left and rear center three-point belt				
Select the relevant version (co	lor) of the three-point belt and specify it in the war	ranty claim.			
Required part numbers:	Designation	Qty.			
9J1857805J A23	\Rightarrow Three-point seat belt, black – rear left	1 ea.			
or					
9J1857805J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear left	1 ea.			
or					
9J1857805J OH5	\Rightarrow Three-point seat belt, chalk beige – rear left	1 ea.			
or					
9J1857805J OI9	\Rightarrow Three-point seat belt, atacama beige – rear left	1 ea.			
or					
9J1857805J OL8	\Rightarrow Three-point seat belt, chalk – rear left	1 ea.			
or					
9J1857805J OS1	\Rightarrow Three-point seat belt, truffle brown – rear left	1 ea.			
or					
9J1857805J OU6	\Rightarrow Three-point seat belt, slate grey – rear left	1 ea.			
or					
9J1857805J OW4	\Rightarrow Three-point seat belt, blackberry rear left	1 ea.			
and	and				
9J1857807E A23	\Rightarrow Three-point seat belt, black – rear center	1 ea.			
Additional parts required for replacing the three-point belt					

6	Service	Techr	nical Information	
U AMB	6 ENU 134/21			
	N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt reel – belt installling	4 ea.	
	\Rightarrow Damage Code AMB6 99	9 000, Repair Code 2		
Scope 18:	Checking and replacing rea	ar right and rear center three-point belt		
	Checking rear right and rear of Includes: Checking three Replacing rear	-	Labor time: 148 TU	
	Select the relevant version (color) of the three-point belt and specify it in the warranty claim.			
	Required part numbers:	Designation	Qty.	
	9J1857806J A23	\Rightarrow Three-point seat belt, black – rear right	1 ea.	
	or			
	9J1857806J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear right	1 ea.	
	or			
	9J1857806J OH7	\Rightarrow Three-point seat belt, graphite blue – rear right	1 ea.	
	or			
	9J1857806J OL8	\Rightarrow Three-point seat belt, chalk – rear right	1 ea.	
	or			
	9J1857806J OU6	\Rightarrow Three-point seat belt, slate grey – rear right	1 ea.	
	and			
	9J1857807E A23	\Rightarrow Three-point seat belt, black – rear center	1 ea.	
	Additional parts required f	or replacing the three-point belt		
	N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt reel – belt installling	4 ea.	
	\Rightarrow Damage Code AMB6 99	000, Repair Code 2		

Г

6

Scope 19: Checking and replacing rear left and rear right three-point belt

	r right three-point belt ree-point belts ear left and rear right three-point belt	Labor time: 89 TU
Select the relevant version	n (color) of the three-point belt and specify it in the v	warranty claim.
Required part numbers	: Designation	Qty.
9J1857806J A23	\Rightarrow Three-point seat belt, black – rear right	1 ea.
or		
9J1857806J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear right	1 ea.
or		
9J1857806J OH7	\Rightarrow Three-point seat belt, graphite blue – rear right	1 ea.
or		
9J1857806J OL8	\Rightarrow Three-point seat belt, chalk – rear right	1 ea.
or		
9J1857806J OU6	\Rightarrow Three-point seat belt, slate grey – rear right	1 ea.
and		
9J1857805J A23	\Rightarrow Three-point seat belt, black – rear left	1 ea.
or		
9J1857805J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear left	1 ea.
or		
9J1857805J OH5	\Rightarrow Three-point seat belt, chalk beige – rear left	1 ea.
or		

9J1857805J 019	\Rightarrow Three-point seat belt, atacama beige – rear left	1 ea.
or		
9J1857805J OL8	\Rightarrow Three-point seat belt, chalk – rear left	1 ea.
or		
9J1857805J OS1	\Rightarrow Three-point seat belt, truffle brown – rear left	1 ea.
or		
9J1857805J OU6	\Rightarrow Three-point seat belt, slate grey – rear left	1 ea.
or		
9J1857805J OW4	\Rightarrow – Three-point seat belt, blackberry – rear left	1 ea.
Additional parts required fo	or replacing the three-point belt	
N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt reel – belt installling	4 ea.
\Rightarrow Damage Code AMB6 99	000, Repair Code 2	

Scope 20: Checking and replacing three-point belt in front (passenger's side) and rear left

Checking al	nd replacing three	-point belt in front (passenger's side) ar	nd Labor time: 169 TU
Includes:	rear left	point belt -point belt in front (passenger's side) ar pelt pretensioner	nd
Select the r	elevant version (co	blor) of the three-point belt and specify	it in the warranty claim.
Required p	oart numbers:	Designation	Qty.
9J1857706	5J A23	⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QQ	1 ea.
or			

Technical Information

Service

134/21 enu

6

AMB6

9J1857706J OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OH5	 ⇒ Three-point seat belt, chalk beige – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OL8	 ⇒ Three-point seat belt, chalk – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J 003	 ⇒ Three-point seat belt, meranti brown – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OS1	 ⇒ Three-point seat belt, truffle brown – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OU6	 ⇒ Three-point seat belt, slate gray – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OW4	 ⇒ Three-point seat belt, blackberry – front (passenger's side) – M-no. 4QQ 	1 ea.
or with M-no. 4QR		
9J1857706G A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QR 	1 ea.
or		
9J1857706G OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QR 	1 ea.
and		
9J1857805J A23	⇒ Three-point seat belt, black – rear left	1 ea.

6 Service AMB6 ENU 134/21

Technical Information

or		
9J1857805J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear left	1 ea.
or		
9J1857805J OH5	\Rightarrow Three-point seat belt, chalk beige – rear left	1 ea.
or		
9J1857805J Ol9	\Rightarrow Three-point seat belt, atacama beige – rear left	1 ea.
or		
9J1857805J OL8	\Rightarrow Three-point seat belt, chalk – rear left	1 ea.
or		
9J1857805J OS1	\Rightarrow Three-point seat belt, truffle brown – rear left	1 ea.
or		
9J1857805J OU6	\Rightarrow Three-point seat belt, slate grey – rear left	1 ea.
or		
9J1857805J OW4	\Rightarrow – Three-point seat belt, blackberry – rear left	1 ea.
Additional parts required fo	r replacing the three-point belt	
N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling (rear) – belt reel (front / rear)	4 ea.
N 90910102	⇒ Lens-type screw, M5 x 18 – T-hook	1 ea.
N 91074201	\Rightarrow Internal hexagon round-head bolt, M5 x 16 – belt deflector	1 ea.
PAF912806	\Rightarrow Internal serration screw – belt installling	1 ea.
\Rightarrow Damage Code AMB6 99	000, Repair Code 2	

Scope 21: Checking and replacing three-point belt in front (passenger's side) and rear right

Checking an rear right	d replacing three	point belt in front (passenger's side) and	Labor time: 158 TU
Includes:	rear right	point belt -point belt in front (passenger's side) and elt pretensioner	
Select the re	elevant version (co	blor) of the three-point belt and specify it in the war	ranty claim.
Required p	art numbers:	Designation	Qty.
9J1857706	J A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706	J OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706	J OH5	 ⇒ Three-point seat belt, chalk beige – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706	J OL8	 ⇒ Three-point seat belt, chalk – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706	J 003	 ⇒ Three-point seat belt, meranti brown – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706	JOS1	 ⇒ Three-point seat belt, truffle brown – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706	J OU6	 ⇒ Three-point seat belt, slate gray – front (passenger's side) – M-no. 4QQ 	1 ea.
or			

6 AMB6 ENU **134/21**

Service

9J1857706J OW4	 ⇒ Three-point seat belt, blackberry – front (passenger's side) – M-no. 4QQ 	1 ea.
or for M-no. 4QR		
9J1857706G A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QR 	1 ea.
or		
9J1857706G OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QR 	1 ea.
and		
9J1857806J A23	\Rightarrow Three-point seat belt, black – rear right	1 ea.
or		
9J1857806J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear right	1 ea.
or		
9J1857806J OH7	\Rightarrow Three-point seat belt, graphite blue – rear right	1 ea.
or		
9J1857806J OL8	\Rightarrow Three-point seat belt, chalk – rear right	1 ea.
or		
9J1857806J OU6	\Rightarrow Three-point seat belt, slate grey – rear right	1 ea.
Additional parts required for	or replacing the three-point belt	
N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling (rear) – belt reel (front / rear)	3 ea.
N 90910102	⇒ Lens-type screw, M5 x 18 – T-hook	1 ea.
N 91074201	\Rightarrow Internal hexagon round-head bolt, M5 x 16 – belt deflector	1 ea.
PAF912806	\Rightarrow Internal serration screw – belt installling	1 ea.
\Rightarrow Damage Code AMB6 99	000, Repair Code 2	

Г

Scope 22: Checking and replacing three-point belt in front (passenger's side) and rear center

Checking and rear center	d replacing three	point belt in front (passenger's side) and	Labor time: 222 TU
Includes:	rear center	point belt -point belt in front (passenger's side) and elt pretensioner	
Select the re	levant version (co	plor) of the three-point belt and specify it in the war	ranty claim.
Required pa	art numbers:	Designation	Qty.
9J1857706.	J A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706.	I OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706.	I OH5	 ⇒ Three-point seat belt, chalk beige – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706.	I OL8	 ⇒ Three-point seat belt, chalk – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706.	1003	 ⇒ Three-point seat belt, meranti brown – front (passenger's side) – M-no. 4QQ 	1 ea.
or			
9J1857706.	IOS1	 ⇒ Three-point seat belt, truffle brown – front (passenger's side) – M-no. 4QQ 	1 ea.
or			

9J1857706J OU6	 ⇒ Three-point seat belt, slate gray – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OW4	 ⇒ Three-point seat belt, blackberry – front (passenger's side) – M-no. 4QQ 	1 ea.
or for M-no. 4QR		
9J1857706G A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QR 	1 ea.
or		
9J1857706G OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QR 	1 ea.
and		
9J1857807E A23	\Rightarrow Three-point seat belt, black – rear center	1 ea.
Additional parts required for	or replacing the three-point belt	
N 98926102	 ⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling (rear) – belt reel (front / rear) 	4 ea.
N 90910102	⇒ Lens-type screw, M5 x 18 – T-hook	1 ea.
N 91074201	\Rightarrow Internal hexagon round-head bolt, M5 x 16 – belt deflector	1 ea.
PAF912806	\Rightarrow Internal serration screw – belt installling	1 ea.
\Rightarrow Damage Code AMB6 99	000, Repair Code 2	

Scope 23: Checking and replacing rear left, rear right and rear center three-point belt

Checking rear left, rear right a Includes: Checking three- Replacing rear b		Labor time: 171 TU
	lor) of the three-point belt and specify it in the war	ranty claim.
Required part numbers:	Designation	Qty.
9J1857806J A23	\Rightarrow Three-point seat belt, black – rear right	1 ea.
or		
9J1857806J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear right	1 ea.
or		
9J1857806J OH7	\Rightarrow Three-point seat belt, graphite blue – rear right	1 ea.
or		
9J1857806J OL8	\Rightarrow Three-point seat belt, chalk – rear right	1 ea.
or		
9J1857806J OU6	\Rightarrow Three-point seat belt, slate grey – rear right	1 ea.
and		
9J1857805J A23	\Rightarrow Three-point seat belt, black – rear left	1 ea.
or		
9J1857805J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear left	1 ea.
or		
9J1857805J OH5	\Rightarrow Three-point seat belt, chalk beige – rear left	1 ea.
or		
9J1857805J OI9	\Rightarrow Three-point seat belt, atacama beige – rear left	1 ea.
or		
9J1857805J OL8	\Rightarrow Three-point seat belt, chalk – rear left	1 ea.

or		
9J1857805J OS1	\Rightarrow Three-point seat belt, truffle brown – rear left	1 ea.
or		
9J1857805J OU6	\Rightarrow Three-point seat belt, slate grey – rear left	1 ea.
or		
9J1857805J OW4	\Rightarrow – Three-point seat belt, blackberry – rear left	1 ea.
and		
9J1857807E A23	\Rightarrow Three-point seat belt, black – rear center	1 ea.
Additional parts required for	or replacing the three-point belt	
N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling – belt reel	6 ea.
\Rightarrow Damage Code AMB6 99	000, Repair Code 2	

Scope 24: Checking and replacing three-point belt in front (passenger side), rear right and rear center

1			
Checking ar right and rea Includes:	ar center Checking three-p	point belt in front (passenger's side), rear enter	Labor time: 233 TU
Select the r	elevant version (co	lor) of the three-point belt and specify it in the	warranty claim.
	, ,	, , , , , , , , , , , , , , , , , , , ,	5
Poquirodr			
I vedanen h	oart numbers:	Designation	Qty.
9J1857706		Designation ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QQ	Qty. 1 ea.
		⇒ Three-point seat belt, black – front (passenger's side)	-

Technical Information

Service

134/21 ENU AMB6

6

or		
9J1857706J OH5	 ⇒ Three-point seat belt, chalk beige – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OL8	 ⇒ Three-point seat belt, chalk – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OO3	 ⇒ Three-point seat belt, meranti brown – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OS1	 ⇒ Three-point seat belt, truffle brown – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OU6	⇒ Three-point seat belt, slate gray – front (passenger's side) – M-no. 4QQ	1 ea.
or		
9J1857706J OW4	 ⇒ Three-point seat belt, blackberry – front (passenger's side) – M-no. 4QQ 	1 ea.
or for M-no. 4QR		
9J1857706G A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QR 	1 ea.
or		
9J1857706G OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QR 	1 ea.
and		
9J1857806J A23	\Rightarrow Three-point seat belt, black – rear right	1 ea.
or		

9J1857806J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear right	1 ea.			
or					
9J1857806J OH7	\Rightarrow Three-point seat belt, graphite blue – rear right	1 ea.			
or					
9J1857806J OL8	\Rightarrow Three-point seat belt, chalk – rear right	1 ea.			
or					
9J1857806J OU6	\Rightarrow Three-point seat belt, slate grey – rear right	1 ea.			
and					
9J1857807E A23	\Rightarrow Three-point seat belt, black – rear center	1 ea.			
Additional parts required for	Additional parts required for replacing the three-point belt				
N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling (rear) – belt reel (front / rear)	5 ea.			
N 90910102	⇒ Lens-type screw, M5 x 18 – T-hook	1 ea.			
N 91074201	\Rightarrow Internal hexagon round-head bolt, M5 x 16 – belt deflector	1 ea.			
PAF912806	\Rightarrow Internal serration screw – belt installling	1 ea.			
⇒ Damage Code AMB6 99 000, Repair Code 2					

Scope 25: Checking and replacing three-point belt in front (passenger side), rear left and rear center

Checking and replacing three-point belt in front (passenger's side), rear Labor time left and rear center		Labor time: 244 TU	
Includes:	Checking three-point belts		
	Replacing three-point belt in front (passenger's side), rear		
	left and rear center		
	Teaching seat belt pretensioner		
Select the relevant version (color) of the three-point belt and specify it in the warranty claim.			

Technical Information

Service

134/21 ENU

6

AMB6

Required part numbers:DesignationQty.9J1857706J A23 \Rightarrow Three-point seat belt, black1 ea front (passenger's side) $-$ M-no. 4QQor \Rightarrow Three-point seat belt, bordeaux red1 ea.9J1857706J 0G6 \Rightarrow Three-point seat belt, bordeaux red1 ea front (passenger's side) $-$ M-no. 4QQ1 ea.or \Rightarrow Three-point seat belt, chalk beige1 ea.9J1857706J 0H5 \Rightarrow Three-point seat belt, chalk beige1 ea.or $-$ front (passenger's side) $-$ M-no. 4QQor $-$ front (passenger's side)1 ea. $-$ front (passenger's side) $-$ M-no. 4QQor $-$ front (passenger's side)1 ea. $-$ front (passenger's side) $-$ M-no. 4QQor $-$ front (passenger's side)1 ea. $-$ front (passenger's side) $-$ M-no. 4QQor $-$ front (passenger's side)1 ea. $-$ front (passenger's side)
- front (passenger's side) - M-no. 4QQor9J1857706J0G6 \Rightarrow Three-point seat belt, bordeaux red - front (passenger's side) - M-no. 4QQor9J1857706J0H5 \Rightarrow Three-point seat belt, chalk beige - front (passenger's side) - front (passenger's side) - M-no. 4QQor9J1857706J0H5 \Rightarrow Three-point seat belt, chalk beige - M-no. 4QQor9J1857706J0H5 \Rightarrow Three-point seat belt, chalk beige - M-no. 4QQImage: state belt of the search of the
9J1857706J0G6 \Rightarrow Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QQ1 ea.or9J1857706J0H5 \Rightarrow Three-point seat belt, chalk beige – front (passenger's side) – M-no. 4QQ1 ea.or9J1857706J0H5 \Rightarrow Three-point seat belt, chalk beige – M-no. 4QQ1 ea.or \Rightarrow Three-point seat belt, chalk beige – M-no. 4QQ1 ea.
- front (passenger's side) - M-no. 4QQor9J1857706J0H5 \Rightarrow Three-point seat belt, chalk beige - front (passenger's side) - M-no. 4QQoror9J1857706J0L8 \Rightarrow Three-point seat belt, chalk1 ea.
9J1857706J0H5 ⇒ Three-point seat belt, chalk beige 1 ea. - front (passenger's side) - M-no. 4QQ or 9J1857706J0L8 ⇒ Three-point seat belt, chalk 1 ea.
- front (passenger's side) - M-no. $4QQ$ or 9J1857706J0L8 \Rightarrow Three-point seat belt, chalk 1 ea.
9J1857706J OL8 \Rightarrow Three-point seat belt, chalk 1 ea.
- M-no. 4QQ
or
9J1857706J003 \Rightarrow Three-point seat belt, meranti brown1 ea front (passenger's side)- M-no. 4QQ
or
9J1857706JOS1 \Rightarrow Three-point seat belt, truffle brown1 ea front (passenger's side)- M-no. 4QQ
or
9J1857706J0U6 \Rightarrow Three-point seat belt, slate gray1 ea front (passenger's side)- M-no. 4QQ
or
9J1857706JOW4 \Rightarrow Three-point seat belt, blackberry1 ea front (passenger's side)- M-no. 4QQ
or with M-no. 4QR
9J1857706G A23 \Rightarrow Three-point seat belt, black1 ea front (passenger's side)- M-no. 4QR
or

6 Service AMB6 ENU 134/21

Technical Information

9J1857706G OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QR 	1 ea.		
and				
9J1857805J A23	\Rightarrow Three-point seat belt, black – rear left	1 ea.		
or				
9J1857805J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear left	1 ea.		
or				
9J1857805J OH5	\Rightarrow Three-point seat belt, chalk beige – rear left	1 ea.		
or				
9J1857805J OI9	\Rightarrow Three-point seat belt, atacama beige – rear left	1 ea.		
or				
9J1857805J OL8	\Rightarrow Three-point seat belt, chalk – rear left	1 ea.		
or				
9J1857805J OS1	\Rightarrow Three-point seat belt, truffle brown – rear left	1 ea.		
or				
9J1857805J OU6	\Rightarrow Three-point seat belt, slate grey – rear left	1 ea.		
or				
9J1857805J OW4	\Rightarrow – Three-point seat belt, blackberry – rear left	1 ea.		
and				
9J1857807E A23	\Rightarrow Three-point seat belt, black – rear center	1 ea.		
Additional parts required for replacing the three-point belt				
N 98926102	 ⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling (rear) – belt reel (front / rear) 	6 ea.		
N 90910102	⇒ Lens-type screw, M5 x 18 – T-hook	1 ea.		

Technic	al Information		Service 134/21 ENU AMB6 6	
	N 91074201	\Rightarrow Internal hexagon round-head bolt, M – belt deflector	M5 x 16 1 ea.	
	PAF912806	\Rightarrow Internal serration screw – belt installling	1 ea.	
	\Rightarrow Damage Code AMB6 99	000, Repair Code 2		
Scope 26:	Checking and replacing three-point belt in front (passenger side), rear left and rear right			
	left and rear right Includes: Checking three Replacing three left and rear rig Teaching seat b	-point belt in front (passenger's side), rea	ar	
			-	
	Required part numbers:	Designation	Qty.	
	9J1857706J A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M·no. 4QQ 	1 ea.	
	or			
	9J1857706J OG6	⇒ Three-point seat belt, bordeaux rec – front (passenger's side) – M·no. 4QQ	1 ea.	
	or			
	9J1857706J OH5	 ⇒ Three-point seat belt, chalk beige – front (passenger's side) – M-no. 4QQ 	1 ea.	
	or			
	9J1857706J OL8	⇒ Three-point seat belt, chalk – front (passenger's side) – M-no. 4QQ	1 ea.	
	or			
	9J1857706J OO3	⇒ Three-point seat belt, meranti brow – front (passenger's side) – M-no. 4QQ	n 1ea.	
	or			

6 AMB6 ENU **134/21**

Service

Technical Information

9J1857706J OS1	 ⇒ Three-point seat belt, truffle brown – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OU6	 ⇒ Three-point seat belt, slate gray – front (passenger's side) – M-no. 4QQ 	1 ea.
or		
9J1857706J OW4	 ⇒ Three-point seat belt, blackberry – front (passenger's side) – M-no. 4QQ 	1 ea.
or with M-no. 4QR		
9J1857706G A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QR 	1 ea.
or		
9J1857706G OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QR 	1 ea.
and		
9J1857805J A23	\Rightarrow Three-point seat belt, black – rear left	1 ea.
or		
9J1857805J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear left	1 ea.
or		
9J1857805J OH5	\Rightarrow Three-point seat belt, chalk beige – rear left	1 ea.
or		
9J1857805J OI9	\Rightarrow Three-point seat belt, atacama beige – rear left	1 ea.
or		
9J1857805J OL8	\Rightarrow Three-point seat belt, chalk – rear left	1 ea.
or		
9J1857805J OS1	\Rightarrow Three-point seat belt, truffle brown – rear left	1 ea.

Technical Information

Service

134/21 ENU AMB6

6

or		
9J1857805J OU6	\Rightarrow Three-point seat belt, slate grey – rear left	1 ea.
or		
9J1857805J OW4	\Rightarrow – Three-point seat belt, blackberry – rear left	1 ea.
and		
9J1857806J A23	\Rightarrow Three-point seat belt, black – rear right	1 ea.
or		
9J1857806J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear right	1 ea.
or		
9J1857806J OH7	\Rightarrow Three-point seat belt, graphite blue – rear right	1 ea.
or		
9J1857806J OL8	\Rightarrow Three-point seat belt, chalk – rear right	1 ea.
or		
9J1857806J OU6	\Rightarrow Three-point seat belt, slate grey – rear right	1 ea.
Additional parts required f	or replacing the three-point belt	
N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling (rear) – belt reel (front / rear)	5 ea.
N 90910102	⇒ Lens-type screw, M5 x 18 – T-hook	1 ea.
N 91074201	\Rightarrow Internal hexagon round-head bolt, M5 x 16 – belt deflector	1 ea.
PAF912806	\Rightarrow Internal serration screw – belt installling	1 ea.
\Rightarrow Damage Code AMB6 99	000, Repair Code 2	

Service АМВ6 ЕNU 134/21

Scope 27: Checking and replacing three-point belt in front (passenger side), rear left, rear right and rear center Labor time: 256 TU Checking and replacing three-point belt in front (passenger's side), rear left, rear right and rear center Includes: Checking three-point belts Replacing three-point belt in front (passenger's side), rear left, rear right and rear center Teaching seat belt pretensioner Select the relevant version (color) of the three-point belt and specify it in the warranty claim. Required part numbers: Designation Qty. 9J1857706JA23 \Rightarrow Three-point seat belt, black 1 ea. - front (passenger's side) – M-no. **4QQ** or 9J1857706J0G6 \Rightarrow Three-point seat belt, bordeaux red 1 ea. - front (passenger's side) - M-no. 400 or 9J1857706J0H5 \Rightarrow Three-point seat belt, chalk beige 1 ea. - front (passenger's side) - M-no. 400 or 9J1857706J OL8 \Rightarrow Three-point seat belt, chalk 1 ea. - front (passenger's side) - M-no. 400 or 9J1857706J003 \Rightarrow Three-point seat belt, meranti brown 1 ea. - front (passenger's side) - M-no. 4QQ or 9J1857706J OS1 \Rightarrow Three-point seat belt, truffle brown 1 ea. - front (passenger's side) - M-no. 4QQ or 9J1857706J OU6 \Rightarrow Three-point seat belt, slate gray 1 ea. - front (passenger's side) – M-no. **4QQ**

or

Technical Information

Service

134/21 enu

6

AMB6

9J1857706J OW4	 ⇒ Three-point seat belt, blackberry – front (passenger's side) – M-no. 4QQ 	1 ea.	
or for M-no. 4QR			
9J1857706G A23	 ⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QR 	1 ea.	
or			
9J1857706G OG6	 ⇒ Three-point seat belt, bordeaux red – front (passenger's side) – M-no. 4QR 	1 ea.	
and			
9J1857805J A23	\Rightarrow Three-point seat belt, black – rear left	1 ea.	
or			
9J1857805J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear left	1 ea.	
or			
9J1857805J OH5	\Rightarrow Three-point seat belt, chalk beige – rear left	1 ea.	
or			
9J1857805J 0l9	\Rightarrow Three-point seat belt, atacama beige – rear left	1 ea.	
or			
9J1857805J OL8	\Rightarrow Three-point seat belt, chalk – rear left	1 ea.	
or			
9J1857805J OS1	\Rightarrow Three-point seat belt, truffle brown – rear left	1 ea.	
or			
9J1857805J 0U6	\Rightarrow Three-point seat belt, slate grey – rear left	1 ea.	
or			
9J1857805J OW4	\Rightarrow – Three-point seat belt, blackberry – rear left	1 ea.	
and			

Service ENU **134/21** AMB6

9J1857806J A23	\Rightarrow Three-point seat belt, black – rear right	1 ea.	
or			
9J1857806J OG6	\Rightarrow Three-point seat belt in bordeaux red – rear right	1 ea.	
or			
9J1857806J OH7	\Rightarrow Three-point seat belt, graphite blue – rear right	1 ea.	
or			
9J1857806J OL8	\Rightarrow Three-point seat belt, chalk – rear right	1 ea.	
or			
9J1857806J OU6	\Rightarrow Three-point seat belt, slate grey – rear right	1 ea.	
and			
9J1857807E A23	\Rightarrow Three-point seat belt, black – rear center	1 ea.	
Additional parts required for	or replacing the three-point belt		
N 98926102	⇒ Cylinder screw, 7/16" - 20 x 32 – belt installling (rear) – belt reel (front / rear)	7 ea.	
N 90910102	⇒ Lens-type screw, M5 x 18 – T-hook	1 ea.	
N 91074201	\Rightarrow Internal hexagon round-head bolt, M5 x 16 – belt deflector	1 ea.	
PAF912806	\Rightarrow Internal serration screw – belt installling	1 ea.	
⇒ Damage Code AMB6 99 000, Repair Code 2			

Important Notice: Technical Bulletins issued by Porsche Cars North America, Inc. are intended only for use by professional automotive technicians who have attended Porsche service training courses. They are written to inform those technicians of conditions that may occur on some Porsche vehicles, or to provide information that could assist in the proper servicing of a vehicle. Porsche special tools may be necessary in order to perform certain operations identified in these bulletins. Use of tools and procedures other than those Porsche recommends in these bulletins may be detrimental to the safe operation of your vehicle, and may endanger the people working on it. Properly trained Porsche technicians have the equipment, tools, safety instructions, and know how to do the job properly and safely. Part numbers listed in these bulletins are for reference only. The work procedures updated electronically in the Porsche PIWIS diagnostic and testing device take precedence and, in the event of a discrepancy, the work procedures in the PIWIS Tester are the ones that must be followed.

© 2021 Porsche Cars North America, Inc.

Sep 29, 2021 Page 38 of 38