

Brake Light Switch Wiring Correction

1. Open the Front Load Center to inspect the wiring. If a yellow wire with a black stripe and a yellow wire with a red stripe are in terminal 201, proceed to the next step. If not then this procedure is not needed.
2. Move the yellow with black and yellow with red to terminal 195.
3. Find the yellow with green located in the lower Panduit in the steering column loom. Move it to terminal 201.

