

October 11, 2024

Version 3

Safety Recall: 2019–21 Passport Fuel Pump Motor**Supersedes 24-028 dated March 28, 2024, to revise the information.****APPLIES TO**

Year	Model	Trim Level	VIN Range
2019–21	Passport	ALL	Check the iN VIN status for eligibility.

REVISION SUMMARY

Information on the first two pages of this bulletin has been extensively revised. American Honda recommends reviewing this information in its entirety.

BACKGROUND

A certain number of 2019–21 Passport units may have been built with a fuel pump motor or may have been repaired with a fuel pump assembly service part with defective impellers.

Due to swelling of the fuel pump motor impeller, the fuel pump may seize and stop working. A defective impeller may cause the fuel pump to become inoperative, which could prevent an engine from functioning as intended. This limitation may cause a loss of motive power or a stall while being driven, increasing the risk of a crash or injury, creating a safety hazard.

If this bulletin appears during an iN VIN status inquiry, the vehicle is subject to a safety recall. Any affected vehicles in your dealer inventory are on STOP SALE until further notice. Refrain from calling Tech Line for updates.

CUSTOMER NOTIFICATION

Owners of affected vehicles will be sent a notification of this campaign. Do an iN VIN status inquiry to make sure the vehicle is shown as eligible. Some vehicles affected by this campaign may be in your new or used vehicle inventory.

Failure to repair a vehicle subject to a recall or campaign may subject your dealership to claims or lawsuits from the customer or anyone else harmed as a result of such failure. To see if a vehicle in inventory is affected by this safety recall, do a VIN status inquiry before selling it.

CORRECTIVE ACTION

Replace the fuel pump motor.

NOTE: If the vehicle has any of the symptoms listed in BACKGROUND, you must apply this bulletin before attempting any other repairs. If the symptoms remain after the recall repair is complete, only attempt further repairs (such as replacing the high-pressure fuel pump) after authorized troubleshooting.

CUSTOMER INFORMATION: The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by “do-it-yourselfers,” and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Honda automobile dealer.

WARRANTY CLAIM INFORMATION

Operation Number	Description	Flat Rate Time	Defect Code	Symptom Code	Template ID	Failed Part Number
3101EH	Replace the fuel pump.	1.3 hr	6FE00	CGY00	A24028A	17045-TG7-A10

Skill Level: Repair Technician

PARTS INFORMATION

Refer to the Parts Information Bulletin 24-0016, *Multi-Model Fuel Pump Motor Safety Recall Parts Availability*, for details regarding parts availability and ordering.

Part Name	Part Number	Quantity
Fuel Pump Motor Kit	06170-TG7-305	1

For dealers experiencing a strong fuel smell from storing a fuel pump motor replaced under this service bulletin, the fuel pump motor may be disposed of immediately in accordance with local regulations. This only applies to the fuel pump motor replaced under this service bulletin. The published retention policy remains in effect for all other parts.

If you have any questions about this exception or other parts retention issues, contact the WPI Administrative Office at **937-642-2737**.

TOOL INFORMATION

Tool Name	Part Number	Quantity
Fuel Sender Wrench	070AA-T0AA100 or 07AAA-T0AA100	1

NOTE: 070AA-T0AA100 supersedes 07AAA-T0AA100. If your dealership has 07AAA-T0AA100, it can be used for this repair.

REPAIR PROCEDURE

⚠ WARNING


Fuel pump motor removal exposes fuel, which can ignite, causing a fire or explosion.

This can cause serious injury or death.

Always work in a well-ventilated area and keep sparks or open flames away.

1. Insert the emergency fuel fill funnel into the fuel filler neck to relieve the pressure in the fuel tank.


NOTE: The emergency fuel fill funnel is located in the left rear side trim panel.

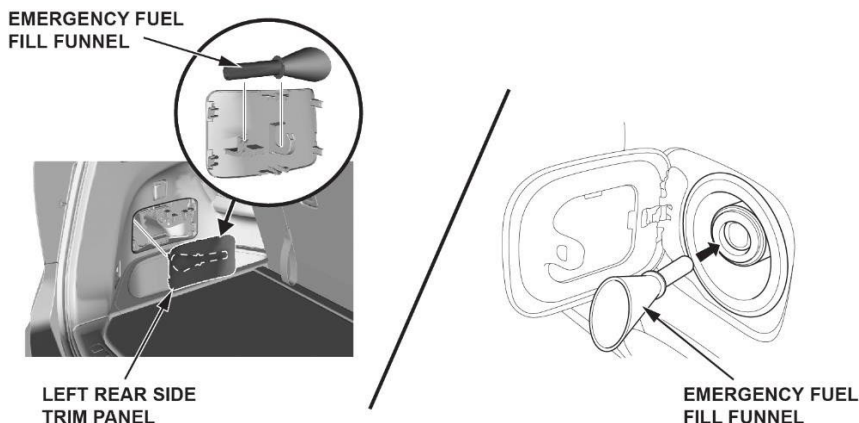

2. Relieve the fuel pressure.

With an i-HDS:


- Connect an i-HDS to the DLC located under the driver's side of the dashboard.

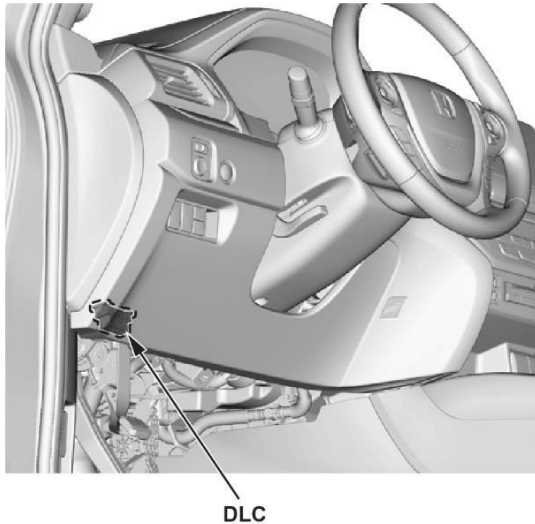

- Turn the ignition to ON.
- Select the **PGM-FI** system on the i-HDS.
- Select FUEL PUMP OFF from the Inspection menu.
- Start the engine and let it idle until it stalls.
NOTE:
 - Do not allow the engine to idle above 1,000 rpm or the PCM will continue to operate the fuel pump.
 - A Pending or Confirmed DTC may be set during this procedure. Check for DTCs and clear them as needed.
- Turn the ignition to OFF.


Without an i-HDS:

- Remove the PGM-FI main relay 2.

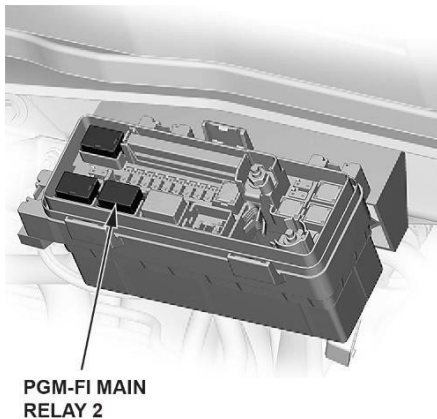


- Start the engine, and let it idle until it stalls.
NOTE: If any DTCs are stored, clear and ignore them.
- Turn the ignition to OFF.
- Install the PGM-FI main relay 2.


3. Remove the front bulkhead cover.

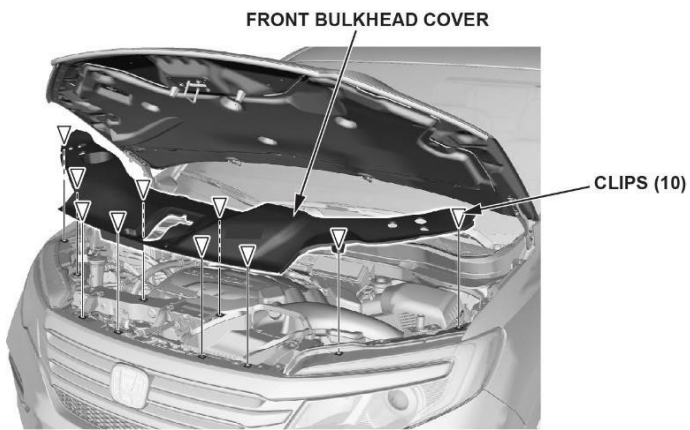

4. Remove the air intake tube.

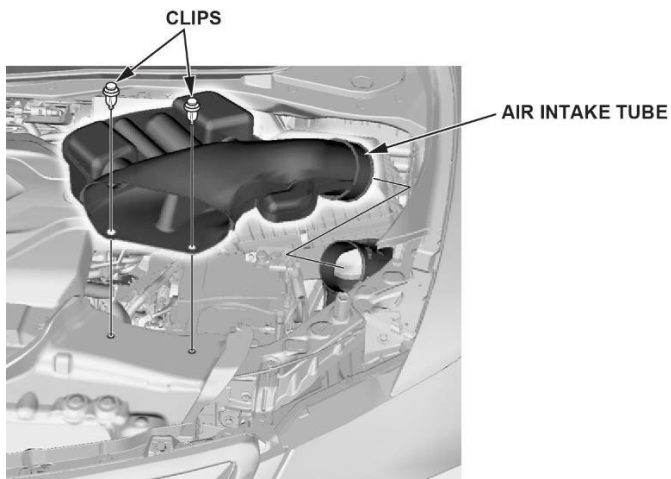

5. Open the positive battery terminal cover.

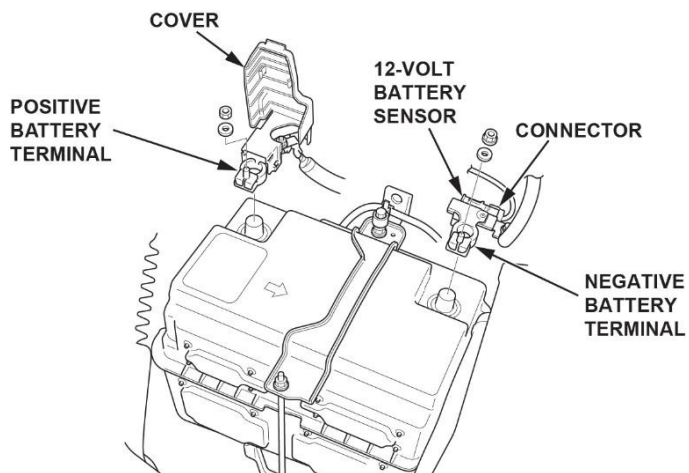

6. Disconnect both 12-volt battery terminals.


NOTICE

To protect the terminal connector from damage, do not hold it when removing the negative terminal.


NOTE:

- Always disconnect the negative terminal first.
- Do not disconnect the 12-volt battery sensor from the cable.


7. Remove the left side second row seat front foot covers.

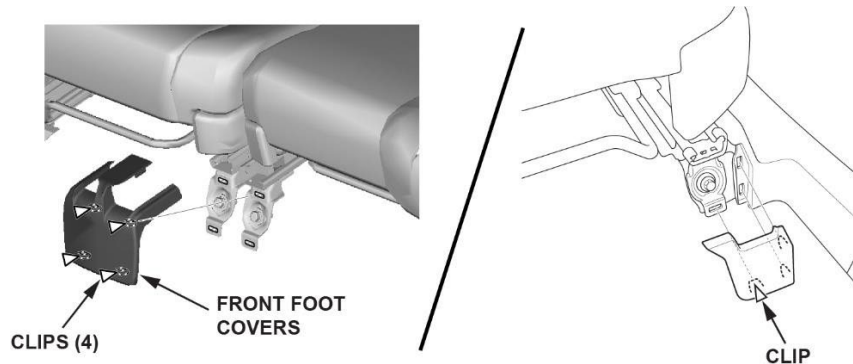


8. Remove the left side second row front seat bolts.

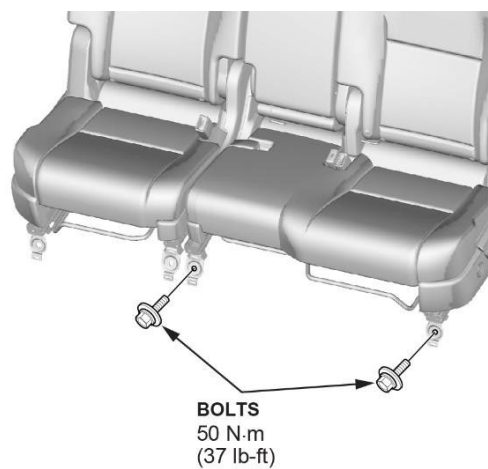


9. Remove the left side rear sill upper trim.

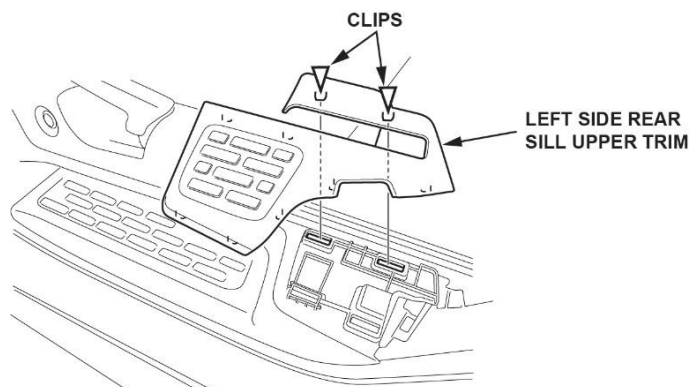


10. Remove the left side rear sill middle trim.

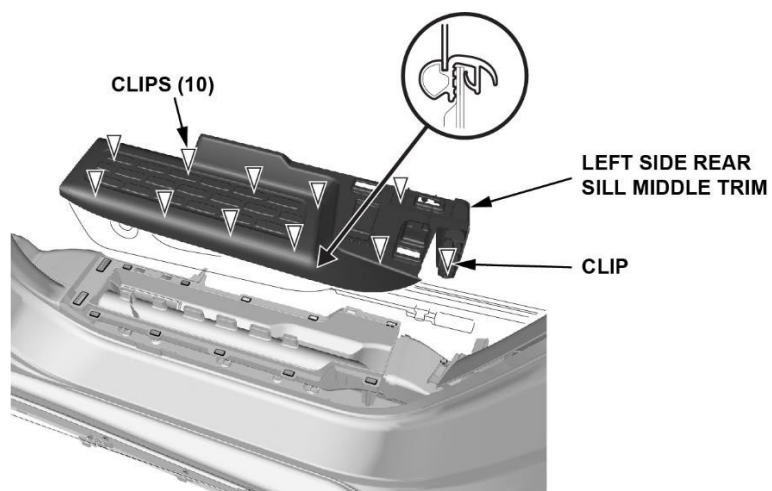


11. Remove the left side rear sill lower trim.

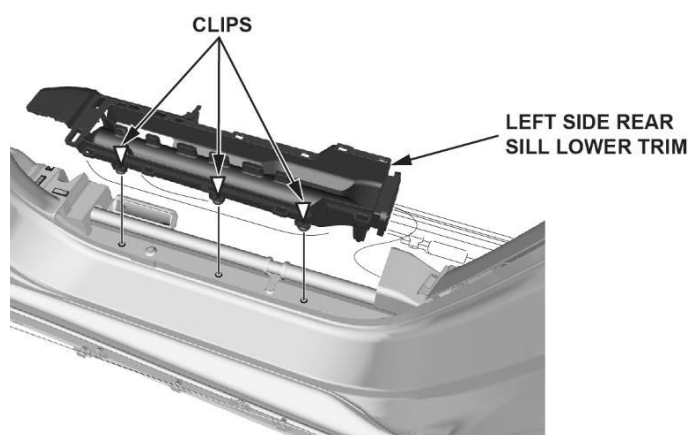


12. Remove the second row seat rear foot cover.

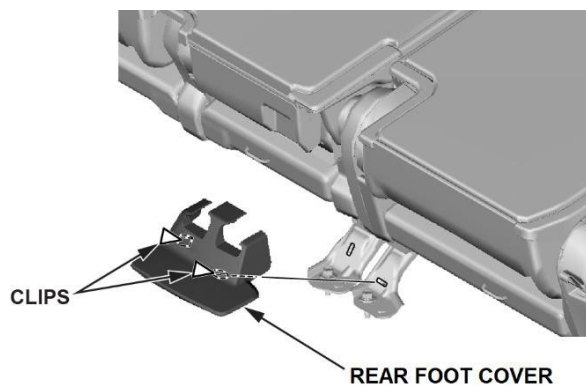

13. Remove the left side second row rear seat bolts.

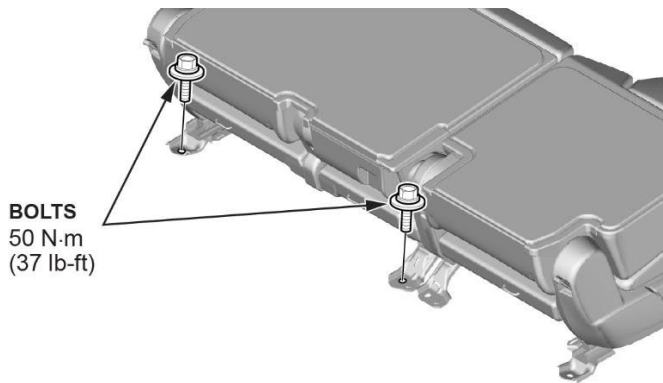


14. Lift up the left side second row seat, and then remove the harness clip and disconnect the connector.

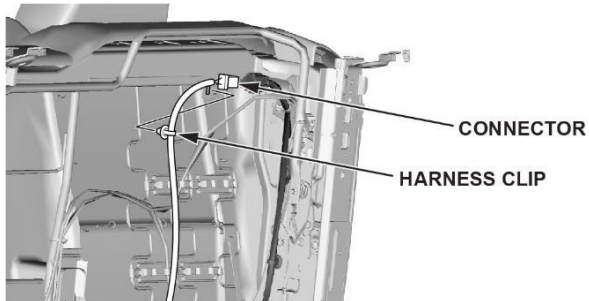


15. Remove the left side second row seat.

16. Remove the fuel tank unit access panel and disconnect the fuel tank unit connector.

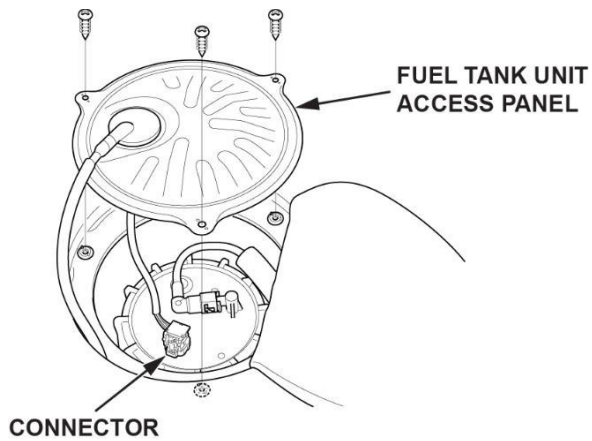


17. Place a rag or shop towel over the quick-connect fitting.

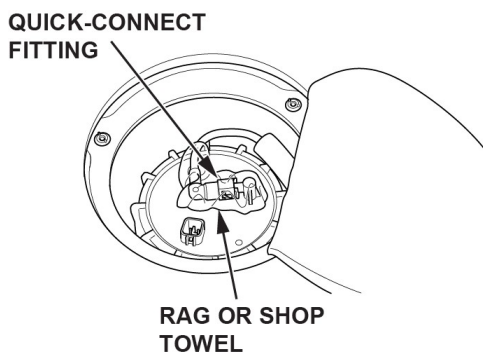

18. Disconnect the quick-connect fitting from the fuel tank unit.

19. Remove the fuel tank unit locknut using the fuel sender wrench (T/N 070AA-T0AA100) as shown.

NOTE: Keep the fuel sender wrench from floating.

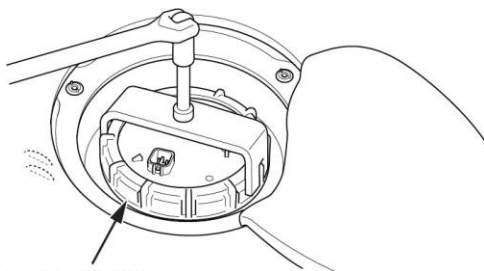


**FUEL TANK
UNIT LOCKNUT**

20. Remove the fuel tank unit locknut, then remove the fuel tank unit.

NOTICE

Do not bend or twist the fuel level sensor arm excessively. This may damage the fuel level sensor or cause it to send inaccurate readings.

NOTE: After unlocking the fuel tank unit cam lock ring, clean the top of the fuel pump flange and adjacent areas to make sure it's free of dirt, dust, and debris.

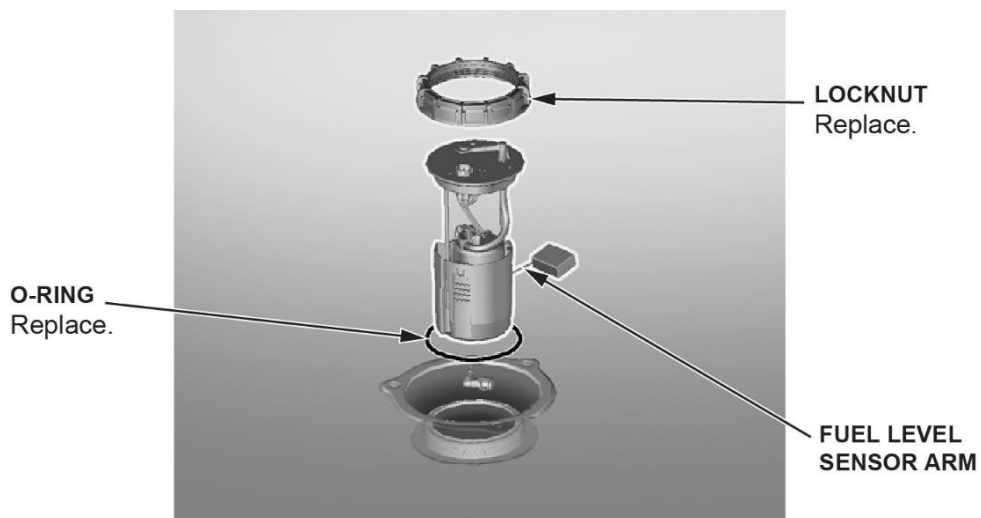


21. Prepare the fuel tank unit and parts to be replaced.

NOTE: Take a photo of the fuel tube and wire harness, and note their routing for assembly. There are various types of routing.


22. Spread the wire harness clamps, and remove the wire harness. Make sure not to damage the wire harness.

NOTICE


Do not spread the clamps too wide. Spreading them too wide may damage them.

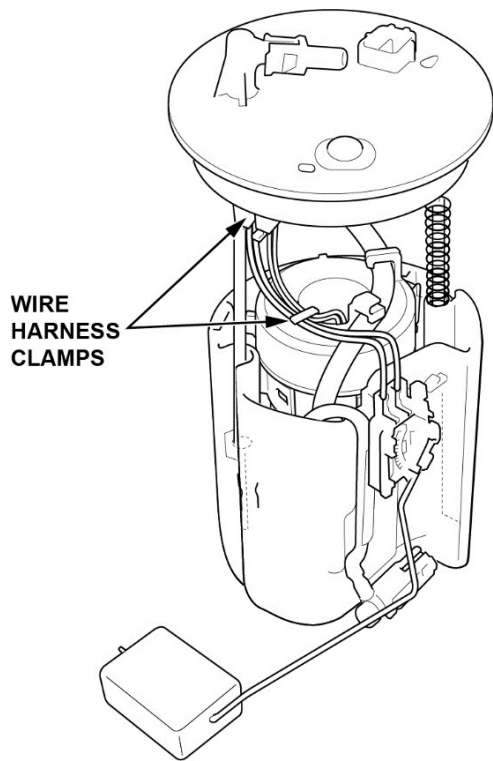

23. Press the tab on the fuel level sensor to release the lock. Then, push up on the fuel level sensor.

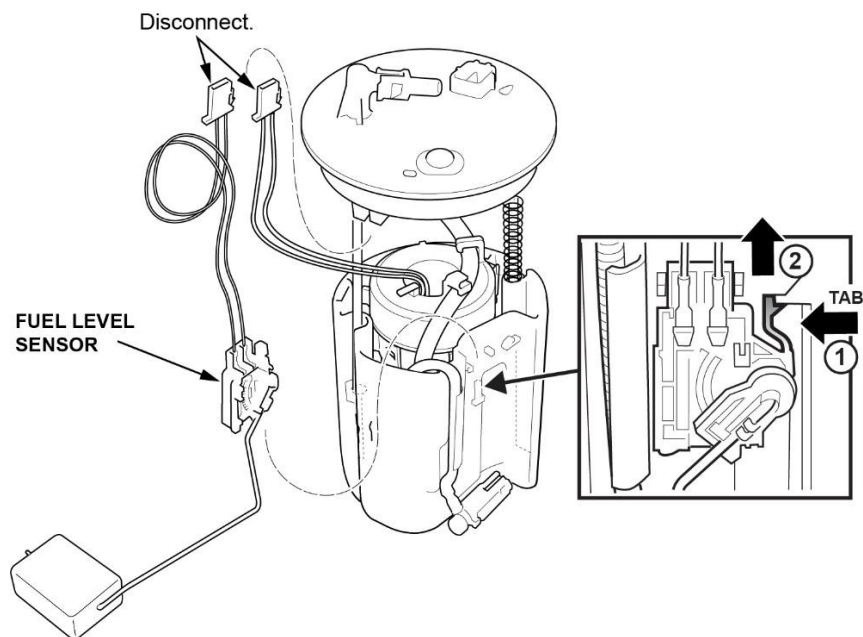

24. Remove the E-rings and discard them.

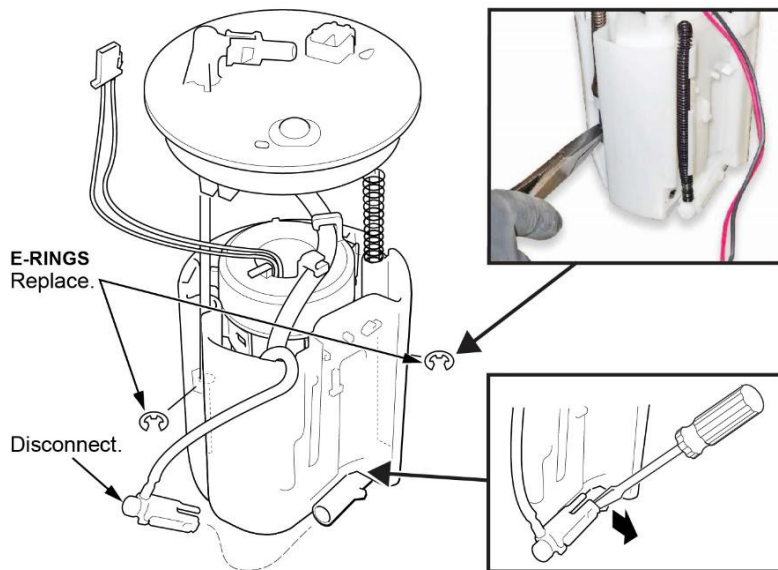


25. Disconnect the joint at the bottom of the reservoir.

26. Remove the fuel filter assembly from the reservoir by releasing the three clips.


NOTICE

Do not spread the clips too wide. Spreading them too wide may damage them.

NOTE: The spring may slide off the sliding shaft. Retain this spring. It will be used during assembly.

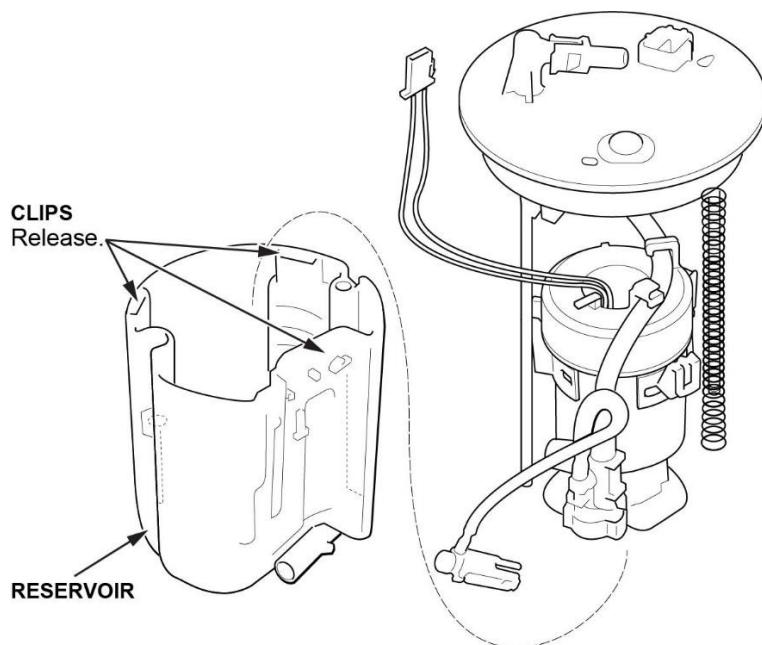


27. Release the three clips at the base of the fuel pump assembly and remove it from the fuel filter.

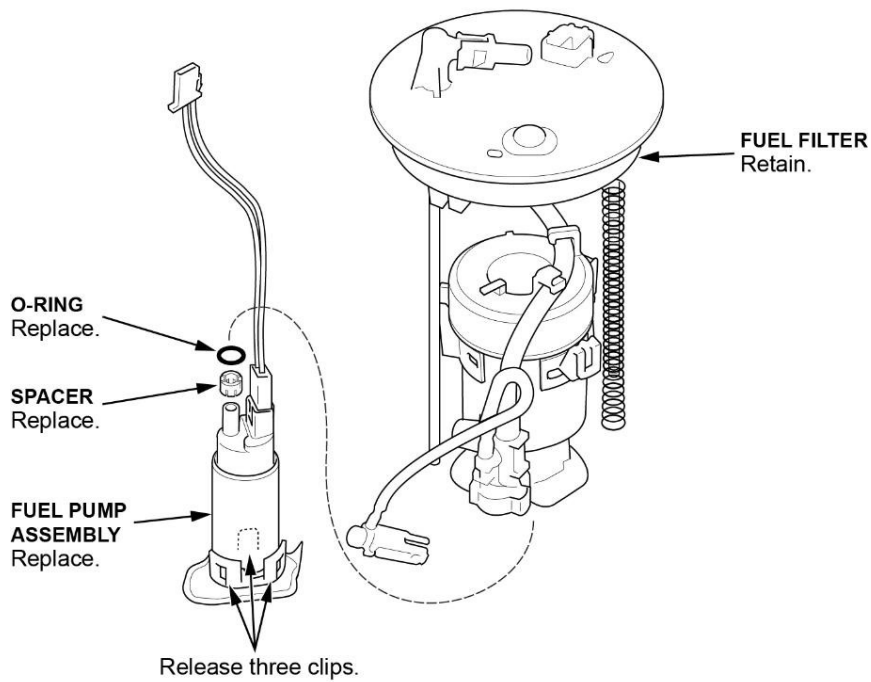

28. Pull the fuel pump assembly out of the fuel filter.

NOTE: If the O-ring remains on the fuel filter, use a flat-tip screwdriver wrapped in protective tape to remove it. Make sure not to damage the O-ring seat section.

29. Install the new spacer onto the new fuel pump motor.

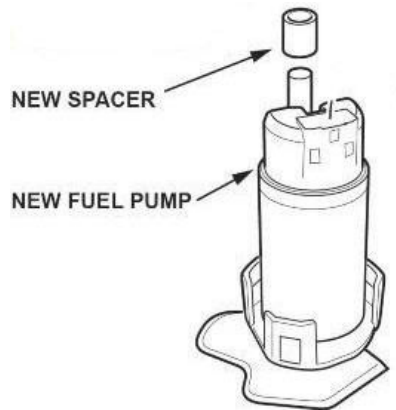

30. Install the new O-ring, then lubricate **ONLY** the outside edge of it, using clean engine oil.


NOTE: Do not pinch the O-ring during installation.

NEW O-RING

Lubricate after installing.
Do not lubricate the
inside of the o-ring.

NEW SPACER

NEW FUEL PUMP

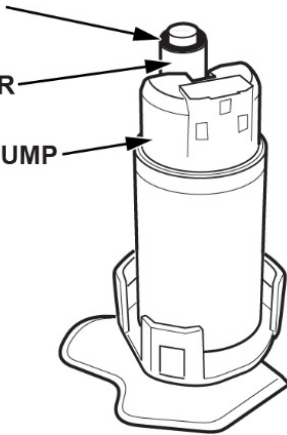

31. Install the new harness and making sure the connection is secure and the connectors are firmly locked into place.


NEW O-RING

Lubricate after installing.
Do not lubricate the
inside of the o-ring.

NEW SPACER

NEW FUEL PUMP

NEW HARNESS

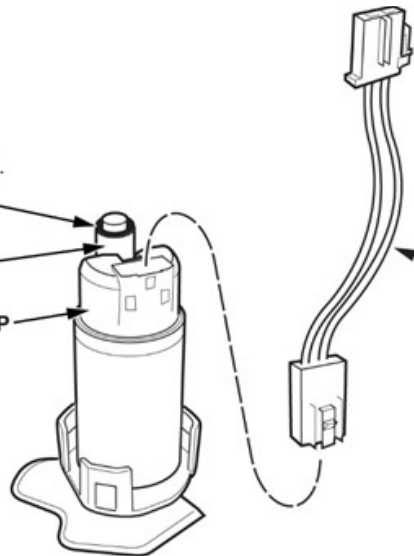

32. With the palm of your hands press the fuel pump into the suction fuel filter.

Click here to view the video:

▶ PLAY VIDEO


NOTICE

When pressing the fuel pump into the suction filter, make sure you do so with a single firm push. Failure to do so may damage the O-ring. If it is seated properly, you will hear a click.

If you do not hear the click, remove all parts, and inspect the O-ring for damage. If the O-ring is damaged, it must be replaced. Reassemble using the above process.

NOTE:


- When inserting the pump be careful not to break the suction filter
- If the O-ring is damaged, replace it with a new one.
- After installing the fuel pump to the suction filter, make sure the clips are firmly attached to the new fuel pump.

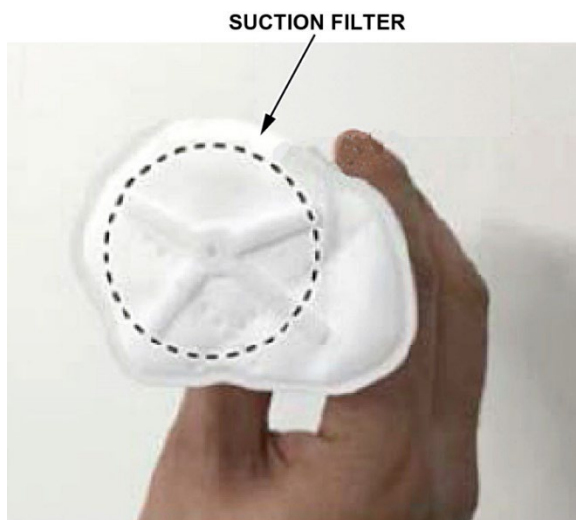

GOOD



NO GOOD

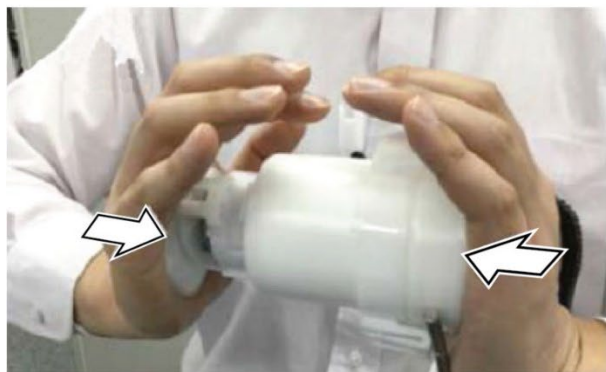

33. Install the fuel filter assembly to the reservoir.

NOTE:

- Coat the O-ring with clean engine oil; do not use any other oil or fluid.
- Do not pinch the O-ring during installation.
- Insert the spring into the sliding shaft, and make sure it is lined up when installing the fuel filter.
- Make sure the fuel tube is routed exactly as shown in the photo taken before disassembly.
- Make sure the three clips are fully engaged.

34. Install the new E-rings.

NOTE: After installation, make sure the E-rings can be rotated with your finger. If they cannot be rotated, the E-rings may not be fully seated or may be incorrectly installed.

35. Install the fuel level sensor to the reservoir. Make sure the lock is engaged and the connection is secure.

NOTICE

Do not bend or twist the fuel level sensor arm excessively. This may damage the fuel level sensor or cause it to send inaccurate readings.

36. Install the wiring harness to the clamps.


NOTICE

Do not spread the clamps too wide. Spreading them too wide may damage them.


NOTE:

- Clip in the smaller harness wires followed by the larger wires.
- Make sure not to damage the wire harness.
- Make sure to route the wire harness **exactly** as shown in the photo taken before disassembly.

HARNESS ROUTING:

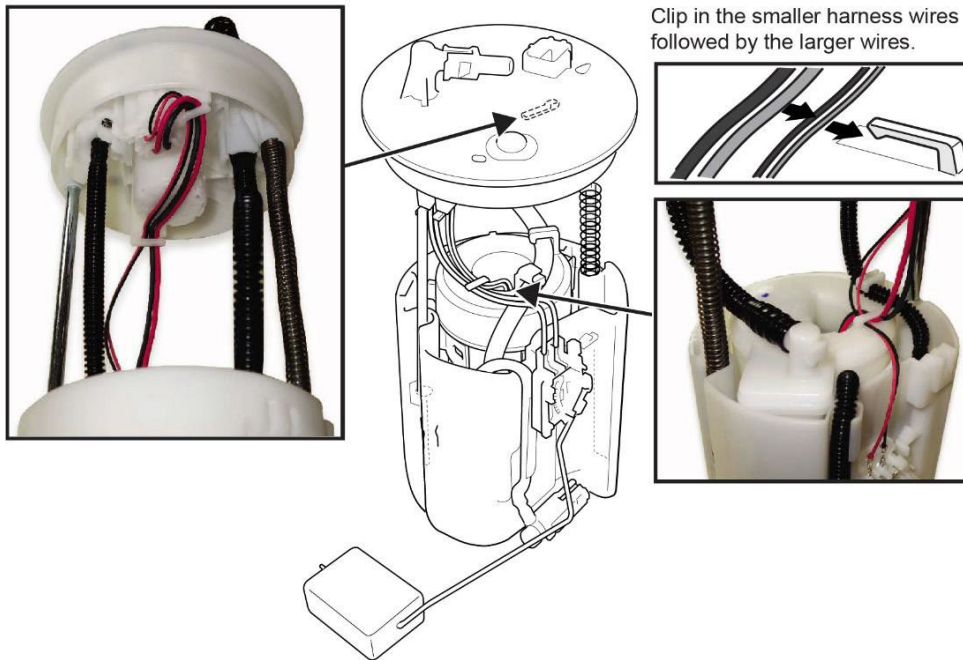

37. While compressing the fuel tank unit, make sure the movement is smooth and the fuel tube and wiring harness do not stretch, pinch, or bind.

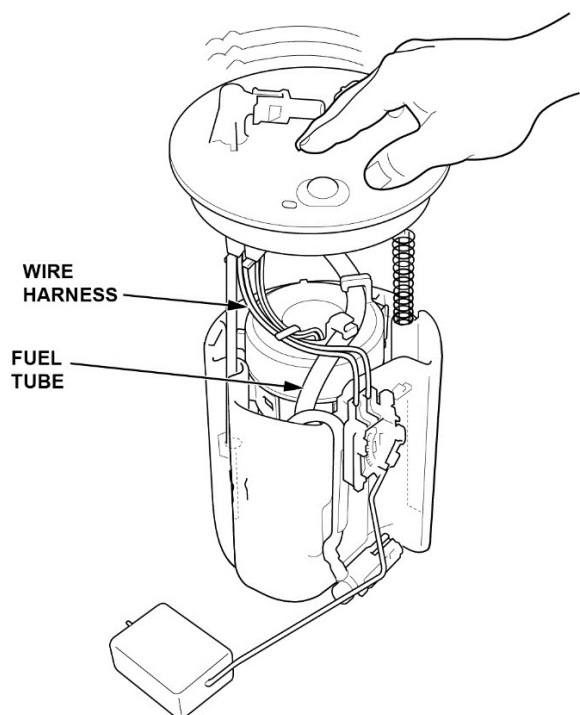


38. Insert the fuel tank unit partially into the fuel tank with a new O-ring.

NOTICE

Do not bend or twist the fuel level sensor arm excessively. This may damage the fuel level sensor or cause it to send inaccurate readings.


NOTE:

- Before installing the new O-ring, clean the fuel tank around the fuel pump opening where the O-ring will seat. The tank opening must be free of dirt, dust, and debris.
- Be careful not to damage the O-ring.
- Do not coat the O-ring with any oil.

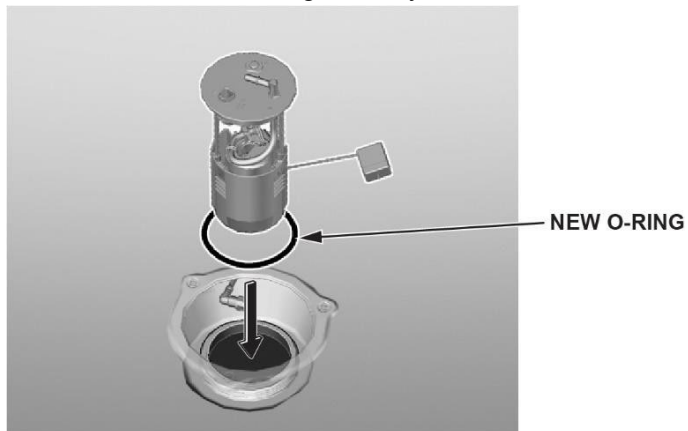


39. Line up the mark on the fuel tank unit to the marks on the fuel tank, then insert the fuel tank unit into the fuel tank.

NOTE: To avoid any leaks, check the O-ring, either visually or by hand, to make sure it is not pinched.

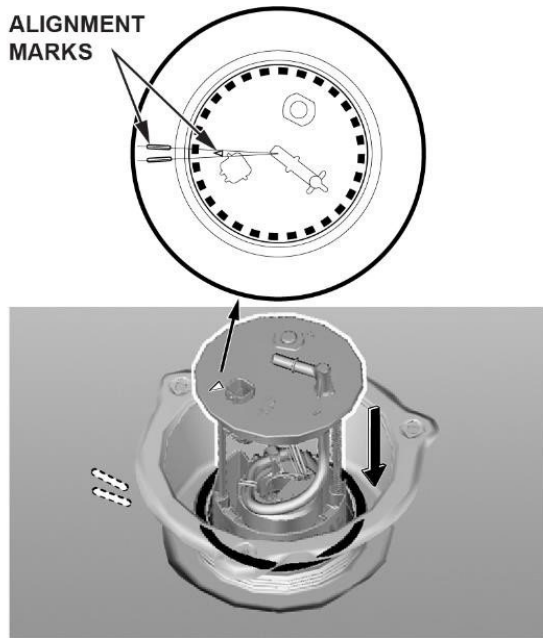

40. Align the mark on the new locknut to the start of the thread on the fuel tank.

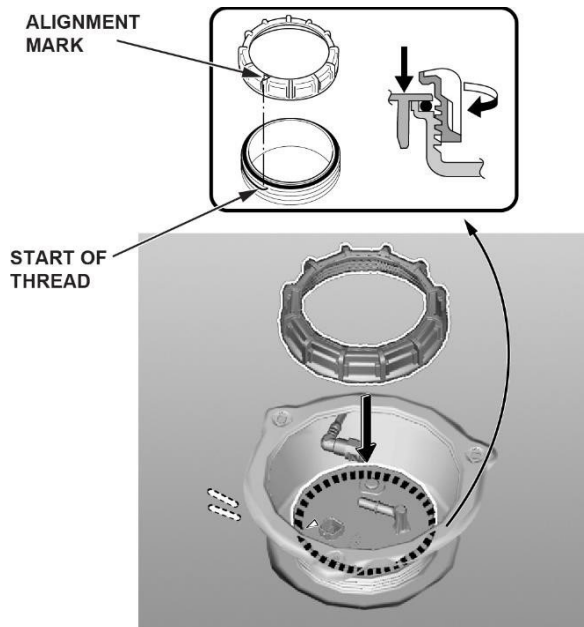


41. Press down on the fuel tank unit while turning the locknut clockwise by hand.

42. Using the fuel nut wrench, tighten the locknut to **100 N·m (74 lb-ft)**.


NOTE:

- During installation, check the O-ring, either visually or by hand, to make sure it is not pinched.
- After tightening, make sure the mark on the fuel tank unit is still lined up with the marks on the fuel tank.

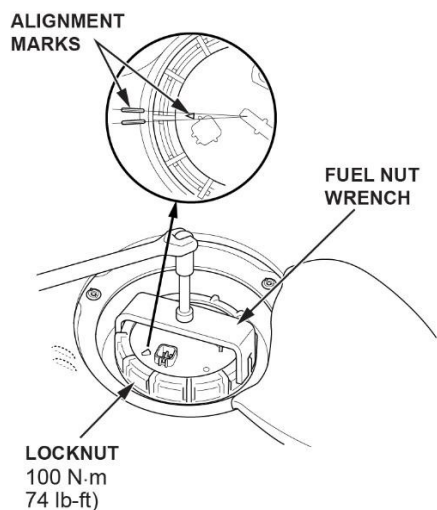


43. If the marks do not line up, friction between the fuel tank unit and the locknut may cause the fuel tank unit to turn while tightening. Observe the difference (shaded area), and loosen the locknut until the fuel tank unit can be rotated. Rotate the fuel tank unit **counter-clockwise** by the same amount, and repeat the tightening process.


NOTE: Repeat this step as necessary until the marks are lined up when the locknut is tightened to the specified torque.

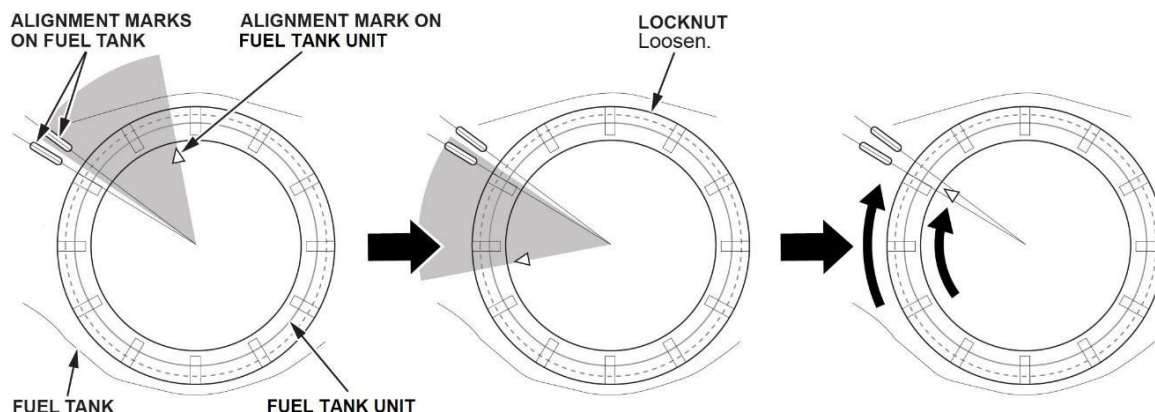


44. Remove the quick-connect fitting retainer from the fuel tank unit, then install a new retainer onto the quick-connect fitting.

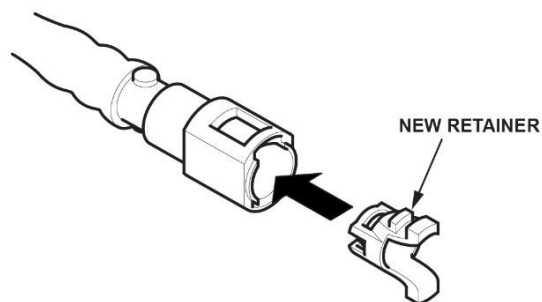

45. Connect the fuel line quick-connect fitting.

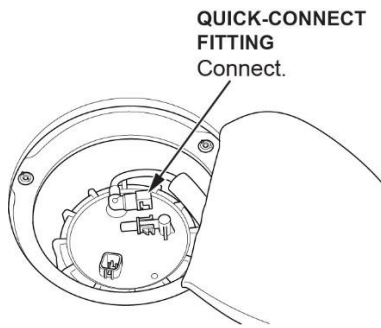

46. Connect the fuel tank unit connector.

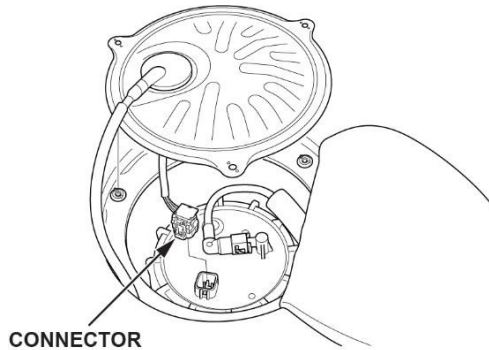


47. Connect the 12-volt battery terminals, torque specifications at **4.0–6.0 N·m (3.0–4.4 ft-lb)**.

48. Reinstall the Air Intake Tube,

49. Install the Front Bulkhead Cover.

50. Turn the ignition to ON, but do not turn the engine on. After the fuel pump runs for about 2 seconds, the fuel line will be pressurized. Repeat two or three times, then make sure there is no fuel leakage.

51. Install the fuel tank unit access panel.

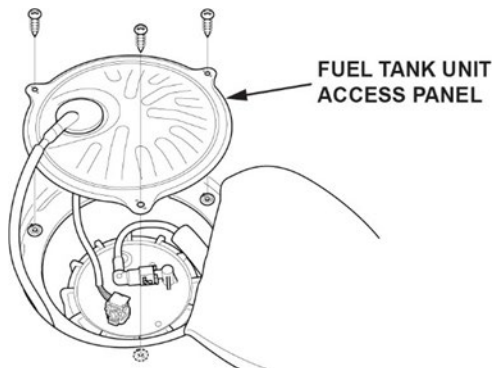

52. Install the remaining parts in the reverse order of removal.

53. Clear all DTCs using an i-HDS.

- | Vehicle Emission Recall - Proof of Correction | | | | | | | | | |
|---|------------|---|-----------------|---|--|--|--|--|--|
| License Number _____ | Make _____ | Year Model _____ | Body Type _____ | Vehicle Identification Number
<div style="border: 1px solid black; height: 20px; width: 100%; position: relative;"> </div> | | | | | |
| Manufacturer _____ | | | | Recall Number CGY
<hr style="border: none; border-top: 1px solid black; margin-top: 5px;"/> | | | | | |
| <p>The above described vehicle has been repaired, modified and/or equipped with new emission control devices to meet applicable California Emission Control Laws.</p> | | | | | | | | | |
| Dealer's Name _____ | | Address, City, State and Zip _____ | | | | | | | |
| Date _____ | | Dealership's Authorized Signature _____
<div style="text-align: center; margin-top: 10px;">X</div> | | | | | | | |
| Return this certificate to DMV only when required - otherwise retain for your records. | | | | | | | | | |

ACL 24832 (0212)