

NHTSA: 24V-046

Transport Canada: TC2024-049

Winnebago Towable: CAM0000034

Safety Recall:

## Access Breakaway Switch Wiring

## Repair, Claim Preparation, and Filing Instructions

Please submit a warranty claim pre-authorization using the following codes and labor times:

LABOR:	OPERATION CODE	LABOR ALLOWANCE
Remove and Replace:	44012304	0.30
D A DTC.		

## PARTS:

N/A

Please follow attached repair instructions.

Submit all pre-authorizations and claims through the Dealer Portal. If there are any questions, please call our Warranty Team at 574-825-5250.

201 14<sup>th</sup> Street, Middlebury, In 46540 Phone: 574-825-8052, <u>wtowWarrantyTech@winnebagoind.com</u> Winnebago.com



Repair Instructions:

Access Breakaway Switch Wiring

Tools Needed: Phillips Head Drill or Screwdriver, Socket and Ratchet Set

## **REPAIR INSTRUCTIONS:**

1. Using the Phillips bit remove the 2 screws from the cover of the 7-way box.



2. Locate the orange wire on the breakaway switch and verify it's connected to the electric brake line (blue) post on the 7-way box.



201 14<sup>th</sup> Street, Middlebury, In 46540 Phone: 574-825-8052, <u>wtowWarrantyTech@winnebagoind.com</u> Winnebago.com



**3.** Locate the black wire on the breakaway switch and verify it's connected to the input (battery) side of the battery disconnect switch.



**Reference Diagram:** 

				7
	BLUE WIRE FR	ZE	BATTERY DISCONNECT	
BRAKEWIRE FROM AXLE		7-27	BATTERY SIDE	
	N B"	BLACK WIRE TO -"A" (BATTERY SIDE	BREAKALDAY SWITZH	
			° ja	

201 14<sup>th</sup> Street, Middlebury, In 46540 Phone: 574-825-8052, <u>wtowWarrantyTech@winnebagoind.com</u> Winnebago.com