

99.03.27 Suburban Range Deactivate Lights Instructions Part # 0440968**WARNING**

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure they can use the appliance safely.

To prevent electrical shock and/or equipment damage, disconnect electrical power to the system at the main fuse or circuit breaker until installation is complete.

CAUTION

This electrical work must be performed by trained technicians only. Adhere to all local and national codes and ordinances. Take care when securing and routing wires so they do not short. Personal injury and/or property damage may occur.

This electrical work will disable the function of the red, white and oven lights.

1. Disconnect 12VDC power to the range.
2. Remove the range main top by firmly pulling up at the front. Lift the main top free of the burner box clips and set aside.




3. Locate the red and black wires that connect to the coach wiring (Coach wiring color may vary). Cut this wire directly behind the connector using a pair of electrical cutters.



4. Crimp the Crimp Caps (233759) to incoming 12V positive and negative to prevent lights from being reattached.



5. Locate and unplug the wires from the light switch on the front of the unit, then remove the light switch by squeezing the locking tabs and replace with the plug provided in the kit (0440968).

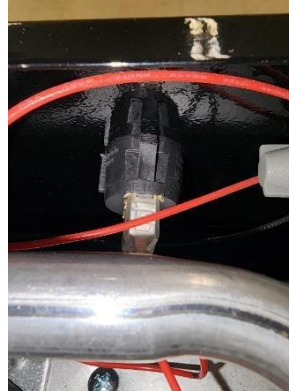

6. Replace the main top by engaging rear clips and pressing firmly on the front latch.



7. Close the glass cover (if equipped).
8. Reconnect 12VDC power.
9. File claim with FRC 99.03.27 for .5 hours

Service

For any questions, please reach out to the Suburban service department using the contact information below.

Suburban, An Airxcel Brand
Service Department
676 Broadway Street
Dayton, TN 37321
(574) 247-9235 Option 5