



TIRE AND LOADING INFORMATION

SEATING CAPACITY TOTAL 15 FRONT 1 REAR 14

The combined weight of occupants and cargo should never exceed 1179 Kg or 2600 Lbs.

TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	LT245/75R16ES	345 KPA/50 PSI	
REAR	LT245/75R16ES	550 KPA/80 PSI	
SPARE	NONE	NONE	



TIRE AND LOADING INFORMATION

SEATING CAPACITY TOTAL 15 FRONT 1 REAR 14

The combined weight of occupants and cargo should never exceed 1080 Kg or 2380 Lbs.

TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	LT245/75R16ES	345 KPA/50 PSI	
REAR	LT245/75R16ES	550 KPA/80 PSI	
SPARE	NONE	NONE	



TIRE AND LOADING INFORMATION

SEATING CAPACITY TOTAL 16 FRONT 1 REAR 15

The combined weight of occupants and cargo should never exceed 1143 Kg or 2520 Lbs.

TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	LT245/75R16ES	345 KPA/50 PSI	
REAR	LT245/75R16ES	550 KPA/80 PSI	
SPARE	NONE	NONE	



TIRE AND LOADING INFORMATION

SEATING CAPACITY TOTAL 10 FRONT 1 REAR 9

The combined weight of occupants and cargo should never exceed 1052 Kg or 2320 Lbs.

TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	LT245/75R16ES	345 KPA/50 PSI	
REAR	LT245/75R16ES	550 KPA/80 PSI	
SPARE	NONE	NONE	



TIRE AND LOADING INFORMATION

SEATING CAPACITY TOTAL 10 FRONT 1 REAR 9

The combined weight of occupants and cargo should never exceed 1297 Kg or 2860 Lbs.

TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	LT245/75R16ES	345 KPA/50 PSI	
REAR	LT245/75R16ES	550 KPA/80 PSI	
SPARE	NONE	NONE	



TIRE AND LOADING INFORMATION

SEATING CAPACITY TOTAL 10 FRONT 1 REAR 9

The combined weight of occupants and cargo should never exceed 1216 Kg or 2680 Lbs.

TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	LT245/75R16ES	345 KPA/50 PSI	
REAR	LT245/75R16ES	550 KPA/80 PSI	
SPARE	NONE	NONE	