

BOWLUS

Remedy Instructions - Owner's Manual Update

NHTSA Recall No. 25V417

Open your Owner's Manual to Section 1.3 Maintenance Schedule. Find the table "Every Year". Please place the attached label over this section to complete the update:

Hitch Coupler, Ball Jockey Wheel and related components	Check for wear or damage. Ensure that all parts operate freely. Replace any component if worn or damaged. Ensure hitch assembly bolts (6 under porch and 4 under travel trailer) are torqued.
---	---

Once the attached sticker is placed, your manual should appear as below:

Hitch Ball Latch	Lubricate with non-detergent motor oil.
Hitch Ball	Lubricate with hitch ball lube or wheel bearing grease.
Tighten Screws	Due to vibration, screws may loosen from time to time. Please confirm all screws are hand-tight. A product like Loctite (temporary only, not permanent) may keep certain screws more secure.

EVERY 10,000 MILES, OR 6 MONTHS

Component	Maintenance
Brakes	Inspect, adjust or replace as necessary.
Wheel Bearings	Clean and grease.
Tires	Inspect.
Exterior	Wash with water.
Seals, Windows & Doors	Clean with mild detergent.
Window Drain Holes	Blow out with compressed air. Remove all organic matter.
Control Panels	Recalibration of control panels.

EVERY YEAR

Component	Maintenance
Seams	Check and reseal exterior seams, windows, lights and vents.

Hitch, Coupler, Ball Jockey Wheel and related components	Check for wear or damage. Ensure that all parts operate freely. Replace any component if worn or damaged. Ensure hitch assembly bolts (6 under porch and 4 under travel trailer) are torqued. Ensure hitch bolts that connect the top and bottom of the hitch together are torqued.
--	---

Entire Bowlus	Bowlus Annual Maintenance Package at a Certified service facility.
---------------	--