



## Technical Service Bulletin

<b>GROUP</b>	<b>NUMBER</b>
<b>RECALL</b>	<b>26-01-002G</b>
<b>DATE</b>	<b>MODEL(S)</b>
<b>JANUARY 2026</b>	<b>GV70 (JK1A)</b>

**SUBJECT:** SIDE CURTAIN AIRBAG (SCAB) INSPECTION & CORRECTION  
(RECALL 029G)

### ★ IMPORTANT

Vehicle repairs related to safety recalls are critically important and must be performed properly in accordance with TSB procedures. Review this bulletin in its entirety prior to beginning any repair work.

As required by federal law, retailers must not deliver new vehicles for sale or for lease to guests until all open recalls have been performed. Retailers must also perform all open recalls on used vehicles, demo, and rental vehicles prior to placing them into guest use and whenever an affected vehicle is in the shop for any maintenance or repair.

Access the "Vehicle Information" screen via WebDCS to identify open recalls.

**Description:** Certain GV70 (JK1A) vehicles equipped with Side Curtain Airbags ("SCAB") may have been improperly installed, which can potentially result in abnormal airbag deployment during a crash, increasing the risk of injury to occupants. An abnormal airbag deployment could increase the risk of injury to occupants during a crash. Follow the information in this TSB to reinstall the SCAB in the correct orientation.



### Applicable Vehicles (Certain):

Model Year	Model	Production Dates
2026	GV70 (JK1A)	04/02/2025 – 04/30/2025

Circulate To: General Manager, Service Manager, Parts Manager, Warranty Manager, Service Advisors, Technicians, Body Shop Manager, Fleet Repair

**Parts Information:**

Model	Part Name	Part Number	Figure	Quantity
GV70 (JK1A)	Clip-Trim MTG	85815-C1100		<p>Qty: 2</p> <p>A-pillar (one time use clips)</p>
	Fastener- DR Trim	82315-2P000		<p>For the Lower B-Pillar Trim Fastener</p> <p>(Replace only if damaged)</p>
	Clip-Trim MTG	85858-3S100		<p>For the Upper B-Pillar Trim</p> <p>(Replace only if damaged)</p>

**NOTE 1:** Retailers will be reimbursed via sublet as noted for any clips, regardless of replacement.

**Warranty Information:**

Model	Op. Code	Operation	Op. Time	Causal Part	Nature Code	Cause Code
GV70 (JK1A)	51DA48R0	Side Curtain Airbag (SCAB) Inspection & Correction	2.3 M/H	80410-AR000	B14	ZZ7

**NOTE 1:** Submit claim on Claim Entry Screen as “Campaign” type.

**NOTE 2:** If any part(s) not subject to this TSB are found in need of replacement while performing the repair procedure, and the affected part(s) are still under warranty, the retailer may submit a separate claim using the same repair order. If the part(s) not subject to this TSB are out of warranty coverage, the dealer has the option to submit a PA Request for goodwill consideration on a case-by-case basis.

**NOTE 3:** This TSB includes repair validation photos. Op times include VIN, mileage, and repair validation photo(s) as outlined in the Digital Documentation Policy.

**NOTE 4:** The incident parts are subject to callback through the normal Warranty Technical Center (WTC) parts return process. **Claim is subject to debit if the part is not returned.**

**NOTE 5:** OP Code 51DA48R0 will reimburse \$2.50 in sublet for any damaged fasteners during the service procedure.

**Service Procedure:****DIGITAL DOCUMENTATION**

This TSB includes repair validation photos. Refer to the latest Warranty Digital Documentation Policy for requirements.


**NOTICE**

Applying the recommended torque to all fasteners is essential to reduce potential issues from occurring after the service procedure.

**Information**

Refer to the QR code or link below for guided video information:

[Recall 029G - Side Curtain Airbag \(SCAB\) Inspection & Correction](#)

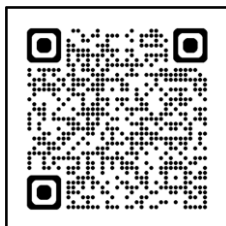

## Side Curtain Airbags Inspection &amp; Correction

1. Disconnect the negative (-) battery terminal (A).

**Tightening Torque:**

lb-ft	6.5
lb-in	78
N.m	8.8




2. Remove the front row seats by referring to the shop manual:
  - **Body (Interior / Exterior / Electrical) > Front Seat > Front Seat Assembly > Removal**



3. Remove the front pillars (B) on both sides by referring to the shop manual:
  - **Body (Interior / Exterior / Electrical) > Interior Trim > Front Pillar Trim > Removal and Installation**

**i Information**

Replace clips (P/N: **85815-C1100**) for the A-pillar trim. These are one time-use clips.

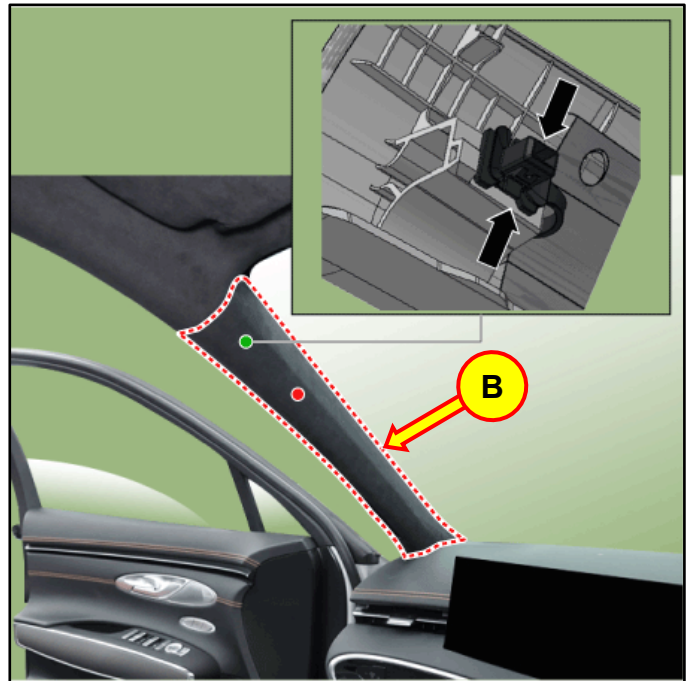


4. Remove the front door and rear door scuff trim on both sides by referring to the shop manual:
  - **Body (Interior / Exterior / Electrical) > Interior Trim > Door Scuff Trim > Removal and Installation**


Remove the lower center pillar lower trim (C).

**i Information**

Replace fasteners (P/N: **82315-2P000**) for the lower B-pillar trim if damaged.

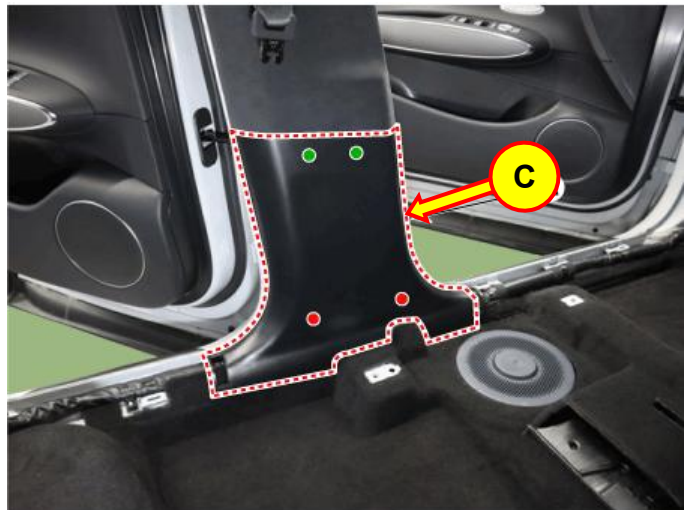



5. Remove the front anchor seat belt (D) on both sides:
  1. Push the front anchor seat belt (D) upward in the direction of ①.
  2. Insert a flat-tip screwdriver into the slot in the direction of ②.
  3. Pull the front anchor seat belt (D) upward in the direction of ③ to remove it.

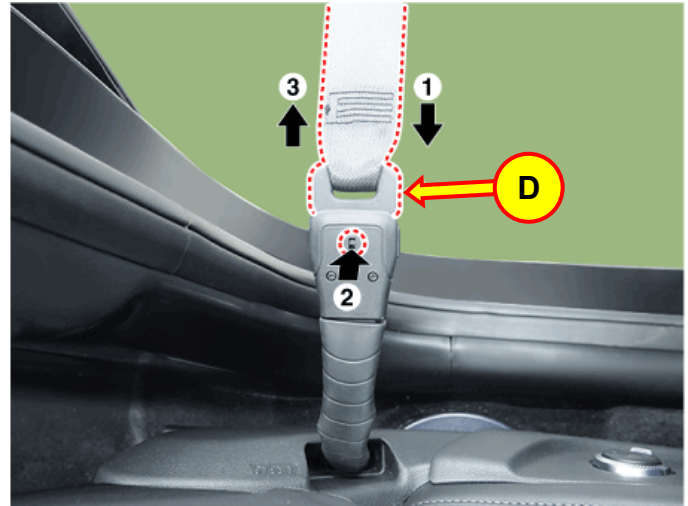

6. Remove the upper center pillar trim (E) on both sides by referring to the shop manual:
  - **Body (Interior / Exterior / Electrical) > Interior Trim > Center Pillar Trim > Removal and Installation**

**i Information**

Replace clips (P/N: **85858-3S100**) for the upper B-pillar trim if damaged.

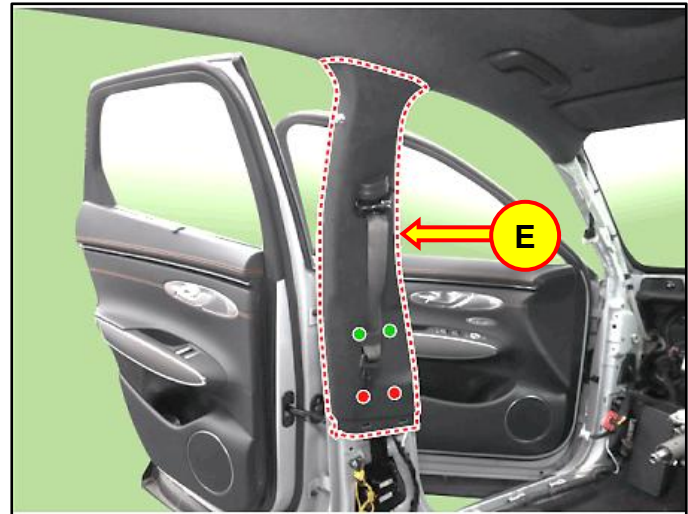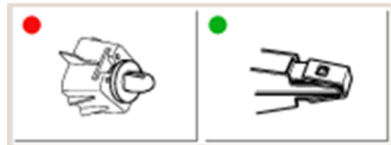

7. Remove the 2nd row seats by referring to the shop manual:
  - **Body (Interior / Exterior / Electrical) > Rear Seat > Rear Seat Assembly > Removal and Installation**




8. Remove the luggage side trim on both sides by referring to the shop manual:
  - **Body (Interior / Exterior / Electrical) > Luggage Trim > Luggage Side Trim > Removal and Installation**

9. Disconnect the speaker connector (F).




10. Disconnect the seat belt cover (G).

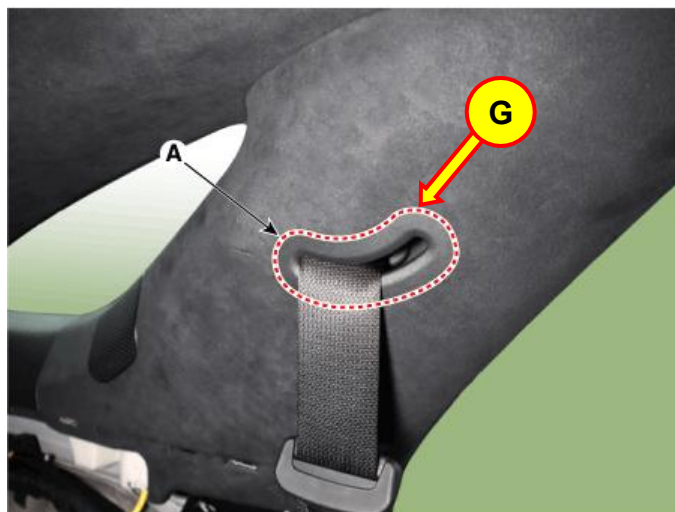


11. Remove the rear pillar trim (H), after removing the bolts.

**i** Information

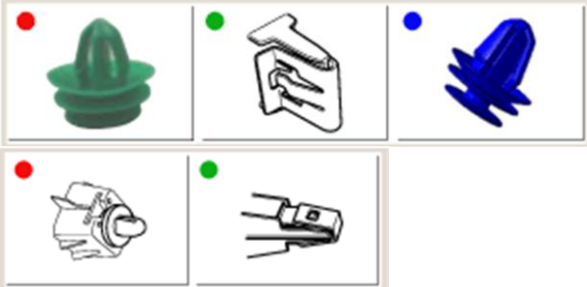

Replace any damaged clips or retainers.

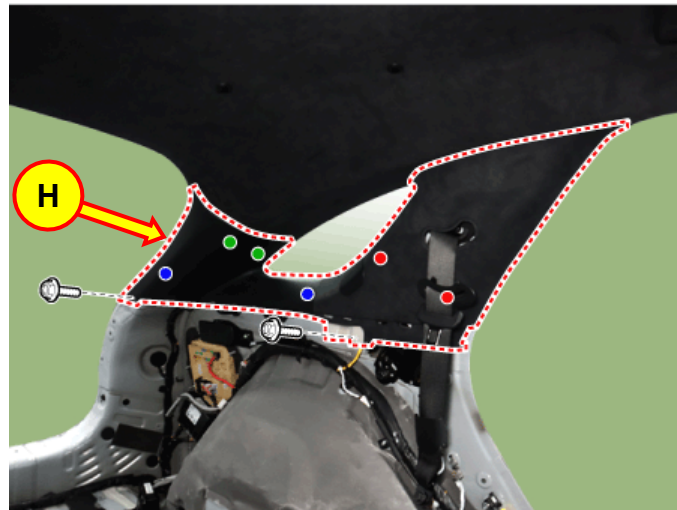


12. Remove the overhead console assembly (I) by referring to the shop manual:
- **Body (Interior / Exterior) Interior > Roof Trim > Overhead Console Assembly > Removal and Installation**


**NOTICE**

Use a plastic trim removal tool to prevent damage to parts.


Remove the overhead console connectors (J).

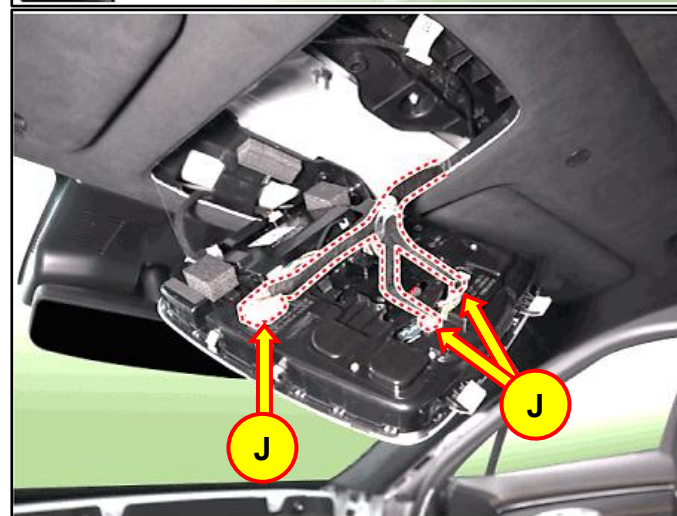


13. Remove the sun visors (K) and retainers (L) on both sides by referring to the shop manual:
- **Body (Interior / Exterior / Electrical) > Roof Trim > Sunvisor > Removal and Installation**

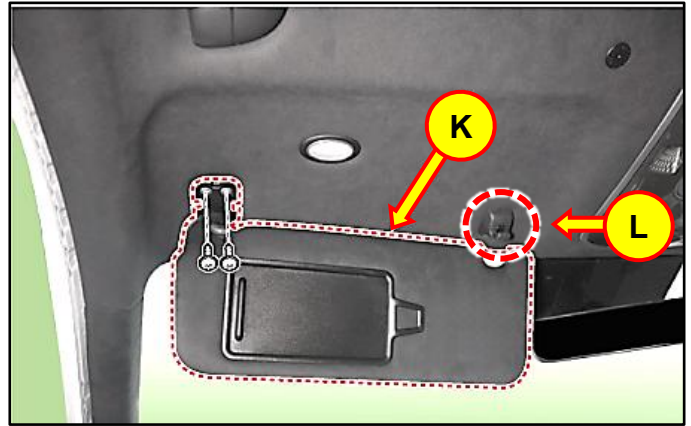


14. Remove the assist handles (M) on both sides by referring to the shop manual:
- **Body (Interior / Exterior / Electrical) > Roof Trim > Assist Handle > Removal and Installation**

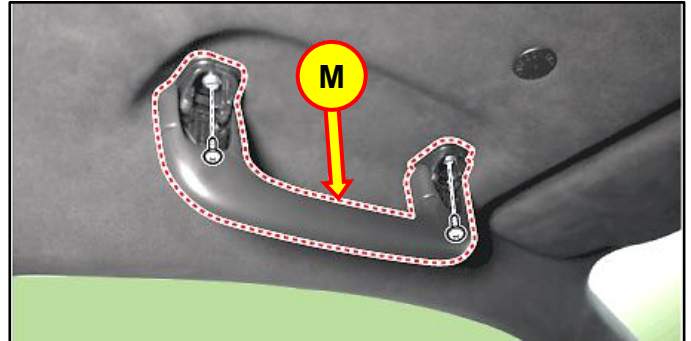

15. Remove the rear-view mirror cover (N) and rain sensor cover.
- **Body (Interior / Exterior / Electrical) > Mirror > Inside Mirror Assembly > Removal**

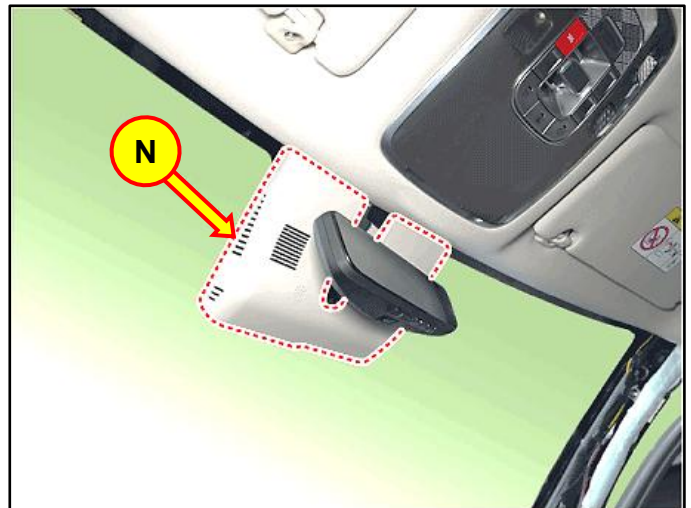


16. Disconnect the connectors (O) from the windshield.

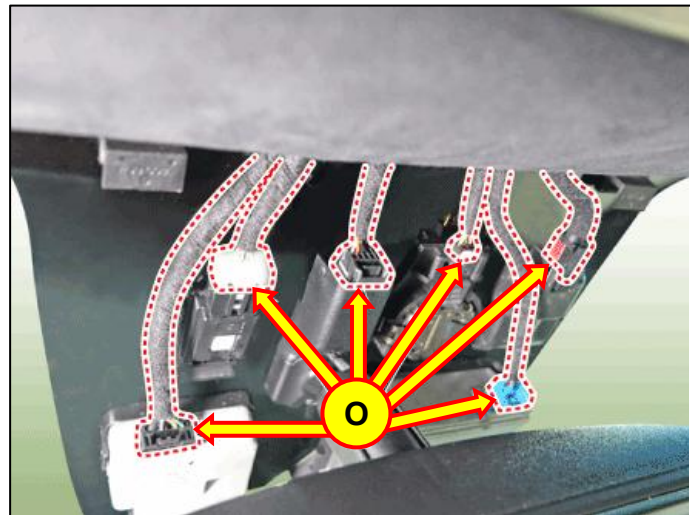

17. Lower the headliner (P) to get access to both Side Curtain Airbags (SCAB).


**NOTICE**

Lower the headliner gently to prevent creasing or damage. Additional support from another technician or a holding tool may be required.

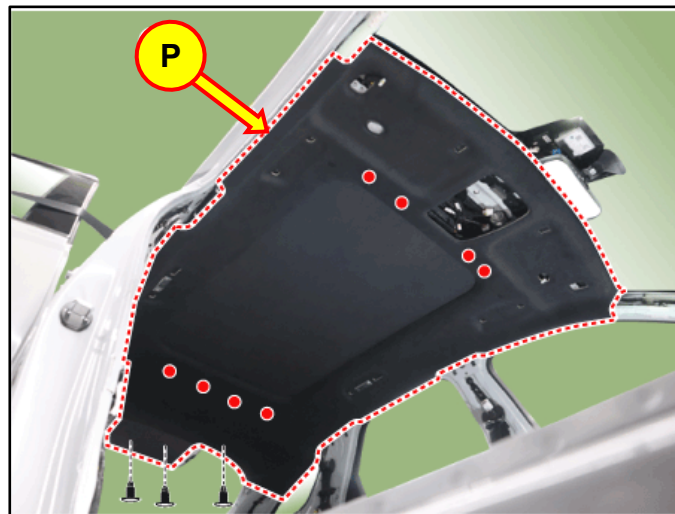

18. Visually inspect curtain airbag for twisting on both sides:

- **NOT TWISTED:** Proceed to **step 21**.
- **TWISTED:** Proceed to **step 19**.

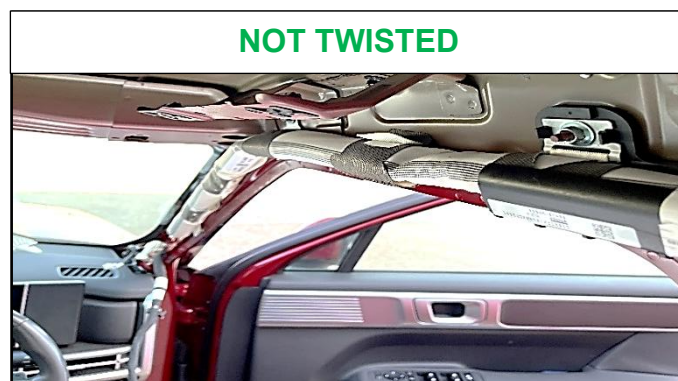

19. Remove the nuts and bolts (Q, R, S, T) in alphabetical order.


**Tightening Torque:**

**Bolt:**

lb-ft	7.25
lb-in	87
N.m	9.8

**Nut:**

lb-ft	3.65
lb-in	44
N.m	4.9

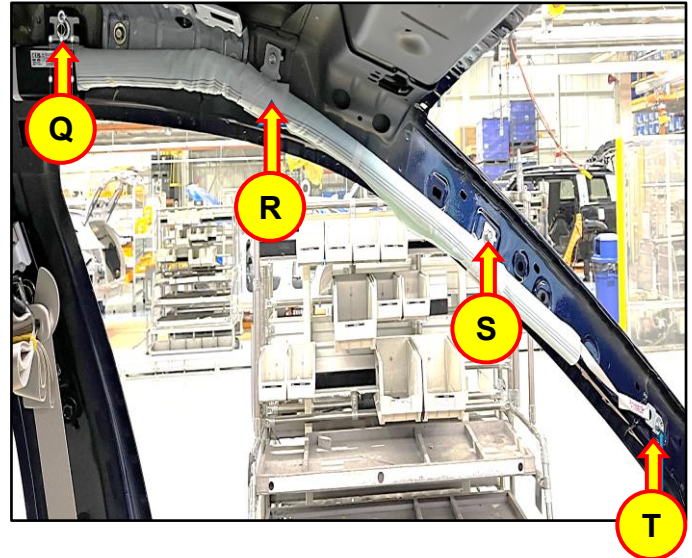

20. Untwist the side curtain airbag then reinstall the nuts and bolts in the reverse order of the removal process.

**Tightening Torque:**

**Bolt:**

lb-ft	7.25
lb-in	87
N.m	9.8

**Nut:**

lb-ft	3.65
lb-in	44
N.m	4.9

21.

DIGITAL DOCUMENTATION



Using the STUI camera function, take a photo of both RH and LH Side Curtain Airbags (SCAB) correctly installed.

Upload the photos to STUI.

**NOTE:** If the STUI camera function is **NOT** used, write the last 6 digits of the VIN and date of repair on a piece of paper to include in the photo.



21. Untwist the side curtain airbag then reinstall the nuts and bolts in the reverse order of the removal process.

**Tightening Torque:**

**Bolt:**

lb-ft	7.25
lb-in	87
N.m	9.8

**Nut:**

lb-ft	3.65
lb-in	44
N.m	4.9

22. Reassemble parts in reverse order of the removal process.
23. The service procedure is now complete.