

May 22, 2026

Version 1

Safety Recall: 2016–21 Civic Seat Weight Sensor

APPLIES TO

Year	Model	Trim Level	VIN Range
2016–20	Civic 2-Door	ALL	Check the iN-VIN status for eligibility.
2017–21	Civic Hatchback	ALL	Check the iN-VIN status for eligibility.
2017–20	Civic 2-Door Si	ALL	Check the iN-VIN status for eligibility.
2017, 2020	Civic 4-Door Si	ALL	Check the iN-VIN status for eligibility.
2016–21	Civic 4-Door	ALL	Check the iN-VIN status for eligibility.

BACKGROUND

Affected vehicles may be equipped with seat weight sensors that are not built to proper specifications. Improperly built sensors could lead to cracking and/or a short circuit of the sensor, resulting in the illumination of the SRS warning light and the passenger airbag indicator remaining OFF. In certain collisions, these seat weight sensors may cause improper deployment of the front passenger airbags, increasing the risk of injury.

CUSTOMER NOTIFICATION

Owners of affected vehicles will be sent a notification of this safety recall.

Do an iN VIN status inquiry to verify eligibility.

Some vehicles affected by this campaign may be in your new or used vehicle inventory.

Failure to repair a vehicle subject to a recall or campaign may subject your dealership to claims or lawsuits from the customer or anyone else harmed as a result of such failure. To see if a vehicle in inventory is affected by this safety recall, do a VIN status inquiry before selling it.

CORRECTIVE ACTION

Replace the seat weight sensors.

CUSTOMER INFORMATION: The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by “do-it-yourselfers,” and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Honda automobile dealer.

WARRANTY CLAIM INFORMATION

Civic 4-Door and 5-Door

Operation Number	Description	Flat Rate Time	Defect Code	Symptom Code	Template ID	Failed Part Number
7491E4	Replace seat weight sensors – power seat (includes, seat calibration and DTC check)	0.8 hr	6XW00	OOA00	A26073A	81201-TBA-A61
7491E5	Replace seat weight sensors – manual seat (includes seat calibration and DTC check)	0.7 hr	6XW00	OOA00	A26073B	81126-TLA-C01

Civic 2-Door

7491E5	Civic 2dr - Replace seat weight sensors – manual seat (includes seat calibration and DTC check)	0.6 hr	6XW00	OOA00	A26073C	81126-TBG-A01
--------	--	--------	-------	-------	---------	---------------

Seat Weight Sensor Kit Serial Number

Enter the Seat Weight Sensor Kit serial number from the Seat Weight Sensor Kit label into the Replacement Serial Number field of the Parts Information section of the warranty claim.

NOTE:

- The Seat Weight Sensor Kit label should be affixed to the repair order by the technician.
- The claim may reject if a valid serial number is not included.

Parts Information						
Failed Part No. •		Failed Part Description •				
Replacement Serial No.						
Item	Replacement Part No. •	Quantity •	Unit Price	Unit Total	Description	
1						Delete
2						Delete
3						Delete
4						Delete
5						Delete
More >						
Materials Information						

PARTS INFORMATION

Part Name	Part Number	Quantity
Seat Weight Sensor Kit	04945-TBA-A00	1

Refer to the Parts Information Bulletin 24-0020, Multi-model Seat-Weight Sensor Safety Recall Parts Availability, for details regarding parts availability and ordering.

TOOL INFORMATION

NOTE: Required tools were shipped as part of a previous campaign action. Replacement or additional tools are available through the Tool and Equipment Program.

 
Tool Name	Part Number	Quantity
SWS Fixture Guide A	07AAG-TVAA100	1
SWS Fixture Guide H	07AAG-TVAA800	1
Snap-On Torque Wrench	07AAA-TVAA400	1
Box End Head (12 mm)	07AAA-TVAA100	1
Box End Head (14 mm)	07AAA-TVAA200	1
Box End Head (16 mm)	07AAA-TG7A300	1

REPAIR PROCEDURE

4 & 5-Door Manual Seat	Manual Seat or see page 4
4 & 5-Door Power Seat	Power Seat or see page 8
2-Door Only	2-Door Seat or see page 14.


4-Door & 5-Door Manual Seat

1. Remove the label from the new seat weight sensor box and affix it to the repair order.

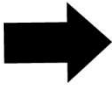[illegible]


- Slide the passenger's seat all the way forward and remove the rear seat rail fasteners.

REAR SIDE

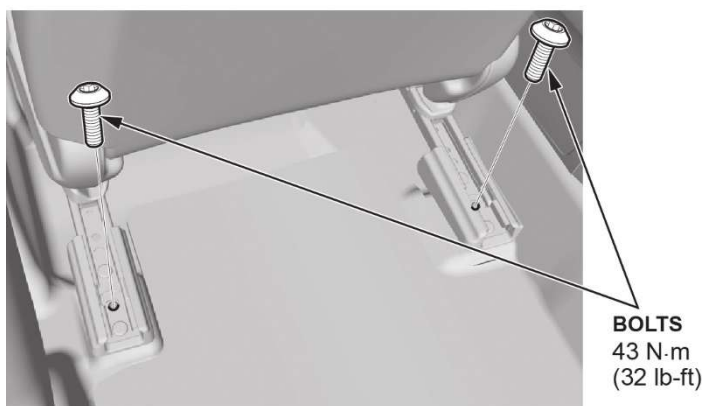


- Slide the passenger's seat all the way rearward and remove the front rail fasteners.


FRONT SIDE

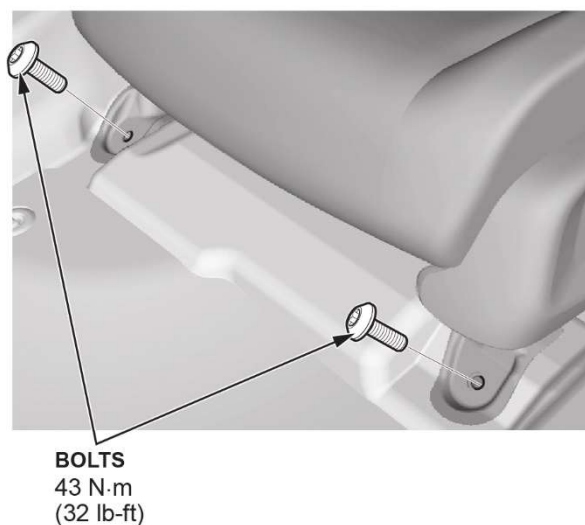


- Disconnect the negative cable to the 12-volt battery.
 - 12 Volt Battery Terminal Disconnection and Reconnection, [\(Click Here\)](#)
 - Lift the front seat, then disconnect the connectors and detach the harness clip.
- NOTE: Take a picture of the harness routing prior to removal for future reference.

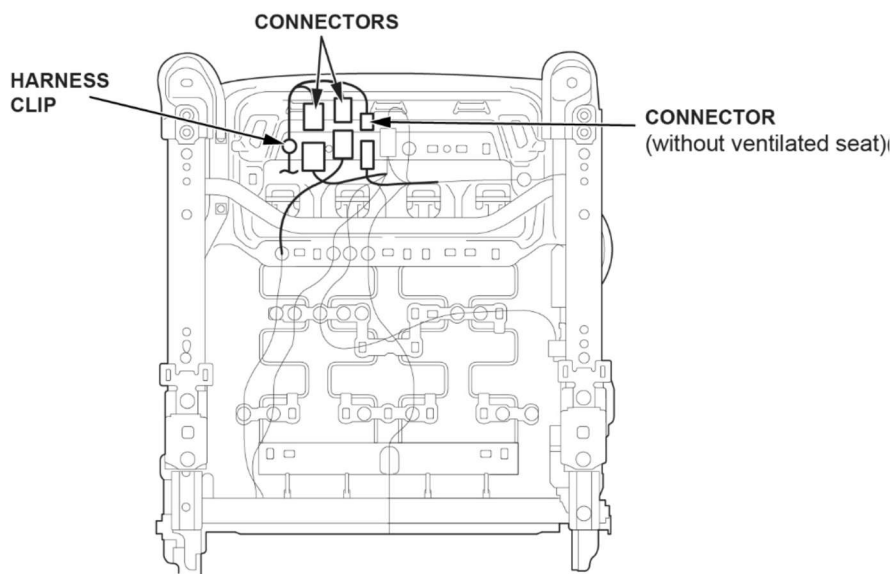


6. With the help of an assistant, carefully remove the front seat through the front door opening. Then, place the seat on a suitable work area.
7. Remove the seat frame lever.

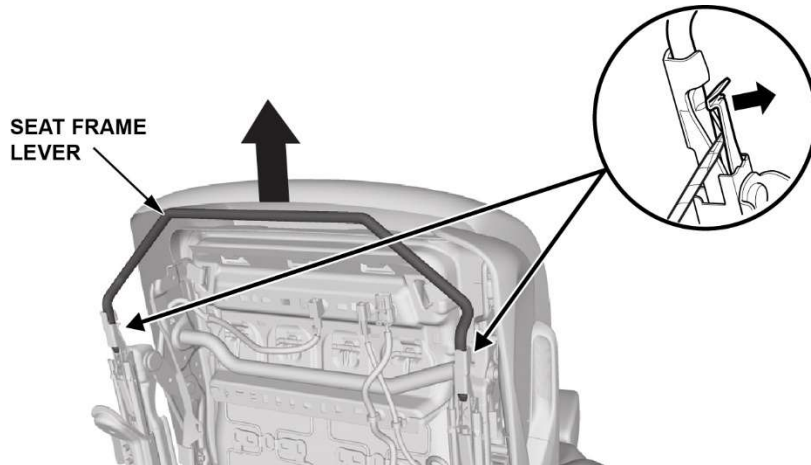

8. Remove the inner seat rail (with sensors) from the seat.

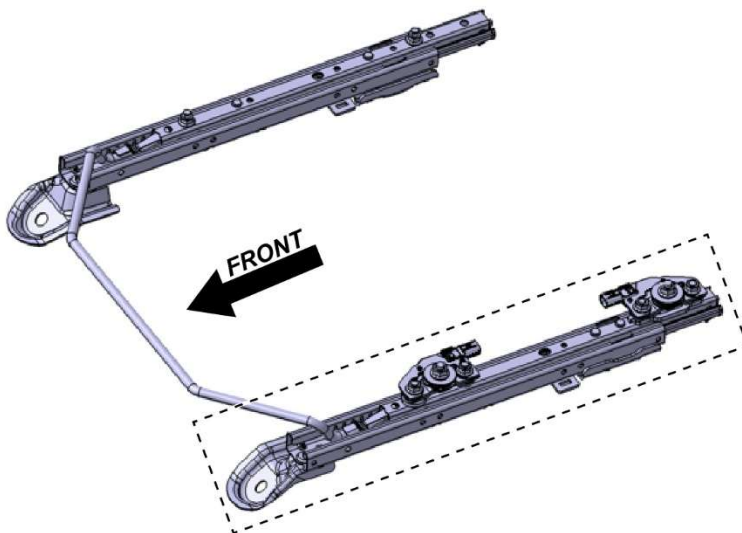

9. Mount the inner seat rail into the vehicle and remove the 2 seat weight sensors, then discard the nuts and sensors.

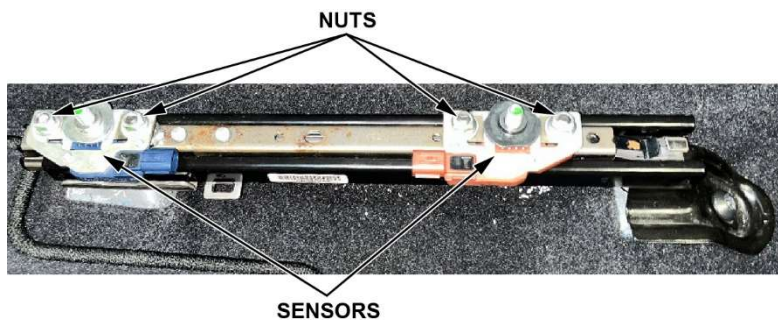

10. Install the new sensors and nuts in the orientation shown.

**SENSOR POSITION 1
LEFT FRONT**





**SENSOR POSITION 2
LEFT REAR**



11. Place the **SWS Fixture Guide A** onto the new seat weight sensors with the tabs located to the inside of the seat track. With the guide properly seated on the new sensors, **torque the nuts to 35 N·m (26 lb-ft) in the order shown on the SWS fixture guide.**

NOTE: Use the socket provided with the guide.

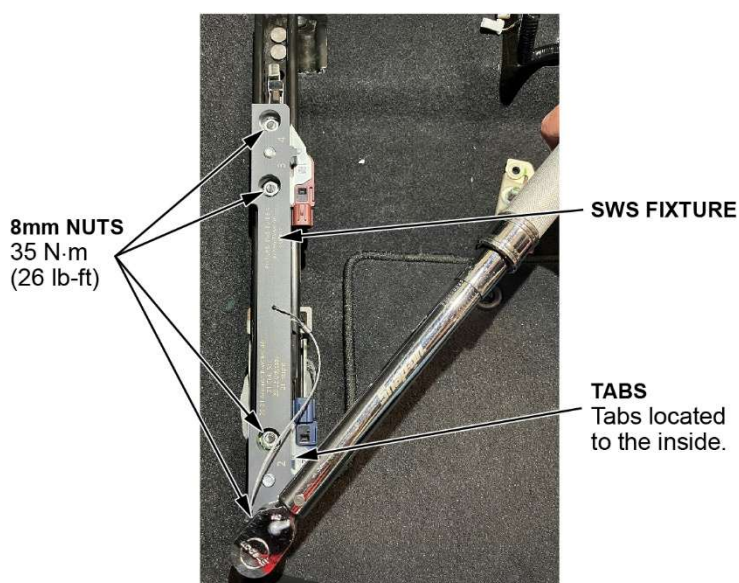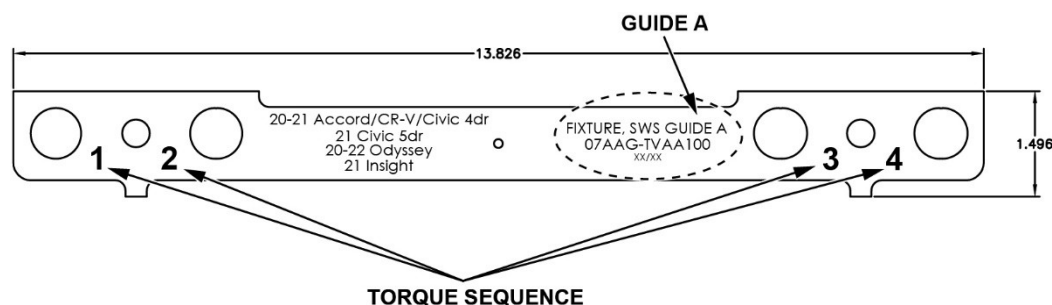


12. Remove the seat rail from the vehicle, then reinstall the seat rail to the seat frame. Use new washers and nuts and torque to **55 N·m (41 lb-ft)**.

- REAR SIDE**



BOLTS
43 N·m
(32 lb-ft)

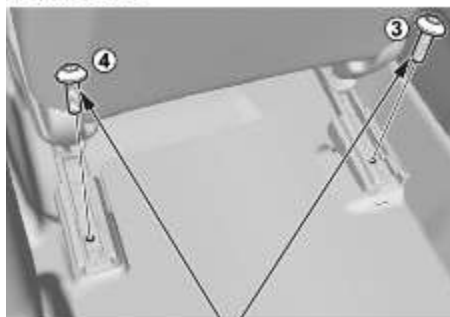

BOLTS
43 N·m
(32 lb-ft)


14. Connect the negative terminal to the 12-volt battery.
 - 12 Volt Battery Terminal Disconnection and Reconnection, [\(Click Here\)](#)
15. Do the *Front Passenger's Weight Sensor Initialization* [\(Click Here\)](#)
16. Do the *Front Passenger's Weight Sensor Operation Check* [\(Click Here\)](#)
17. Confirm SRS operation
 - Turn the vehicle to the ON mode and check that the SRS indicator comes on for about **6 seconds**, and then goes off.
18. Do the *Steering Angle Neutral Position Learning* procedure [\(Click Here\)](#)

1. Remove the label from the new seat weight sensor box and affix it to the repair order.

[illegible]


2. Slide the passenger's seat all the way forward and remove the rear seat rail fasteners.

REAR SIDE

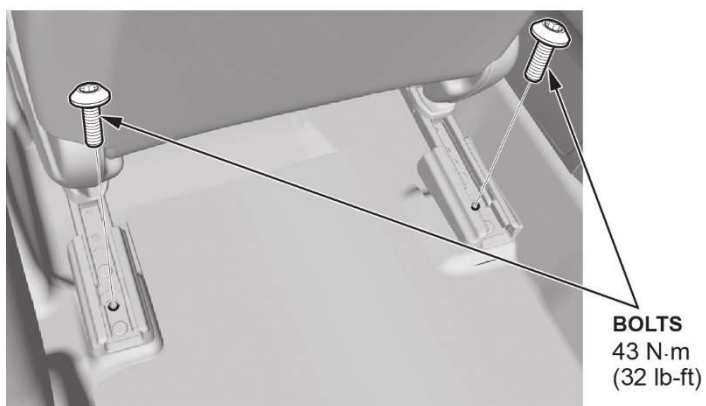


3. Slide the passenger's seat all the way rearward and remove the front rail fasteners.

FRONT SIDE

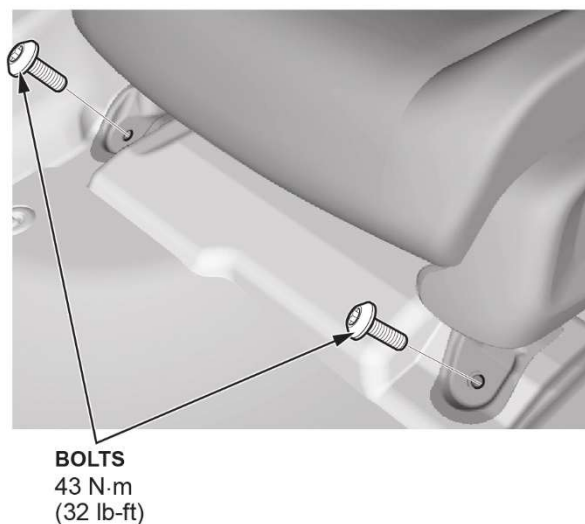


4. Disconnect the negative cable to the 12-volt battery.

1.5L ENGINE

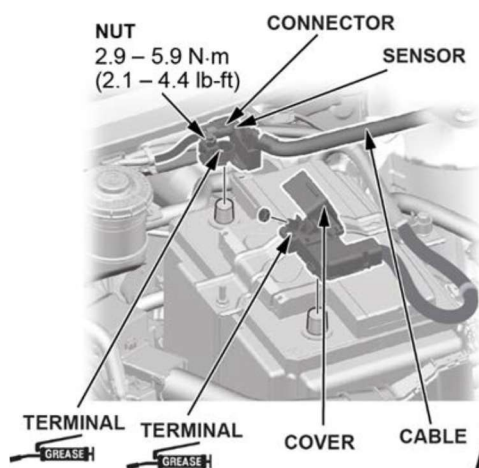


2.0L ENGINE

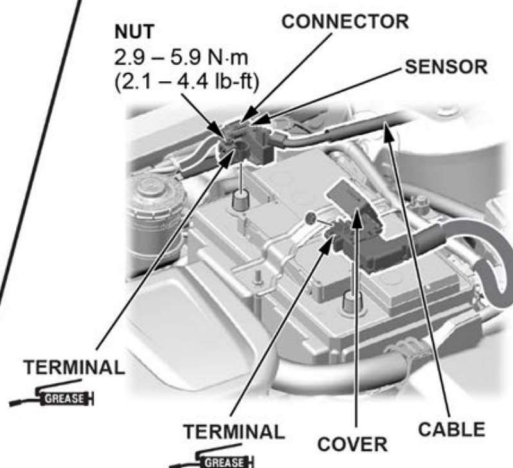

5. Lift the seat and remove the harness clip, then disconnect the connectors.



NOTE: Take a picture of the harness routing prior to removal for future reference.

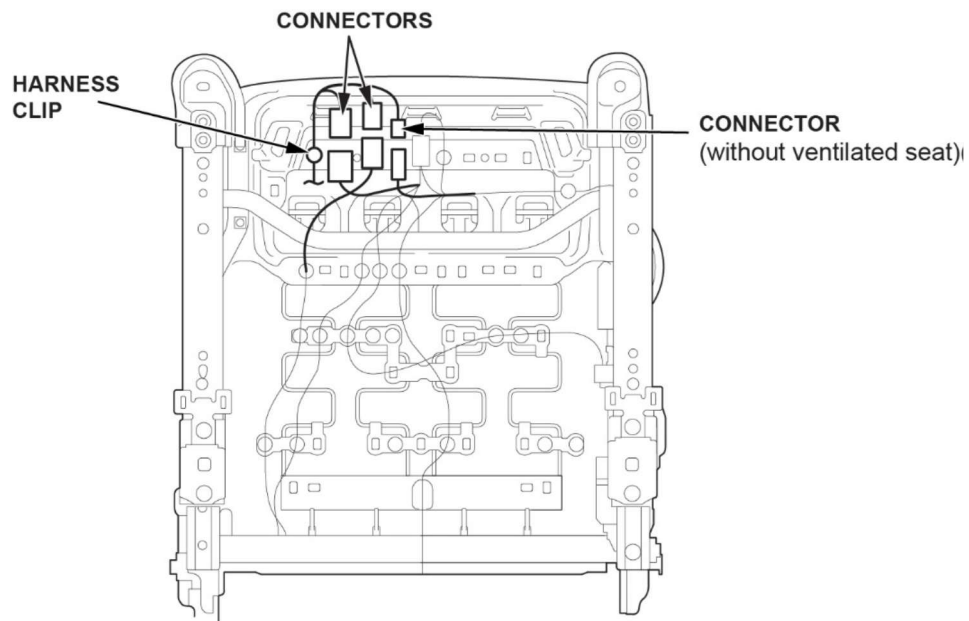


6. With the help of an assistant, carefully remove the passenger's front seat through the front door opening and place the seat on a suitable area to work.
7. Disconnect the connector to the power motor.

8. Remove the seat rails from the seat.

NOTE: Take a picture of all four seat frame nuts, bushings, and collars for reference.

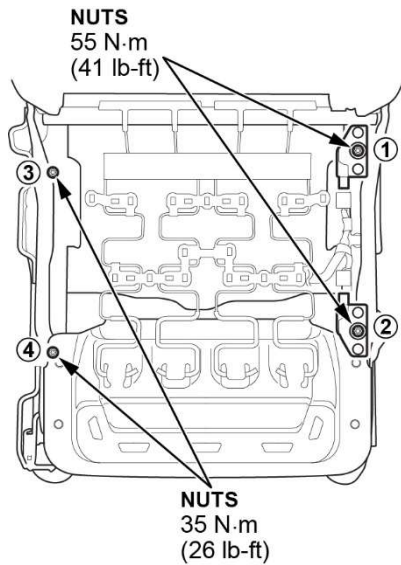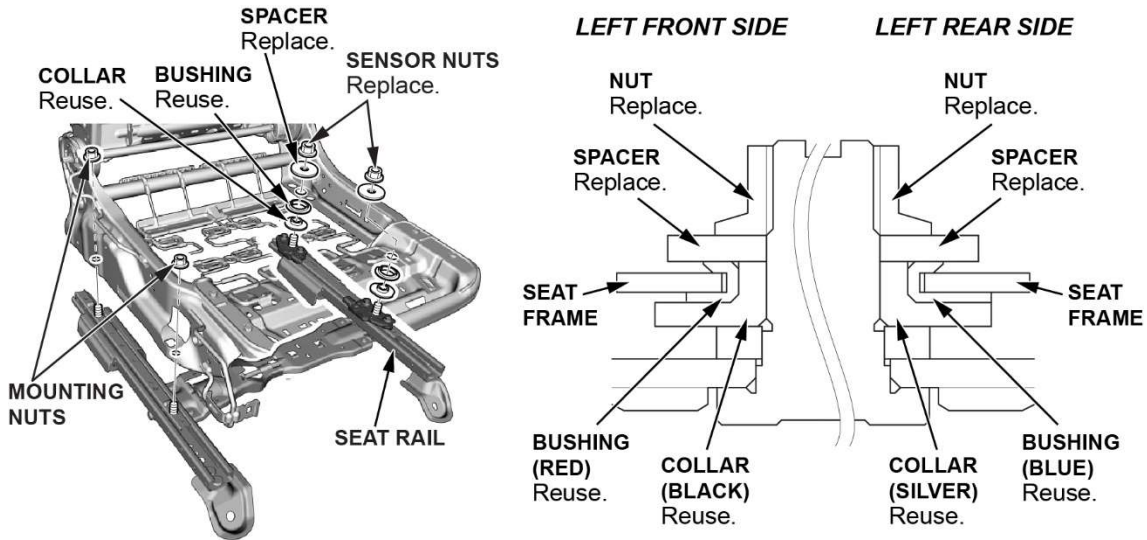

9. Mount the seat rail into the vehicle and remove the 2 seat weight sensors, then discard the nuts and sensors.

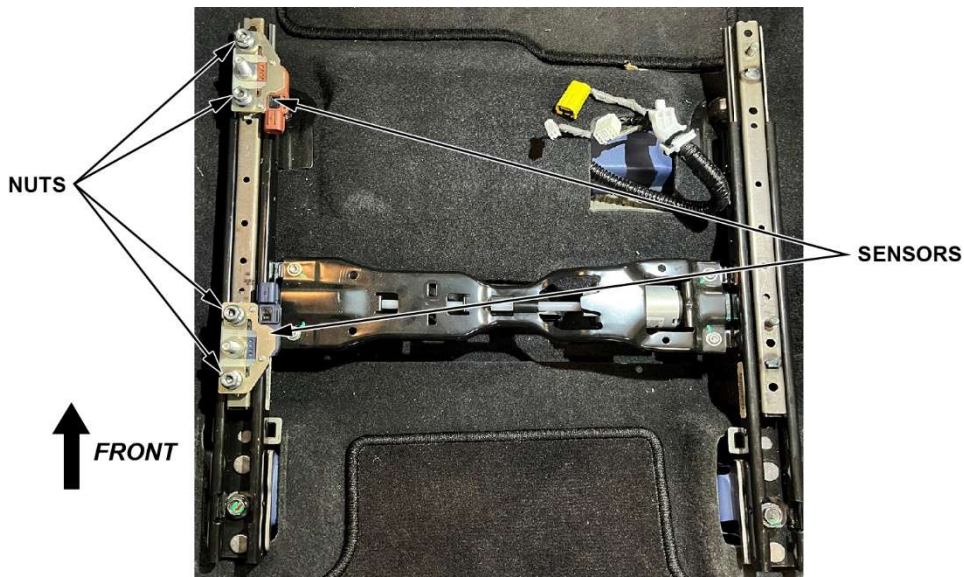

10. Install the new sensors and nuts in the orientation shown.

SENSOR POSITION 1

LEFT FRONT




SENSOR POSITION 2

LEFT REAR



11. Place the **SWS Fixture Guide A** onto the new seat weight sensors with the tabs located to the inside of the seat track. With the guide properly seated on the new sensors, **torque the nuts to 35 N·m (26 lb-ft) in the order shown on the SWS fixture guide.**

NOTE: Use the socket provided with the guide.

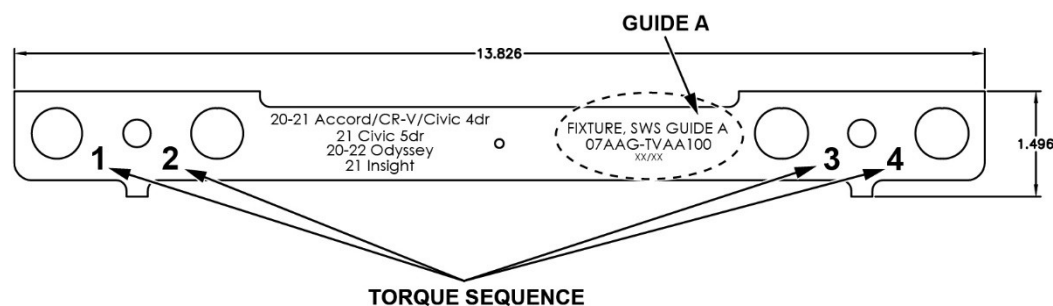


8mm NUTS
35 N·m
(26 lb-ft)

SWS FIXTURE

TABS
Tabs located
to the inside.




12. Remove the seat rail from the vehicle and reinstall the seat rail to the seat frame. Use new washers and nuts and torque the left side seat frame nuts to **55 N·m (40 lb-ft)**. The right-side nuts should be torqued to **35 N·m (26 lb-ft)**.

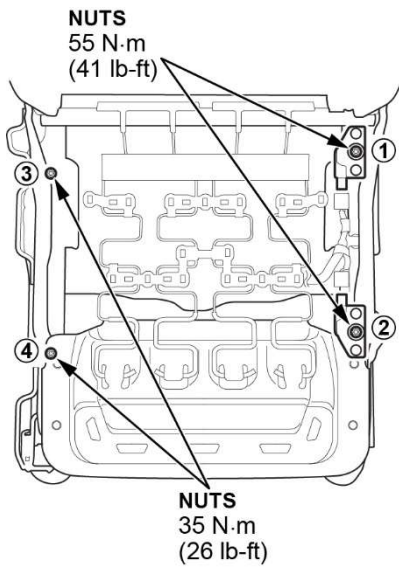


13. Install the passenger's seat into the car and tighten the bolts by hand, then torque them to **43 N·m (32 lb-ft)** in the sequence shown.

FRONT SIDE

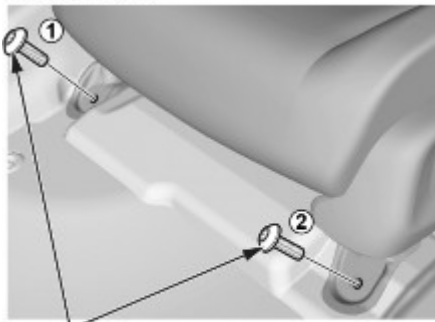


BOLTS
43 N·m
(32 lb-ft)

REAR SIDE

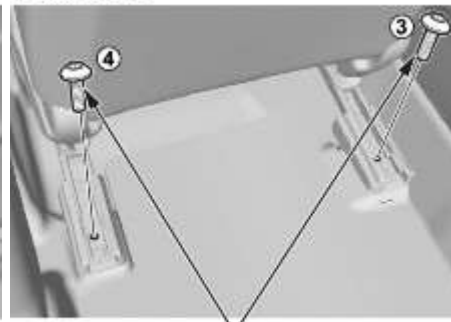


BOLTS
43 N·m
(32 lb-ft)

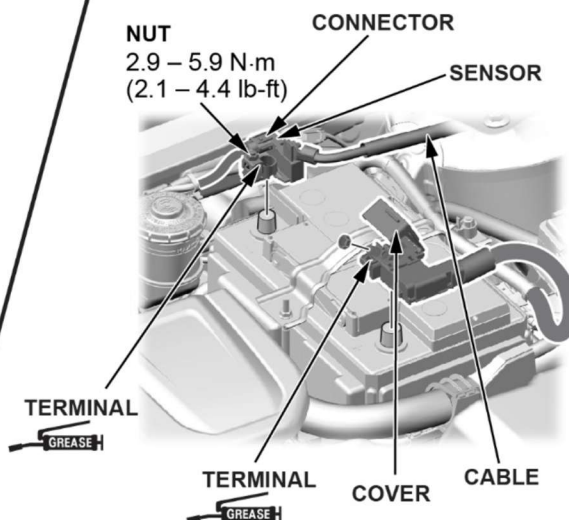


2. Slide the passenger's seat all the way forward and remove the rear seat rail fasteners.

REAR SIDE

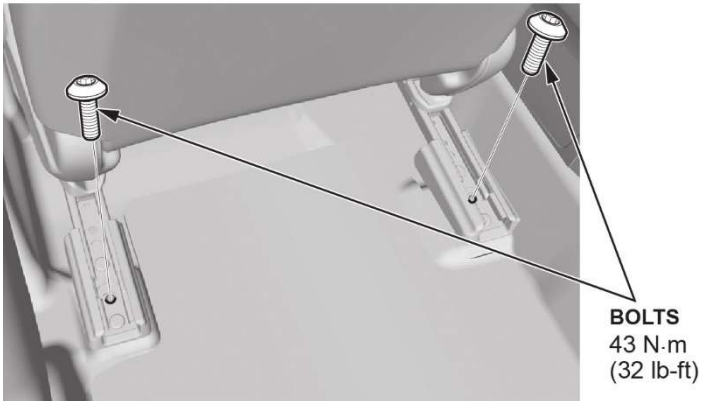

3. Slide the passenger's seat all the way rearward and remove the front rail fasteners.

FRONT SIDE

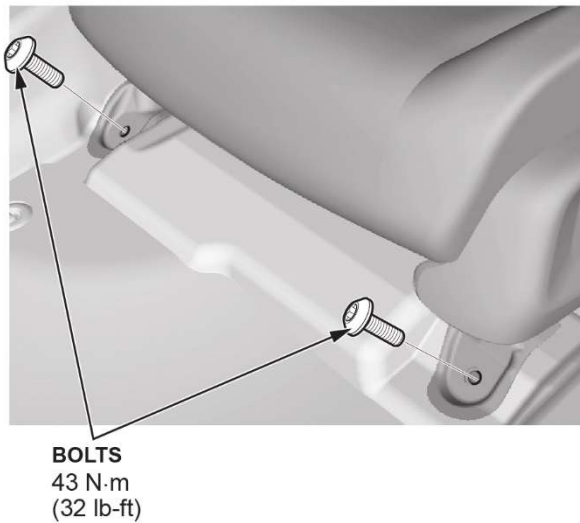

4. Disconnect the negative cable of the 12-volt battery.
 - 12 Volt Battery Terminal Disconnection and Reconnection, [\(Click Here\)](#)

5. Disconnect all connectors to allow the seat to be removed.

NOTE: Take a picture of the harness routing prior to removal for future reference.




6. Carefully remove the passenger's seat from the vehicle and place it on a suitable work area.
7. Remove the two clips from the cross brace.



8. Remove the left bracket and cross brace by removing the four bolts.



9. Remove the left rear rail cover.

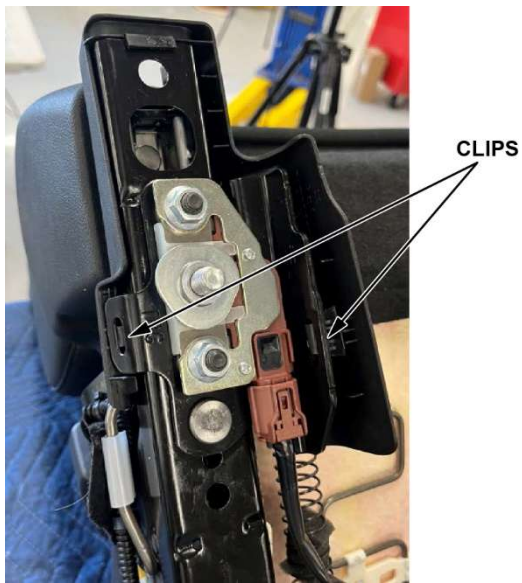

10. Remove the seat weight sensors, then discard the sensors and nuts.



11. Install the new sensors and nuts in the orientation shown.

SENSOR POSITION 1
LEFT REAR




SENSOR POSITION 2
LEFT FRONT



12. Place the **SWS Fixture Guide H** onto the new seat weight sensors with the tabs located to the inside of the seat track.
With the guide properly seated on the new sensors, **torque nuts to 35 N·m (26 lb-ft) in the order shown on the SWS fixture guide.**

NOTE: Use the socket provided with the guide.

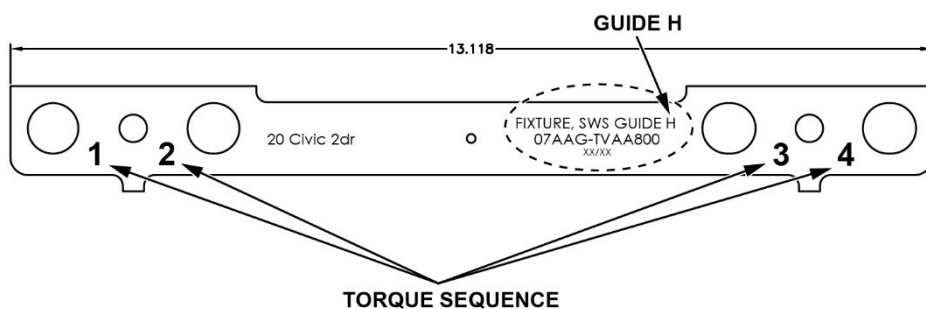


8mm NUTS
35 N·m
(26 lb-ft)




SWS FIXTURE

TABS
Tabs located
to the inside.


13. Install the left rear rail cover.

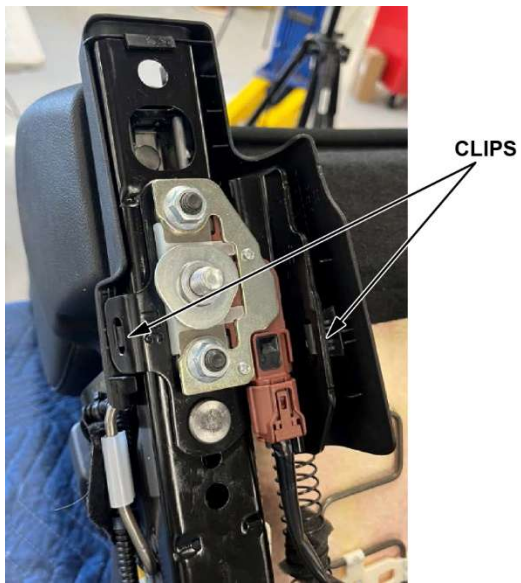

14. Install the left bracket and cross brace and torque to specification.

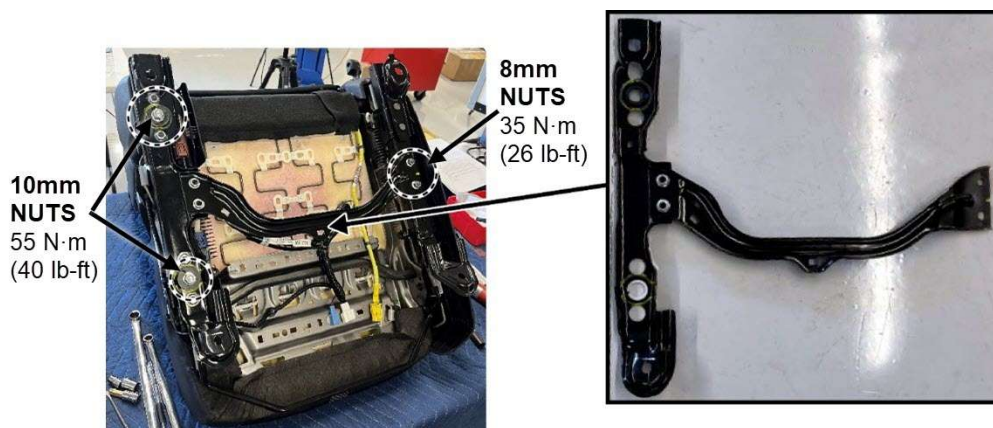

15. Install the seat and reconnect all connectors. Hand tighten the bolts first, then torque them in sequence **43 N·m (32 lb-ft)**.

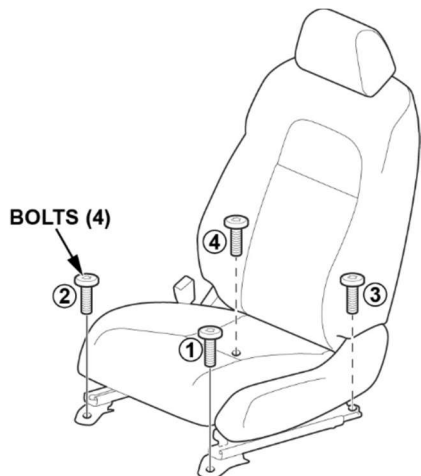

16. Connect the negative terminal to the 12-volt battery.
 - *12 Volt Battery Terminal Disconnection and Reconnection*, [\(Click Here\)](#)
17. Do the *Front Passenger's Weight Sensor Initialization* [\(Click Here\)](#)
18. Do the *Front Passenger's Weight Sensor Operation Check* [\(Click Here\)](#)
19. Confirm SRS operation
 - Turn the vehicle to the ON mode and check that the SRS indicator comes on for about **6 seconds**, and then goes off.
20. Do the *Steering Angle Neutral Position Learning* procedure [\(Click Here\)](#)