

ENGINE TECH TIPS

Subject:
DAVCO FUEL FILTER CHANGE AND PRIMING PROCEDURE


RELEVANT MODELS: 2005-2009 Conventional models with Davco fuel filter



Filter Change and
Priming Procedure

Filter Change:

1. Remove vent (1) and open Drain Valve (5) to drain fuel below the collar level.
2. Remove the cover (2) and collar (4).
Note: Use Collar Wrench 232007DAV or 1/2 Wrench 232002.
3. Remove filter and grommet (3), cover seal, and vent cap seal. Dispose of properly.
4. Install new filter, cover seal, and vent cap seal. Be sure grommet is in place on the bottom of the filter element.
5. Install cover and collar. **Hand tighten collar.**
6. Fill the cover with fuel.
7. Install Vent Cap. **Hand tighten vent cap.**
8. Start engine, when the lubrication system reaches it's normal operating pressure, increase the engine RPM for on minute. **Slowly** open vent cap until fuel level drops to one inch above collar. **Hand tighten vent cap.**

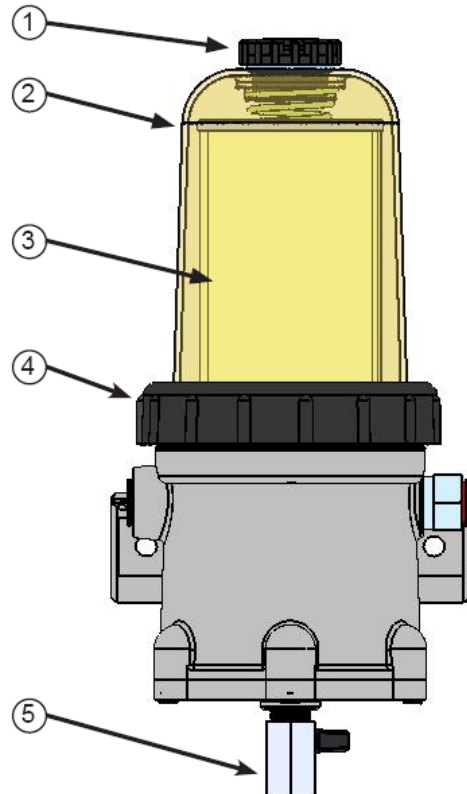

NOTE:

The DAVCO Fuel Pro vent cap and collar are designed to be removed with a DAVCO wrench. As such Warranty Claims associated with broken vent caps and collars will not be accepted if tools other than a DAVCO Fuel Pro wrench are used for removal. Please note that the vent cap and collar are to be hand tightened only during installation. The wrench is not be used for tightened either the vent cap or collar.

