



Customer Information Sheet
Vehicles built between August 3, 2007 and September 15, 2008
6.4L Diesel Engine

Your vehicle received revised / updated Instrument Cluster Message Center Information.

DRIVE TO CLEAN EXHAUST FILTER

Displayed when the Diesel Particulate Filter (DPF) is full of particles (exhaust soot) and the vehicle is not being operated in a manner to allow normal cleaning. This message will stay on until the exhaust filter cleaning has begun, at which time the "CLEANING EXHAUST FILTER" message will be displayed. It is recommended the vehicle operator drive the vehicle above 30 mph (48 km/h) until the "CLEANING EXHAUST FILTER" message is extinguished. This message is NORMAL.

NOTE: If this message is ignored, your vehicle will continue to fill the Diesel Particulate Filter (DPF) with particles (exhaust soot). If cleaning is not permitted, the light will illuminate and engine power may be limited. If the vehicle is still not operated in a manner to allow cleaning, the light will illuminate and engine power will be further limited. Dealer service will then be required to restore your vehicle to full power operation.

NOTE: Diesel Particulate Filter (DPF) regeneration will not INITIATE at Idle or in Power-Take-Off (PTO) mode. When DRIVE TO CLEAN EXHAUST FILTER is displayed in the message center, PTO and/or Stationary Elevated Idle Control (SEIC) must be disengaged/inactive in order to properly clean the DPF. The vehicle must be driven until the "CLEANING EXHAUST FILTER" message is extinguished.

CLEANING EXHAUST FILTER

Displayed when the vehicle has entered the cleaning mode. Various engine actions will raise the exhaust temperature in the Diesel Particulate Filter (DPF) system to burn off the particles (exhaust soot). After the particles are burned off, the exhaust temperature will fall back to normal levels. This message is NORMAL.

WARNING: When the CLEANING EXHAUST FILTER message appears in the message center, do not park near flammable materials, vapors or structures until filter cleaning is complete.

EXHAUST FILTER DRIVE COMPLETE

Displayed when the Diesel Particulate Filter (DPF) has been adequately cleaned after the "DRIVE TO CLEAN EXHAUST FILTER" followed by "CLEANING EXHAUST FILTER" messages have been displayed.

Please keep this letter in your glove box for future reference.

TB-9436-B