# 2010 USA Volkswagen Maintenance Schedule by Miles

### Routan Only

## Carefree Maintenance Program Coverage for USA Only



1.00.00														
Miles	6000	12000	18000	24000	30000	36000	42000	48000	54000	60000	66000	72000	78000	84000
Change the engine oil and engine oil filter	X	Х	X	X	X	X	X	X	X	X	X	X	X	X
Rotate tires	Х	Х	Х	X	Х	Х	Х	Х	X	X	Х	Х	Х	Х
If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter, replace if necessary		x		х		x		x				x		x
Replace the engine air cleaner filter					Х					Х				
Replace the air conditioning filter (if applicable)		Х		Х		Х		Х		Х		Х		Х
Inspect the brake linings, replace if necessary		Х		Х		Χ		Х		X		Х		Х
Inspect the CV Joints		X (1)		Х				Х				Х		
Inspect the exhaust system		X (2)		X				Х				Х		
Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary		х		х		x		х		X		х		х
Change the automatic transaxle fluid and filter if using your vehicle for any of the following: Police, taxi, fleet or frequent trailer towing.										X				
Flush and replace the engine coolant										X (3)				

- 1. Inspect the CV joint. Perform the first inspection at 12,000 miles or 12 months
- 2. Inspect the exhaust system. Perform the first inspection at 12,000 miles or 12 months
- 3. Flush and replace the engine coolant at 60 months if not completed at 102,000 miles

Revised: September, 2012

### 2010 USA Volkswagen Maintenance Schedule by Miles Routan Only



Miles	90000	96000	102000	108000	114000	120000	126000	132000	138000	144000	150000
Change the engine oil and engine oil filter	Х	Х	X	Х	Х	Х	X	Х	X	X	Х
Rotate tires	X	X	X	Х	X	X	X	X	Х	X	X
If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter, replace if necessary		х		x				x		x	
Replace the engine air cleaner filter	X					X					X
Replace the air conditioning filter (if applicable)		Х		Х		Х		X		X	
Inspect the brake linings		Х		Х		Х		X		X	
Inspect the CV Joints		Х				Х					
Inspect the exhaust system		Х				Х					
Inspect the front suspension, tie rod ends, and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play: replace if necessary		x		x		x		x		x	
Change the automatic transaxle fluid and filter if using your vehicle for any of the following: Police, taxi, fleet or frequent trailer towing.											
Change the automatic transaxle fluid and filter						Х					
Inspect and replace the PCV Valve if necessary	Х										
Flush and replace the engine coolant			X (4)								
Replace the ignition cables (3.8L engine)			Х								
Replace the spark plugs			Х								
Replace the timing belt (4.0L engine)			Х								
Replace accessory drive belt (s)						Х					

4. Flush and replace the engine coolant if not completed at 60 months

#### © 2012 Volkswagen Group Of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

Revised: September 2012