

FLA COE
FLB COE
FLD Conventional
Business Class
FLC 112 Conventional

> Century Class Conventional
> Argosy COE
Cargo
> Columbia

> Coronado
> Business Class M2
> Cascadia
> 108SD/114SD

**Freightliner
Service Bulletin**

General Information

If a vehicle that was decked during transport has a crank/no start condition, prime the fuel system following the instructions in the engine manufacturer's service manual. Refer to the Detroit Diesel or Cummins service literature for proper servicing procedures and equipment.

NOTE: This bulletin does not apply to Cummins ISC, ISL, and ISX engines as they have an electric priming pump.

Warranty

This bulletin is informational only. Warranty does not apply.