



Countries:	AUSTRALIA, BRAZIL, CANADA, UNITED STATES, MEXICO, SOUTH AFRICA	Document ID:	IK0800404
Availability:	ISIS, FleetISIS	Revision:	0
Major System:	ELECTRICAL SYSTEM	Created:	11/1/2012
Current Language:	English	Last Modified:	11/2/2012
Other Languages:	NONE	Author:	Chris Moody
Viewed:	101		

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 3	Not Helpful 0
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	-------------------------	-----------------------------

Title: Circuit diagram for ProStar/LoneStar Fifth wheel

Applies To: ProStar, LoneStar

DESCRIPTION

The electrical circuit diagram manual S08344 is missing a diagram for the Fifth wheel.

SYMPTOMS

- No fifth wheel documentation can be found.

RESOLUTION

See attachment

CIRCUIT DIAGRAMS

[Fifth wheel circuit diagram](#)

Hide Details

Feedback Information

Viewed: 100
Helpful: 3
Not Helpful: 0
No Feedback Found