#### SB-10043563-4531

# TECHNICAL BULLETIN LTB00348NAS2 27 JAN 2012



### SECTION: 417

# Water Ingress Through High-Mounted Stop Lamp

### AFFECTED VEHICLE RANGE:

LR2 (LF)

#### VIN: 8H000001 – CH284721 Model Year: 2008 - 2012

#### **CONDITION SUMMARY:**

**Situation:** Water may enter the vehicle through the high-mounted stop lamp area. This may be caused by water passing through the lamp seal.

Action: In the event of a customer concern of the above, refer to the Repair Procedure outlined below to apply sealant to the high-mounted stop lamp.

#### <u>PARTS</u>:

STC50550 .....PU sealant

Qty: 1

#### TOOLS:

Refer to Workshop Manual for any required special tools

#### WARRANTY:

△ NOTE: Repair procedures are under constant review, and therefore times are subject to change; those quoted here must be taken as guidance only. Always refer to DDW to obtain the latest repair time.

DDW requires the use of causal part numbers. Labor only claims must show the causal part number with a quantity of zero.

DESCRIPTION	SRO	Time (Hours)	Condition Code	CAUSAL PART
Apply sealant to the high-mounted stop lamp	86.41.89/27	0.20	D8	LR014462

Normal Warranty policies and procedures apply





#### **REPAIR PROCEDURE**

#### APPLY SEALANT TO THE HIGH-MOUNTED STOP LAMP

1. Refer to Workshop Manual, section 417-01: *Exterior Lighting*, and remove the high-mounted stop lamp for access.

2. Clean and dry the sealing faces of the lamp foam seal and vehicle body.

3. Apply a 3mm bead of sealant (STC50550) to the sealing face of the lamp seal.



CAUTION: Allow 24 hours before power washing the vehicle.

4. Refer to Workshop Manual, section 417-01: *Exterior Lighting*, and install the high-mounted stop lamp.