



Applies To: **2001–02 Civic** – Check the iN VIN status for eligibility

April 20, 2012

Passenger's Airbag Replacement

BACKGROUND

American Honda is inspecting passenger airbags from selected vehicles. With the customer's consent, replace the airbag. The passenger's airbag will be collected by American Honda.

If the customer agrees to participate in this study, order the airbag through the controlled parts system. To avoid inconveniencing the customer, it may be necessary to request overnight shipping if the part is not available from your facing parts center. If the customer needs a rental, American Honda will pay 1 day for a rental car to help avoid any customer inconvenience.

The color of the new airbag cover may not match the coloring of the dashboard. Ask the customer if they would like the original airbag cover installed or the new cover that may not match.

This is a voluntary action, not a campaign. You **must** have the customer's permission **before** replacing any components on eligible vehicles because replacing any part without the customer's permission is illegal. After the study is complete, this procedure will be discontinued.

PARTS INFORMATION

Passenger Airbag:

P/N 06780-S5A-A80ZA (black)

P/N 06780-S5A-A80ZB (taupe)

TOOL INFORMATION

KTC Trim Tool Set: SOJATP2014

WARRANTY CLAIM INFORMATION

OP#	Description	FRT
7541A1	Replace the passenger's airbag.	0.3
A	Transfer the original cover to the new airbag.	0.1

Failed Part: P/N 06780-S5A-A80ZA

Defect Code: 5ZZ00


Symptom Code: S3700

Skill Level: Repair Technician


REPLACEMENT PROCEDURE

NOTE: Don't deploy the airbag. American Honda will contact your parts department to arrange for the return of the airbag once the warranty claim has been submitted.

1. Disconnect the battery negative cable, and wait at least 3 minutes before beginning work.
2. Lower the glove box:
 - Remove the passenger's dashboard lower cover.
 - While holding the glove box, remove the glove box stop on each side.
3. Remove the passenger's airbag:
 - Disconnect the front passenger's airbag 4P connector from the dashboard harness B 4P connector.

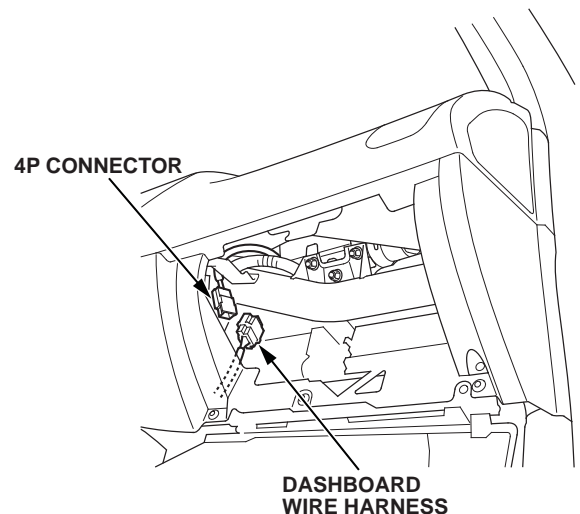


- Remove the three mounting nuts from the bracket. Do not reuse the nuts.

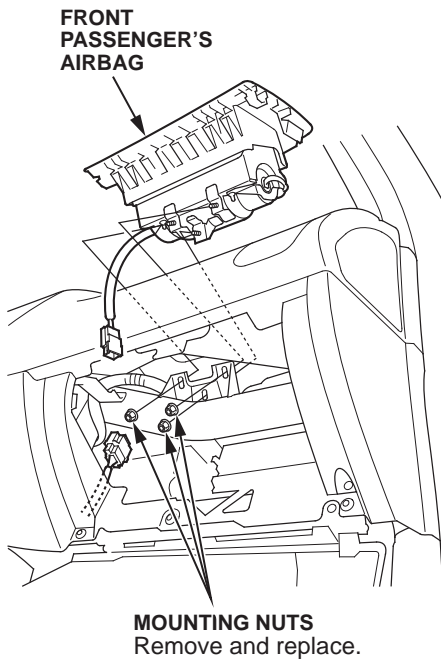

- Cover the airbag cover and dashboard with a cloth, then carefully pry with a screwdriver to lift the airbag out of the dashboard.
 - If the customer wants to keep the original airbag cover that matches the dashboard, go to step 4.
 - If the customer wants the new cover, go to step 6.

4. Separate the original airbag from the original airbag cover:


- Place a clean shop towel on your workbench, then place the airbag, with the cover side down, on the towel.
- Insert a trim tool at both ends of the airbag's front row of hooks as shown.

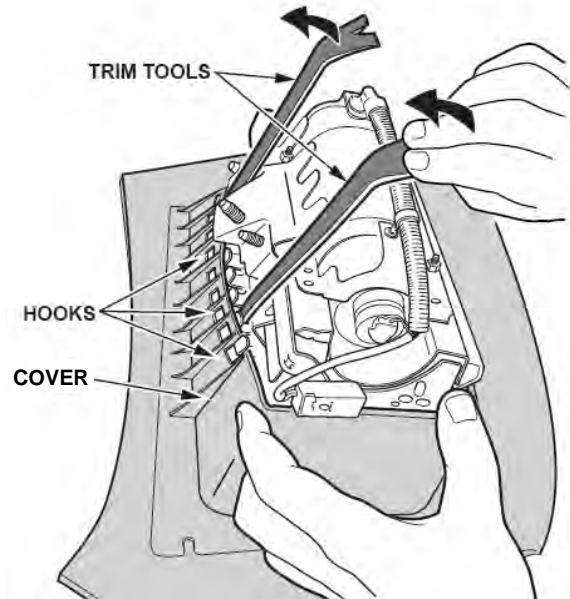


- With the help of an assistant, pry up on both trim tools to release the hooks from the lid, and remove the airbag.

NOTE: Use this same procedure to remove the replacement airbag from the new cover.

5. Install the original cover on the replacement airbag.

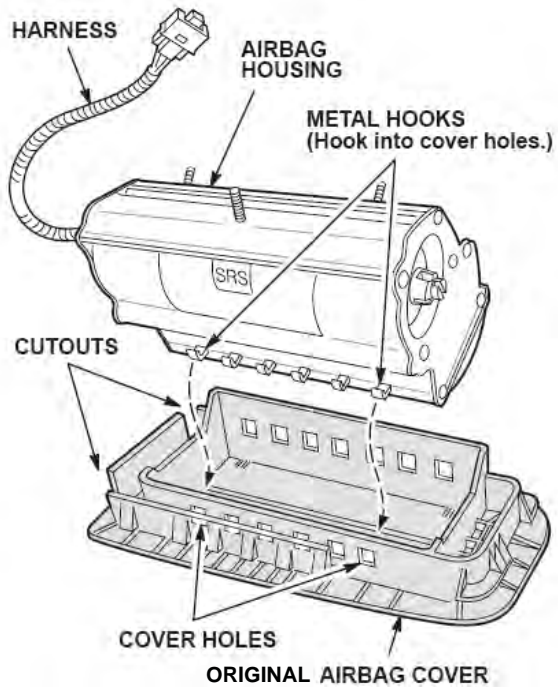

6. Install the replacement passenger's side airbag into the dashboard.
7. Install the three new mounting nuts, and torque them to **9.8 N·m (7.2 lb-ft)**.

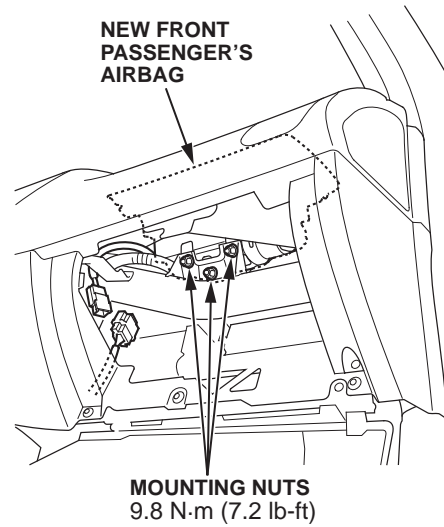

8. Reconnect the passenger's airbag 4P connector to the dashboard harness B 4P connector.
9. Reinstall the glove box.
10. Reconnect the negative battery cable.
11. Confirm the airbag is installed properly by turning the ignition switch to ON (II). The SRS indicator should come on for about 6 seconds, then turn off.
12. Return the undeployed airbag to the parts department for collection by American Honda.