December 11, 2012



2013 Camry Pre-Delivery Service (PDS)

Service

Category General

Section

Pre-Delivery Service

Market USA



Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION	
2013	Camry	les de la companya d	4 4

Introduction

Pre-Delivery Service (PDS) is a critical step in satisfying our new car customers. Customer feedback indicates the following areas deserve special attention when performing PDS:

- Careful inspection for paint chips/scratches and body dents/dings.
- Proper operation of electrical accessories (including interior light, clock, and radio reset).
- Interior cleanliness.
- Proper function of mechanical systems.

Customer retention and proper maintenance of vehicles has been a major focus for Toyota. To help remind customers that regular oil changes are essential to the proper maintenance of their vehicle, dealers are required to begin installing a first oil change reminder sticker prior to delivery. By doing this, customers will be reminded to return to your dealership for their first oil change. Your current oil change reminder sticker may be used. (See PDS Check Sheet item 9 of "Final Inspection & Cleaning".)

A new PDS <u>Check Sheet</u> has been developed for the 2013 model year Camry. Some check points have been added, expanded or clarified. **Bulletins are available for items in bold type.**

Warranty Policy

If the need for additional repairs or adjustment is noted during the Pre-Delivery Service, the required service should be performed under warranty. Reimbursement will be managed under the warranty policy.

The Warranty Policy and Procedures Manual requires that you maintain the completed PDS check sheet in the customer's file. If you cannot produce a completed form for each retailed vehicle upon TMS and/or Region/Distributor audit, the PDS payment amount will be subject to debit.

An additional Repair Order completed in conjunction with normal PDS must have time punch/flags for service. If multiple repairs are performed, separate time flags must be punched for each repair.



Reimbursement Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
001013	Pre-Delivery Service	1.0	N/A	N/A	N/A

Required Tools & Equipment

REQUIRED EQUIPMENT	SUPPLIER	PART NUMBER	QTY
TIS Techstream* or Techstream Lite NOTE: Software version 7.31.003 or later is required.	ADE	TSPKG1 or TSLITEDLR01	1

^{*} Essential SST.

NOTE

Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787.

Before Inspection

When performing new car Pre-Delivery Service, install Short Pin before moving vehicle from storage lot so that FUNCTIONAL OPERATION checks can begin as soon as vehicle is moved into the service stall.

1. **Install Short Pin*** – T-SB-0238-12

NOTE

The Short Pin is removed only on vehicles going to Hawaii, Puerto Rico, Saipan, Guam, and American Samoa.

Functional Operation

Apply parking brake and cycle ignition "IG-ON", place gear selector in reverse, turn on lights and rear defogger. Unlock all doors, release fuel door.

- 1. Check dome, courtesy, map, and sun visor lights*
- 2. Check warning/indicator lights, gauges, and horn
- 3. Check windshield wipers and washers
- 4. Check headlights, instrument lights, turn signals, emergency flashers, and brake lights
- Check inside/outside rear view mirror operation/adjustment*

T-SB-0241-12

Functional Operation (Continued)

6. Check cigarette lighter* and power outlets

Check the power outlet using an electrical accessory designed for this use.

7. Check audio/navigation*/backup camera* systems and set clock

For navigation, set the destination search area to the correct location.

- Verify Entune/Navigation software version (Display Audio, Non-HDD Type only)* T-SB-0026-12
- 9. Check sliding roof*
- 10. Install shift-lock override button cover

Walkaround Inspection

Starting at the left front door, check window and door lock operation and the operation of all power windows and door locks from master switch, on vehicles so equipped. While walking around vehicle in a counterclockwise direction, open left rear door (if applicable) and check operation of window regulator and door lock, set child safety door locks to the normal (unlocked) position. Assure tightness of interior garnishes and check seat belts. Inspect lights at rear of vehicle. Repeat checks at right rear door. Inspect right front door window regulator and lock operation and garnishes. Check seats and seat belt operation. Continue on around to the front of the vehicle checking lights.

- 1. Check Smart Key System* T-SB-0015-12
- Check door and door lock operation, including each wireless remote control/theft deterrent system*
- 3. Check window operation
- 4. Check that engine starts with all keys
- 5. Check that child safety door locks are in normal (unlocked) position
- 6. Check seats and seat belt operation
- 7. Check rear defogger/rear view mirror defogger*
- 8. Check side marker, tail, backup, and license plate lights
- 9. Check luggage compartment light* and trim appearance
- 10. Adjust spare tire pressure, inspect for damage, and check jack and tool installation

NOTE

Compact spare tire — 60 psi (420 kPa).



Walkaround Inspection (Continued)

11. Check headlight aim

Refer to the Repair Manual for procedures.

Under Hood

- 1. Check engine oil level and ATM fluid levels
- Check brake fluid level

Visually inspect using see-through reservoir.

- Check engine coolant level
- 4. Check windshield washer fluid level
- 5. Check battery state-of-charge using Digital Battery System Analyzer

Refer to Service Bulletin No. PG001-06, "Battery Maintenance for In-Stock Vehicles & Pre-Delivery."

December 11, 2012

NOTE

Battery SOC should be a minimum of 75%. Please enter the SOC Reading on the space provided on the check sheet and attach the printout to the check sheet.

6. Inspect for fuel, oil, coolant, and other fluid leaks

Under Vehicle (On Hoist)

Remove disc brake anti-rust covers/anti-corrosion wheel film* - PD017-04

Visually inspect rotors for rust.

NOTE

For best rotor rust prevention, retain wheel film on vehicle until just prior to customer delivery.

- 2. Inspect tires for defects/damage
- 3. Verify Tire Pressure Warning System (TPWS) operation see check sheet
- Install wheel covers/caps/spare tire wheel covers*
- 5. Inspect for fuel, oil, coolant, and other fluid leaks
- 6. Inspect under the vehicle for damage, rust, etc
- 7. Visually check bolts and nuts on chassis and powertrain for looseness

T-SB-0241-12

Under Vehicle (On Hoist) (Continued)

- 8. Install rubber body plugs (stored in glove box or center console)*
- 9. Install front wheel opening extension pads see check sheet

Road Test

A complete road test helps assure customer satisfaction. Drive vehicle over a variety of road surfaces and driving conditions. Check for unusual noise and driving performance.

1. Check cold engine operation

Check starting and fast idle operation performance.

2. Check engine operation during warm-up

Check that engine operates smoothly during warm-up.

Check for unusual noise, engine vibration, rough idle, etc.

3. Check engine at normal operating temperature

Check engine performance over a broad range of driving conditions, including idle quality, acceleration, cruise, and deceleration.

4. Check transmission operation

Check automatic transmission operation, including operation in each range, neutral start switch, and shift lock system.

5. Check brake and parking brake operation

Check brake function, including unusual noise, parking brake performance, and all related brake system indicator lights.

6. Check steering operation and off-center/vehicle pull/flutter

Check steering function.

Check steering off-center/vehicle pull/flutter.

- 7. Inspect for abnormal noise and vibration
- 8. Inspect for squeaks and rattles
- Check Blind Spot Monitor System*

Check when the switch is "ON", the indicator is illuminated. Check when a vehicle is detected in the blind spot, the outside rear view mirror indicator on that side illuminates.

Road Test (Continued)

- 10. Check front and rear* heater and A/C operation
- Check cruise control operation*

Check cruise control, including On-Off switch, "SET/COAST," "RESUME/ACCEL," and "CANCEL" functions.

- 12. Check front seat heater/ventilation operation*
- 13. **Set/calibrate compass*** see check sheet

Final Inspection & Cleaning

1. Remove interior protective covers, unnecessary labels, tags, etc. (Remove protective covers just before delivery to the customer)

Remove plastic covers from door panels, seats, head restraints, and sun visors, as required. Remove labels, tags, and stickers (except those containing owner information).

NOTE

Consumer information labels, such as airbag information warning and bumper information labels, MUST be left on the vehicle until delivery to a retail customer.

- 2. Visually inspect all interior parts for installation, damage, fit, dirt, etc.
- 3. Verify floor mat application and install using retaining clips* T-SB-0024-12
- 4. Verify green light is illuminated on SOS (Safety Connect) button*
- Remove Rapgard™ and clear protective bumper film*
 Ensure that ALL glue residue is removed.
- 6. Wash and clean vehicle
- 7. Inspect paint finish for scratches, chips, rust, dents, damage, etc.
- 8. Inspect exterior body parts for proper installation, damage, rust, etc.
- 9. Place oil change sticker on inside of windshield, top left corner

Complete the mileage or date recommendation and apply the oil change reminder sticker to the inside of the windshield, top left corner. You may use your current oil change reminder sticker or order new stickers by calling 1-800-527-6283.

10. Place Owner's Guide and first aid kit portfolio* in glove box



Final Inspection & Cleaning (Continued)

11. Perform Techstream Health Check

Perform Health Check to ensure that diagnostic trouble codes are no present. Health Check results can be printed for the customer at delivery, or for the dealer file, using the Diagnostic Report function.

12. Install front license plate & mounting bracket* – see check sheet

^{*} Inspect or install when equipped or required



2013 PRE-DELIVERY SERVICE CHECK SHEET

ZOIST INC-DELIVE			mber 2012
BEFORE INSPECTION	OK Adjust/ Repair	UNDER VEHICLE (ON HOIST)	OK Adjust/ Repair
01 Install Short Pin* (Hawaii, Puerto Rico, Saipan, Guam,		01 Remove disc brake anti-rust covers/anti-corrosion wheel film*	_
American Samoa)		02 Inspect tires for defects/damage	50
FUNCTIONAL OPERATION		03 Verify Tire Pressure Warning System (TPWS) operation - see page 2	00
Apply parking brake and cycle ignition "IG-ON"; place gear selector in return on lights and rear defogger. Unlock doors; release fuel door.	verse;	04 Install wheel covers/caps/spare tire wheel covers*	
01 Check dome, courtesy, map, and sun visor lights*	00		88
02 Check warning/indicator lights, gauges, and horn		07 Inspect under the vehicle for damage, rust, etc.	55
03 Check windshield wipers and washers 04 Check headlights, instrument lights, turn signals,	00	08 Visually check bolts and nuts on chassis and powertrain	
emergency flashers, and brake lights	00	for looseness	00
05 Check inside/outside rear view mirror operation/	00	console)*	▫
adjustment* 06 Check cigarette lighter* and power outlets		To motal none whose sponling extension page 2	
07 Check audio/navigation*/backup camera* systems and		ROAD TEST	
set clock		A complete road test helps assure customer satisfaction. Drive vehicle ove variety of road surfaces and driving conditions. Check for unusual noise and	era d
Audio, Non-HDD Type only)*		driving performance.	
09 Check sliding roof* 10 Install shift-lock override button cover		Enter Odometer Readings	
		Reading Before Test:Reading After Test:	
WALKAROUND INSPECTION	ELAN DELL	01 Check cold engine operation	88
Start at left front door. Check window and door lock operation (from mas switch, if equipped). Continue around vehicle in a counterclockwise		03 Check engine at normal operating temperature	
checking each door and window operation, child door locks, seat bell condition, all lights, luggage compartment contents. Finish by checking		04 Check hybrid transmission operation	
aim and continue into UNDER HOOD checks.		05 Check brake and parking brake operation	
01 Check Smart Key System		07 Inspect for abnormal noise and vibration	
02 Check door and door lock operation, including each	00	08 Inspect for squeaks and rattles	88
wireless remote control/theft deterrent system*		10 Check front and rear* heater and A/C operation	
04 Check that engine starts with all keys		11 Check cruise control operation*	
05 Check that child safety door locks are in normal (unlocked) position		12 Check front seat heater/ventilation operation*	88
06 Check seats and seat belt operation			
07 Check rear defogger/rear view mirror defogger* 08 Check side marker, tail, backup, and license plate lights		FINAL INSPECTION AND CLEANING	
09 Check luggage compartment light* and trim appearance		01 Remove interior protective covers, unnecessary labels, tags, etc. (Remove just before delivery to customer)	
10 Adjust spare tire pressure, inspect for damage, and check		02 Visually inspect all interior parts for installation.	
jack and tool installation		3-,,,	
UNDER HOOD		03 Verify floor mat application and install using retaining clips*	
01 Check engine oil level	Too	04 Verify green light is illuminated on SOS (Safety Connect)	
02 Check brake fluid level			80
03 Check engine coolant level		06 Wash and clean vehicle	
04 Check inverter coolant level	155	07 Inspect paint finish for scratches, chips, rust, dents, damage, etc.	00
06 Check battery state-of-charge using Digital Battery		08 Inspect exterior body parts for proper installation,	
System Analyzer (SOC Reading:%) 07 Inspect for fuel, oil, coolant, and other fluid leaks	188	damage, rust, etc	
BATTERY MAINTENANCE		left corner	
01 Perform HV battery check and maintenance	Too	The state of the s	80
* Inspect or install when equipped/required.	100		85
	o Worronty	Policy	
Completion and retention of this from is required to comply with Toyota's	s warranty	We hereby certify that all it	ems
TECHNICIAN'S SIGNATURE SERV	IOE MANIA	GER'S SIGNATURE on this form have been che	
	ICE MANA	OLIVO OIOIVATOILE	
	ICE MANA	and corrected for prope	
NAME (PLEASE PRINT) NAME	(PLEASE	and corrected for prope operation as required.	

FRONT WHEEL OPENING EXTENSION PAD INSTALLATION

The front wheel opening extension pad set (right and left front wheel opening extension pads and 2 tapping screws) is loaded in the luggage compartment at the assembly plant to avoid damage in transit.

- Remove the 2 tapping screws form the engine under cover (the screws will be reused for installation).
- Place the left front wheel opening extension pad on the installation position as shown and tighten the 3 tapping screws.

NOTE

- There is a distinguishable mark on each pad.
- Do not interchange the tapping screws A and B.
- Repeat steps 1 and 2 for the right side.


Tapping Screws A:

Nominal length: 23.0 mm (0.91 in.)

Diameter: 6.0 mm (0.24 in.)

Washer outside diameter: 18.0 mm (0.71 in.)

Screw A

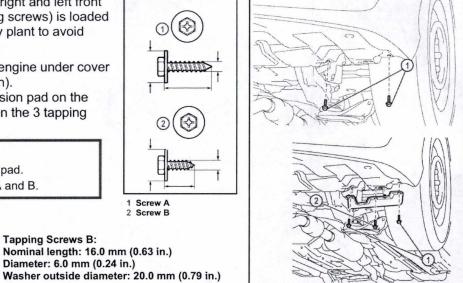

COMPASS CALIBRATION

Refer to the Repair Manual for the Calibration procedure for vehicles equipped with a compass in the rear view mirror.

Nominal length: 16.0 mm (0.63 in.) Diameter: 6.0 mm (0.24 in.)

Tapping Screws B:

NOTE

- Do NOT perform calibration of the compass in a place where the earth's magnetic field is subject to interference (underground parking, under a steel tower, between buildings, roof parking, near a railroad crossing, near a large vehicle, etc.).
- During calibration, do NOT operate electric systems (moon roof, power windows, etc.) as they may interfere with the calibration.

TPWS OPERATION VERIFICATION

- Connect Techstream to DLC3.
- Adjust all tires (except the spare tire) to the standard tire inflation pressure, as indicated on the tire and loading information label on the vehicle.

NOTE

- To adjust tire pressure correctly when outside temperature is significantly colder or warmer than shop temperature, follow the procedures outlined in Service Bulletin No. T-SB-0020-12, "Tire Inflation Pressure Compensation and Adjustment".
- Adjust the tire pressure when the tires are cold.
- Cycle the ignition switch to the "IG-ON" mode.
- Check the tire pressure of all tires using Techstream. If the tire pressure values cannot be displayed, the system is NOT operating properly. Refer to the Repair Manual.


FRONT LICENSE PLATE & MOUNTING BRACKET* INSTALLATION

Installation Procedure Part Number: 52114-06160


- 1. Insert the front license plate into the mounting bracket.
- 2. Align the center tab on the mounting bracket with the center line of the air intake.
- 3. Attach the hooks of the mounting bracket to the second air intake opening and rotate the bracket upwards.
- 4. Align the installation holes on the mounting bracket and front license plate with the dimples on the front bumper.
- 5. Screw in the 2 self-tapping screws directly into the dimples to install the front license plate and mounting bracket.

NOTICE

- · Do NOT pre-drill holes into the bumper.
- · Do NOT over-tighten the self-tapping screws.

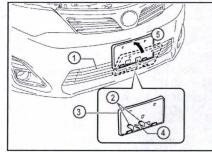

- Air Intake
- Front License Plate **Mounting Bracket**
- 5 Rotate Bracket

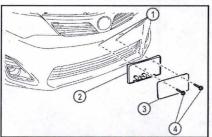

- Dimples
- 2 Front License Plate
- **Mounting Bracket** 3 License Plate
- 4 Self-tapping Screws