

TECHNICAL BULLETIN

LTB00488NAS1

28 SEPT 2012



SECTION: 206-04

Rear Brake 'Squeal' Noise

AFFECTED VEHICLE RANGE:

Range Rover Evoque (LV)

VIN: CH000001 – CH687092
Model Year: 2012

CONDITION SUMMARY:

Situation: The rear brakes may exhibit a 'squeal' noise.

Cause: This may be caused by contact between unlubricated parts within the brake caliper assembly.

Action: In the event of a customer concern of the above, refer to the Repair Procedure outlined below to clean the rear brake pads and apply grease to the abutment springs.

PARTS:

LR020053..... Anti-seize grease Qty: 1

TOOLS:

Refer to Workshop Manual for any required special tools

WARRANTY:

△ **NOTE:** Repair procedures are under constant review, and therefore times are subject to change; those quoted here must be taken as guidance only. Always refer to DDW to obtain the latest repair time.

DDW requires the use of causal part numbers. Labor only claims must show the causal part number with a quantity of zero.

DESCRIPTION	SRO	TIME (HOURS)	CONDITION CODE	CAUSAL PART
Remove and clean rear brake pads; grease abutment springs	70.40.03	0.90	42	LR027126 / LR027128

Normal Warranty policies and procedures apply

NOTE: The information in Technical Bulletins is intended for use by trained, professional Technicians with the knowledge, tools, and equipment required to do the job properly and safely. It informs these Technicians of conditions that may occur on some vehicles, or provides information that could assist in proper vehicle service. The procedures should not be performed by 'do-it-yourselfers'. If you are not a Retailer, do not assume that a condition described affects your vehicle. Contact an authorized Land Rover service facility to determine whether this bulletin applies to a specific vehicle.


REPAIR PROCEDURE

REMOVE AND CLEAN REAR BRAKE PADS; GREASE ABUTMENT SPRINGS

1. Refer to Workshop Manual section 206-03 and remove the rear brake pads.

⚠ CAUTION: Make sure no damage is caused to the paint when cleaning the brake pads and abutment springs.

2. Use a suitable dry clean cloth to clean the brake pads and abutment springs.
3. Apply anti-seize grease to the abutment springs.

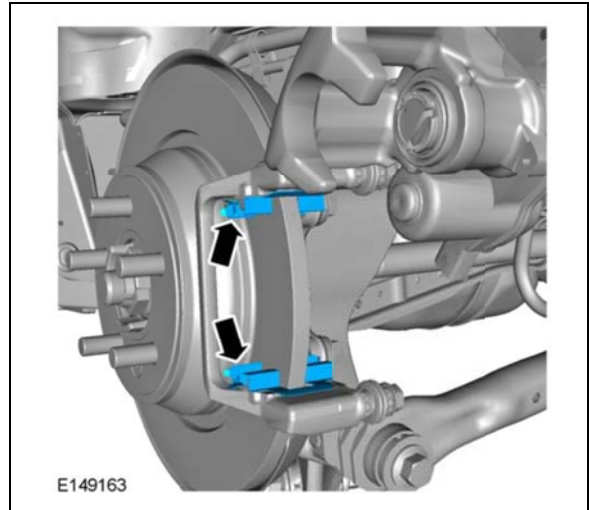

4. Refer to Workshop Manual section 206-03 and install the rear brake pads.
5. Road test vehicle to verify 'squeal' noise issue has been resolved.