T-SB-0112-13

Rev1

August 14, 2013



2014 4Runner Pre-Delivery Service (PDS)

Service

Category General

Section

Pre-Delivery Service

Market USA



Applicability

| YEAR(S) | MODEL(S) | ADDITIONAL INFORMATION | |
|---------|----------|------------------------|--|
| 2014 | 4Runner | | |

REVISION NOTICE

September 4, 2013 Rev1:

· The Functional Operation Section has been updated.

Any previous printed versions of this bulletin should be discarded.

Introduction

Pre-Delivery Service (PDS) is a critical step in satisfying our new car customers. Customer feedback indicates the following areas deserve special attention when performing PDS:

- Careful inspection for paint chips/scratches and body dents/dings.
- Proper operation of electrical accessories (including interior light, clock, and radio reset).
- · Interior cleanliness.
- · Proper function of mechanical systems.

Customer retention and proper maintenance of vehicles has been a major focus for Toyota. To help remind customers that regular oil changes are essential to the proper maintenance of their vehicle, dealers are required to begin installing a first oil change reminder sticker prior to delivery. By doing this, customers will be reminded to return to your dealership for their first oil change. Your current oil change reminder sticker may be used. (See PDS Check Sheet item 11 of "Final Inspection & Cleaning.")

A new PDS <u>Check Sheet</u> has been developed for the 2014 model year 4Runner. Some check points have been added, expanded, or clarified. **Bulletins are available for items in bold type.**

Warranty Policy

If the need for additional repairs or adjustment is noted during the Pre-Delivery Service, the required service should be performed under warranty. Reimbursement will be managed under the warranty policy.

The Warranty Policy and Procedures Manual requires that you maintain the completed PDS check sheet in the customer's file. If you cannot produce a completed form for each retailed vehicle upon TMS and/or Region/Distributor audit, the PDS payment amount will be subject to debit.

An additional Repair Order completed in conjunction with normal PDS must have time punch/flags for service. If multiple repairs are performed, separate time flags must be punched for each repair.

Reimbursement Information

| OP CODE | DESCRIPTION | TIME | OFP | T1 | T2 |
|---------|----------------------------------|------|-----|-----|-----|
| 001013 | 01013 Pre-Delivery Service (PDS) | | N/A | N/A | N/A |

Required Tools & Equipment

| REQUIRED EQUIPMENT | SUPPLIER | PART NUMBER | QTY |
|--------------------|----------|-------------|-----|
| Techstream 2.0* | | TS2UNIT | |
| TIS Techstream | ADE | TSPKG1 | 1 |
| Techstream Lite | A | TSLITEDLR01 | |

^{*} Essential SST.

NOTE

- Only ONE of the Techstream units listed above is required.
- · Software version 8.20.019 or later is required.
- Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787.

Before Inspection

When performing new car Pre-Delivery Service, install Short Pin before moving vehicle from storage lot so that FUNCTIONAL OPERATION checks can begin as soon as vehicle is moved into service stall.

- 1. Install Short Pin see check sheet
- 2. Install antenna* T-SB-0025-13

Functional Operation

Apply parking brake and cycle ignition "ON," place gear selector in reverse, turn on lights and rear defogger. Unlock all doors, release fuel door, release luggage compartment hatch.

- 1. Check dome, courtesy, map, and sun visor lights*
- 2. Check warning/indicator lights, gauges, and horn
- 3. Check windshield wipers and washers
- 4. Check headlights, instrument lights, turn signals, emergency flashers, and brake lights
- 5. Check inside/outside rear view mirror operation/adjustment
- Check cigarette lighter* and power outlets
 Check the power outlet using an electrical accessory designed for this use.
- 7. Check sliding roof*
- 8. Check audio/navigation*/backup camera* system and set clock For navigation, set the destination search area to local position.
- 9. Check auto-running boards*
- 10. Install shift-lock override button cover

Walkaround Inspection

Starting at the left front door, check window and door lock operation and the operation of all power windows and door locks from master power switch, on vehicles so equipped. While walking around vehicle in a counterclockwise direction, open left rear door and check operation of window regulator and door lock, set child safety door locks to the normal (unlocked) position. Assure tightness of interior garnishes and check seat belts. Inspect luggage compartment contents and lights at rear of vehicle. Repeat checks at right rear door. Inspect right front door window regulator and lock operation and garnishes. Check seat and seat belt operation. Continue on around to the front of the vehicle checking lights.

- 1. Check Smart Key System* T-SB-0020-13
- Check door and door lock operation, including each wireless remote control/theft deterrent system*
- 3. Check window operation
- 4. Check that engine starts with all keys
- 5. Check that child safety door locks are in normal (unlocked) position
- 6. Check seats and seat belt operation

Walkaround Inspection (Continued)

- 7. Check rear defogger/rear view mirror defogger*
- 8. Check side marker, tail, backup, and license plate lights
- 9. Check luggage compartment light* and trim appearance
- 10. Check jack and tool installation
- 11. Check headlight aim

Refer to the Repair Manual for procedures.

Under Hood

- 1. Check engine oil level
- Check brake and power steering fluid levels Visually inspect using see-through reservoirs.
- 3. Check engine coolant level
- 4. Check windshield washer fluid level
- 5. Check battery state-of-charge using Digital Battery System Analyzer

Refer to Service Bulletin No. <u>PG001-06</u>, "Battery Maintenance for In-Stock Vehicles & Pre-Delivery."

NOTE

Battery SOC should be a minimum of 75%. Please enter the SOC Reading on the space provided on the check sheet and attach the printout to the check sheet.

6. Inspect for fuel, oil, coolant, and other fluid leaks

Under Vehicle (On Hoist)

1. Remove disc brake anti-rust covers/anti-corrosion wheel film* - PD017-04

Visually inspect rotors for rust.

NOTE

For best rotor rust prevention, retain wheel film on vehicle until just prior to customer delivery.

- 2. Inspect tires for defects/damage
- 3. Activate Tire Pressure Warning System (TPWS) T-SB-0102-13

Under Vehicle (On Hoist) (Continued)

- 4. Install wheel covers/caps/spare tire wheel covers*
- 5. Inspect for fuel, oil, coolant, and other fluid leaks
- 6. Inspect under the vehicle for damage, rust, etc.
- 7. Visually check bolts and nuts on chassis and powertrain for looseness
- 8. Install rubber body plugs (stored in glove box or center console)*

Road Test

A complete road test helps assure customer satisfaction. Drive vehicle over a variety of road surfaces and driving conditions. Check for unusual noise and driving performance.

1. Check cold engine operation

Check starting and fast idle operation performance.

Check engine operation during warm-up

Check that engine operates smoothly during warm-up.

Check for unusual noise, engine vibration, rough idle, etc.

Check engine at normal operating temperature

Check engine performance over a broad range of driving conditions, including idle quality, acceleration, cruise, and deceleration.

Check automatic transmission operation

Check automatic transmission operation, including operation in each range, neutral start switch, and shift lock system.

5. Check brake and parking brake operation

Check brake function, including unusual noise, parking brake performance, and all related brake system indicator lights.

6. Check steering operation and off-center/vehicle pull/flutter

Check steering function.

Check steering off-center/vehicle pull/flutter.

- 7. Inspect for abnormal noise and vibration
- 8. Inspect for squeaks and rattles
- 9. Check front and rear* heater and A/C operation

Page 6 of 7

2014 4Runner Pre-Delivery Service (PDS)

Road Test (Continued)

10. Check cruise control operation*

Check cruise control, including On-Off switch, "SET/COAST," "RESUME/ACCEL," and "CANCEL" functions.

- 11. Check front seat heater/ventilation operation*
- 12. Set/calibrate compass* see check sheet

Final Inspection & Cleaning

1. Remove interior protective covers, unnecessary labels, tags, etc. (Remove protective covers just before delivery to the customer)

Remove plastic covers from door panels, seats, head restraints, and sun visors, as required.

Remove labels, tags, and stickers (except those containing owner information).

NOTE

Consumer information labels, such as airbag information warning and bumper information labels, MUST be left on the vehicle until delivery to a retail customer.

- 2. Visually inspect all interior parts for installation, damage, fit, dirt, etc.
- 3. Verify floor mat application and install using retaining clips* T-SB-0023-13
- 4. Verify green light is illuminated on SOS (Safety Connect) button*
- 5. Remove Rapgard ™ and clear protective bumper film*

Ensure that ALL residue is removed.

- 6. Wash and clean vehicle
- 7. Inspect paint finish for scratches, chips, rust, dents, damage, etc.
- 8. Install front bumper lower side support see check sheet
- 9. Install roof rack leg covers and cross bars* T-SB-0103-13
- 10. Inspect exterior body parts for proper installation, damage, rust, etc.
- 11. Place oil change sticker on inside of windshield, top left corner

Complete the mileage or date recommendation and apply the oil change reminder sticker to the inside of the windshield, top left corner. You may use your current oil change reminder sticker.

Final Inspection & Cleaning (Continued)

TOYOTA

- 12. Install front license plate and mounting bracket* see check sheet
- 13. Place Owner's Guide and first aid kit portfolio* in glove box
- 14. Perform Techstream Health Check

Perform Health Check to ensure that diagnostic trouble codes are not present. Health Check results can be printed for the customer at delivery, or for the dealer file, using the Diagnostic Report function.

*Inspect or install when equipped or required

TOYOTA COROLLA 2014 PRE-DELIVERY SERVICE CHECK SHEET September 2013 Rev2


| BEFORE INSPECTION | Adjust Repair | UNDER VEHICLE (ON HOIST) | | | | |
|--|------------------------|--|--|--|--|--|
| 01 Install D/C Cut Fuse* (see page 2) | | 01 Remove disc brake anti-rust covers/anti-corrosion wheel film* | | | | |
| FUNCTIONAL OPERATION | | 02 hspect tires for defects/damage | | | | |
| Apply parking brake and cycle ignition "IG-ON", place gear selector in return on lights and rear defogger. Unlock doors; release fuel door. | verse; | 03 hitialize Tire Pressure Warning System (TPWS) (see page 2) | | | | |
| 01 Check dome, courtesy, map, and sun visor lights* | | 05 Inspect for fuel, oil, coolant, and other fluid leaks | | | | |
| 08 Check sliding roof* | | variety of road surfaces and driving conditions. Check for unusual noise and driving performance. | | | | |
| Enter Odometer Readings | | | | | | |
| Start at left front door. Check window and door lock operation (from masswitch, if equipped). Continue around vehicle in a counterclockwise checking each door and window operation, child door locks, seat bel condition, all lights, luggage compartment contents. Finish by checking aim and continue into UNDER HOOD checks. | direction ts, interior | 03 Check engine at normal operating temperature | | | | |
| 01 Check Smart Key System* 02 Check door and door lock operation, including each wireless remote control/theft deterrent system* 03 Check window operation | | 06 Check steering operation & off-center/vehicle pull/flutter 07 Inspect for abnormal noise and vibration 08 Inspect for squeaks and rattles 09 Check heater and A/C operation 10 Check cruise control operation* 11 Check front seat heater operation* 12 Set/calibrate compass* (see page 2) 15 16 17 17 17 18 18 18 18 18 | | | | |
| | | | | | | |
| | | 01 Remove interior protective covers, unnecessary labels, tags, etc. (Remove just before delivery to customer) 02 Visually inspect all interior parts for installation, damage, fit, dirt, etc. | | | | |
| UNDER HOOD | | retaining clips* | | | | |
| 01 Check engine oil and ATM* fluid levels | | 05 Wash and clean vehicle | | | | |
| System Analyzer (SOC Reading:%) 06 Inspect for fuel, oil, coolant, and other fluid leaks | | left corner | | | | |
| COMMENTS: | | 09 Place Owner's Guide and first aid kit portfolio* in glove box | | | | |
| * Inspect or install when equipped/required. | | 11 Install front license plate and mounting bracket* (see page 2) | | | | |
| Completion and retention of this from is required to comply with Toyota' | s Warranty | y Policy. | | | | |
| | - | GER'S SIGNATURE We hereby certify that all items on this form have been checked | | | | |
| NAME (PLEASE PRINT) RAME (PLEASE PRINT) and corrected for proper operation as required. | | | | | | |
| Date Dealer Name | | Dealer Code Vehicle Identification Number (Sticker) | | | | |

D/C CUT FUSE INSTALLATION

To minimize battery discharge the D/C Cut Fuse has been removed and is stored in the engine compartment Relay Block. Install the D/C Cut Fuse and confirm all related DTCs are cleared.

DTC Clearing Procedure

- 1. Connect Techstream.
- 2. Cycle the ignition switch to the "IG-ON" position.
- 3. Using Techstream, check any other codes being output.
- 4. Erase DTCs (B1247) and Freeze Frame Data.

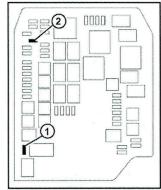

- 1 Remove This D/C Cut Fuse (30A)
- 2 Install D/C CUT Fuse (30A) Here (Original Location)

TPWS INITIALIZATION

Initialization Procedure

Refer to the Repair Manual for the Initialization procedure. Please note the spare tire does not have a TPWS sensor.

NOTE

To adjust the tire pressure correctly when the outside temperature is significantly colder than shop temperature, perform a Health Check using Techstream and select the "Compensation Tire Pressure" checkbox. Compensation pressures will be displayed on the Health Check results screen. Adjust the tire pressure when the tires are cold.

COMPASS CALIBRATION

Refer to the Repair Manual for the Calibration procedure for vehicles equipped with a compass in the rear view mirror.

NOTE


- Do NOT perform calibration of the compass in a place where the Earth's magnetic field is subject to interference (underground parking, under a steel tower, between buildings, roof parking, near a railroad crossing, near a large vehicle, etc.).
- During calibration, do NOT operate electric systems (moon roof, power windows, etc.) as they may interfere with the calibration.

FRONT LICENSE PLATE & MOUNTING BRACKET* INSTALLATION


- 1. Insert the front license plate into the tabs on the bracket.
- 2. Attach the clip of bracket to the upper lip of second air intake and rotate bracket upwards.
- 3. Align the holes on the license plate and license plate bracket with the dimples on the lower grille.
- Screw the 2 self-tapping screws directly into the dimples to install the front license plate and the front license plate bracket.

NOTICE

- Do NOT pre-drill holes into the bumper.
- Do NOT overtighten the self-tapping screws.

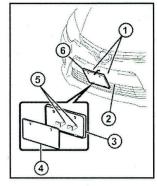

- 1 Dimples
- 2 Second Air Intake
- 3 Front License Plate Bracket
- 4 License Plate
- 5 Clip
- 6 Rotate Bracket

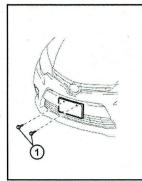

1 Self-tapping Screw