

EZ Loader Boat Trailers

29 January 2013

Technical Service Bulletin

Subject: Wheel nut torque specifications

Model: All models

Summary: To ensure product safety when installing wheel nuts, the correct installation sequence and torque value is required. This service bulletin clarifies the correct installation.

Action: It is imperative to apply proper wheel nut torque when installing wheels. The correct torque specifications and tightening pattern are as follows;

All Knott torsion axles – torque wheel nuts to 63 lbs/ft

All EZ Loader torsion and spring axles – torque wheel nuts to 80 lbs/ft

All UFP spring axles – torque wheel nuts to 80 lbs/ft

Diagram 1 shown below indicates proper tightening sequence for hubs with 4, 5, 6 and 8 lugs respectively. Follow this sequence for proper installation.

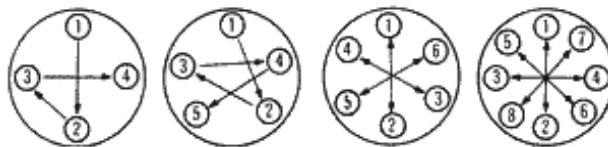


Diagram 1
