

ElDorado National - Kansas



Mobility Vans
Wholly owned subsidiary of Thor Industries, Inc.

Toyota Amerivan, Seat, ABS and Ramp Removal

Picture 1



Picture 2



These instructions show passenger side pictures, but they are applicable to the driver side as well.

1: Move front seat all the way back


2: Remove foot rest, reference “A” picture1

3: Move front seat all the way forward

4: Unplug seat from lower B-pillar

5: To remove front seats, push forward on back of head rest while pushing down on foot release petal reference “B” picture 2. Continue pushing down foot release, until the wheels on seat base are locked in the down position. Remove seat from van.

Picture 3

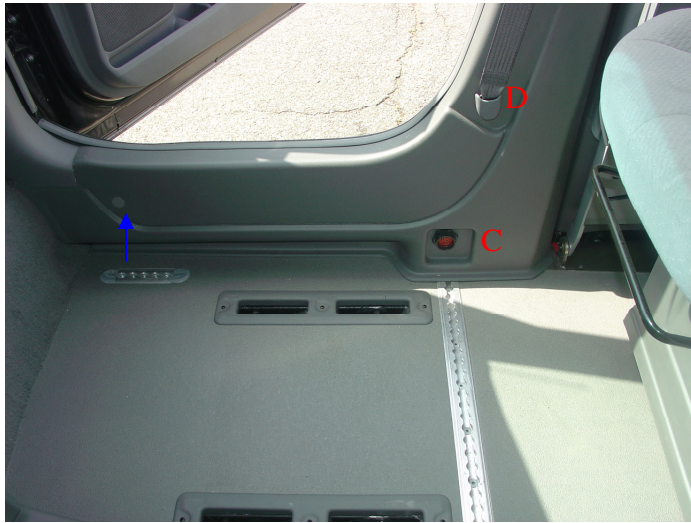

Picture 4



Picture 5



ABS Removal:

1: Remove the large nut on seat plug, reference "C" picture 3.

2: Remove seatbelt, reference "D" picture 3


3: Remove the plastic fasteners, shown with blue arrows in picture 3 and 4

Please note if ABS is not coming loose after following steps 1 to 3 please check for any small screws under door frame weather stripping


Ramp Motor Cover:

1: Picture 5 shows the ramp motor cover; remove the 4 plastic fasteners indicated and remove.

Picture 6

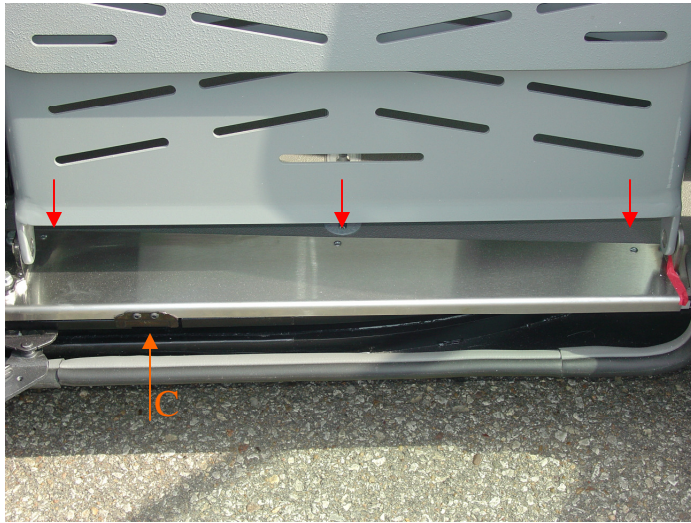

Picture 8

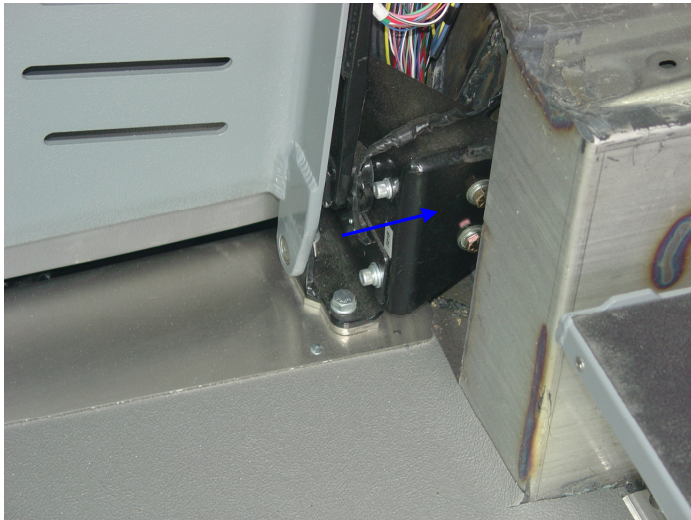

Removal of Ramp:

1: Remove bracket C, in picture 6.
Please note this bracket allows for the removal of the passenger sliding door. Do not remove the door.

2: Drill out the three rivets in ramp threshold, shown with red arrows in pictures 6.

3: Remove the two bolts on ramp motor mount, indicated by the blue arrow in picture 8. *These were under the ramp motor cover already removed*

With the rivets and bolts removed the ramp can be safely removed from the van.

