

If you encounter a customer complaint relating to the audible tone from the back-up assist feature remaining on at all times, inspect the sensors in the rear bumper for possible collision damage causing a short in the sensor. Also, make sure to check the harnesses feeding the sensors for continuity to ground. Refer to the schematic diagram (A) below or to the <u>Body</u> <u>Electrical</u> section of the service manual for detailed repair information.

