



Countries: CANADA, UNITED STATES, PUERTO RICO
Availability: ISIS, FleetISIS
Major System: EXHAUST
Current Language: English
Other Languages: [Français](#), [Español](#),
Viewed: 468
Document ID: IK0700002
Revision: 3
Created: 4/20/2007
Last Modified: 12/13/2013
Author: Steve Kueller

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 41	Not Helpful 139
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	---------------------------------	--------------------------------------

Title: Proper ProStar Exhaust Shield Orientation

Applies To: All 2007 to Present ProStar Day Cab and Sleeper Cab

DESCRIPTION

The heat shield on the vertical exhaust pipe is oriented so that the opening is inboard. This shield and its position is designed to protect the right side air fairing from the increased exhaust temperatures.

See the photo below for the proper exhaust heat shield orientation. Do not change this shield position



Photo 1 Proper Exhaust Shield Orientation

 Hide Details

Feedback Information

Viewed: 467

Helpful: 41

Not Helpful: 139

No Feedback Found

Copyright © 2014 Navistar, Inc.