



Countries: CANADA, UNITED STATES, MEXICO, PUERTO RICO
Availability: ISIS
Major System: EXHAUST
Current Language: English
Other Languages: [Français](#), [Español](#),
Viewed: 381

Document ID: IK0700019
Revision: 2
Created: 5/26/2010
Last Modified: 12/13/2013
Author: Steve Kueller

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 58	Not Helpful 81
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	--------------------------	------------------------------

Title: Water Leaking from Exhaust Pipe Joint

Applies To: LoneStar Model equipped with Horizontal Aftertreatment and Vertical Tailpipe

DESCRIPTION

Water dripping from exhaust joint or clamp between the under cab flexpipe and lower tailpipe causing the fuel tank or skirt to stain.


SYMPTOMS

- Fuel Tank Staining

PARTS INFORMATION

Part #	Description	Qty.
3846392c1	4" Gasket	1

SIGNALS TO WATCH

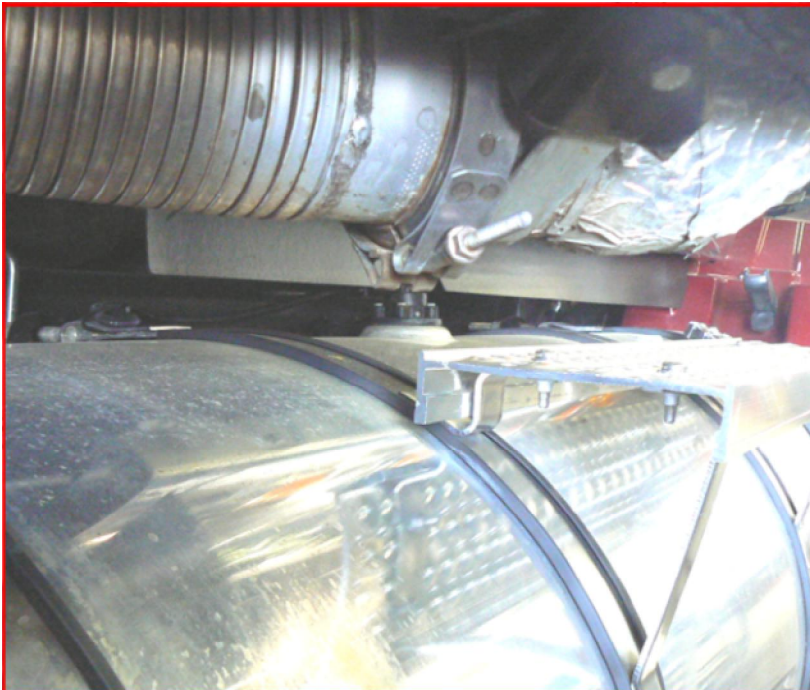

RESOLUTION

Remove Clamp and Install Appropriate Gasket as Listed in Parts Information. Reinstall the clamp and torque to specs.

 Hide Details

Feedback Information

Viewed: 380
Helpful: 58
Not Helpful: 81

No Feedback Found

Copyright © 2014 Navistar, Inc.